

Appendix E: Updating MiniOS7 and firmware

In following situations, we release the new version firmware and MiniOS7 image.

- Supporting new I/O modules
- Adding new functions
- Fixing bugs

The tool to update firmware and MiniOS7 image is MiniOS7 Utility.



File location of MiniOS7 Utility

CD:\Napdos\MiniOS7\Utility\MiniOS7.Utility\MiniOS7.Utility.exe or

[ftp://ftp.icpdas.com/pub/cd/8000cd/napdos/minios7/utility/minios7_utility/](http://ftp.icpdas.com/pub/cd/8000cd/napdos/minios7/utility/minios7_utility/)

E.1 Access the controller


Please follow the steps to do the updating procedure.

Step1: Install MiniOS7 Utility


Step2: Use CA-0915 to connect 8430/8830/8KE4/8KE8 to COM1/2 of the host PC.

Step3: Short Init* and Init*COM.


Step4: Power off and then power on the 8KE4/8KE8. The CPU doesn't run the autoexec.bat while power on stage.

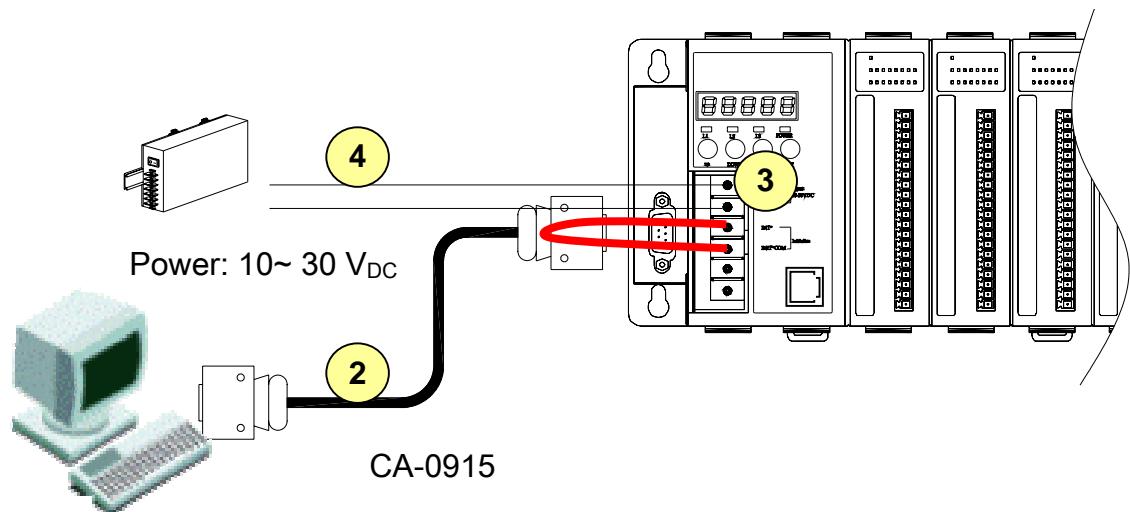

Step5: Run MiniOS7 Utility

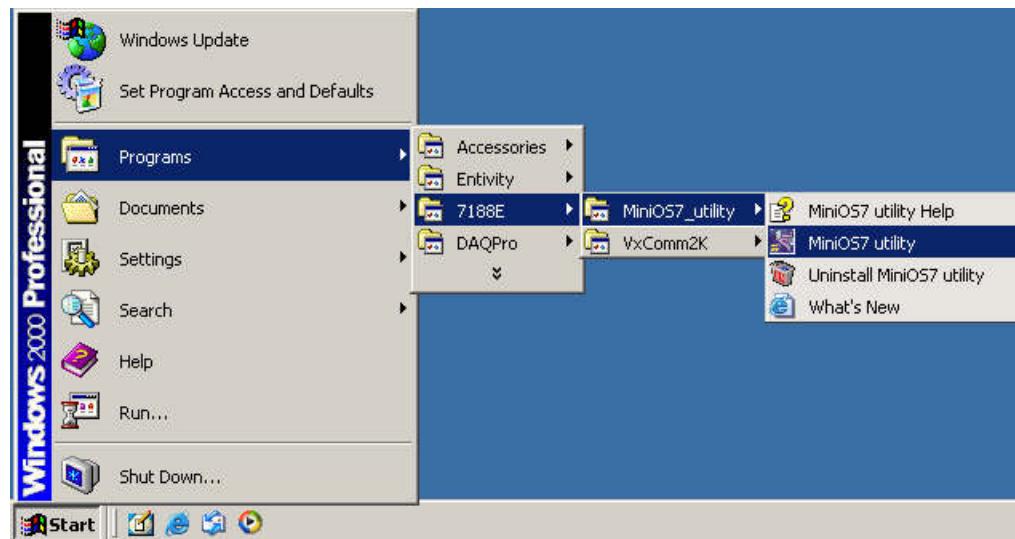


Step6: Select the COM port of the host PC.

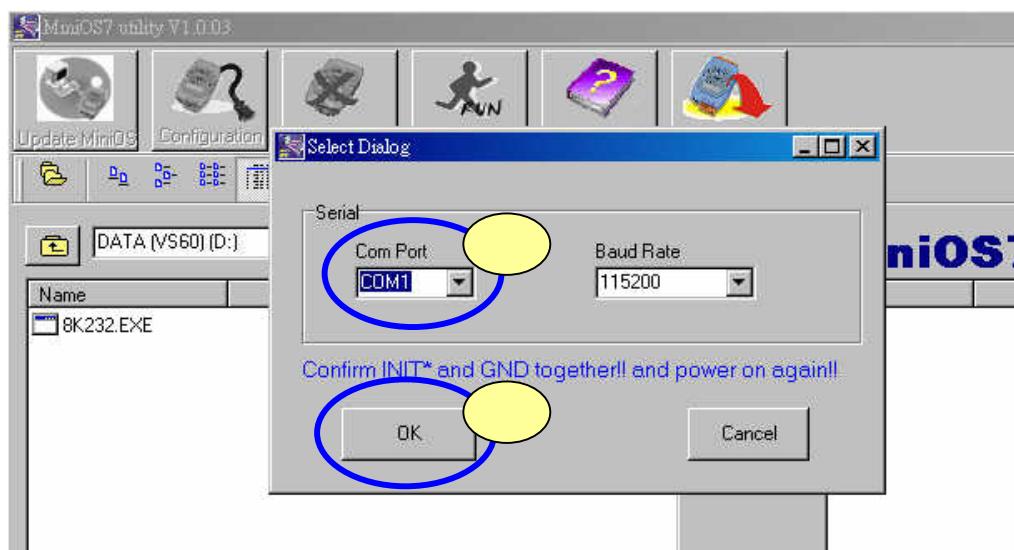

After opening the COM port, the MiniOS7 Utility will show information as below:

1. MiniOS7 image version of the 8430/8830/8KE4/8KE8.
2. Files in the Flash ROM

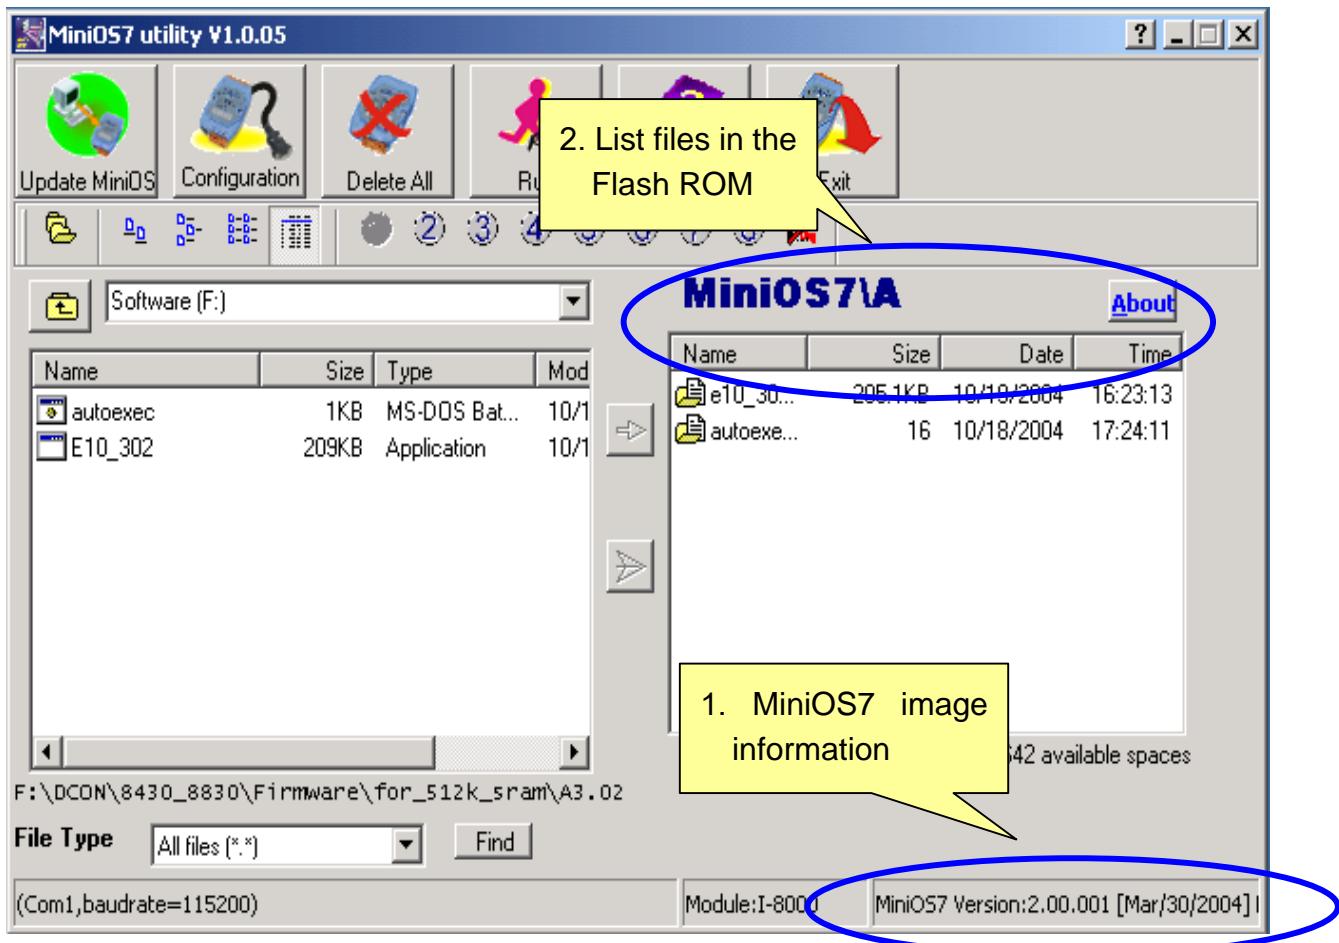

E.2 Update MiniOS7 image

After setup MiniOS7 Utility and initial the 8430/8830/8KE4/8KE8. Please follow the steps to do the updating MiniOS7 image.





Step1: Click **Update MiniOS** and select the file to update MiniOS7.

8430/8830: CD:\Napdos\DCON\8430_8830\OS_Image\40MHz\8K040330.img)

ftp://ftp.icpdas.com/pub/cd/8000cd/napdos/dcon/8430_8830/os_image/40mhz/8k040330.img

8KE4/8KE8: : CD:\Napdos\DCON\8KE4_8KE8\OS_Image\8e040420.img)

ftp://ftp.icpdas.com.tw/pub/cd/8000cd/napdos/dcon/8ke4_8ke8/os_image/8e040420.img

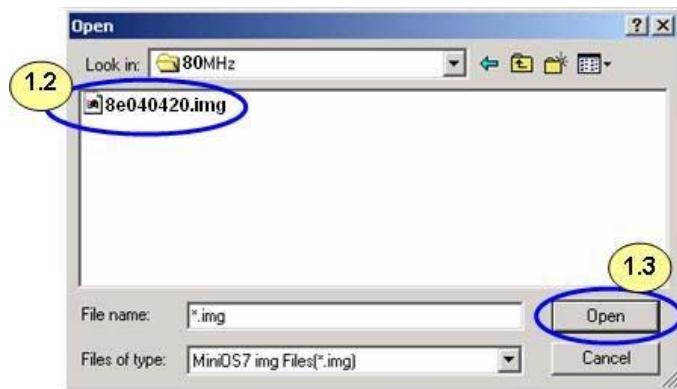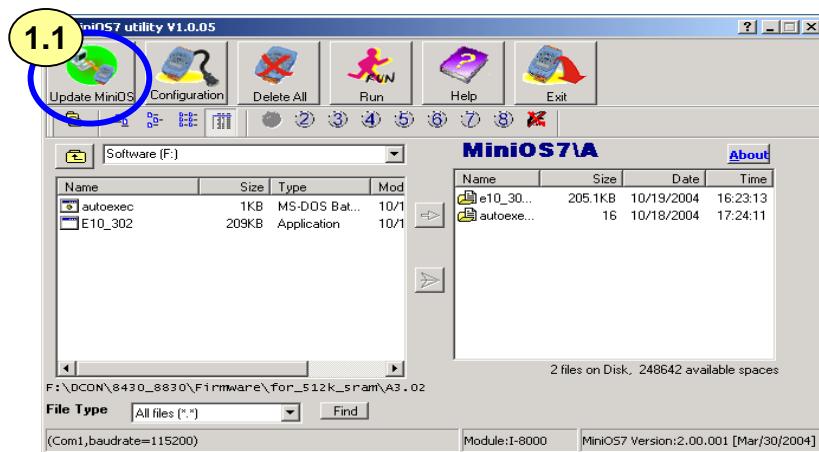

Note: 8430/8830 use different OS image from 8KE4/8KE8.

For 8430/8830 the OS image is for 40MHz used and file name: 8K040330.img


For 8KE4/8KE8 the OS image is for 80MHz used and file name: 8e040420.img

E.3 Download firmware


Please follow the steps to download the firmware to the Flash ROM.

Step1: Delete all files in the Flash ROM.

Step2: Select the firmware files and autoexec.bat and click  to download the files into the Flash ROM

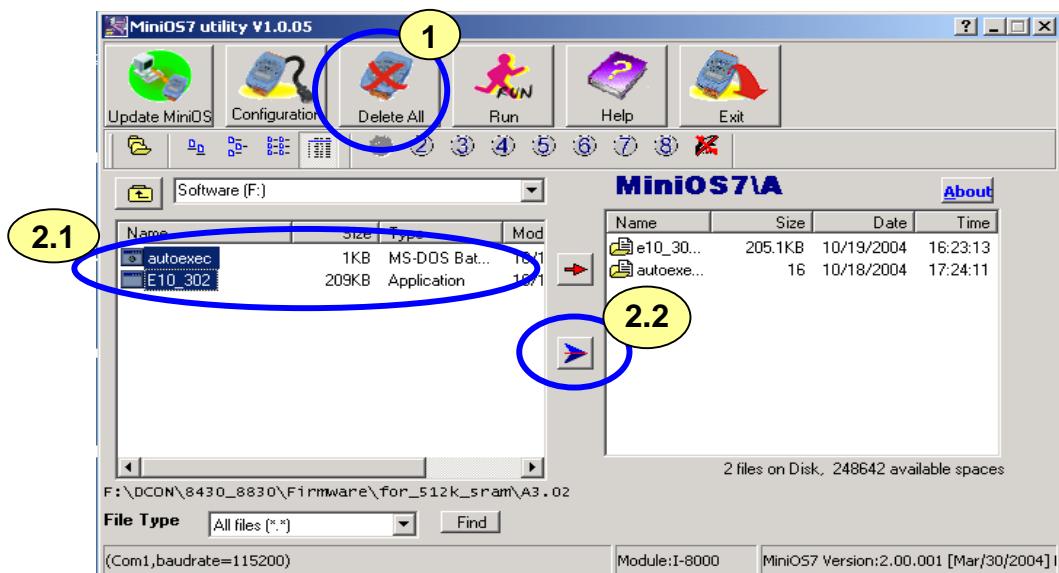

Step3: Disconnect Init* and Init*COM

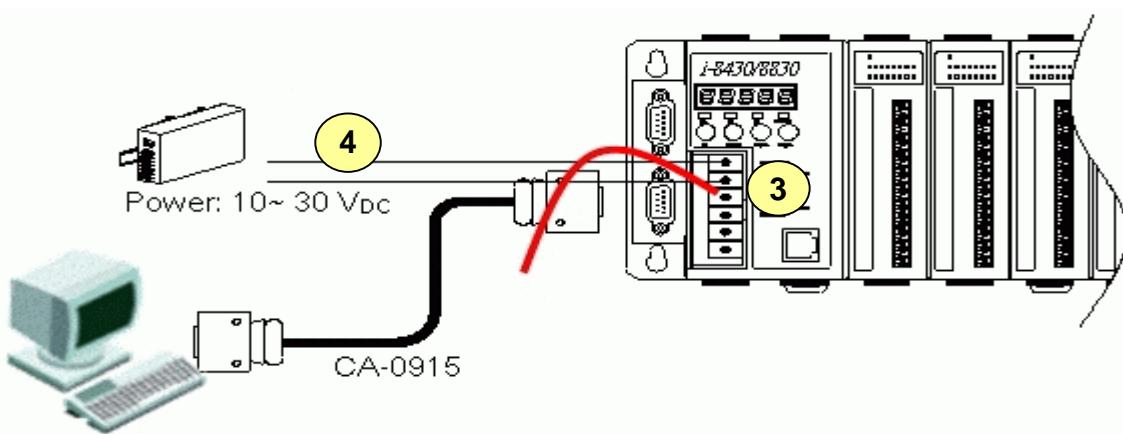

Step4: Run the firmware

Method 1: Power off and then power on the 8430/88308KE4/8KE8. The CPU will run the autoexec.bat in the Flash ROM.



Method 2: Click  to run the firmware.