

Classification	NAPOPC_ST FAQ				No.	1-004-E	
Author	James	Version	1.0.0	Date	2010/7/12	Page	1/2

How to connect XPAC to PC via NAPOPC DCOM settings?

Applies to:

Platform	OS version	NAPOPC version
PC	XP	NAPOPC_ST v3.20

In this case, **XPAC** is the **OPC Client** and **PC** is the **OPC Server**. Set up DCOM settings of both **XPAC (Client)** and **PC (Server)** first, and then **XPAC (Client)** could take the data from **NAPOPC_ST** of **PC (Server)** by the **OPC Client** program.

Step 1:


Accomplish DCOM settings of **PC (Server)**. Please refer to **NAPOPC_ST manual 4.2.2**.

Step 2:

Accomplish DCOM settings of **XPAC (Client)**. Please refer to **NAPOPC_ST manual 4.2.5**.

Step 3:


Edit your NAPOPC_ST project on **PC (Server)**.

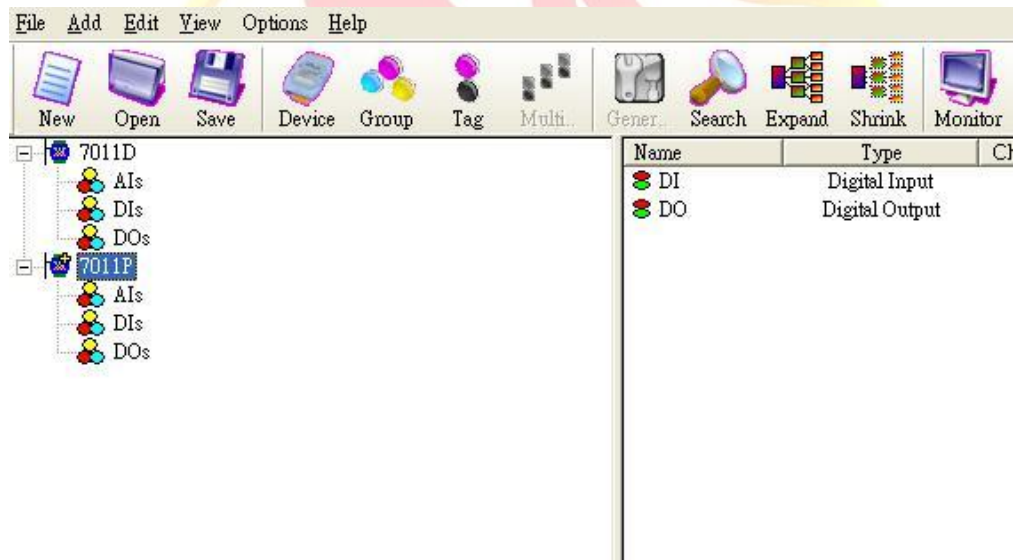

Step 4:

Execute your OPC Client program on **XPAC (Client)**, and connect it to **NAPOPC_ST** of **PC (Server)**. Furthermore, you could exchange data between XPAC and PC. In following capture, the OPC Client program is **Server Explorer** (Provided by NI).

Classification	NAPOPC_ST FAQ				No.	1-004-E	
Author	James	Version	1.0.0	Date	2010/7/12	Page	2/2

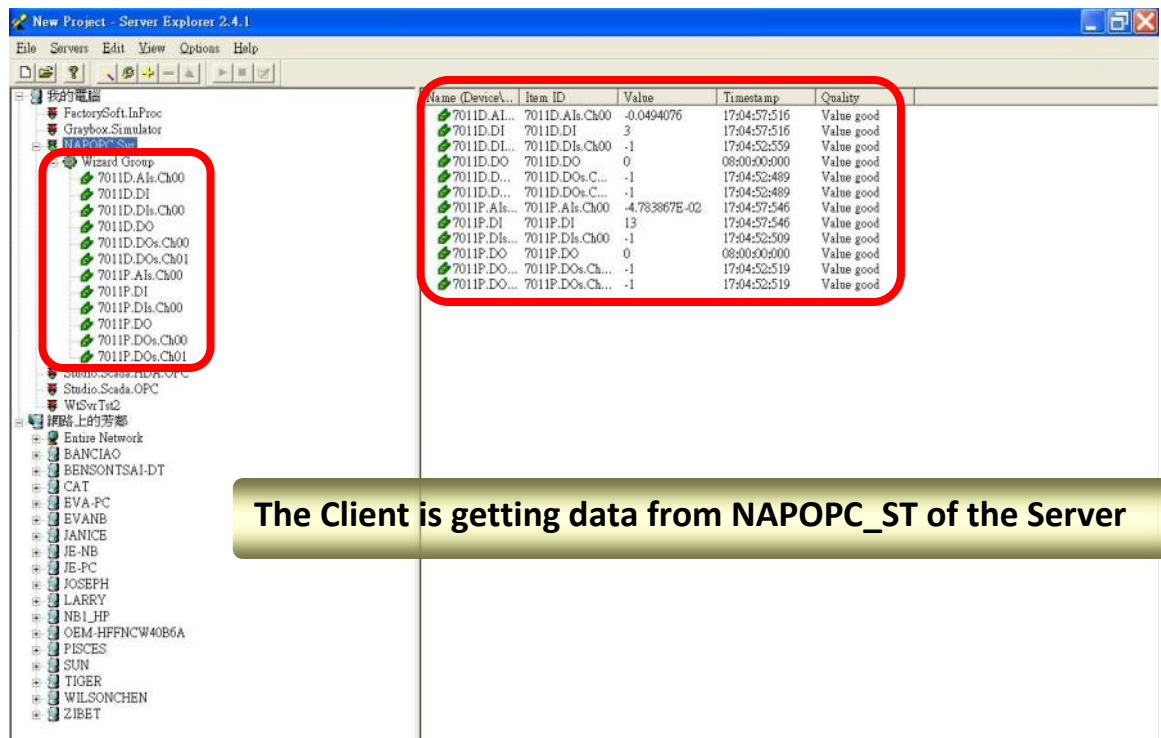

The Client is getting data from NAPOPC_ST of the Server

NOTE:

1. The User Account of both Server and Client must be the same. Please pay attention to it when you set User Account.
2. Install NAPOPC DA Server on both Server and Client, it's better for data exchange.
3. Please notice the last step of DCOM settings on "Client".

NAPOPC DA Server properties -> Location: You have to input the IP Address of "Server".

