


Packing List


In addition to this **Quick Start Guide**, the package includes the following items:

iSN-101 iSN-101/DIN	Quick Start	ASO-0042
		 1m Water Sense Cable
ASO-0043	ASO-0044	ASO-0045
 3m Water Sense Cable	 3m Extended Cable	 Water Sense Probe
ASO-0046	ASO-0047	
 180° Hold-Down Clip	 90° Hold-Down Clip	

The ASO-0042 and ASO-0044 are included for iSN-101/S and iSN-101/S/DIN.
The ASO-0043 and ASO-0044 are included for iSN-101/S2 and iSN-101/S2/DIN.
The ASO-0045 are included for iSN-101/S3 and iSN-101/S3/DIN.

Wire Connections

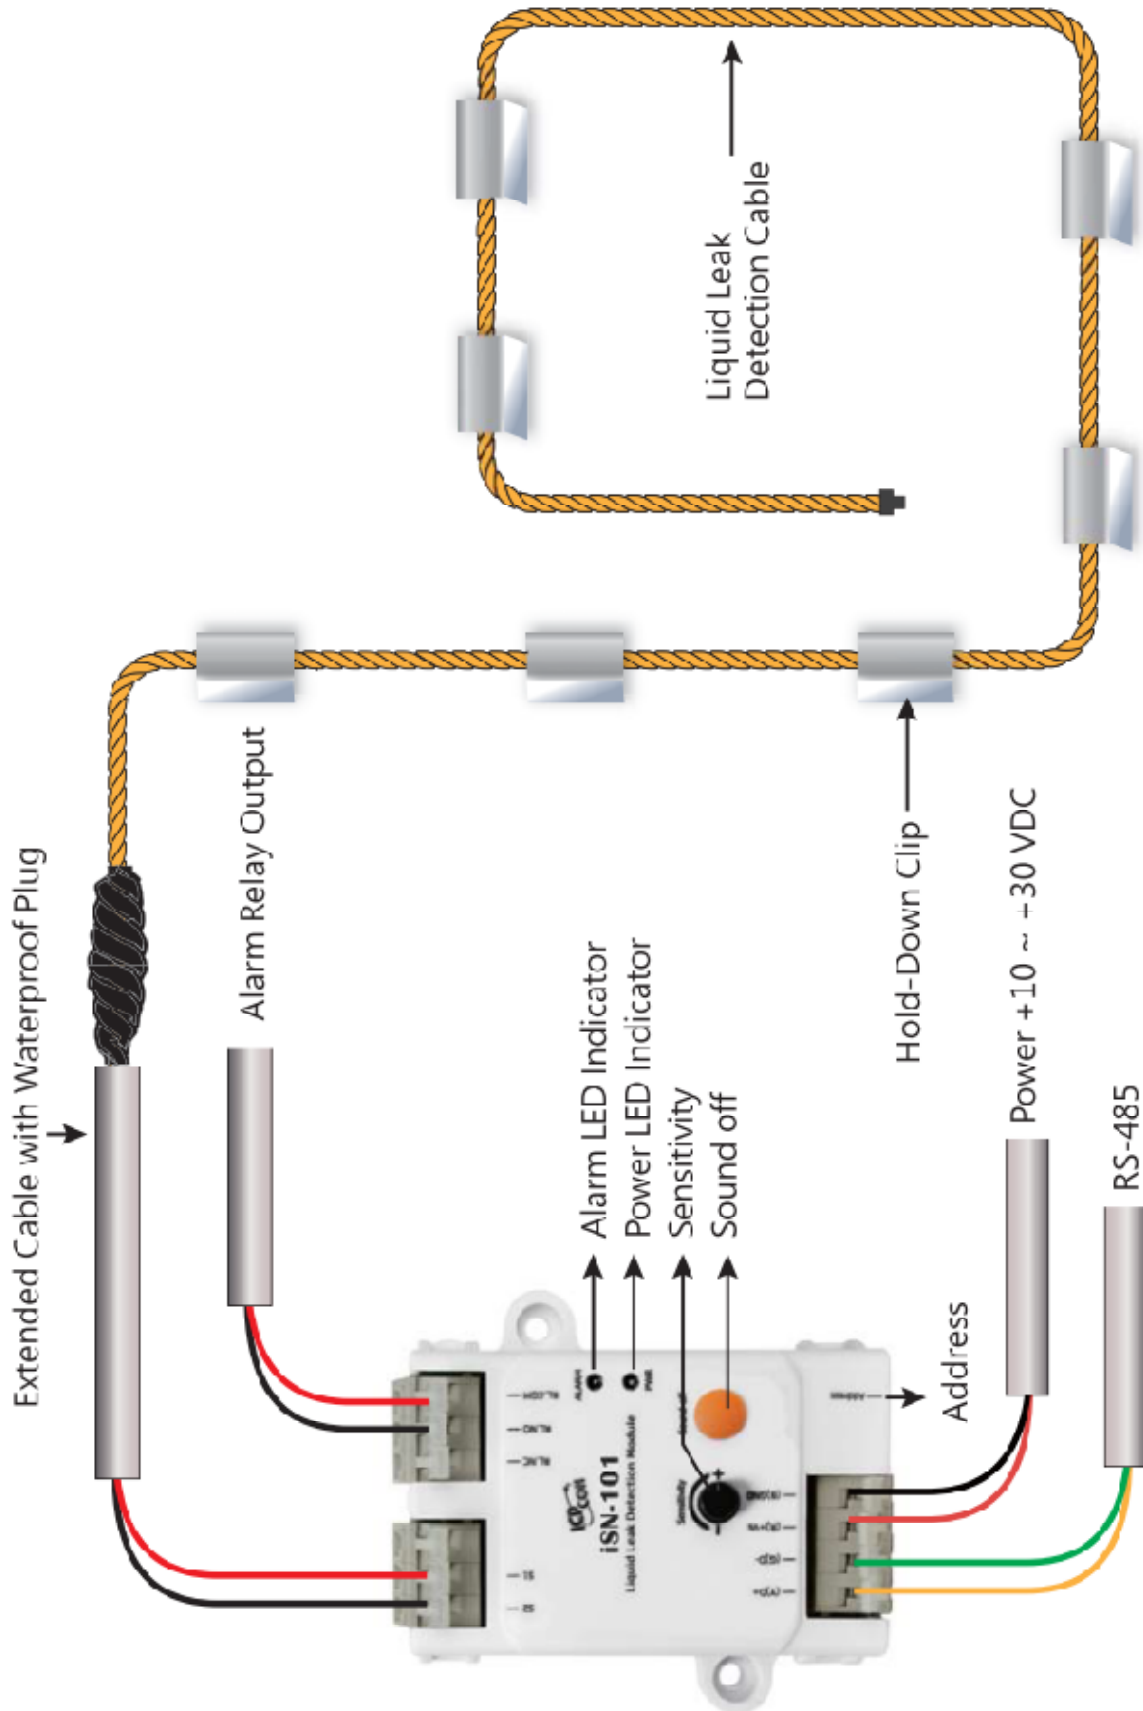

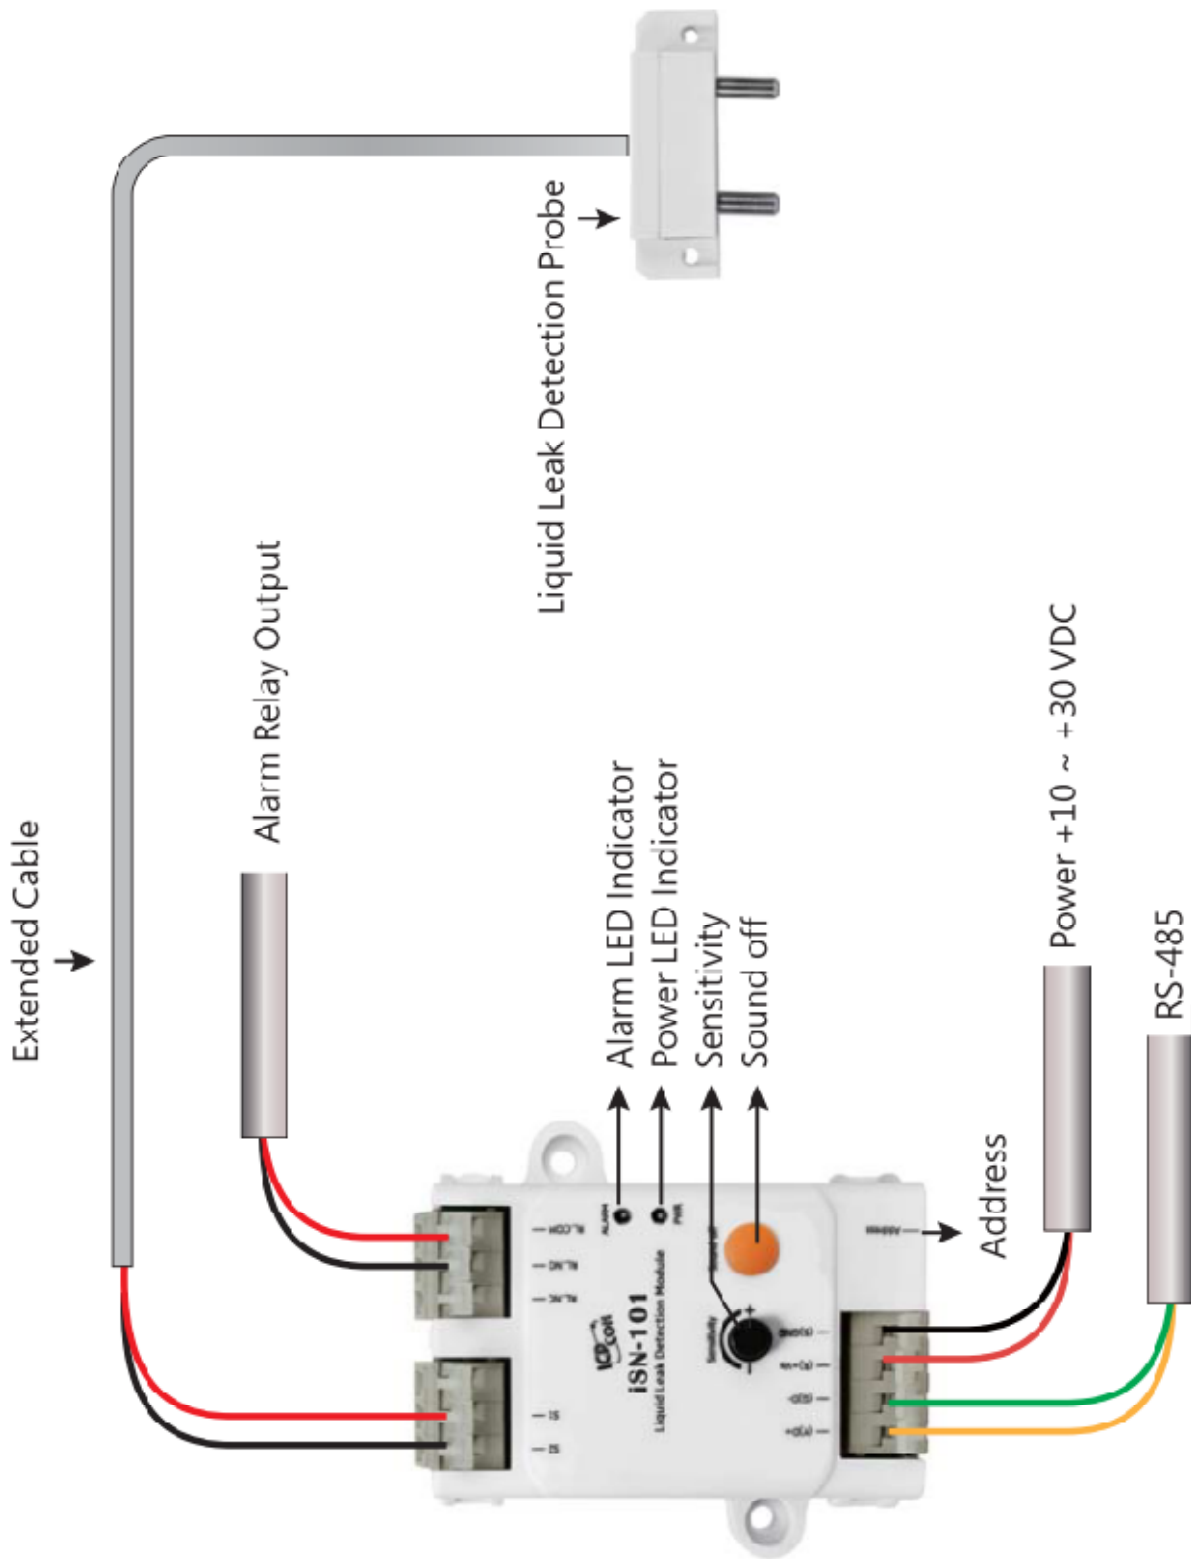



iSN-101 Getting Started/User Manual

- **iSN-101 Series User Manual**

<http://ftp.icpdas.com.tw/pub/cd/iiot/>

- **DCON Utility**

<http://ftp.icpdas.com.tw/pub/cd/iiot/utility/>

- **iSN-101 Website**

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/sensor_series/isn-101.html

DIP Switch and Jumper Settings

	SW1	ON	DCON Protocol
		OFF	Modbus RTU Protocol
	SW2	ON	Software Configuration
		OFF	Hardware Configuration
	SW3	ON	High Node Address
		OFF	Low Node Address
	SW4	ON	INIT Mode
		OFF	Normal Mode

Address Settings via Hardware Configuration

		0 ~ F for Addresses 96 ~ 111 (Low Node Address)
		0 ~ F for Addresses 112 ~ 127 (High Node Address)



If there is any other question, please feel free to contact us.

Email: service@icpdas.com