

Classification	System and Application FAQ on WinCE PAC				No.	1-003-02	
Author	Tunglu-Yu	Version	1.0.1	Date	2013/10/12	Page	1/3

How to set up a USB printer

Applies to:

<i>Platform</i>	<i>OS version</i>	<i>WinPAC/ViewPAC utility version</i>
<i>WP-8x3x/ WP-8x4x</i>	<i>All versions</i>	<i>All versions</i>
<i>WP-5000</i>	<i>All versions</i>	<i>All versions</i>
<i>VP-23W1/ VP-25W1</i>	<i>All versions</i>	<i>All versions</i>
<i>VP-4131</i>	<i>All versions</i>	<i>All versions</i>

Tips & Warnings




WinPAC/ViewPAC only supports HP Laser Jet Printers that support the PCL6 driver



To use a printer via USB, perform the following steps:

Step 1: On the WinPAC/ViewPAC, open a WordPad format file (*.txt, *.ini...) and click the **“File”** → **“Print”**. (or Ctrl + P)

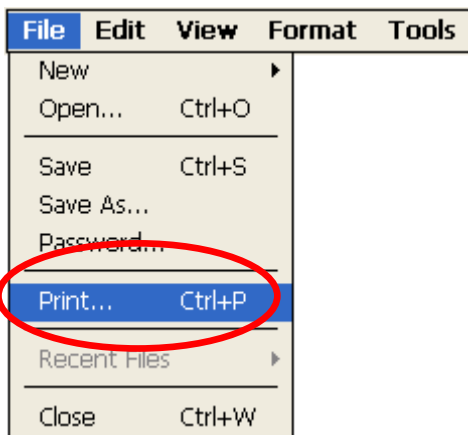


Step 2: Set up the printer as following.

Classification	System and Application FAQ on WinCE PAC				No.	1-003-02	
Author	Tunglu-Yu	Version	1.0.1	Date	2013/10/12	Page	2/3

File Edit View Format Tools [Icons] Tahom 14

Test !!!

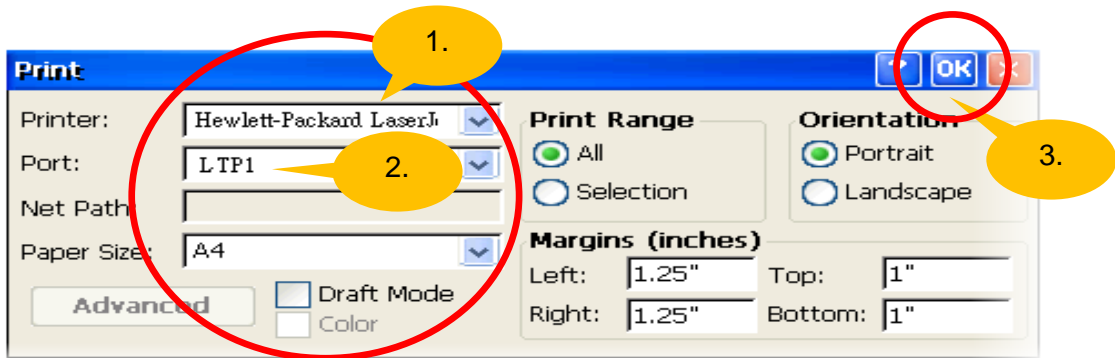

Classification	System and Application FAQ on WinCE PAC				No.	1-003-01	
Author	Tunglu-Yu	Version	1.0.1	Date	2013/10/12	Page	3/3

Revision History

Revision	Date	Description
1.0.1	2013/10/12	NEW: Added support for WP-5000 series and VP-4131
1.0.0	2010/02/12	Initial release