

Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	1/3

How to calibrate a Penmount serial touch panel

Applies to:


Platform	OS Version	PAC Utility Version
WinPAC	All Versions	All Versions

Tips & Warnings




Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports. If COM3 is used to connect to the touch panel, you will need a "NULL MODEM".

Standard Wiring

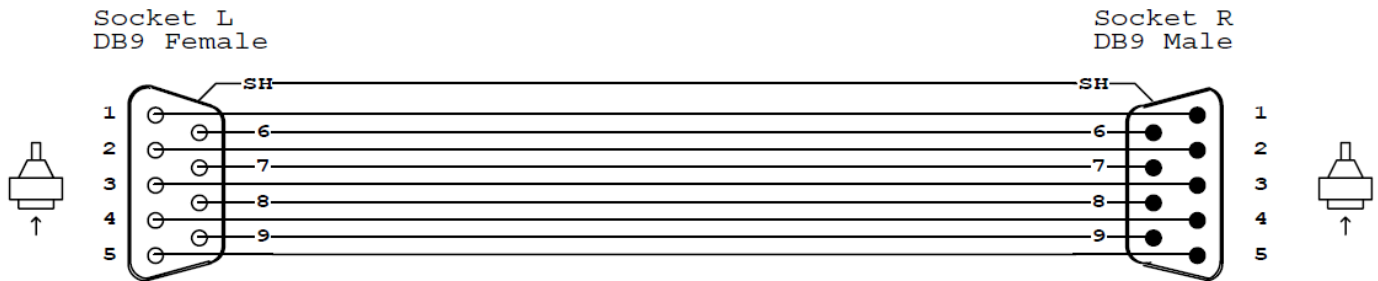


Connecting to COM1

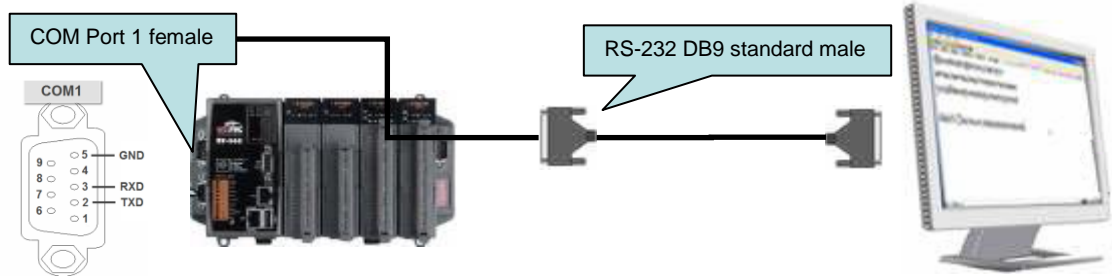


Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	2/3

Connecting to COM4

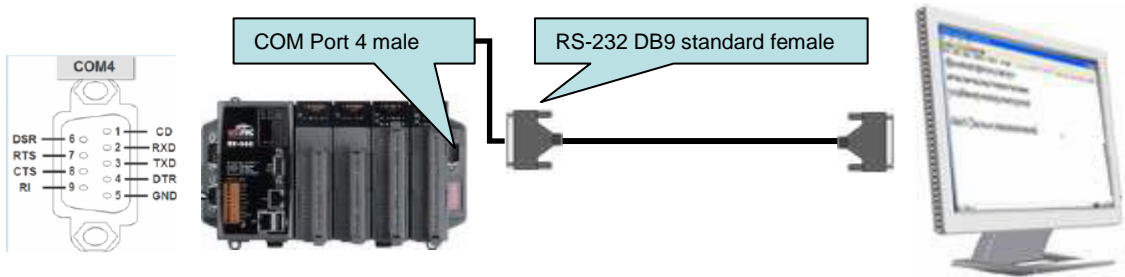

Connecting to COM3

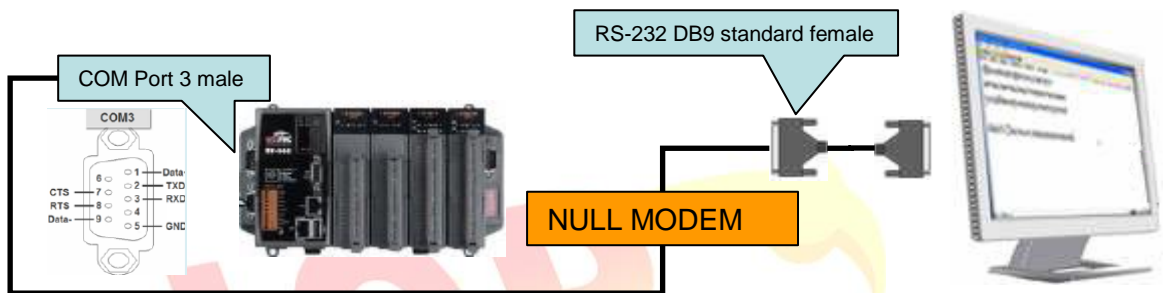

To calibrate a Penmount serial touch panel, perform the following steps:


Step 1: Execute the calibration program.

- 1.1. Click My Device → System_Disk → Drivers → Serial_TOUCH → Penmount → LNK → Calibration.



Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	3/3

1.2. Touch the arrowhead one by one and then touch the “+” icon on the monitor till the program finish.

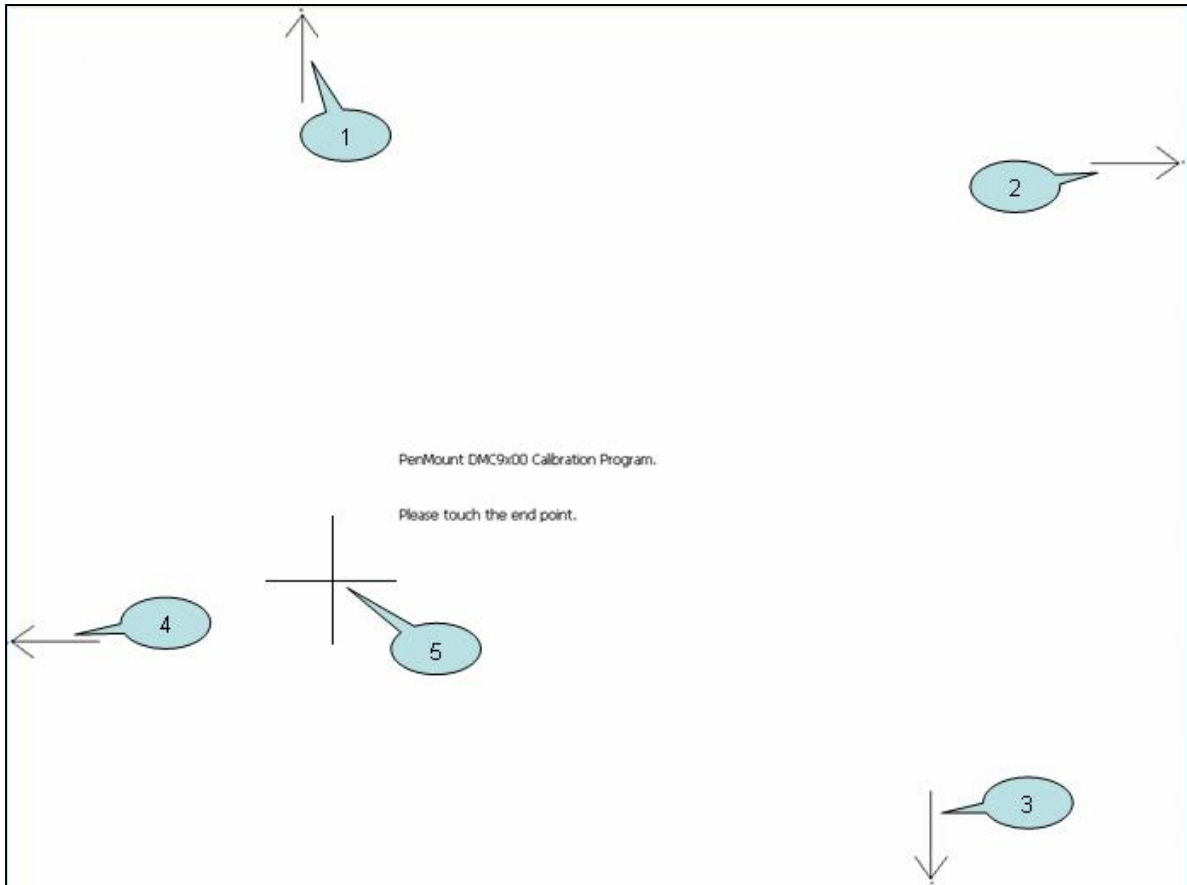

Step 2: Reboot your WinPAC.

- 2.1. Start the PAC utility and click the “File” → “Reboot” menu option.
- 2.2. Click the “Yes” button and wait for reboot.

