


| | | | | | | | |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC | | | | No. | 1-003-01 | |
| Author | Weikai | Version | 1.0.0 | Date | 2011/3/31 | Page | 1/3 |


How to set up a printer

Applies to:


| Platform | OS version | WinPAC/ViewPAC utility version |
|-------------|-----------------------|--------------------------------|
| XPAC series | All versions (WinCE6) | All versions |
| | | |
| | | |

Tips & Warnings

 A shared printer added using the “local printer attached to this computer” option is only used for XPAC via the network.

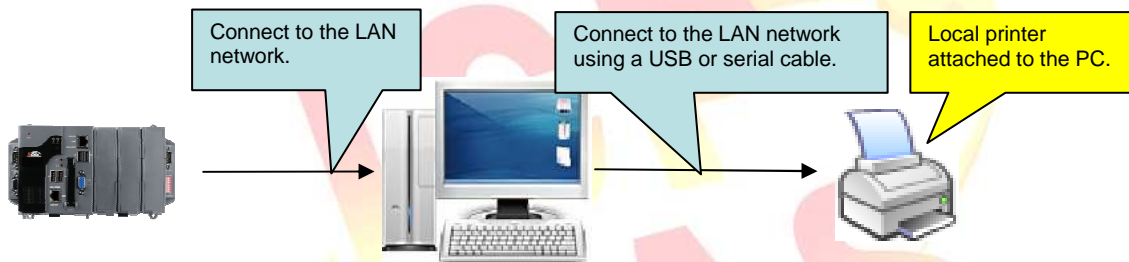


Selecting “Local printer attached to the PC” in this diagram means a printer (local printer or network printer) that is setting “Local printer attached to this computer” on PC, as show below. The XPAC series doesn’t support a printer which is set up by selecting “A network print or a printer attached to another computer” option.

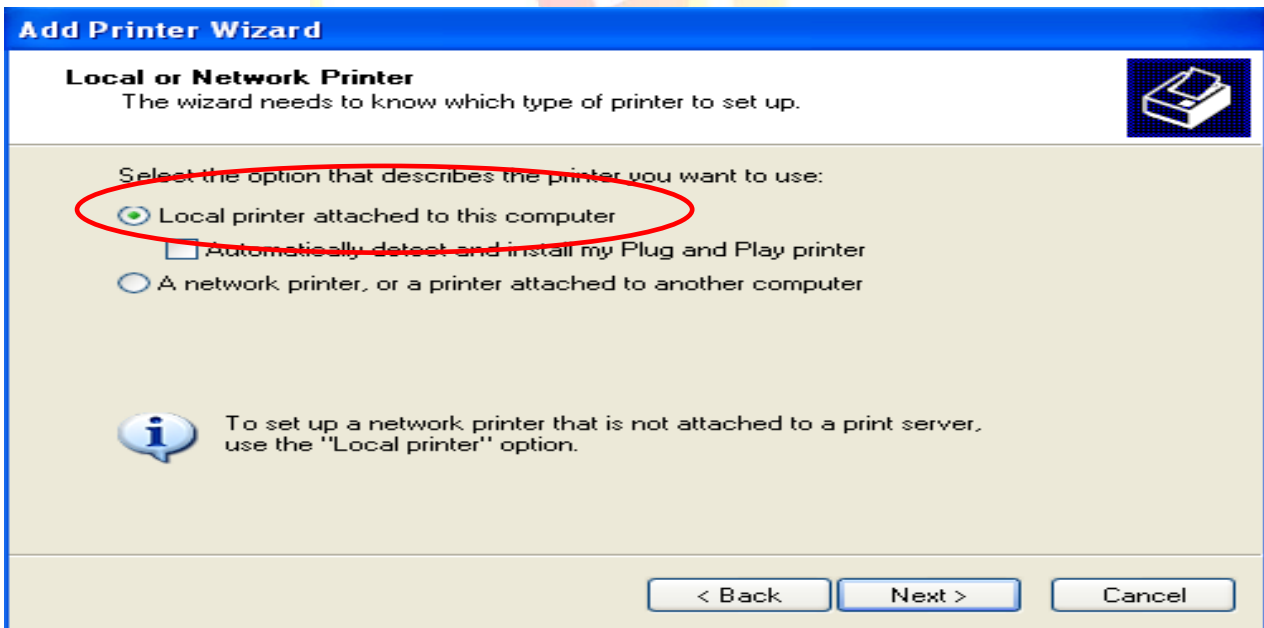

| | | | | | | | |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC | | | | No. | 1-003-01 | |
| Author | Weikai | Version | 1.0.0 | Date | 2011/3/31 | Page | 2/3 |


To use a shared printer, perform the following steps:

Step 1: On the Host PC, **check** the name of the Host PC and the shared printer.

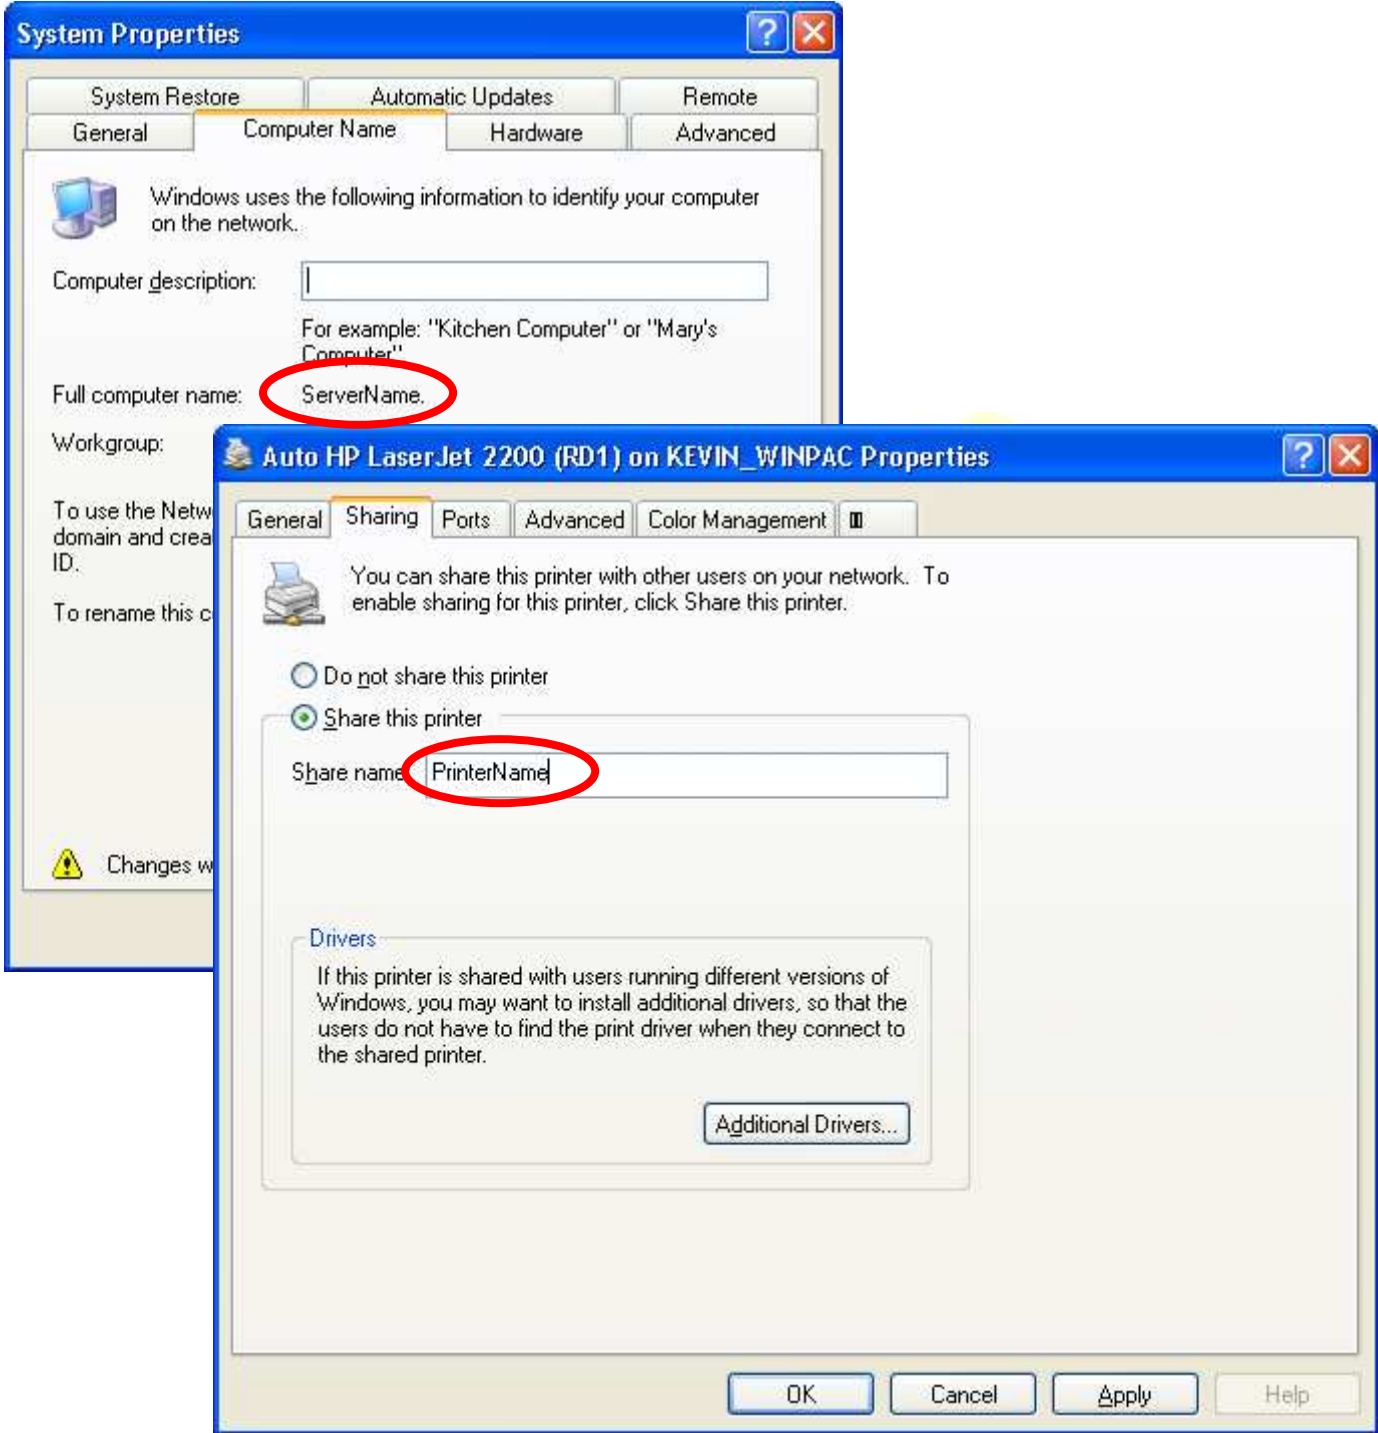


| | | | | | | | |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC | | | | No. | 1-003-01 | |
| Author | WeiKai | Version | 1.0.0 | Date | 2011/3/31 | Page | 3/3 |

Step 2: On the XPAC, use INotepad.exe **open** a file (*.txt,* .ini...) and click the “File->Print” .

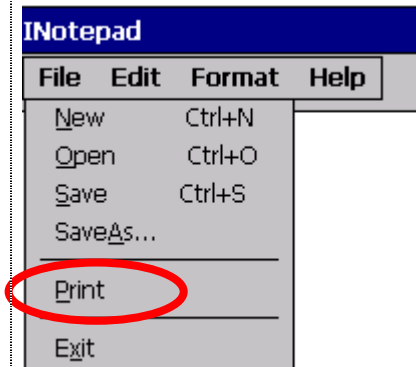

Step 3: Set up the printer as following.

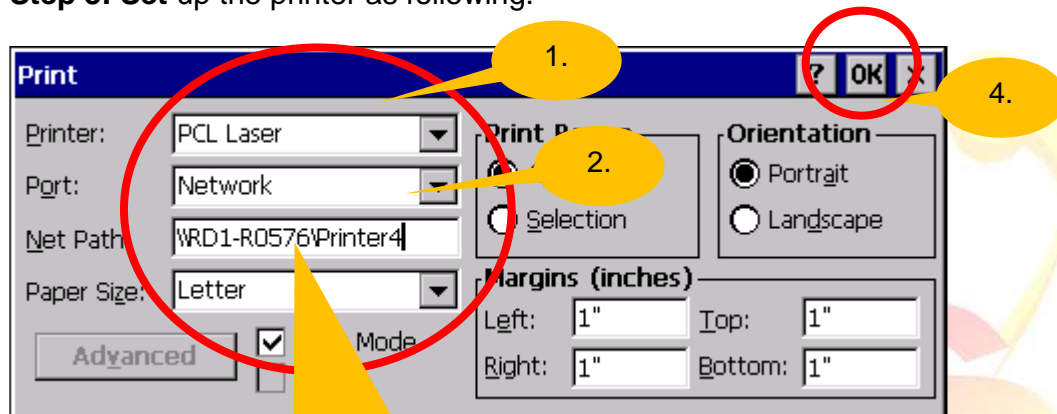

3. Enter \\ServerName\PrinterName