


# iKAN Series Quick Start

Apr. 2017, Version 1.02

## What's In the Box?

The package includes the following items:

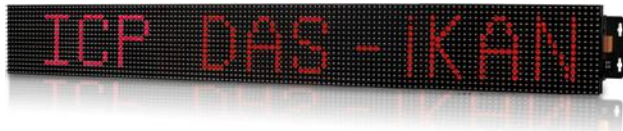

iKAN Series LED Display



Quick Start  
(This document)



Screw Driver  
(1C016) 2.4 mm

- ❖ The following items are included with iKAN-124 only



Wall Mounting Kit \* 2



Screw \* 8


## Technical Support

iKAN Series User Manual

<http://ftp.icpdas.com/pub/cd/ikan/document/>

# 1 ..... Connecting to PC, Network and Power

The module is equipped with a standard Ethernet port (RJ-45) for connecting to an Ethernet Hub/Switch and PC. Moreover, you can also connect the PC directly with an Ethernet cable.

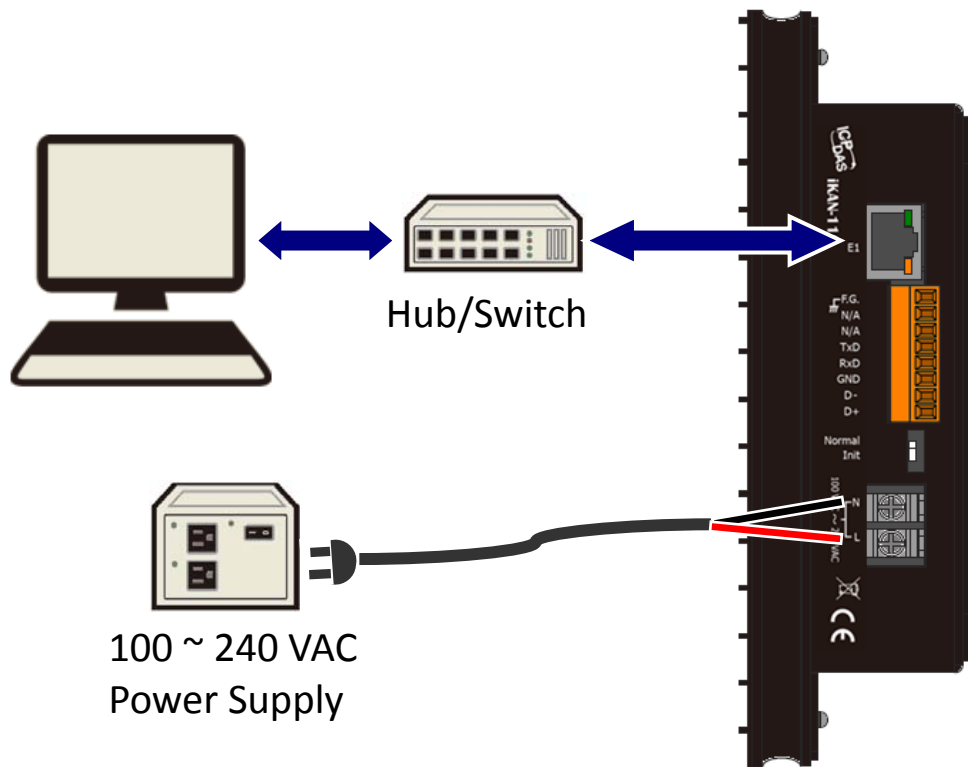

## 2 Assigning a New IP Address for iKAN


1. Power on the computer and your iKAN display.
2. Set the IP address on your computer.

The iKAN series display comes with a default IP address of 192.168.255.1, you must choose an IP address for the computer in the range of 192.168.255.2 – 192.168.255.253 that is not already in use.


**NOTE:** Details on how to change the IP address on your computer depend upon the type architecture and operating system you are using. Search for “IP Addressing” within your computer's local Help and Support functionality for detailed information.

**NOTE:** Remember the original IP address on the computer for restoring it later.

- Open web browser and go to the website at <http://192.168.255.1>, where 192.168.255.1 is the IP address in your iKAN display.

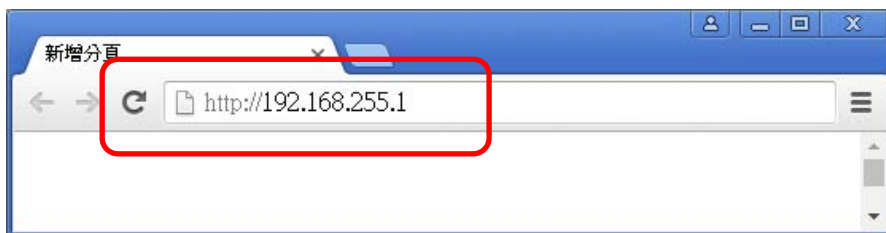


- Assign IP address, mask, and gateway address for the iKAN display.

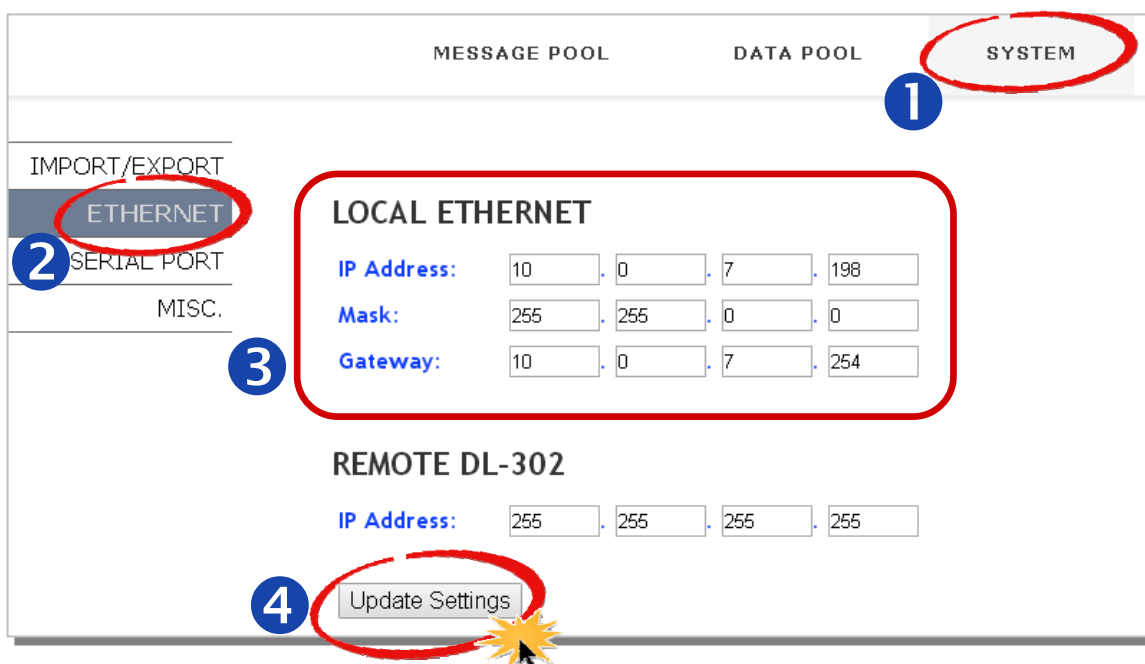

<b>1</b>	Click on the <b>SYSTEM</b> tab at the top of the iKAN page.
<b>2</b>	Click on the <b>ETHERNET</b> at the left side.
<b>3</b>	Assign a valid IP address, subnet mask and gateway address to the <b>LOCAL TEHRTNET</b> field. Make sure that the IP address you pick is not used by another device on the network.
<b>4</b>	Click on the <b>Update Settings</b> button. The display will auto restart to take new settings in effect.
<b>5</b>	Restore the original IP address for the PC.

# 3 Message Editing

Open a web browser and go to the website at <http://xxx.xxx.xxx.xxx>, where xxx.xxx.xxx.xxx is the new IP address for your iKAN display.

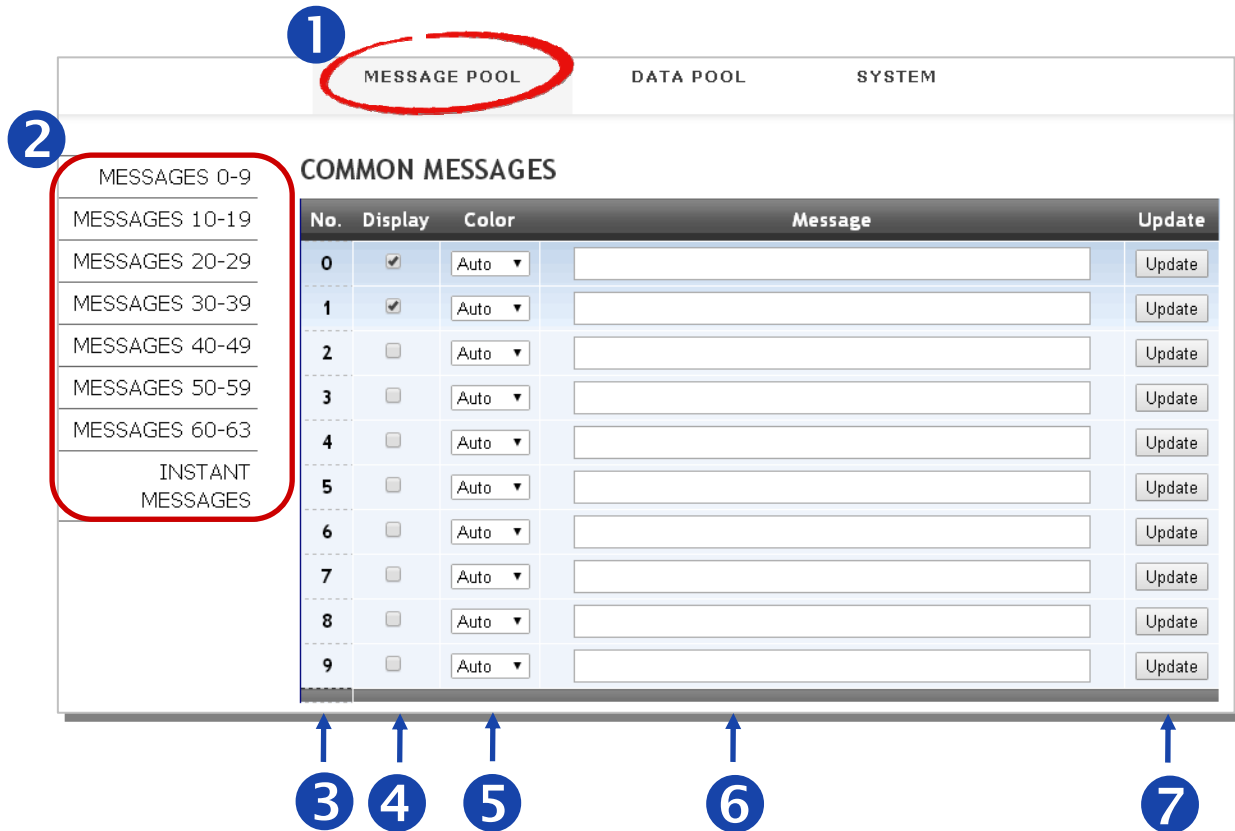

- |   |   |
|---|---|
| 1 | Click on the <b>MESSAGE POOL</b> tab at the top of the page.                    |
| 2 | Click on the group name for which the message you want to edit belongs to.      |
| 3 | Confirm the message number.   |
| 4 | Check the checkbox to display the message, or uncheck it to hide the message.   |
| 5 | Select the text color.  |
| 6 | Edit your message.  |
| 7 | Click on the <b>Update</b> button for this message to update the configuration. |