

## Install the driver on Windows 7

## Follow those steps:

6. Click



**1.** Setup the Windows driver.(For example:PCI-1002)

You can get the driver from: CD:\NAPDOS\PCI\PCI-1002\DLL\_OCX\ http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/pci-1002/dll\_ocx/



- **2.** Click **button** to start installation.
- **3.** Click button to install driver into the default folder.
- **4**. Click **button** to continue installation.
- 5. Installation the following windows will appear, select the

"Install this driver software anyway (I)" and continue it.



button to reboot the PC.



PIO Series	PISO	PCI Series	<b>PEX/FRB Series</b>
PIO-D168, PIO-D144/D144U, PIO-D96/D96U, PIO-D64/D64U, PIO-D56/D56U, PIO-D48/D48U, PIO-D24/D24U	PISO-P64/C64/A64, PISO-730/730A PISO-P32C32/P32C32U, PISO-P32A32, PISO-P32S32WU PISO-P16R16U PISO-P8R8, PISO-P8SSR8AC, PISO-P8SSR8DC	PCI-1202L/H, PCI-1202LU/1202HU PCI-1602, PCI-1602F PCI-1602U, PCI-1602FU PCI-1800L/H, PCI-1802L/H	PEX-P16R16i
PIO-DA16/DA8/DA4 PIO-DA16U/DA8U/DA4U PISO-DA16U/DA8U/DA4 U	PISO-725	PCI-P16R16, PCI-P8R8 PCI-P16C16, PCI-P16POR16	FRB-100/100U, FRB-200/200U
PIO-821	PISO-DA2/DA2U	PCI-822LU, PCI-826LU	PEX-D48
		PCI-1002L/H PCI-1002LU/1002HU	
		PCI-M512/M512U	
		PCI-TMC12A	

Writer: Dan Huang (2010/01)

## The ICP DAS Web Site

http://www.icpdas.com



- Technical support
- Supplies and ordering information
- Ways to enhance your device
- FAQ
- Application story

Contact Us Service@icpdas.com

Copyright ©2009 by ICP DAS Co., Ltd. All right are reserved