

# i-8092F 快速上手手冊

(Version 2.3)

i-8092 C++ 巨集指令函式庫快速上手  
PAC WinCon-8000、WinPAC、I-8000 系列控制器  
(適用於 i-8092F)



**ICP DAS CO., LTD.**

泓格科技股份有限公司

---

## Warranty

All products manufactured by ICPDAS Inc. are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

## Warning

ICPDAS Inc. assumes no liability for damages consequent to the use of this product. ICPDAS Inc. reserves the right to change this manual at any time without notice. The information furnished by ICPDAS Inc. is believed to be accurate and reliable. However, no responsibility is assumed by ICPDAS Inc. for its use, or for any infringements of patents or other rights of third parties resulting from its use.

## Copyright

Copyright 1997-2005 by ICPDAS Inc., LTD. All rights reserved worldwide.

## Trademark

The names used for identification only maybe registered trademarks of their respective companies.

## License

The user can use, modify and backup this software on a single machine. The user may not reproduce, transfer or distribute this software, or any copy, in whole or in part.

# 目錄

|   |    |
|---|----|
| I-8092 C++ 巨集指令函式庫快速上手 .....                          | 1  |
| 1 I-8092/F 運動控制器模組簡介 .....                            | 7  |
| 1.1 i-8092/F簡介.....                                   | 7  |
| 1.2 硬體規格.....   | 8  |
| 1.2.1 主要規格 .....                                      | 8  |
| 1.2.2 補間功能 .....                                      | 8  |
| 1.2.3 輸出脈衝 .....                                      | 8  |
| 1.2.4 編碼器輸入.....                                      | 9  |
| 1.2.5 位置計數器.....                                      | 9  |
| 1.2.6 伺服馬達輸入訊號 Servo Motor Input Signal.....          | 9  |
| 1.2.7 極限訊號輸入.....                                     | 9  |
| 1.2.8 其它輸入訊號 Other Input Signals .....                | 9  |
| 1.2.9 緊急停止訊號輸入, Emergency Stop Signal Input .....     | 10 |
| 1.2.10 一般輸出訊號 General Output Signal .....             | 10 |
| 1.2.11 整合輸入濾波器Contents of integral type filters ..... | 10 |
| 1.2.12 軟體極限 .....                                     | 10 |
| 1.2.13 手動外部輸入信號驅動.....                                | 10 |
| 1.2.14 模組狀態顯示LED .....                                | 10 |
| 1.2.15 FRnet分散式DI/O (i8092F 專用功能) .....               | 10 |
| 1.3 環境參數Environment.....                              | 11 |
| 1.4 採購資訊Ordering Information .....                    | 11 |
| 2 硬體接線.....   | 12 |
| 2.1 i-8092 檢查包裝,及安裝 .....                             | 12 |
| 2.1.1 檢查包裝 .....                                      | 12 |
| 2.1.2 i-8092 安裝 .....                                 | 12 |
| 2.2 DN-8237GB 端子板.....                                | 13 |
| 2.2.1 腳位定義 .....                                      | 14 |

|  |           |
|--|-----------|
| 2.2.2 功能選擇及開關設定 .....                                  | 19        |
| 2.3 I/O 輸出介面 .....                                     | 21        |
| 2.3.1 脈波輸出介面 .....                                     | 21        |
| 2.3.2 極限開關接線(Connection for Limit switch Signal) ..... | 22        |
| 2.3.3 一般DI輸入接線(nINPOS,nALARM) .....                    | 23        |
| 2.3.4 Encoder輸入接線(Encoder Signals) .....               | 24        |
| 2.3.5 外部輸入脈波接線(external pulse signal) .....            | 24        |
| 2.3.6 緊急停止輸入接線(emergency stop signal) .....            | 25        |
| 2.3.7 外部信號輸入接線(EXP+,EXP-) .....                        | 25        |
| 2.3.8 Servo On/Off信號輸出接線(ENABLE) .....                 | 26        |
| 2.4 接線範例 .....   | 27        |
| <b>3 I-8092F 軟體開發程序 .....</b>                          | <b>28</b> |
| 3.1 軟體開發測試程序概觀 .....                                   | 28        |
| 3.1.1 註冊軸卡 .....                                       | 29        |
| 3.2 安全IO規劃(會使Motion不動作原因) .....                        | 29        |
| 3.2.1 緊急開關輸入 .....                                     | 29        |
| 3.2.2 設定伺服馬達異常ALARM輸入參數 .....                          | 29        |
| 3.2.3 設定各軸前後硬體極限 .....                                 | 29        |
| 3.2.4 設定各軸前後軟體極限 .....                                 | 29        |
| 3.3 檢查是否有錯誤(GET_ERROR) .....                           | 30        |
| 3.4 Motion 基本設定 .....                                  | 30        |
| 3.5 Motion 動作測試(手動外部輸入)(如需要) .....                     | 30        |
| 3.6 軸歸零 .....  | 32        |
| 3.6.1 軸歸零 .....  | 32        |
| 3.7 Motion 基本運作 .....                                  | 33        |
| 3.7.1 一般運動控制速度曲線分類 .....                               | 33        |
| 3.7.2 單軸Motion 基本設定 .....                              | 34        |
| 3.7.3 單軸Motion 基本動作 .....                              | 34        |
| 3.7.4 兩軸補間(向量)Motion 基本設定 .....                        | 35        |

|  |           |
|--|-----------|
| 3.7.5 多軸補間Motion 基本動作 .....  | 35        |
| 3.8 Motion 進階運動 .....  | 36        |
| <b>4 軟體快速上手 .....</b>  | <b>37</b> |
| <b>4.1 WinCon eVC++ .....</b>  | <b>37</b> |
| 4.1.1 確認相關檔案 .....   | 37        |
| 4.1.2 新增一eVC++應用程式專案 .....   | 37        |
| 4.1.3 在eVC++專案中加入I8092.h.....  | 39        |
| 4.1.4 在eVC++ 專案中加入參考路徑.....  | 40        |
| 4.1.5 在eVC++ 專案中開始應用 .....   | 41        |
| 4.1.6 編譯專案成可執行檔 .....  | 44        |
| 4.1.7 下載與執行.....   | 45        |
| <b>4.2 WinCon Microsoft Visual Studio .NET 2003(VB.NET , C#) .....</b> | <b>45</b> |
| 4.2.1 確認相關檔案 .....   | 45        |
| 4.2.2 開一新專案.....   | 45        |
| 4.2.3 在專案中加入參考DLL.....   | 47        |
| 4.2.4 開始程式撰寫 .....   | 48        |
| 4.2.5 建置專案 .....   | 51        |
| 4.2.6 下載與執行.....   | 51        |
| <b>4.3 I-8000 Turbo C .....</b>  | <b>52</b> |
| 4.3.1 確認相關檔案 .....   | 52        |
| 4.3.2 使用TC ++ 來編譯程式的方式如下： .....  | 52        |
| 4.3.3 開一新專案.....   | 52        |
| 4.3.4 撰寫程式 .....   | 54        |
| 4.3.5 撰編譯連結程式 .....  | 59        |
| 4.3.6 Download 程式到I-8000 系列PAC控制器.....                                 | 59        |
| <b>A 附錄 .....</b>  | <b>61</b> |
| <b>A.1 i-8092 開發環境安裝內容 .....</b>                                       | <b>61</b> |
| A.1.1 eVC ++ 4.0.....  | 61        |
| A.1.2 Visual Studio .NET 2003(VB.NET , C#) .....                       | 61        |
| A.1.3 Turbo C(BC).....   | 61        |
| <b>A.2 i-8092 概觀 .....</b>   | <b>62</b> |
| <b>A.3 外觀尺寸.....</b>   | <b>63</b> |

|                   |    |
|-------------------|----|
| A.4 版本更新內容註解..... | 64 |
|-------------------|----|

## 附錄 B OTHER TERMINAL BOARDS ..... 65

|                                    |    |
|------------------------------------|----|
| B.1 DN-8237-DB Daughter Board..... | 65 |
|------------------------------------|----|

|   |    |
|---|----|
| B.1.1 Board Layout for DN-8237-DB ..... | 65 |
|---|----|

|   |    |
|---|----|
| B.1.2 Signal Connections for DN-8237-DB ..... | 66 |
|---|----|

|                                       |    |
|---------------------------------------|----|
| B.1.3 Jumper and Switch Settings..... | 71 |
|---------------------------------------|----|

|                                     |    |
|-------------------------------------|----|
| B.2 DN-8237-MB Daughter Board ..... | 74 |
|-------------------------------------|----|

|  |    |
|--|----|
| B.2.1 Board Layout for DN-8237-MB..... | 74 |
|--|----|

|   |    |
|---|----|
| B.2.2 Signal Connections for DN-8237-MB ..... | 75 |
|---|----|

|                                       |    |
|---------------------------------------|----|
| B.2.3 Jumper and Switch Settings..... | 82 |
|---------------------------------------|----|

|                                     |    |
|-------------------------------------|----|
| B.3 DN-8237-PB Daughter Board ..... | 84 |
|-------------------------------------|----|

|   |    |
|---|----|
| B.3.1 Board Layout for DN-8237-PB ..... | 84 |
|---|----|

|   |    |
|---|----|
| B.3.2 Signal Connections for DN-8237-PB ..... | 85 |
|---|----|

|                                       |    |
|---------------------------------------|----|
| B.3.3 Jumper and Switch Settings..... | 90 |
|---------------------------------------|----|

|                                    |    |
|------------------------------------|----|
| B.4 DN-8237-YB Daughter Board..... | 92 |
|------------------------------------|----|

|   |    |
|---|----|
| B.4.1 Board Layout for DN-8237-YB ..... | 92 |
|---|----|


|   |    |
|---|----|
| B.4.2 Signal Connections for DN-8237-YB ..... | 93 |
|---|----|

|                                       |    |
|---------------------------------------|----|
| B.4.3 Jumper and Switch Settings..... | 98 |
|---------------------------------------|----|

# 1 i-8092/F 運動控制器模組簡介

## 1.1 i-8092/F 簡介

i-8092/F 是一個支援 2 軸 步進/伺服 馬達運動控制模組，輸出 Pulse 可高達 4M PPS，配合泓格公司 I-8000、W-8000、WP8000 等控制器上。i-8092 運動控制模組適合一般運動控制應用，提供非常多的運動控制功能讓客戶使用，例如 2 軸直線補間、2 軸圓(弧)補間、T/S 加減速曲線、原點返回運動等等，而 i-8092 在執行上述功能時，並不需耗用 I-8000、WinCon、LinCon 系統資源，CPU 可同時監控其他執行狀態，由於只耗用少量系統資源，因此可以在 I-8000、WinCon-8000、LinCon-8000 插上多個 i-8092 模組，以多軸(2、4....)運動控制於同一控制器上。泓格亦提供相當多的範例程式及巨集功能，以減少程式設計的工時，符合低成本高效能的運動控制系統設計平台。

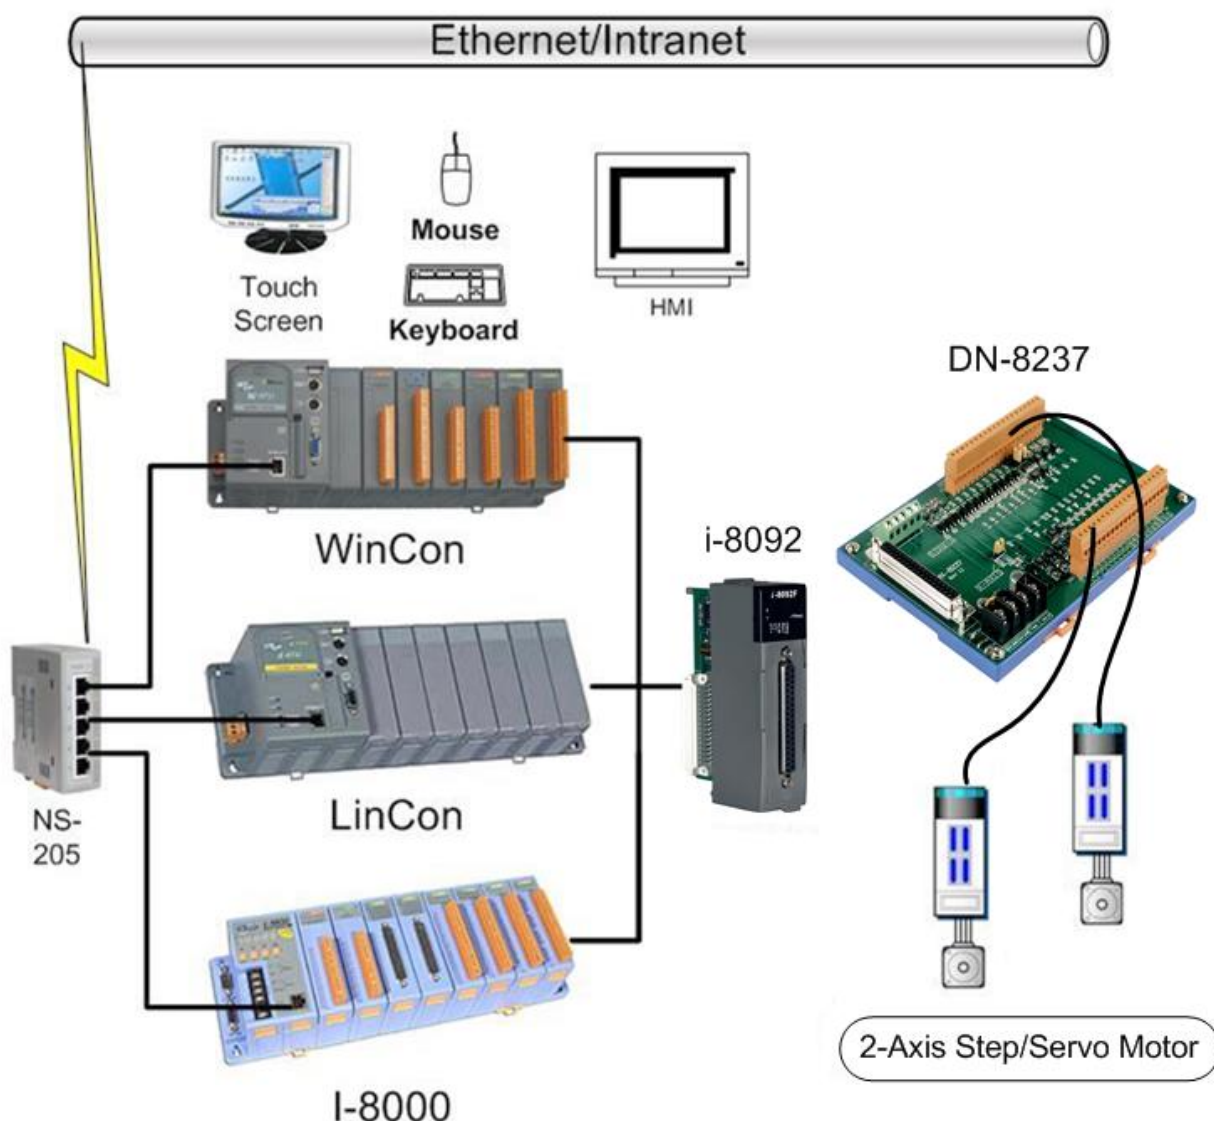

i-8092 與控制器規劃圖 (I-8000、W-8000、WP8000)

## 1.2 硬體規格

### 1.2.1 主要規格

- |            |                    |
|------------|--------------------|
| ■ 控制晶片     | MCX312             |
| ■ 控制軸數     | 2 軸,脈波式輸出(步進或伺服馬達) |
| ■ 最大輸出脈波速度 | 4 M PPS            |

### 1.2.2 補間功能

#### 2-軸 直線補間

- |           |                         |
|-----------|-------------------------|
| ■ 每一軸補間區間 | -8,388,607 ~ +8,388,607 |
| ■ 補間向量速度  | 1 PPS ~ 4 M PPS         |
| ■ 補間精度    | ± 0.5 LSB               |

#### 圓弧補間

- |           |                         |
|-----------|-------------------------|
| ■ 每一軸補間區間 | -8,388,607 ~ +8,388,607 |
| ■ 補間向量速度  | 1 PPS ~ 4 M PPS         |
| ■ 補間精度    | ± 1 LSB                 |

#### 位元補間

- |          |   |
|----------|---|
| ■ 補間向量速度 | 1 ~ 4 MPPS (Dependent on CPU data writing time) |
|----------|---|

#### 相關補間功能

- 固定向量速度
- 可連續補間

### 1.2.3 輸出脈衝

- |                   |   |
|-------------------|---|
| ■ 脈衝輸出速度範圍        | 1 PPS ~ 4 MPPS  |
| ■ 脈衝輸出精度          | ± 0.1%  |
| ■ S-曲線衡量(Jerk) 範圍 | 954 ~ 62.5 x 10 <sup>6</sup> PPS/S <sup>2</sup><br>477 x 10 <sup>3</sup> ~ 31.25 x 10 <sup>9</sup> PPS/S <sup>2</sup> |
| ■ 加減速範圍           | 125 ~ 1 x 10 <sup>6</sup> PPS/S<br>62.5x10 <sup>3</sup> ~ 500 x 10 <sup>6</sup> PPS/S                                 |
| ■ 速度精度            | 1 PPS 到 500PPS(依最高速而定)  |
| ■ 脈衝輸出數           | 0 ~ 268,435,455 (定量驅動)  |
| ■ 速度曲線型態:         |   |
| ◆ 定速              |   |
| ◆ 對稱與非對稱線性加減速     |   |



#### ◆ 對稱S型加減速

- 減速度模式
  - ◆ 自動(對稱線性加減速) Auto
  - ◆ 自訂
- 於驅動中途可以動態改變速度及脈波數
- 定數脈波輸出可以用 T/S-曲線加減速
- 可選脈波輸出為CW/CCW 或 PULSE/DIR 方式
- 可以選擇邏輯準位

### 1.2.4 編碼器輸入

- 可選擇 A/B 相脈衝輸入或 Up/Down 脈衝輸入
- 可選擇 1、2 及 4 除頻 (A/B 相脈衝輸入)
- 編碼器輸入可設定反方向

### 1.2.5 位置計數器

- 指令位置計數器範圍 -2,147,483,648 ~ +2,147,483,647
- 實際位置(編碼器輸入)計數器範圍 -2,147,483,648 ~ +2,147,483,647
- 可設定為環狀計數器功能(圓位置)
- 編碼器輸入可設定反方向
- 位置計數器可以讀取，也可以設定

### 1.2.6 伺服馬達輸入訊號 Servo Motor Input Signal

- 警告 (Alarm)
- 可選擇伺服到位(In Position Check) 或 伺服就序(Servo Ready)
- 可以選擇 有效/無效 及 邏輯準位

### 1.2.7 極限訊號輸入

- 各軸 2 個極限訊號輸入+ 極限, - 極限
- 可以選擇 邏輯準位 及 碰觸極限後可 減速停或急停

### 1.2.8 其它輸入訊號 Other Input Signals

- 各軸 IN3 可以用來做一般DI輸入用途

## 1.2.9 緊急停止訊號輸入, Emergency Stop Signal Input

- 每一模組提供一個緊急停止信號輸入

## 1.2.10 一般輸出訊號 General Output Signal

- 各軸 nOUT0 作為一般 DO On/Off 信號
- 各軸 nOUT1 作為控制 Servo On/Off 信號

## 1.2.11 整合輸入濾波器 Contents of integral type filters

- 對模組中一般DI輸入信號可以設定雜訊數位濾波(時間參數)功能

## 1.2.12 軟體極限

- 各軸可支援 2 個軟體極限 + 極限, - 極限 (-2,147,483,646 ~ +2,147,483,646)

## 1.2.13 手動外部輸入信號驅動

- 固定Pulse數驅動(Fixed Pulse Driving Mode)
- 連續Pulse驅動(Continuous Pulse Driving Mode)
- 手輪Pulse驅動(Manual pulsar mode)

## 1.2.14 模組狀態顯示 LED

- 紅燈 → 電源指示燈
- 橘燈 → Servo Alarm 指示燈 (驅動器輸出ON橘燈亮)  
例:三菱驅動器故障(ALM), 無異常時輸出ON, 橘燈亮
- 綠燈 → Motion 動作指示燈

## 1.2.15 FRnet 分散式 DI/O (i8092F 專用功能)

- DI → 128 點
- DO → 128 點

可搭配 FRnet I/O 模組動態增減點數

### 1.3 環境參數 Environment

- 工作溫度 -20 ~ + 75°C
- 儲存溫度 -30 ~ +85°C
- 工作濕度 10 ~ 85%，非結露non-condensing
- 儲存濕度 5 ~ 90%，非結露non-condensing
- I/O 信號隔離 2500Vrms
- 外部供給電壓 24V DC (接線子板)

### 1.4 採購資訊 Ordering Information

- I-8000、W-8000、WP8000 嵌入式控制器系列主機(請洽相關業務單位)
- i-8092F 2 軸運動控制器模組
- DN-8237GB i8092 端子板
- CA-3710DM 37 Pin Dsub 連接線 1M

---

## 2 硬體接線

---

### 2.1 i-8092 檢查包裝,及安裝

#### 2.1.1 檢查包裝

- i-8092/F 是一個支援 2軸 步進/伺服 馬達運動控制模組，須搭載於泓格公司I-8000、WinCon-8000、WinPAC等嵌入式控制器系列主機使用

#### 2.1.2 i-8092 安裝

##### 準備控制器

I-8000、W-8000、WP8000 嵌入式控制器系列主機(擇其一),並選用有空 IO 插槽之型號,請先將電源關閉。

##### 插入模組,及連接線

選一嵌入式控制器空IO插槽，將i-8092小心依導槽插入I-8000、W-8000、WP8000 嵌入式控制器,並用CA-3710DM聯接到 DN-8237GB配線端子板，如下圖：



i-8092 與控制器規劃圖 (I-8000、W-8000、WP8000)

## 2.2 DN-8237GB 端子板

DN-8237GB為泓格公司專為自家研發的PIS0-PS200及I-8092F等之兩軸運動控制卡所做的端子板，主要是提供給一般通用脈衝型之伺服或步進馬達的配接使用之端子板。

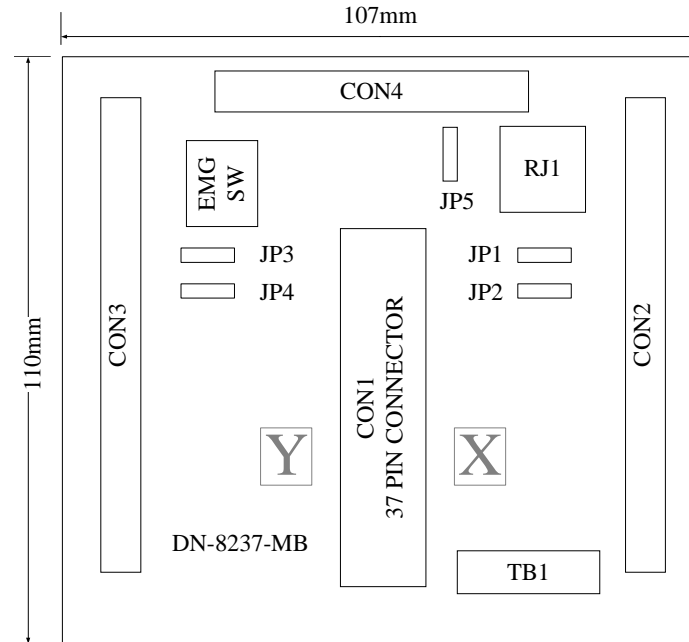


Fig. 2.0 DN-8237GB 位置圖

## 2.2.1 腳位定義

- CON1 接腳圖

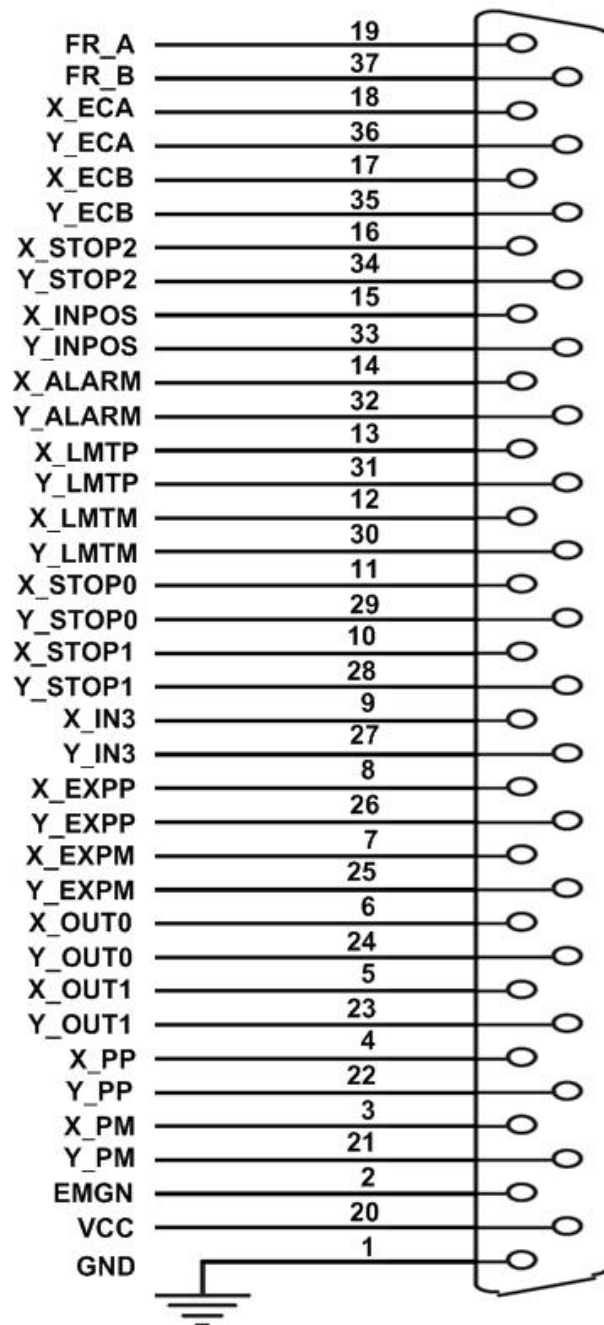


Fig. 2.2 DN-8237 連接線 I/O 腳位圖

Table 2.2 DN-8237 連接線 I/O 腳位說明 1

| Pin name | Pin number | Description                                  |
|----------|------------|--|
| FR_A     | 19         | FRnet A-phase signal                         |
| FR_B     | 37         | FRnet B-phase signal                         |
| X_ECA    | 18         | Encoder A-phase signal for the X axis        |
| Y_ECA    | 36         | Encoder A-phase signal for the Y axis        |
| X_ECB    | 17         | Encoder B-Phase signal for the X axis        |
| Y_ECB    | 35         | Encoder B-Phase signal for the Y axis        |
| X_STOP2  | 16         | Stop 2 signal for the X axis                 |
| Y_STOP2  | 34         | Stop 2 signal for the Y axis                 |
| X_INPOS  | 15         | In-position signal for the X axis            |
| Y_INPOS  | 33         | In-position signal for the Y axis            |
| X_ALARM  | 14         | Alarm signal for the X axis                  |
| Y_ALARM  | 32         | Alarm signal for the Y axis                  |
| X_LMTP   | 13         | Limit switch input signal (+) for the X axis |
| Y_LMTP   | 31         | Limit switch input signal (+) for the Y axis |
| X_LMTM   | 12         | Limit switch input signal (-) for the X axis |
| Y_LMTM   | 30         | Limit switch input signal (-) for the Y axis |
| X_STOP0  | 11         | Stop 0 signal for the X axis                 |
| Y_STOP0  | 29         | Stop 0 signal for the Y axis                 |
| X_STOP1  | 10         | Stop 1 signal for the X axis                 |
| Y_STOP1  | 28         | Stop 1 signal for the Y axis                 |
| X_IN3    | 9          | Input 3 signal for the X axis                |
| Y_IN3    | 27         | Input 3 signal for the Y axis                |
| X_EXPP   | 8          | EXT pulsar input signal (+) for the X axis   |
| Y_EXPP   | 26         | EXT pulsar input signal (+) for the Y axis   |
| X_EXPM   | 7          | EXT pulsar input signal (-) for the X axis   |
| Y_EXPM   | 25         | EXT pulsar input signal (-) for the Y axis   |
| X_OUT0   | 6          | Output 0 signal for the X axis               |
| Y_OUT0   | 24         | Output 0 signal for the Y axis               |
| X_OUT1   | 5          | Output 1 signal for the X axis               |
| Y_OUT1   | 23         | Output 1 signal for the Y axis               |
| XPP      | 4          | Driving pulsar signal (+) for the X axis     |
| YPP      | 22         | Driving pulsar signal (+) for the Y axis     |
| XPM      | 3          | Driving pulsar signal (+) for the X axis     |
| YPM      | 21         | Driving pulsar signal (+) for the Y axis     |
| EMGN     | 2          | Emergency stop input signal                  |
| VCC      | 20         | Module power (+5V)                           |
| GND      | 1          | Ground                                       |

■ CON2,3 X、Y 軸 I/O 信號接線

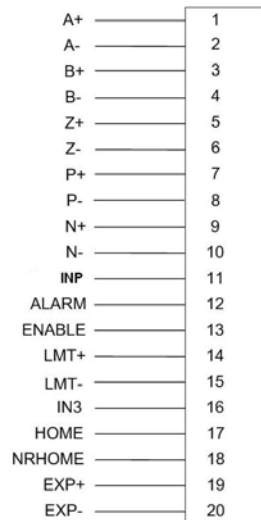


Fig. 2.3 CON2~3 腳位定義

Table 2.4 CON2/3

| Pin name | Description                         |
|----------|-------------------------------------|
| A+       | Encoder A-Phase (+)                 |
| A-       | Encoder A-Phase (-)                 |
| B+       | Encoder B-Phase (+)                 |
| B-       | Encoder B-Phase (-)                 |
| Z+       | Encoder Z-Phase (+)                 |
| Z-       | Encoder Z-Phase (-)                 |
| P+       | Positive Direction Pulse Output(+)  |
| P-       | Positive Direction Pulse Output(-)  |
| N+       | Negative Direction Pulse Output(+)  |
| N-       | Negative Direction Pulse Output(-)  |
| READY    | Servo Ready Input Signal            |
| ALARM    | Alarm Input Signal                  |
| ENABLE   | Driver Enable Output Signal (Servo) |
| LMT+     | Limit Switch Input Signal (+)       |
| LMT-     | Limit Switch Input Signal (-)       |
| IN3      | Input Signal (IN3)                  |
| HOME     | Home Sensor Input Signal            |
| NHOME    | Near Home Sensor Input Signal       |
| EXP+     | EXT Positive Direction Pulse (+)    |
| EXP-     | EXT Negative Direction Pulse (-)    |



## ■ CON4

為主要提供給客戶配接 FRNet, 外部緊急停止訊號及伺服的 RDY 等訊號使用. 詳細腳位內容如下列圖示及列表:

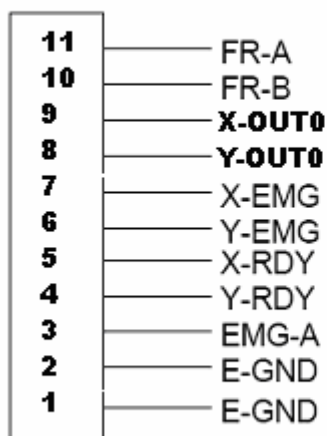


Fig.2-4 Pin definition for CON4

Table 2-4 CON4 Signal Connection

| Name          | Description                          |
|---------------|--------------------------------------|
| FR-A          | FRnet port A                         |
| FR-B          | FRnet port B                         |
| <b>X-OUT0</b> | <b>OUT0 output signal for X axis</b> |
| <b>Y-OUT0</b> | <b>OUT0 output signal for Y axis</b> |
| X-EMG         | EMG input signal for X axis          |
| Y-EMG         | EMG input signal for Y axis          |
| X-RDY         | Ready input signal for X axis        |
| Y-RDY         | Ready input signal for Y axis        |
| EMG-A         | EMG input signal for all axes        |
| E-GND         | EXT power ground                     |
| E-GND         | EXT power ground                     |

## ■ TB1

為端子板的電源入力配接點,腳位定義如下:

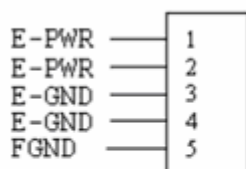


Fig.2i-4 Pin definition for TB1

Table 2-4 TB1 Signal Connection

| Pin name | Description           |
|----------|-----------------------|
| E-PWR    | EXT power supply +24V |
| E-GND    | EXT power ground      |
| FGND     | Frame ground          |

► **Note:** Don't reverse connect signals with E\_PWR and E\_GND. Serious damage to your motion card and motion controller might be happened.

## ■ RJ45

為現場方便配線,我們為 FR\_NET 另設計 RJ45 接頭,其腳位定義如下:

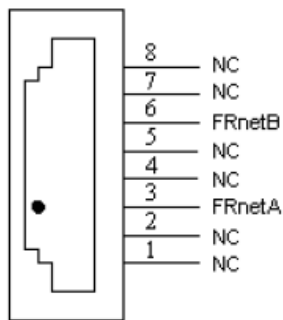


Table 3-5 RJ1

| Pin name | Description   |
|----------|---------------|
| FRnetA   | FRnet port A  |
| FRnetB   | FRnet port B  |
| NC       | No connection |

Fig. 3-5 Pin definition for RJ1

► **Note:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

**FRnet(For i8092F) 接線可以連接 FRnet 系列 IO 模組如 FR-2053,FR-2057....詳情請參考泓格網站:**

**[http://www.icpdas.com/products/Remote\\_IO/frnet/frnet\\_introduction.htm](http://www.icpdas.com/products/Remote_IO/frnet/frnet_introduction.htm)**

## 2.2.2 功能選擇及開關設定

### ■ JP5

Jumper 5 控制緊急停止輸入是否有接，1-2pin 短路為有接，2-3pin 短路為不接

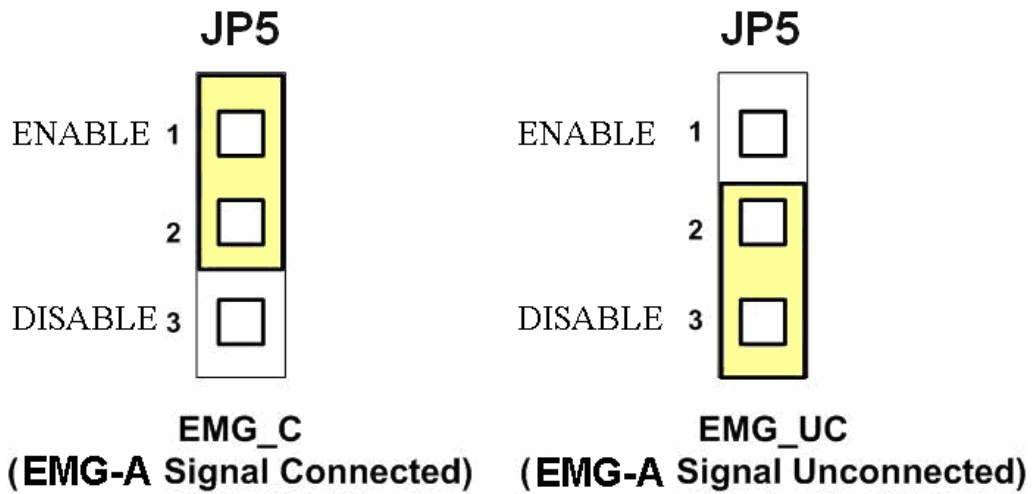


Fig. 2.5 Jumper 1 設定

### ■ JP1~JP4

Jumper 2、3 控制X軸(CON1) XPP、XPM 是用差動輸出 2-3pin 短路(Differential)，開集極輸出 1-2pin 短路(Open Collector)，其他 Y(JP4/5)一樣相同設定，如下圖範例

**注意：** 開集極輸出(Open Collector)，P+ (N+)和 EXT\_5V 短路，可供外部使用 (參考 Fig 2.10)。

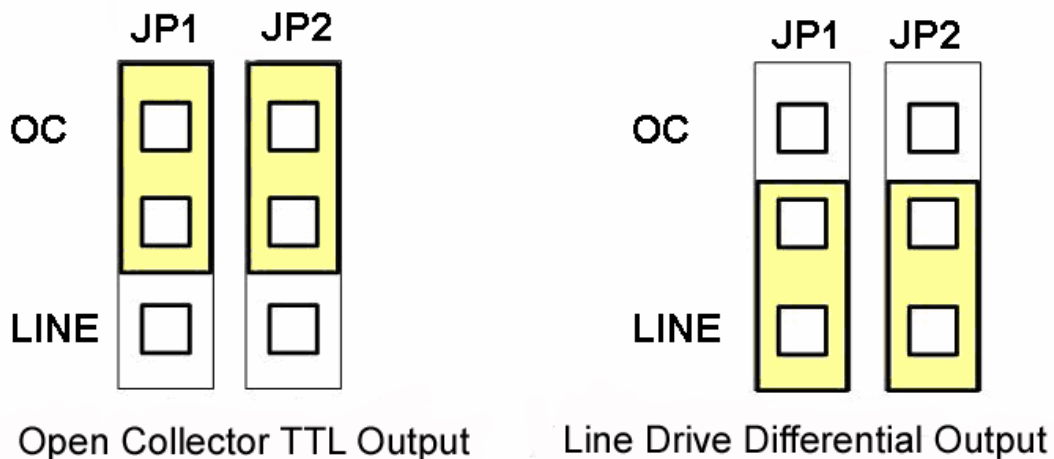


Fig. 2.6 Jumper 2, 3 設定

## ■ SW 1

伺服馬達的驅動器端的 EMG 點設定，當設定為 ON 代表為直接到 GND（預設值為 ON），反之則為讓使用者可以從 CON4 來連接到 GND 當成一個安全接點。

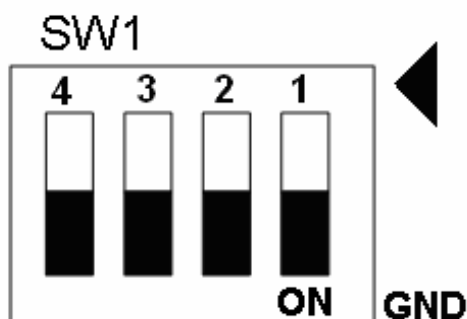


Fig. 2-7 SW1 setting for normally GND (Default setting)

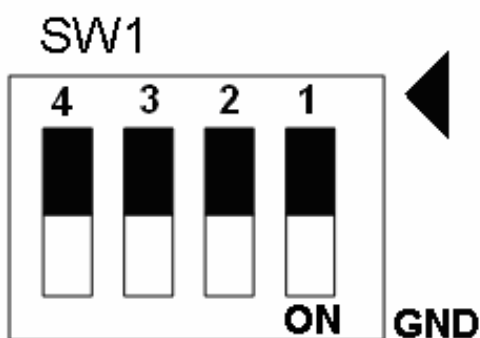


Fig. 2-8 SW1 setting for user controlled signals.

## 2.3 I/O 輸出入介面

### 2.3.1 脈波輸出介面

差動脈波輸出接線

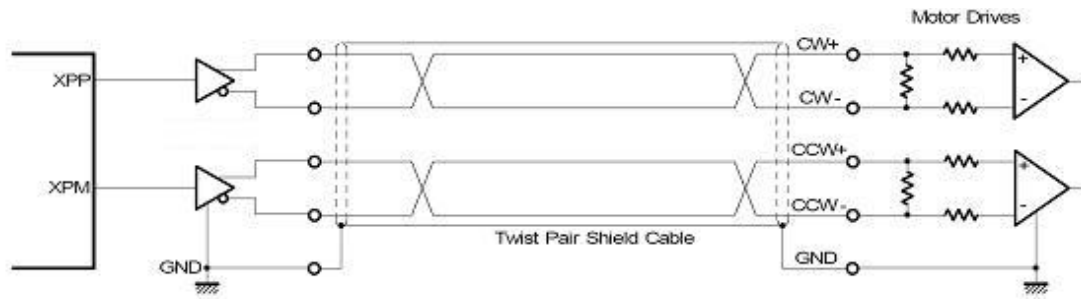


Fig. 2.8 差動脈波輸出接線

開集極輸出

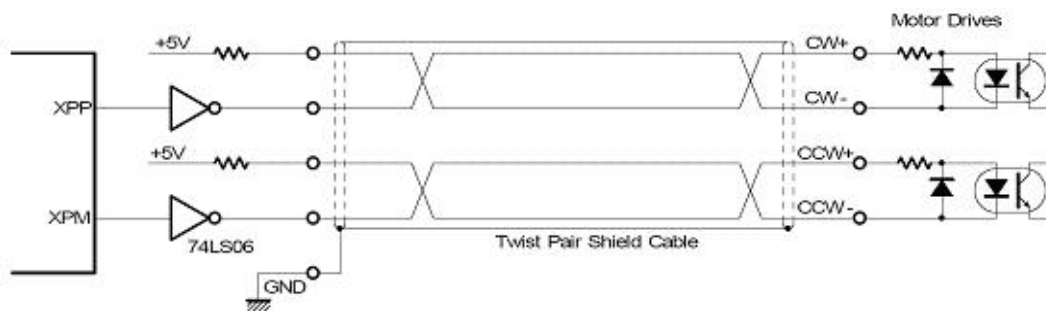


Fig. 2.9 開集極輸出

脈波信號接線範例

i-8092 脈波輸出命令，可以使用 CW/CCW 模式或用 PULSE/DIR 模式。利用 JP2 和 JP3 去選擇差動或開集極的接法。

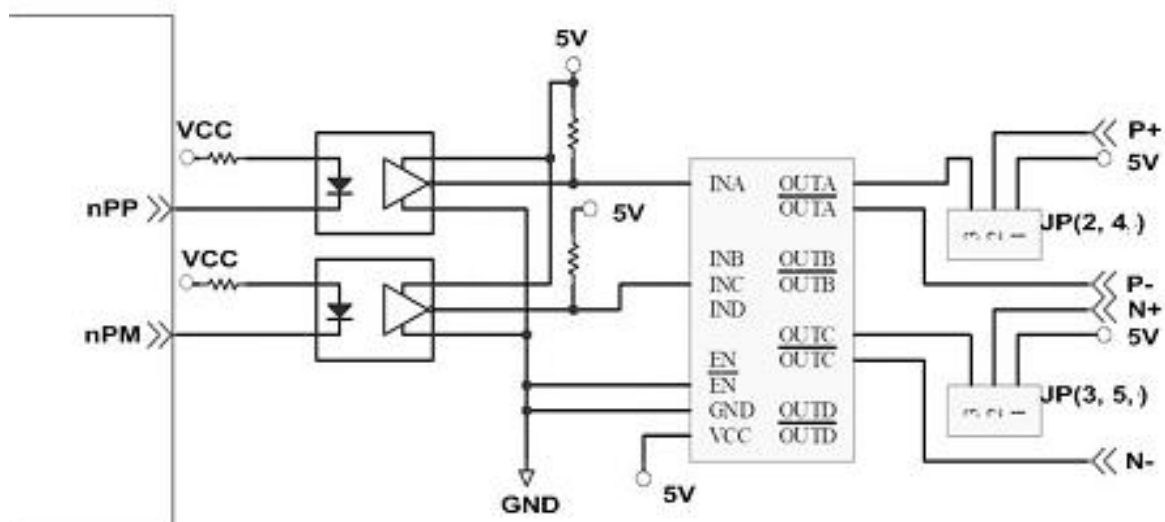


Fig. 2.10 脈波信號接線範例

## 2.3.2 極限開關接線(Connection for Limit switch Signal)

使用極限開關去防止機械過動作，設計者能透過本手冊的函式庫，去設定硬體極限開關的動作等級。下面圖例，極限開關信號的接續迴路是為了要隔離雜訊源。

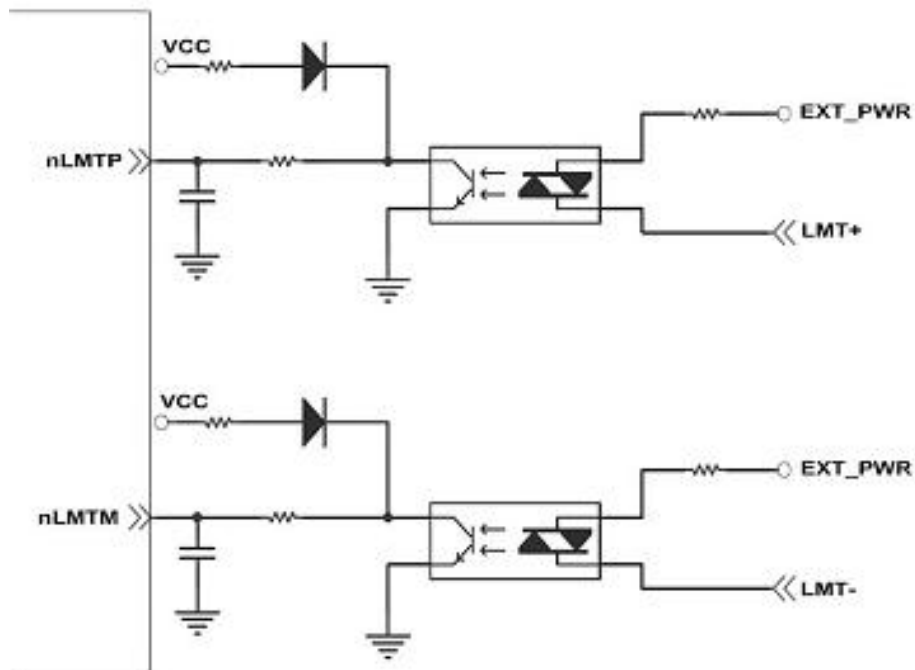


Fig. 2.11 極限開關接線範例

### 2.3.3 一般 DI 輸入接線(nINPOS,nALARM)

nINPOS 輸入信號，是伺服驅動器 in-Position 的檢查信號。設計者能透過本手冊的函式庫去 enable/disable 這個信號。硬體配線方面,使用者可以依照需求使用定位完成訊號(in-position)或伺服完成訊號(servo-ready)。

nALARM 輸入信號，是伺服驅動器警報輸出信號，當 I8092 收到這個信號可以停止輸出脈波。設計者能透過本手冊的函式庫去 enable/disable 這個信號。

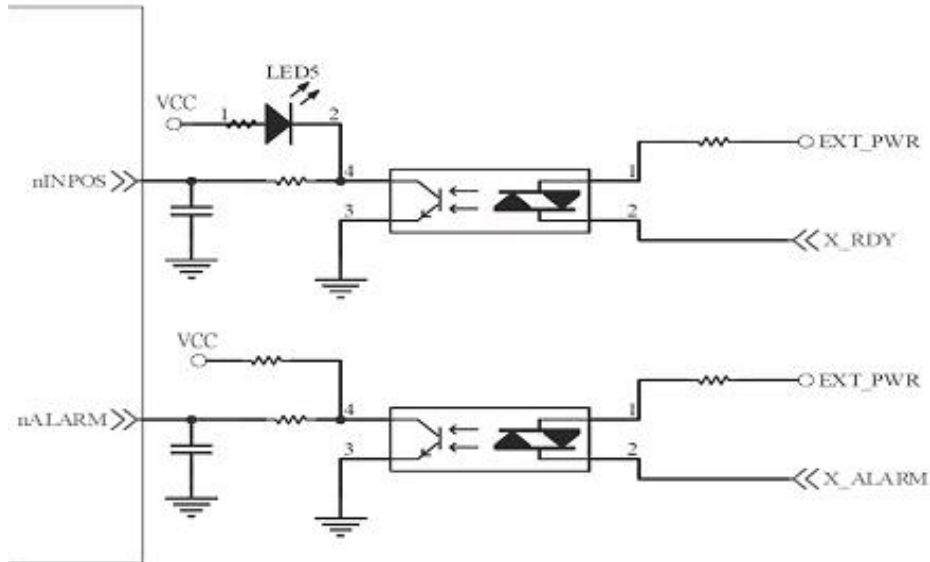


Fig. 2.12 一般 DI 輸入接線範例

### 2.3.4 Encoder 輸入接線(Encoder Signals)

下圖是一個 Encoder 輸入接線範例，是用差動輸入信號接法。要接 Encoder 輸入時，A 相請連接 A+、A-，B 相請連接 B+、B-，經過高速光耦合 IC 就直接連到運動控制晶片。

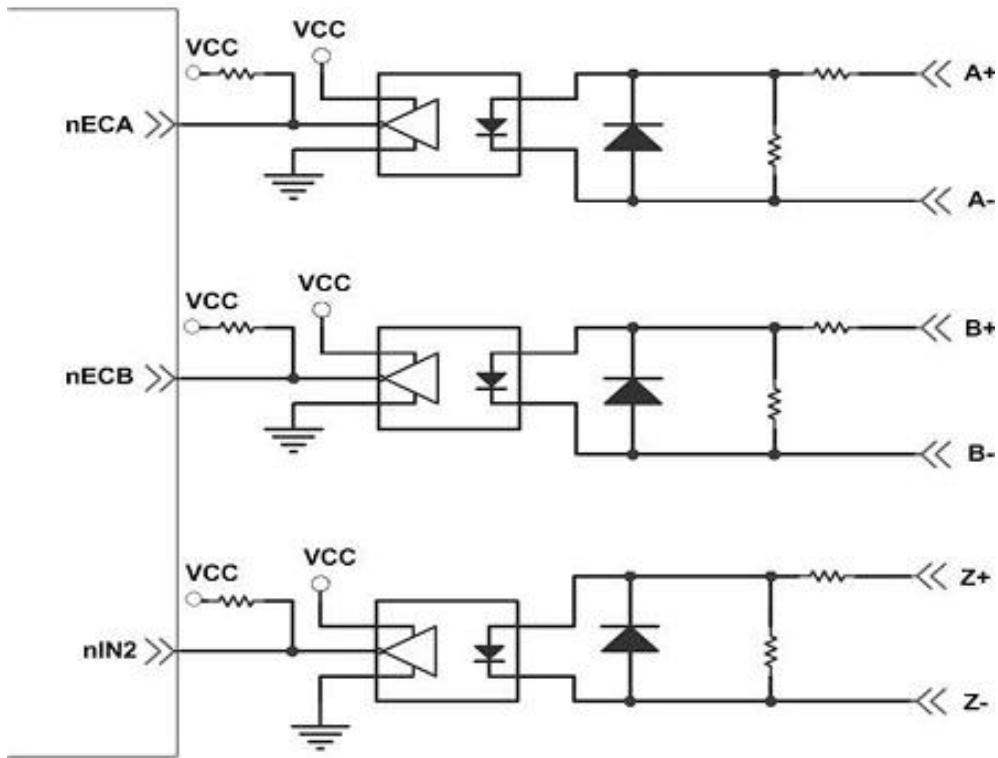


Fig. 2.13 Encoder 接線範例

### 2.3.5 外部輸入脈波接線(external pulse signal)

下圖是一個外部輸入脈波接線範例，經過高速光耦合 IC 就直接連到運動控制晶片。

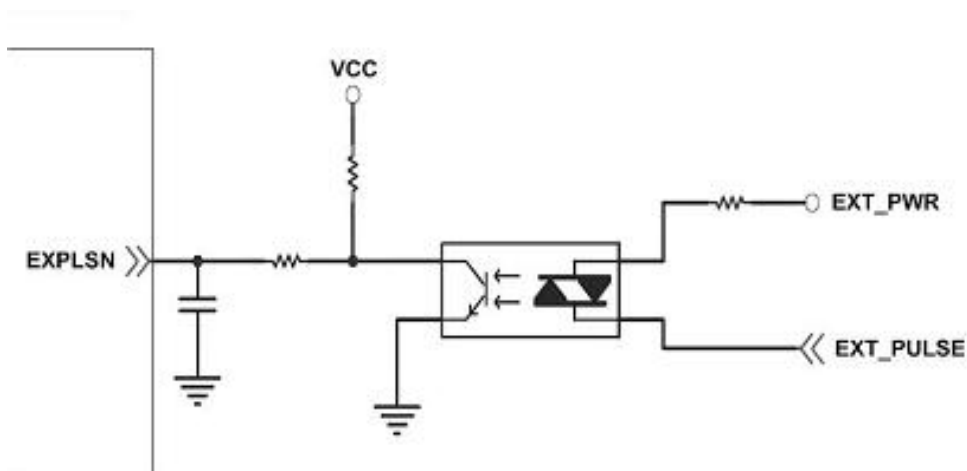


Fig. 2.14 外部輸入脈波接線範例



### 2.3.6 緊急停止輸入接線(emergency stop signal)

下圖是一個緊急停止輸入接線範例，當緊急停止輸入被按下時，所有軸會立即停止輸出，錯誤旗標將設為 1，這信號經過高速光耦合 IC 就直接連到運動控制晶片。

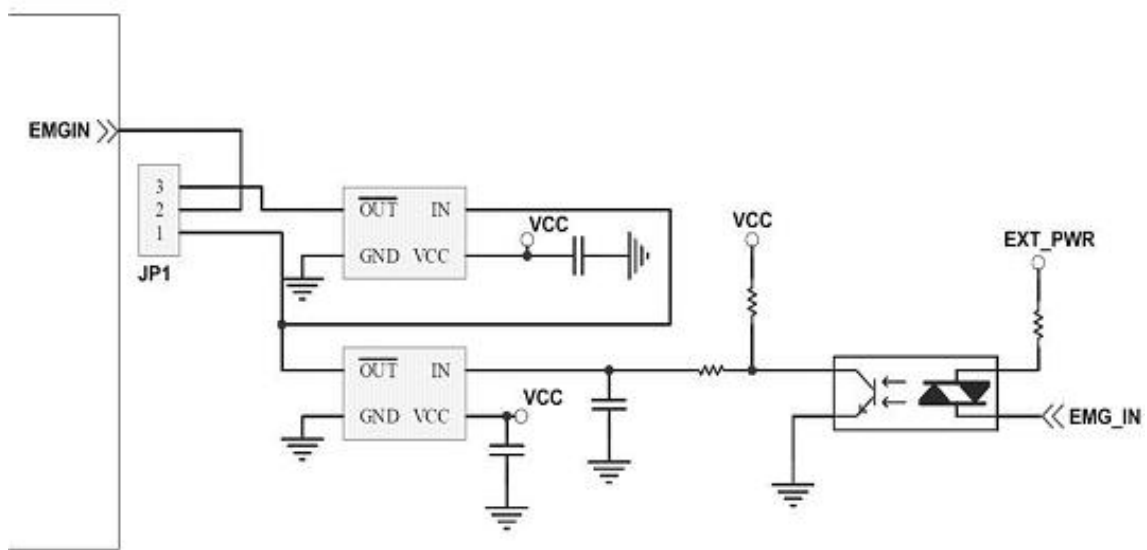


Fig. 2.15 緊急停止輸入接線範例

### 2.3.7 外部信號輸入接線(EXP+,EXP-)

本信號用於外部輸入驅動，下圖是外部信號 +/- 輸入接線範例，這輸入功能可用 5.1 章節中的固定脈波驅動、連續脈波驅動、手輪脈波驅動三個功能可以應用。

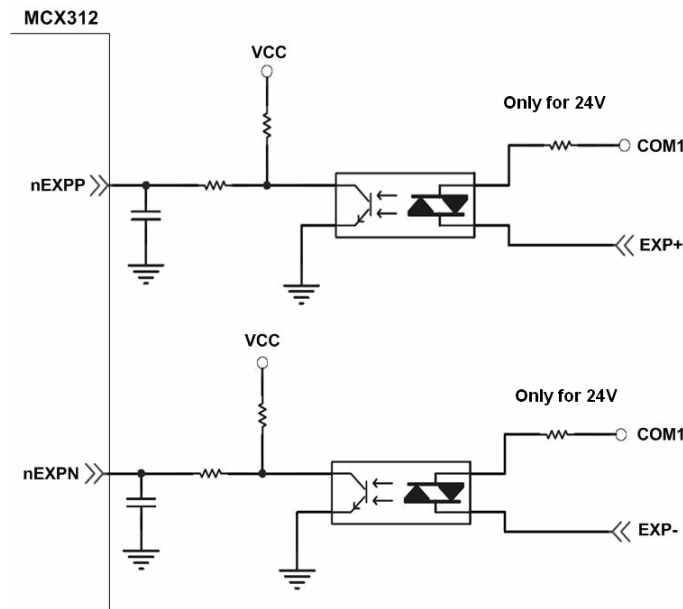


Fig. 2.16 外部信號 +/- 輸入接線範例

### 2.3.8 Servo On/Off 信號輸出接線(ENABLE)

下圖是 Servo On/Off 信號輸出接線範例，這輸出功能用於使每軸伺服馬達伺服啟動/關閉。

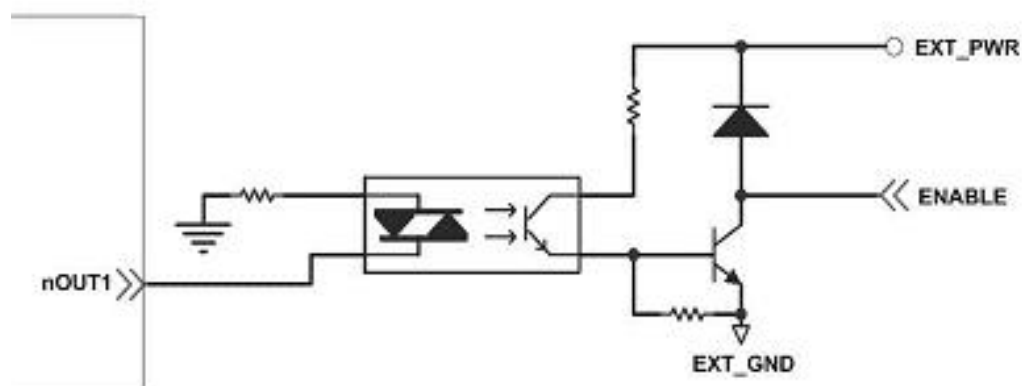


Fig. 2.17 Servo On/Off 信號輸出接線

## 2.4 接線範例

我們實際示範接 MITSUBISHI MR-J2S AC 伺服馬達，連接到 DN-8237 的接線腳位圖


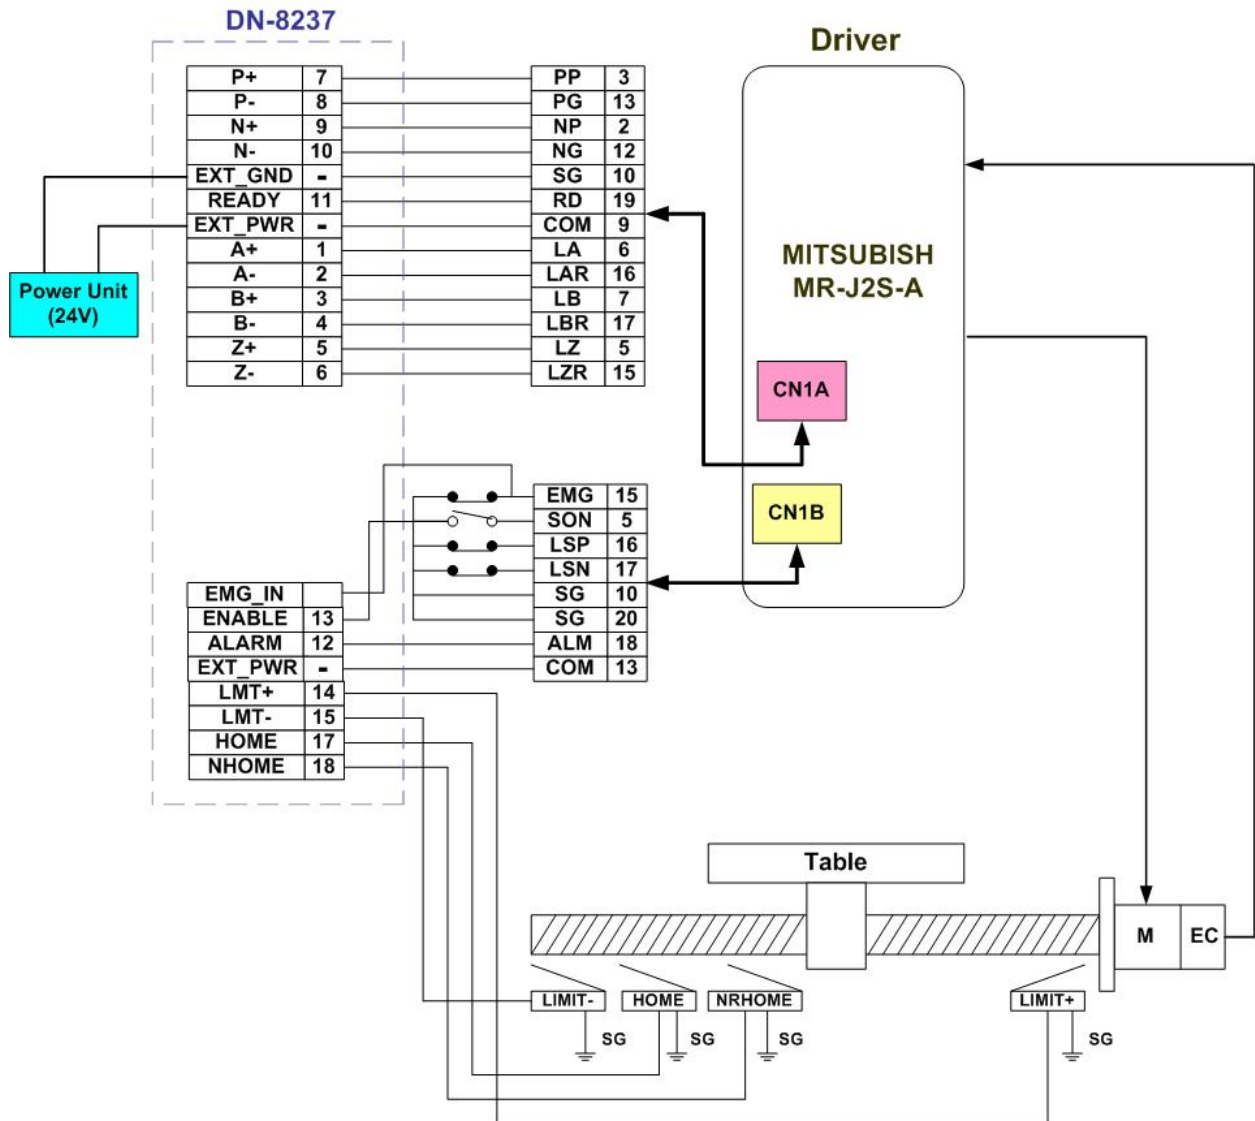


Fig. 2.18 MR-J2S AC 伺服馬達，連接到 DN-8237 的接線腳位圖

# 3 i-8092F 軟體開發程序

## 3.1 軟體開發測試程序概觀

詳細請參考:demo\_start 範例

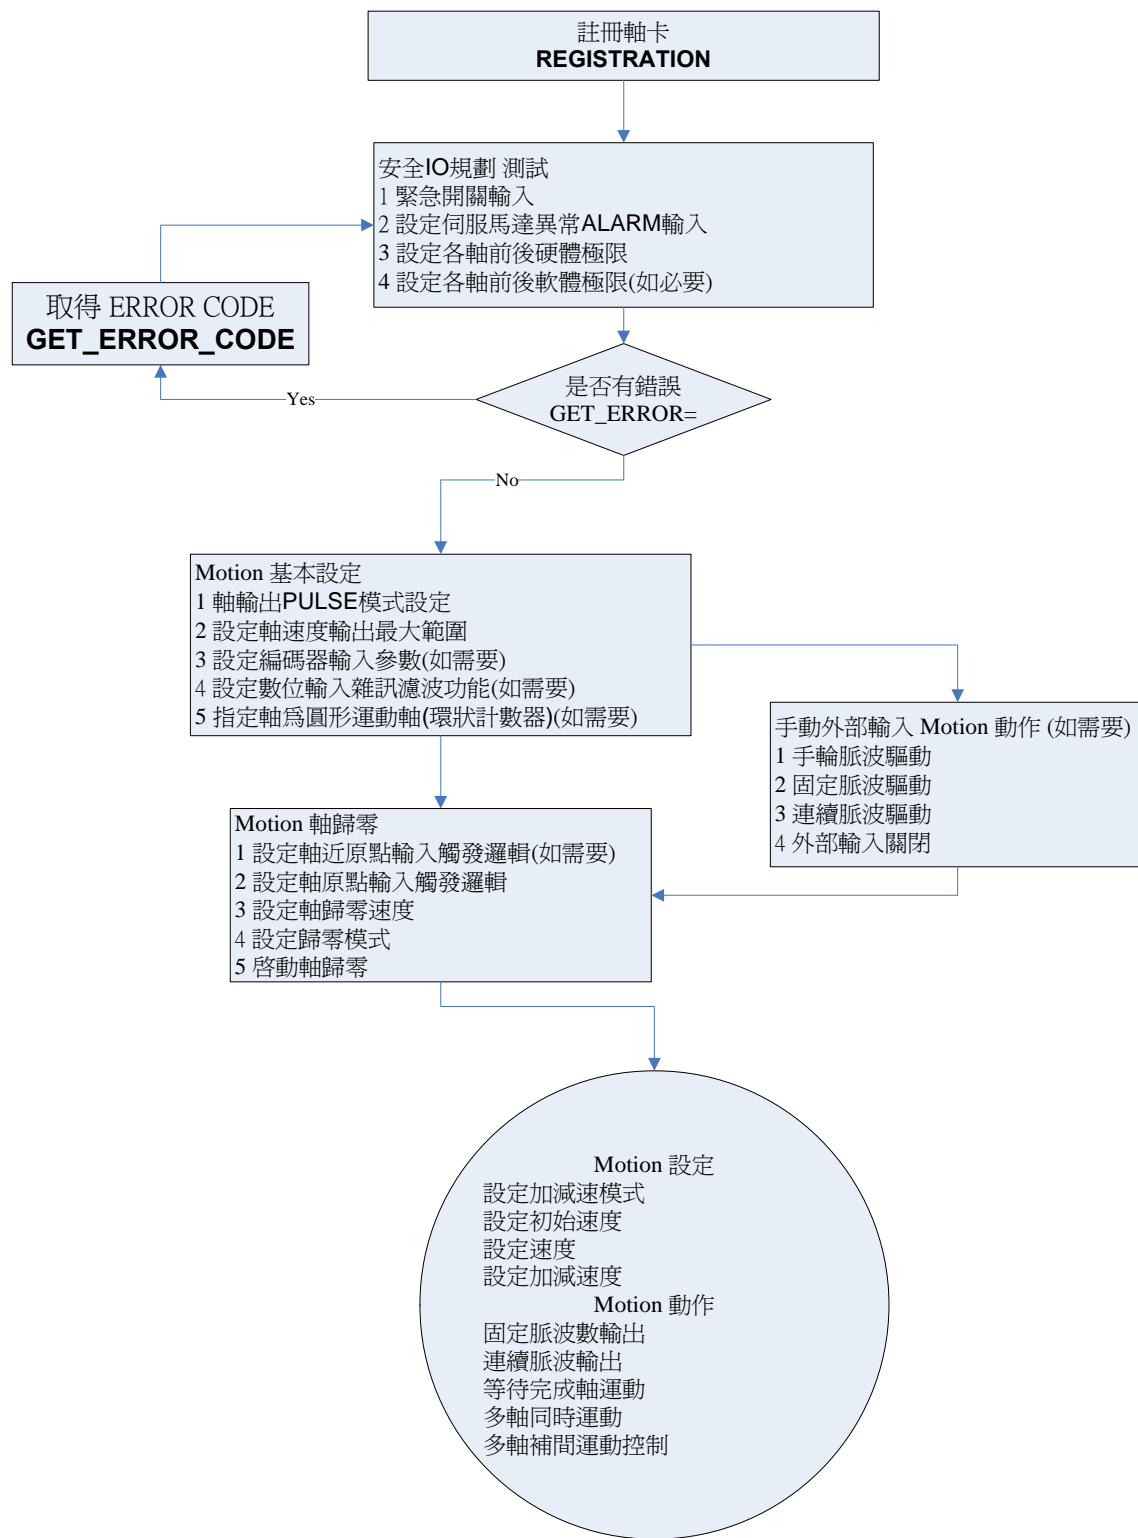

### 3.1.1 註冊軸卡

每一軸卡要使用之前一定要先註冊，才能下其他指令，否則會產生錯誤。

`i8092MF_REGISTRATION()`詳情請參考“i-8092 運動控制模組使用手冊” pdf 2.2。

## 3.2 安全 IO 規劃(會使 Motion 不動作原因)

### 3.2.1 緊急開關輸入

緊急開關，是為因應緊急狀況，讓使用者在緊急時可以立即使Motion 動作停止，以保護人機安全。

如果您不用緊急開關，在 1.2.3 的JP1接為2-3pin。

如果您要使用緊急開關，在 1.2.3 的JP1接為1-2pin，EMG\_IN 請連到常閉型(N.C.) 開關，並將開關安裝到適當位置。

### 3.2.2 設定伺服馬達異常 ALARM 輸入參數

是為因應伺服馬達ALARM發生時輸入，讓使用者可以判斷及處理，您可以選擇使用與否，與適當觸發邏輯。詳情請參考“i-8092運動控制模組使用手冊” pdf 2.13

`i8092MF_SET_ALARM()`

### 3.2.3 設定各軸前後硬體極限

在一般機構設計時，為保護機構安全，會在機構的安全行程內設置前後硬體極限開關，讓使用者可以避免超出行程，如碰觸到前後硬體極限開關i-8092會自動停止，您可以選擇使用適當觸發邏輯。詳情請參考“i8092運動控制模組使用手冊” pdf 2.6

`i8092MF_SET_HLMT ()` 功能

### 3.2.4 設定各軸前後軟體極限

在一般機構設計時，為保護機構安全，會在機構的安全行程內設置前後硬體極限開關外，可以再加軟體極限，讓使用者可以提早避免超出行程，或免用硬體極限，如碰觸到前後軟體極限i-8092會自動停止，您可以選擇使用與否，與設定位置。詳情請參考“i8092運動控制模組使用手冊” pdf 2.1.10

`i8092MF_SET_SLMT ()`，與`i8092MF_CLEAR_SLMT()` 功能

### 3.3 檢查是否有錯誤(GET\_ERROR)

檢查是否有錯誤，如有再GET\_ERROR\_CODE 取得 ERROR\_CODE並查相關原因，相關處理檢查，及正確設定詳情請參考 “i-8092運動控制模組使用手冊 ”pdf 3.6 也可以利用“i8092運動控制模組使用手冊 ”pdf 3.5 讀取目前DI狀態 i8092MF\_GET\_DI() 確認DI輸入是否正確

### 3.4 Motion 基本設定

Motion 基本設定主要是針對一般必要性設定分別如下:

1 軸輸出PULSE模式設定，Pulse/Dir、CW/CCW...

i8092MF\_SET\_PULSE\_MODE() (詳情請參考 i-8092運動控制模組使用手冊 2.4)

2 設定軸速度輸出最大範圍，設定每一軸最高速度

i8092MF\_SET\_MAX\_V ()(詳情請參考 i-8092運動控制模組使用手冊 2.5)

3 設定編碼器輸入參數(如需要)

i8092MF\_SET\_ENCODER()(詳情請參考 i-8092運動控制模組使用手冊 2.11)

4 設定數位輸入雜訊濾波功能(如需要)

i8092MF\_SET\_FILTER()(詳情請參考 i-8092運動控制模組使用手冊 2.15)

5 指定軸為圓形運動軸(環狀計數器)(如需要)

i8092MF\_VRING\_ENABLE()(詳情請參考 i-8092運動控制模組使用手冊 2.16)

### 3.5 Motion 動作測試(手動外部輸入)(如需要)

實際測試時可用手動驅動功能，做一些基本前後移動動作，確認DI信號是否正常，正負方向是否正確，以便做進一步線路及參數調整，主要有下列三種方法可以選其一運用:

1 手輪脈波驅動: 用A/B相手輪(手動脈波產生器，如附圖)做為前後之控制。

i8092MF\_EXD\_MP()(詳情請參考 i-8092運動控制模組使用手冊 2.18.1)



**2 固定脈波驅動:** 利用兩按鈕開關,可設定每按一下走幾步(Pulse),一按鈕控制Motion前進,另一按鈕控制後退。

**i8092MF\_EXD\_FP()**(詳情請參考 I8092運動控制模組使用手冊 2.18.2)

**3 連續脈波驅動:** 利用兩按鈕開關,可設定Pulse輸出速度(Hz)按下輸出,放開即停止,一按鈕控制Motion前進,另一按鈕控制後退。

**i8092MF\_EXD\_CP ()**(詳情請參考 I8092運動控制模組使用手冊 2.18.3)

**4 外部輸入關閉:** 使用完上述三項功能,必須用此指令,將它關閉。

**i8092MF\_EXD\_DISABLE()** (詳情請參考 I8092運動控制模組使用手冊 2.18.3)

## 3.6 軸歸零

i-8092 提供多種軟體歸零功能，只要經適當設定後，即可下指令自動執行，主要步驟如下：

- 以高速尋找近原點開關
- 以歸零速度尋找原點開關
- 以歸零速度尋找伺服馬達 Z 相信號
- 以高速運動到補正值(Offset)位置(程式原點)

### 3.6.1 軸歸零

1 設定軸近原點輸入觸發邏輯(如需要)

`i8092MF_SET_NHOME()` (詳情請參考 I8092\_MANUAL-TC 2.8)

2 設定軸原點輸入觸發邏輯

`i8092MF_SET_HOME_EDGE()` (詳情請參考 I8092\_MANUAL-TC 2.9)

3 軟體自動歸零功能

`i8092MF_AUTO_HOME()` (詳情請參考 I8092\_MANUAL-TC 5.2)

4 軟體單步驟歸零功能

`BYTE i8092MF_SEARCH_NHOME()`

`BYTE i8092MF_SEARCH_HOME()`


`BYTE i8092MF_SEARCH_ZPHASE()`

(詳情請參考 I8092\_MANUAL-TC 5.3.1~5.3.3)




### 3.7 Motion 基本運作


#### 3.7.1 一般運動控制速度曲線分類

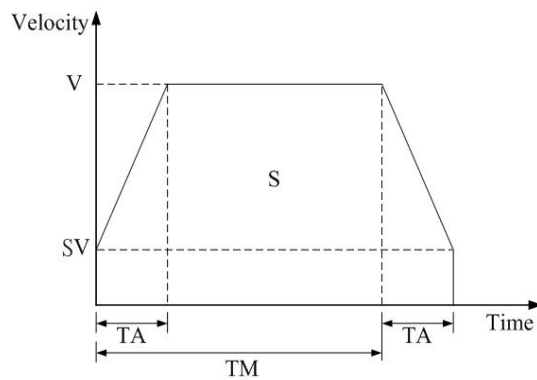

1 對稱 T 型運動控制速度曲線(如 SV 大於等於 V, 將執行定速驅動)

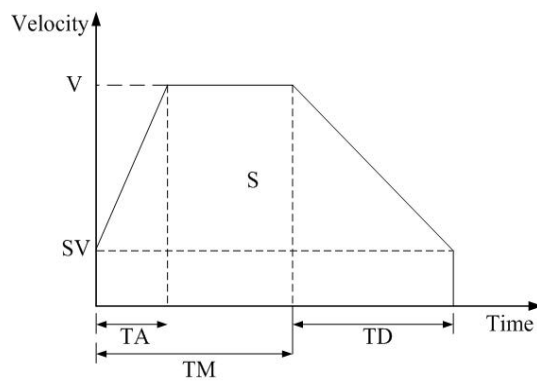

2 非對稱 T 型運動控制速度曲線

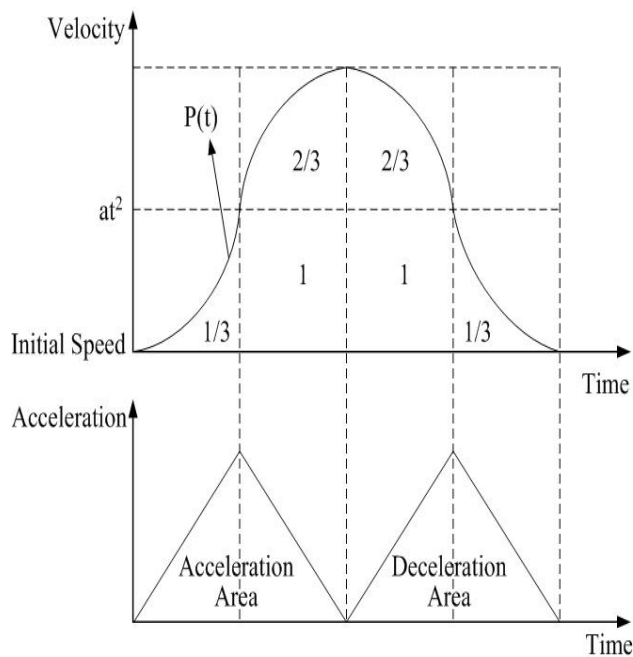

3 對稱 S 型運動控制速度曲線

## 3.7.2 單軸 Motion 基本設定

1 設定加減速模式：有四種速度模式設定。

0 → 對稱 T 曲線 (SV、V、A、AO)

1 → 對稱 S 曲線 (SV、V、K、AO)

2 → 非對稱 T 曲線 (SV、V、A、D、AO)

i8092MF\_NORMAL\_SPEED()(詳情請參考 i-8092運動控制模組使用手冊 6.1.1)

2 設定初始速度：設定最低速度

i8092MF\_SET\_SV ()(詳情請參考 i-8092運動控制模組使用手冊 6.1.2)

3 設定速度：指定運動速度

i8092MF\_SET\_V ()(詳情請參考 i-8092運動控制模組使用手冊 6.1.3)

4 設定加減速度：指定運動時之加減速

i8092MF\_SET\_A ()(詳情請參考 i-8092運動控制模組使用手冊 6.1.4)

i8092MF\_SET\_D ()(詳情請參考 i-8092運動控制模組使用手冊 6.1.5)

## 3.7.3 單軸 Motion 基本動作

1 固定脈波數輸出：執行單軸固定步數輸出。

i8092MF\_FIXED\_MOVE()(詳情請參考 i-8092運動控制模組使用手冊 6.1.8)

2 連續脈波輸出：執行單軸連續脈波輸出。

i8092MF\_CONTIUNE\_MOVE ()(詳情請參考i-8092運動控制模組使用手冊 6.1.9)

3 等待完成軸運動：等待軸完成停止。

i8092MF\_STOP\_WAIT()(詳情請參考 i-8092 運動控制模組使用手冊 6.5.3)

### 3.7.4 兩軸補間(向量)Motion 基本設定

- 1 設定補間軸: 因只有兩軸已固定為 XY 免設定。
- 2 設定向量加減速模式: 設定向量加減速模式，共有如下7種模式
  - 0 → 二軸(直線&弧&圓)固定向量速度 (VV)
  - 1 → 二軸直線對稱 T 曲線 (VSV、VV、VA、VAO)
  - 2 → 二軸直線對稱 S 曲線 (VSV、VV、VK、VAO)
  - 3 → 二軸直線非對稱 T 曲線 (VSV、VV、VA、VD、VAO)
  - 4 → N/A
  - 5 → 二軸(弧&圓)對稱 T 曲線 (VSV、VV、VA、VAO)
  - 6 → 二軸(弧&圓)非對稱 T 曲線 (VSV、VV、VA、VD、VAO)

i8092MF\_VECTOR\_SPEED()(詳情請參考 I8092運動控制模組使用手冊 6.2.2)

- 2 設定向量初始速度: 設定軸之向量初始速度。

i8092MF\_SET\_VSV()(詳情請參考 I8092運動控制模組使用手冊 6.2.3)

- 3 設定向量速度: 設定軸之向量定速度。

i8092MF\_SET\_VV()(詳情請參考 I8092運動控制模組使用手冊 6.2.4)

- 4 設定向量加減速度: 設定軸之向量加減速度。

i8092MF\_SET\_VA()(詳情請參考 I8092運動控制模組使用手冊 6.2.5)

i8092MF\_SET\_VD()(詳情請參考 I8092運動控制模組使用手冊 6.2.6)

### 3.7.5 多軸補間 Motion 基本動作

- 1 二軸直線補間: 執行二軸直線補間。

i8092MF\_LINE\_2D()(詳情請參考 I8092 運動控制模組使用手冊 6.2.9)

- 2 二軸圓弧補間: 執行二軸圓弧補間。

i8092MF\_ARC\_CW ()(詳情請參考 I8092運動控制模組使用手冊 6.2.10)

i8092MF\_ARC\_CCW ()(詳情請參考 I8092運動控制模組使用手冊 6.2.10)

- 3 二軸圓補間: 執行二軸圓補間。

i8092MF\_CIRCLE\_CW ()(詳情請參考 I8092運動控制模組使用手冊 6.2.11)

i8092MF\_CIRCLE\_CCW ()(詳情請參考 I8092運動控制模組使用手冊 6.2.11)

## 3.8 Motion 進階運動

1 二軸矩形連續補間: 執行二軸矩形補間。

`i8092MF_RECTANGLE()`(詳情請參考 I8092 運動控制模組使用手冊 6.3.1)

2 二軸直線連續補間:

二軸直線連續補間初始設定(對稱 T 曲線加減速)。

`i8092MF_LINE_2D_INITIAL()`(詳情請參考 I8092 運動控制模組使用手冊 6.3.2)

執行二軸直線連續補間。

`i8092MF_LINE_2D_CONTINUE()`(詳情請參考 I8092 運動控制模組使用手冊

6.3.2)

3 其他補間: 多點連續補間, 二軸比例運動, 二軸混合連續補間 (詳情請參考 I8092 運動控制模組使用手冊 6.3.3~6.3.5)

---

## 4 軟體快速上手

---

### 4.1 WinCon eVC++

#### 4.1.1 確認相關檔案

請確認您有以下相關檔案：


1. i8092.lib
2. i8092.dll
3. i8092.h

如您沒有,請找 CD 或到我們的網站下載最新版本資料


<http://www.icpdas.com/download/download-list.htm>

#### 4.1.2 新增一 eVC++ 應用程式專案

請開啟 eVC++ 4.0 軟體。然後，請按滑鼠鍵“File” -> “New”來開啟新程式。在“Projects”標籤，選擇“WCE MFC AppWizard (exe)”並且設定專案名稱為“Demo\_First”並在“Location”填入它的檔案路徑。然後，在中央處理器列表框中選擇“Win 32[WCE ARMV4]”，如果必要的話也一起勾選其他的選項。最後按滑鼠鍵“OK”。

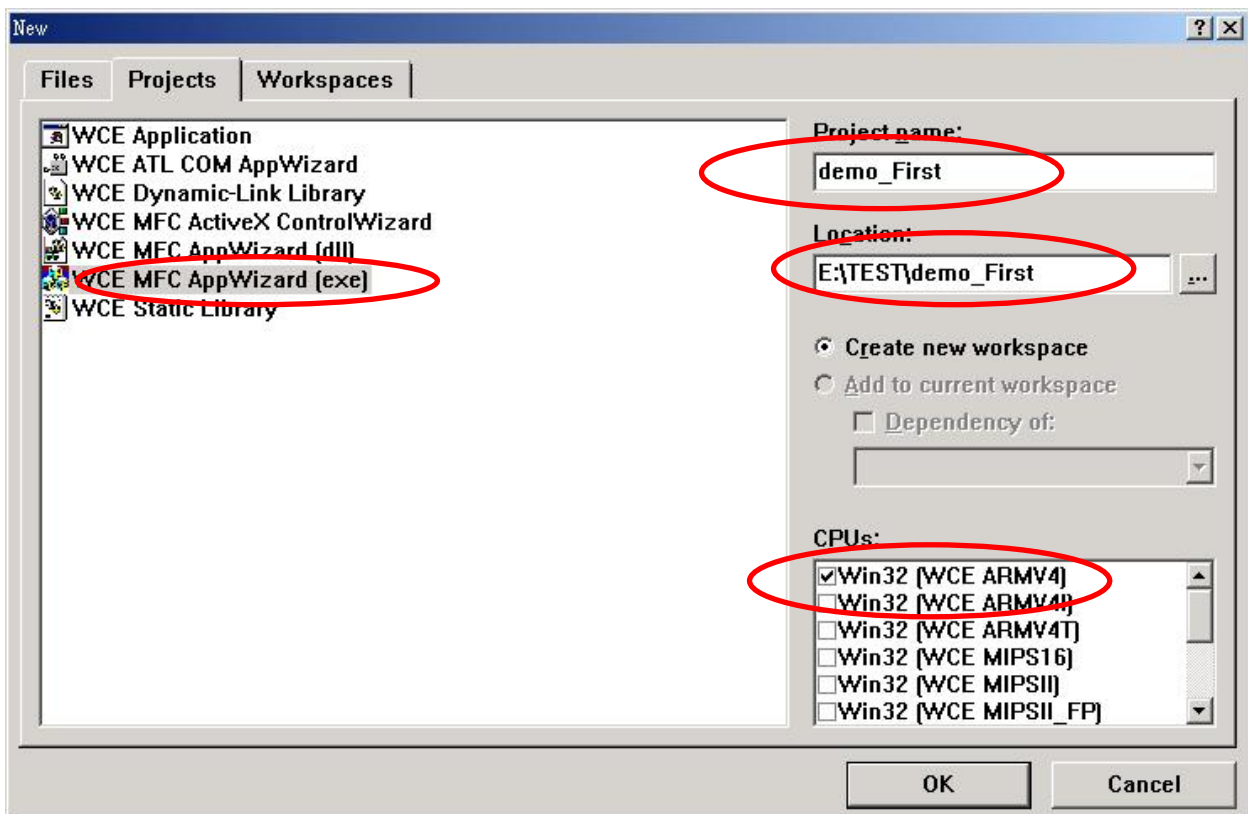

選擇 Dialog based 按“NEXT”

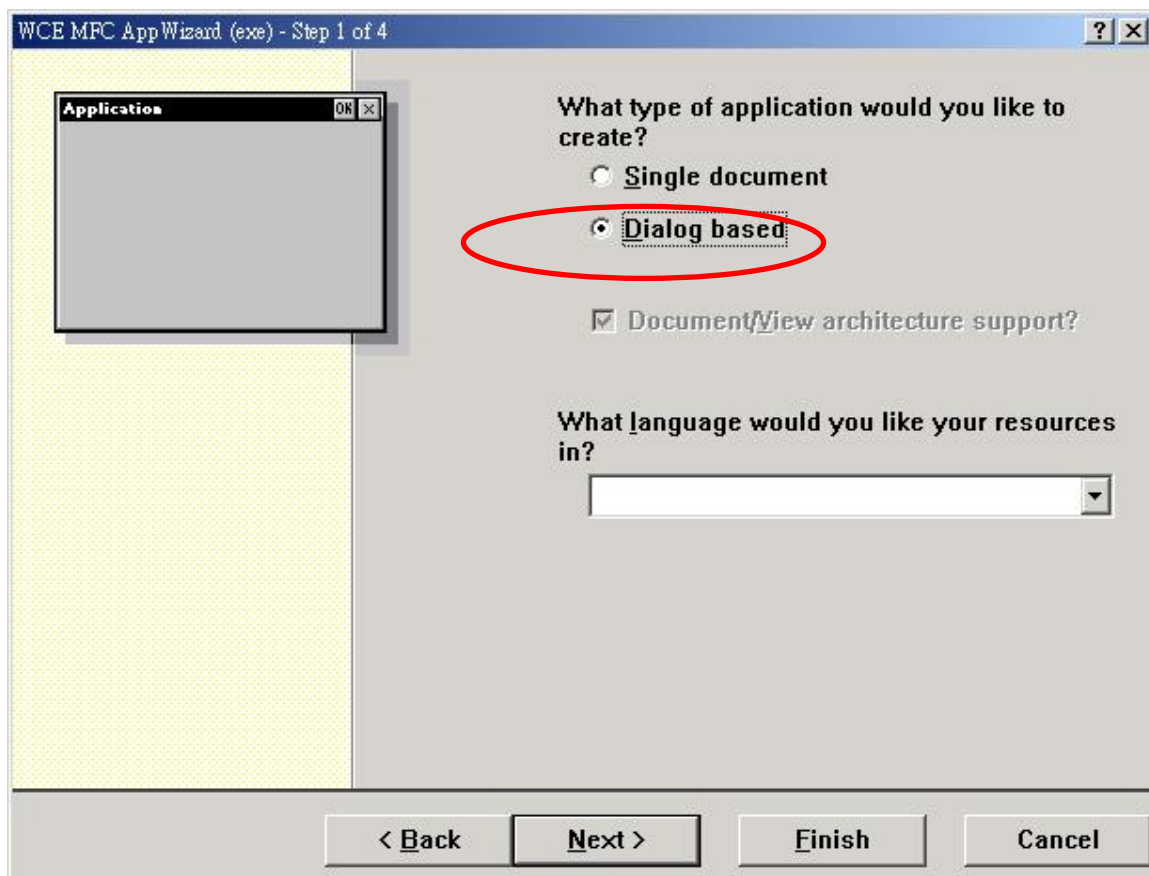


再按 “Finish”

即完成開一新專案


### 4.1.3 在 eVC++ 專案中加入 I8092.h

在專案的 Workspace 中加入 i8092.h 如下:

在 Header Files 按滑鼠右鍵，選 Add Files to Folder....

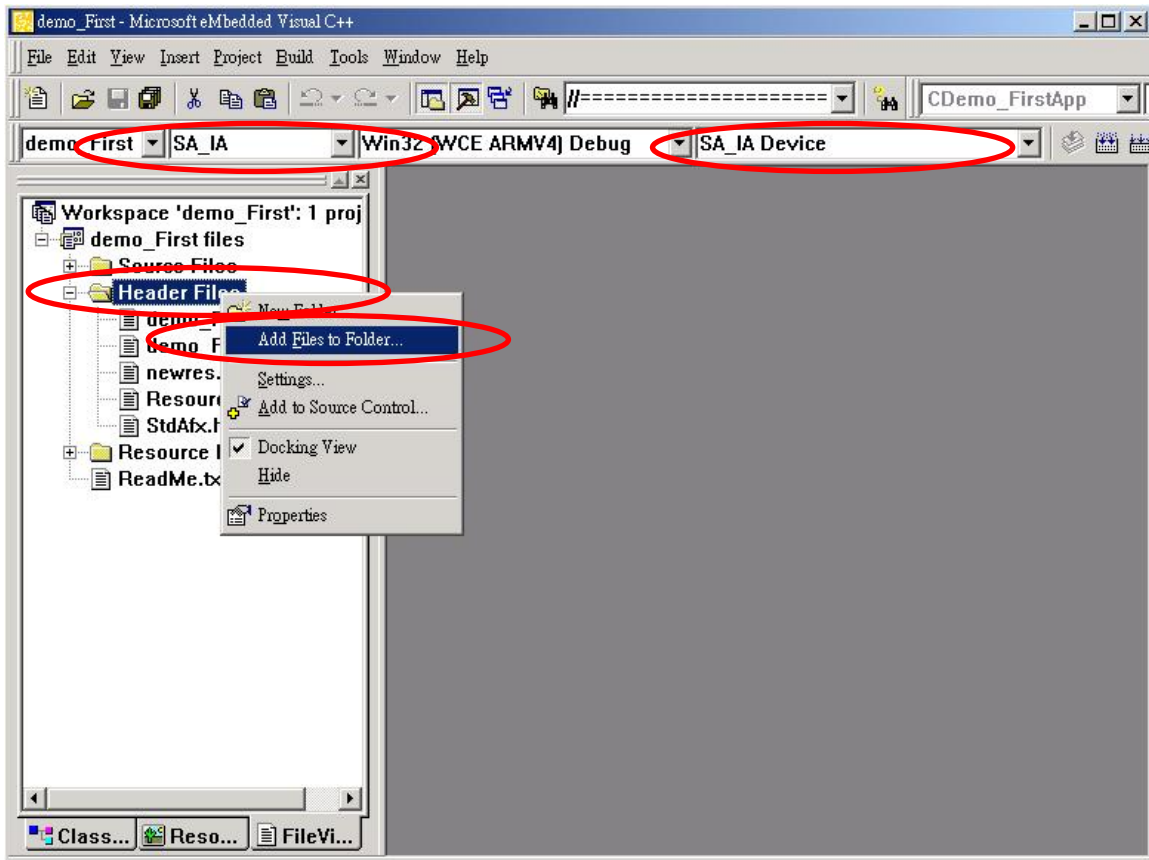


出現選檔對話框，找到並選擇 I8092.h 檔並按 OK

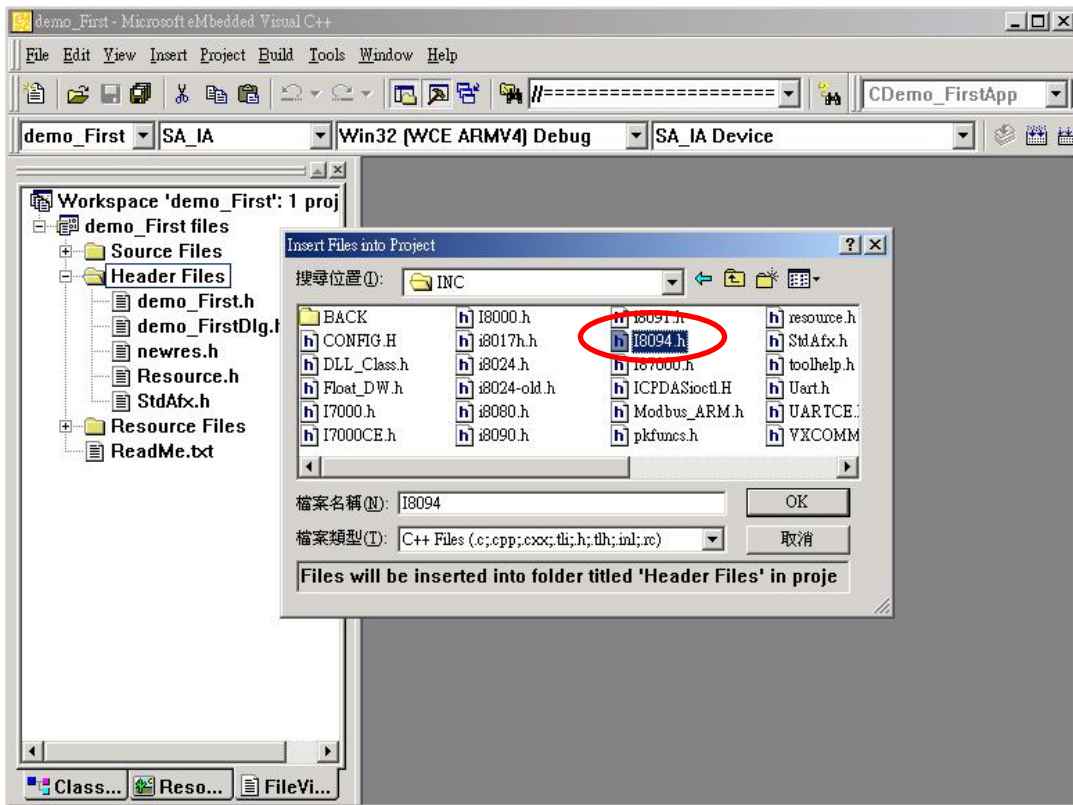


#### 4.1.4 在 eVC++ 專案中加入參考路徑

- A. 在“Tools” 工能表中開啟“Options” 對話框。
- B. 選“Directories” 標籤，在“Platform” 項目選擇“SA\_IA”， 在“CPUs”項目選擇“Win32 [WCE ARMV4]”和在“include files”項目選擇“Show directories”。
- C. 增加含括檔的路徑，在“Directories” 下方空行處 (指出附近空的長方形)雙擊-按滑鼠鍵，如顯示在下列的圖片；請輸入包括用戶安裝驅動程式的檔案路徑。
- D. 再來，於“Show directories”項目中選擇“Library files”。

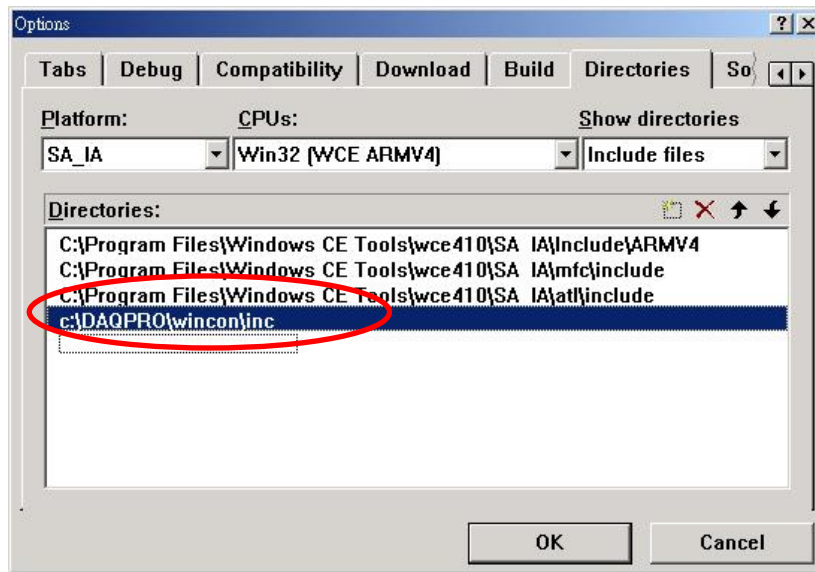


- E. 增加程式庫的檔案路徑，在“Directories” 下方空行處 (指出附近空的長方形)雙擊-按滑鼠鍵，輸入包括含有用戶安裝程式庫的檔案路徑，如下圖。

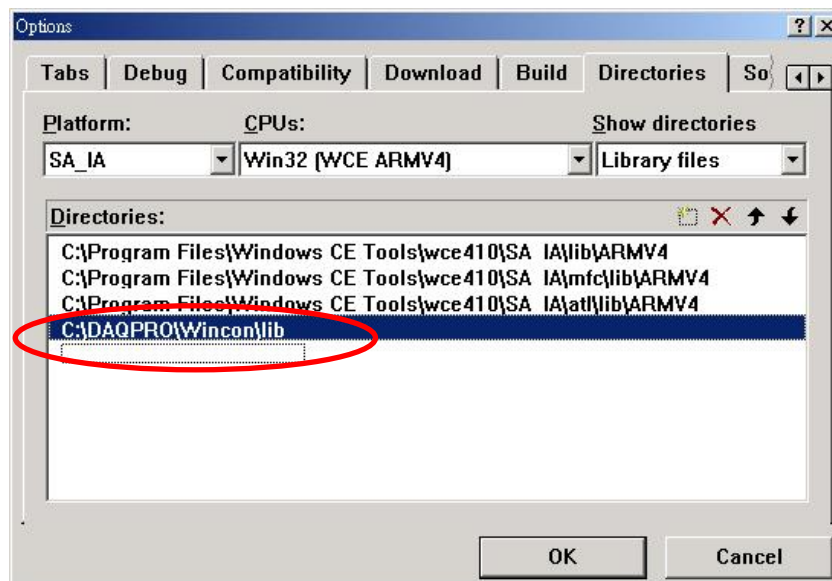




## 4.1.5 在 eVC++ 專案中開始應用


在 Dialog 中加入一 BUTTON 如下圖：

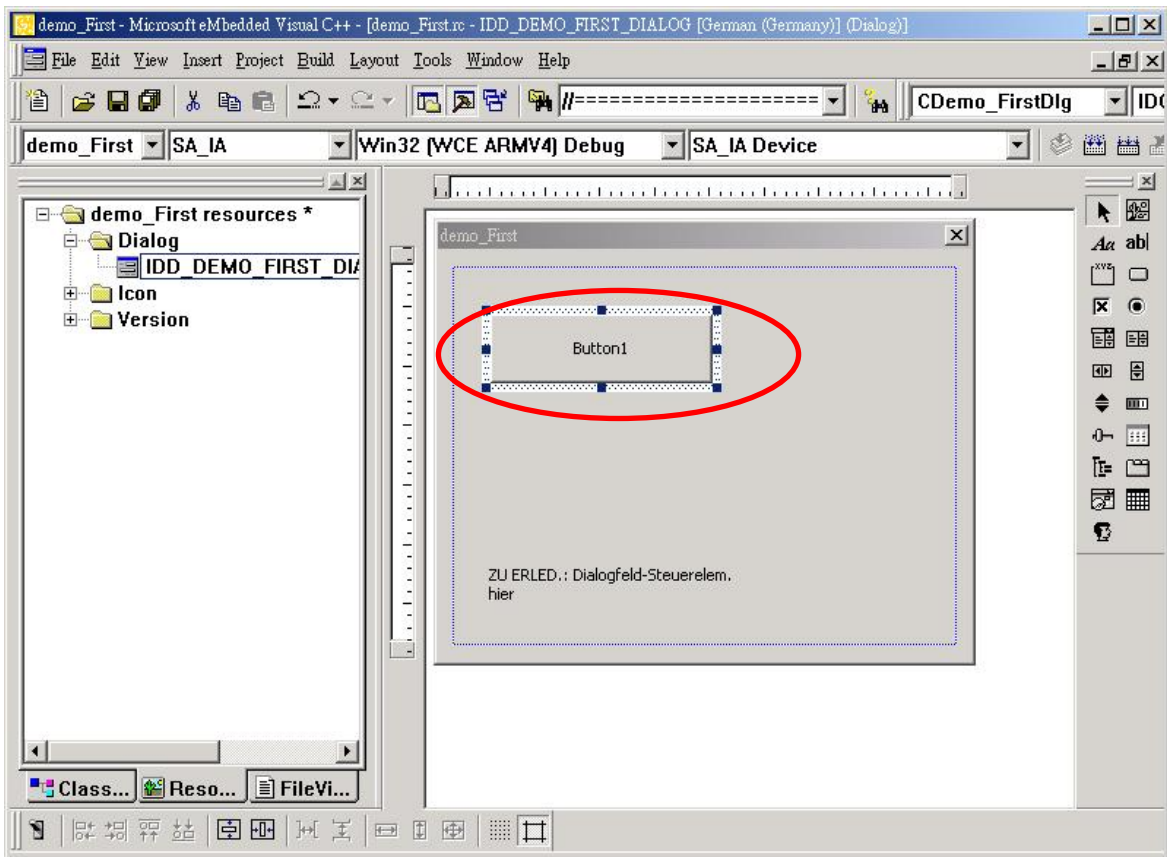

在 BUTTON 快按兩下，並產生一副程式，並在檔案起始位置加入”#include “i8092.h”  
“WinConSDK.h”及宣告 CI8092MF I8092MF; bool Driver\_Open;  
BYTE cardNo=0;變數，如下圖：

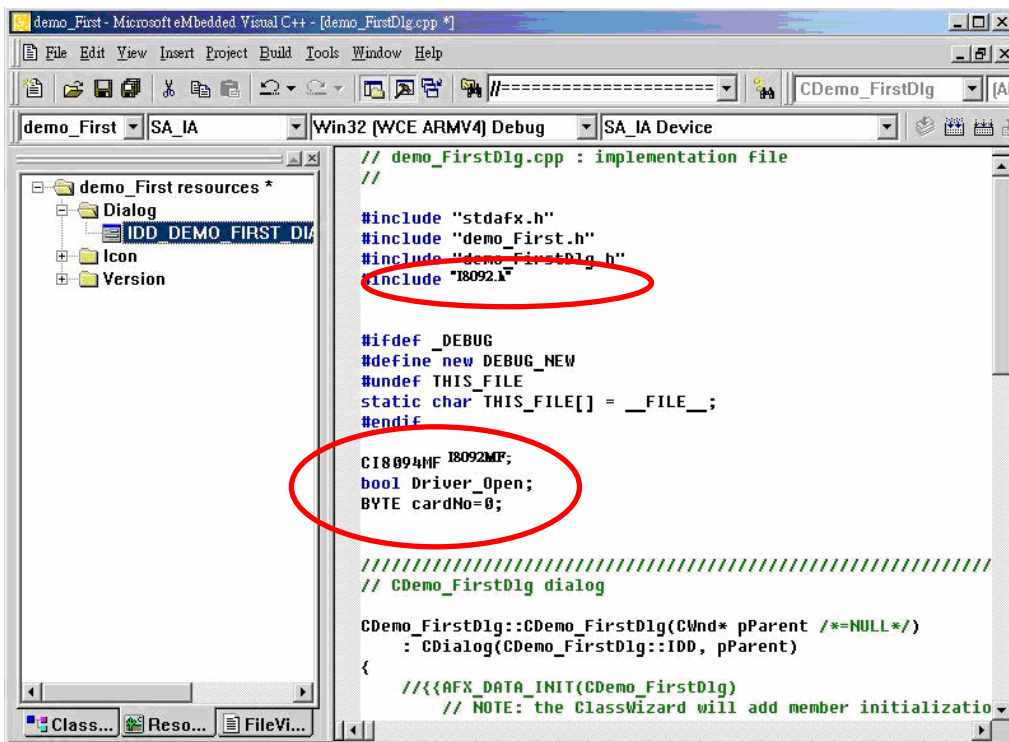

由於我們有另建一類別(Class) CI8092MF(For 巨集指令)，方便導引程式設計，使用者也可以直接使用手冊指令。在 **BUTTON** 快按兩下，並產生一副程式中，鍵入”I8092MF.”及會出現引導視窗，協助您選用相關指令。

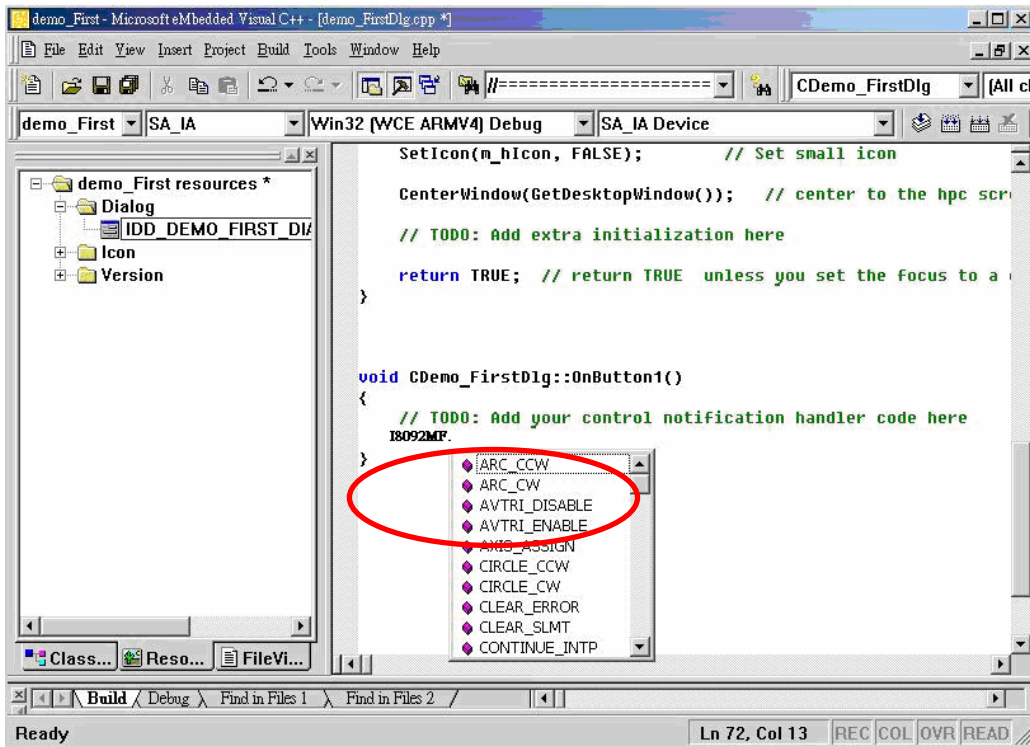

請選 “i8092MF.REGISTRATION”與輸入”(cardNo,3); “ 表示插在第 3 Slot 的 i8092 註冊為第 0 卡，輸入詳細程式如下：

```

//====='Step 1 Driver init
if (!Driver_Open)
{
    I8092MF.REGISTRATION(cardNo,3);
    Driver_Open = true;
}

//====='Step 2 CONFIG IO
I8092MF.RESET_CARD (cardNo);
I8092MF.SET_PULSE_MODE (cardNo, AXIS_XY, 2); //set the pulse output mode
I8092MF.SET_ALARM (cardNo, AXIS_XY, 0, 0); //disable the SERVO ALARM Input
I8092MF.SET_ENCODER (cardNo, AXIS_XY, 0, 0, 0); //set the encoder input type
I8092MF.SET_MAX_V (cardNo, AXIS_XY, 16000); //set the max speed for XYZU
I8092MF.EXD_DISABLE (cardNo, AXIS_XY); //set the external input Off
I8092MF.SET_LP (cardNo, AXIS_XY, 0); //set the Logic position =0
I8092MF.SET_EP (cardNo, AXIS_XY, 0); //set the Encoger position =0
I8092MF.SET_A (cardNo, AXIS_XY, 1000); //set the Acc =1000
I8092MF.SERVO_ON (cardNo, AXIS_XY); //set the Servo_ON to servo motors

//====='Step 3 Check ERROR
WORD KK=0;

```


```

KK= I8092MF.GET_ERROR(cardNo);
CString MSGG;
if (KK != YES)
{
    //No ERROR: Step 4 Move X axis
    BYTE axis=AXIS_X; //for AXIS_X it can be to AXIS_XY
    I8092MF.SET_MAX_V(cardNo, axis, 20000);
    I8092MF.NORMAL_SPEED(cardNo, axis, 0); //set axis as Symmetrical T curve mode
    I8092MF.SET_V(cardNo, axis, 20000); //set v=10000 PPS
    I8092MF.SET_A(cardNo, axis, 100000); //set acc=100000 PPS/S
    I8092MF.SET_SV(cardNo, axis, 10); //set start speed=1000 PPS
    I8092MF.SET_AO(cardNo, axis, 0); //set offset pulse (at SV speed)= 0 PS
    I8092MF.FIXED_MOVE(cardNo, axis, 10000); //run the fixed 10000 Pulse move.
    while (I8092MF.STOP_WAIT(cardNo, axis) == NO)
    {
        DoEvents();
        Sleep(1);
        //wait for axis to stop
    }
    long AA= I8092MF.GET_LP(cardNo,axis); //Get X Now position
}
else
{
    //Please check the ERROR CODE
    //Get X ERROR CODE
    KK= I8092MF.GET_ERROR_CODE(cardNo, AXIS_X);
    //Get Y ERROR CODE
    KK= I8092MF.GET_ERROR_CODE(cardNo, AXIS_Y);
    //=====
}

```


詳細請參考: demo\_First 範例

完成後，請在功能表中選 “Project”->”Setting”出現如下對話框，選”Link”頁籤，並在 Object/library modules:輸入 WinConSDK.lib i8092.lib(如下圖)，並按 OK

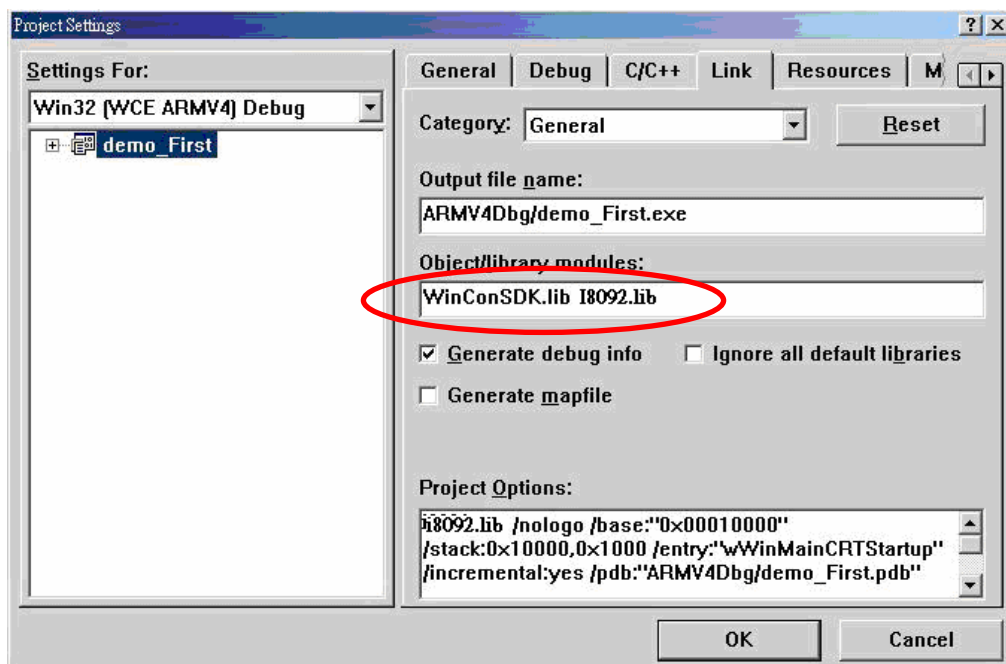

## 4.1.6 編譯專案成可執行檔

請在功能表中選 “Build”->”Build All”如沒問題話，即完成這簡單的程式

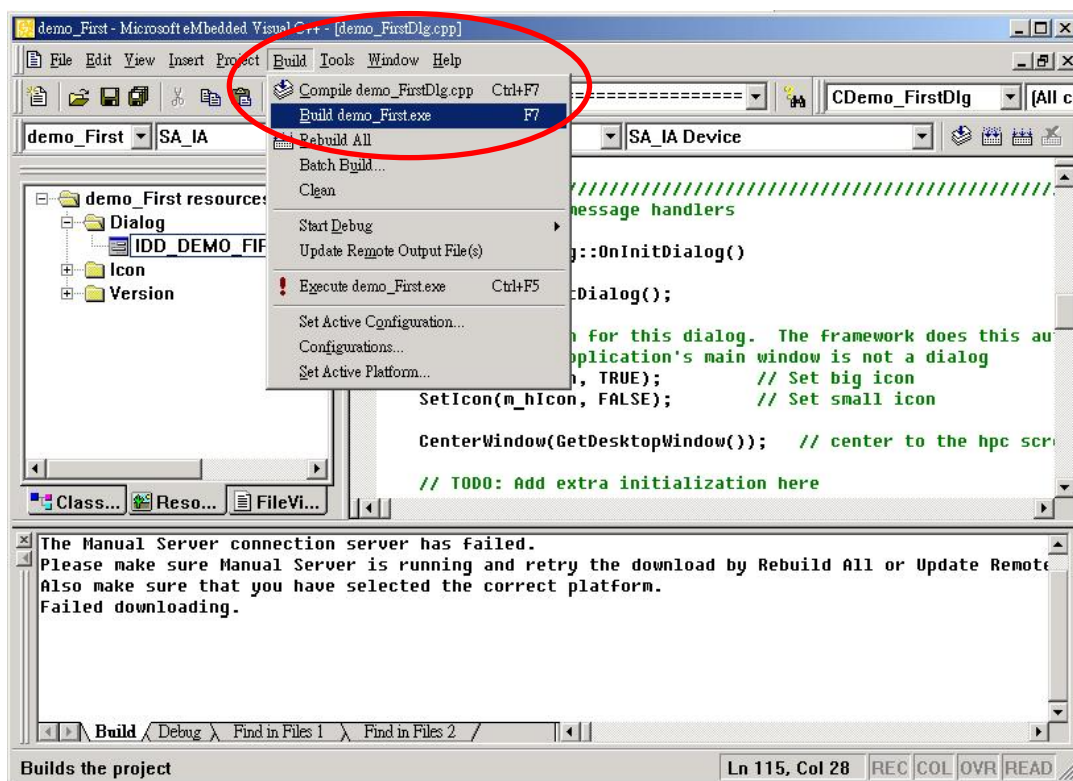

## 4.1.7 下載與執行

請將執行檔“i8092Demo.exe”與動態連結檔“i8092.dll”複製到 WinCon 同一目錄中(可用 eVC++ Online Download，或 FTP，或 USB 行動碟)，並用執行即可。

## 4.2 WinCon Microsoft Visual Studio .NET 2003(VB.NET，C#)

因 Microsoft Visual Studio .NET 2003 開發環境相似，因此我們以 VB.NET 作示範

### 4.2.1 確認相關檔案

請確認您有以下相關檔案：

i8092.dll


i8092\_NET.dll

如您沒有,請找 CD 或到我們的網站下載最新版本資料


<http://www.icpdas.com/download/download-list.htm>

### 4.2.2 開一新專案

請啟動 Microsoft Visual Studio .NET 2003，並新增一 VB 專案並選“智慧型裝置”如下圖選項：

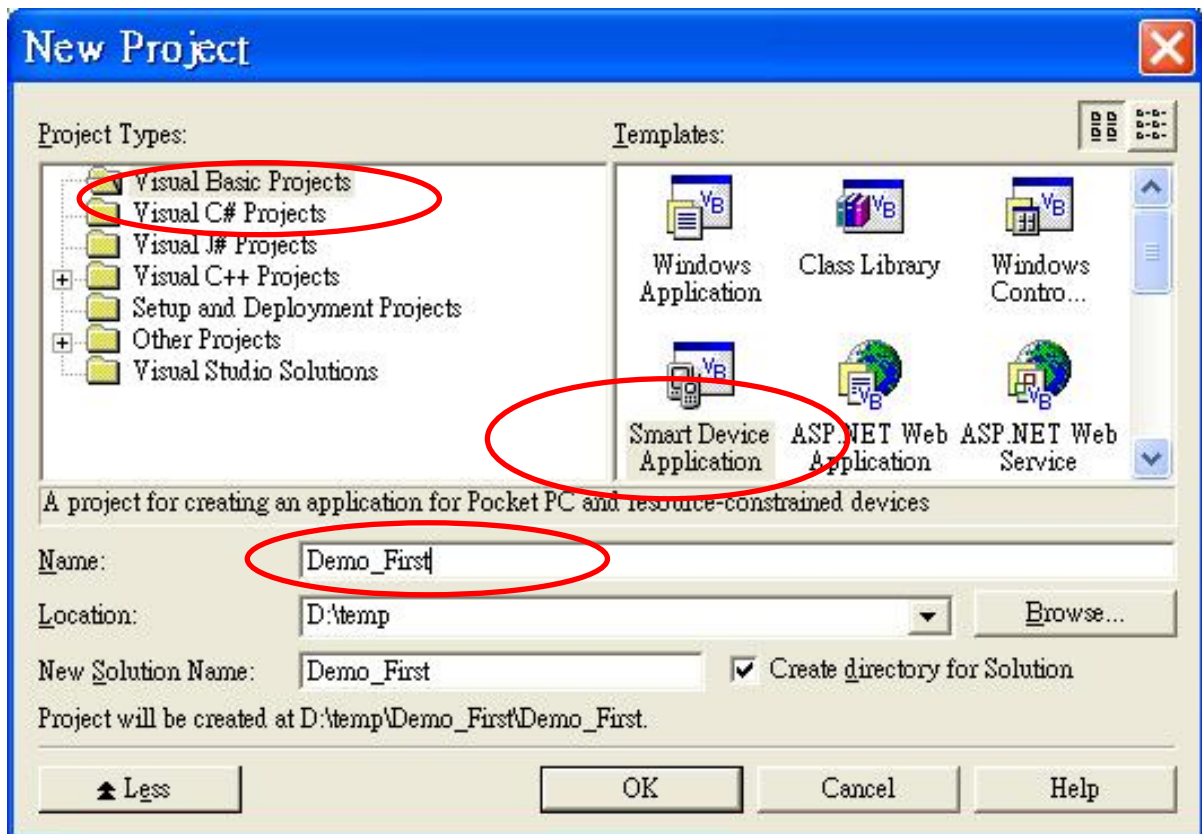


選“確定”後

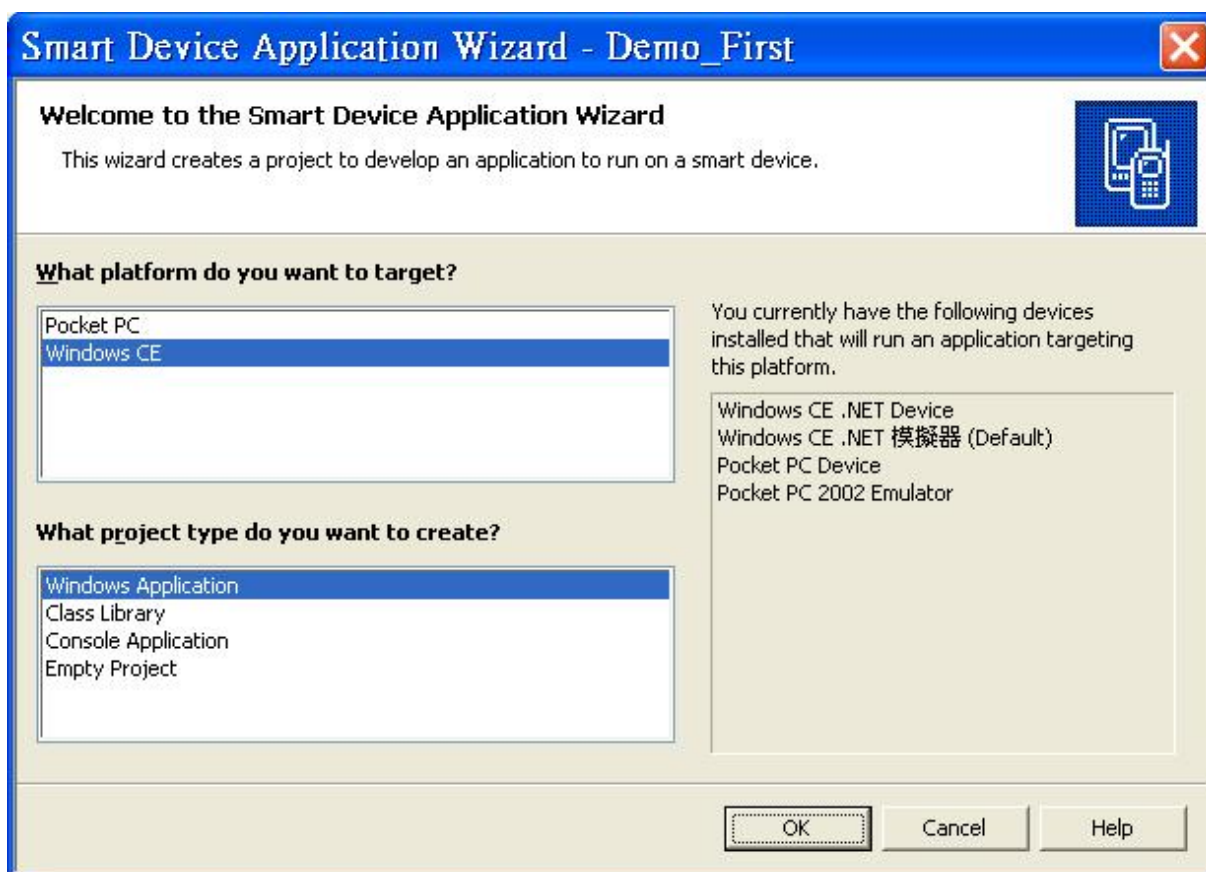

再選 WinDows CE 及 Windows Application，再選 “確定”


## 4.2.3 在專案中加入參考 DLL

在方案總管中之參考上按滑鼠右鍵=>add Reference

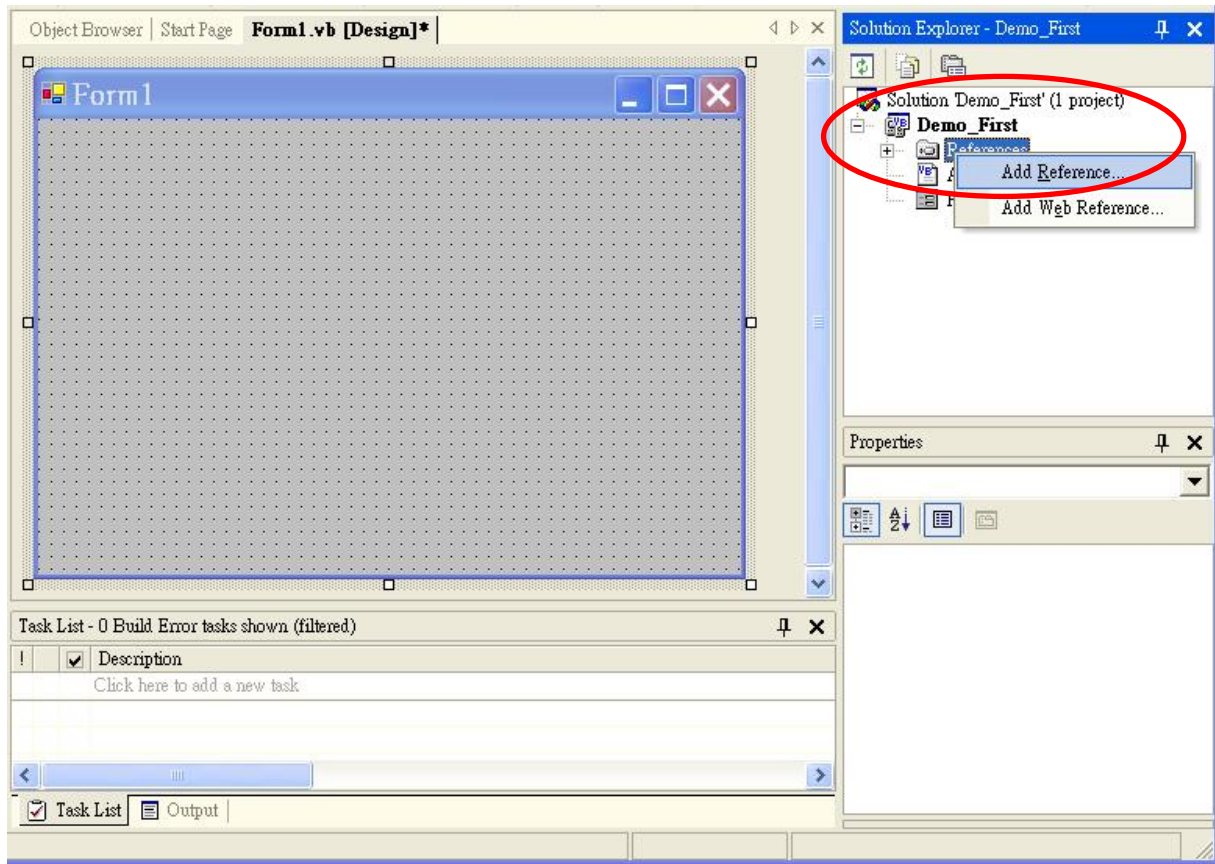


=>選擇 Browse

選擇 i8092 \_NET.DLL

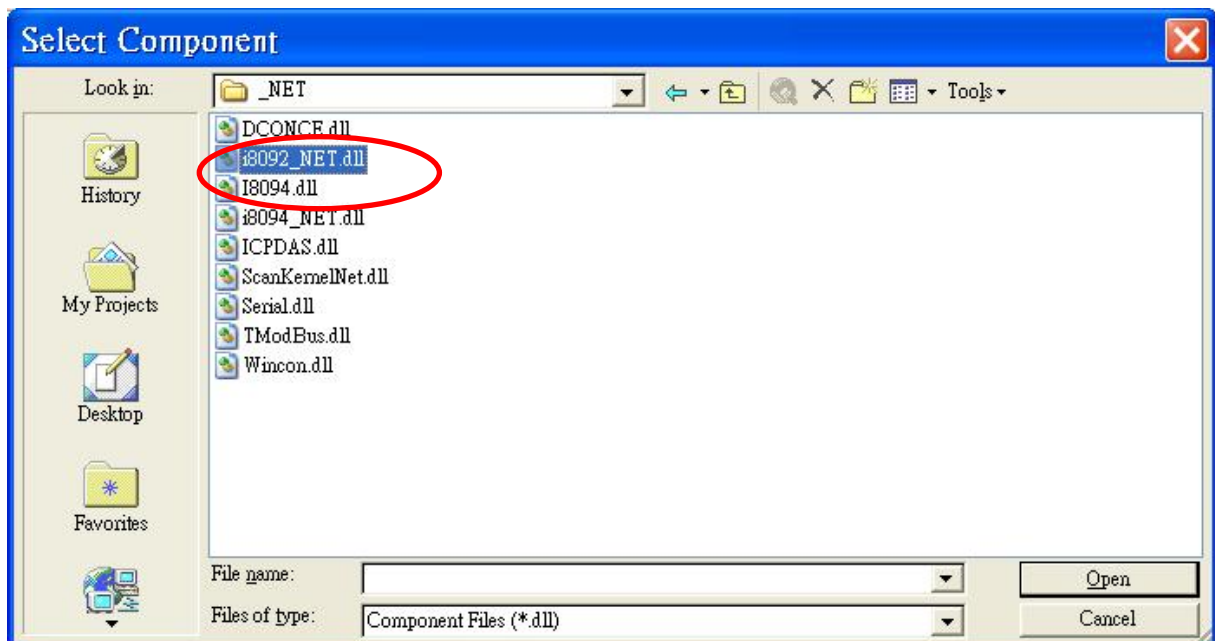


選擇 “Open” 如下圖：

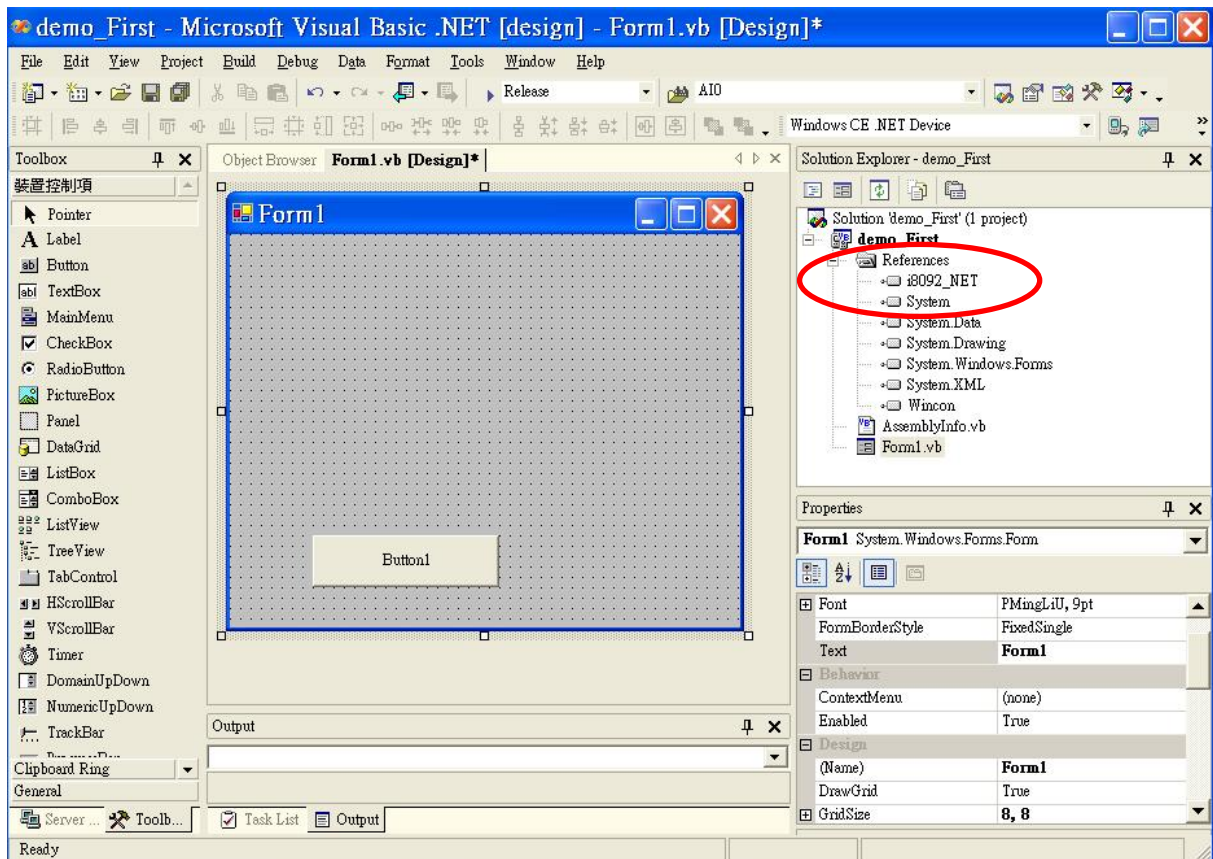


#### 4.2.4 開始程式撰寫

在 Form1 中加入一 "BUTTON" 物件，並雙擊 BUTTON，出現 Form1.vb 程式碼，並在最前面加入 "imports i8092\_NET" 如下圖：

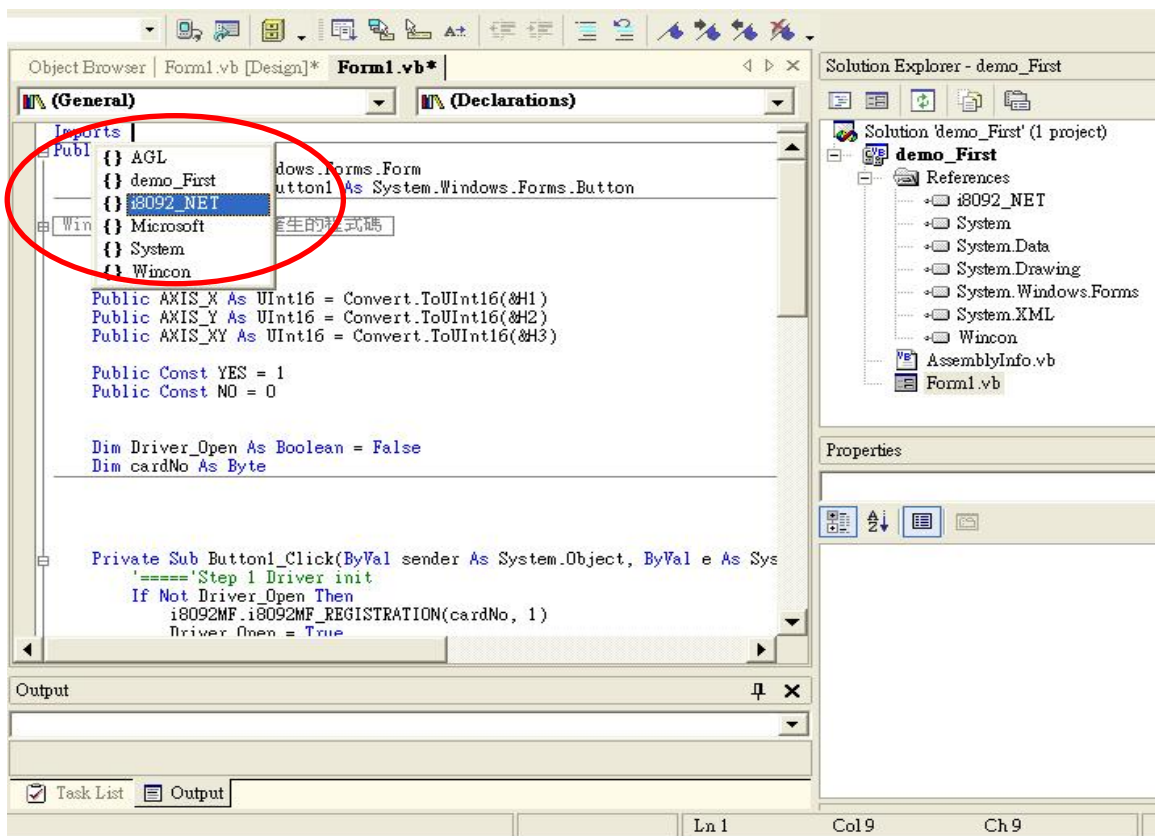



在 **Button1\_Click** 中加入輸入程式 “i8092MF.” 及會出現下拉式功能表，可以引導進行程式設計，

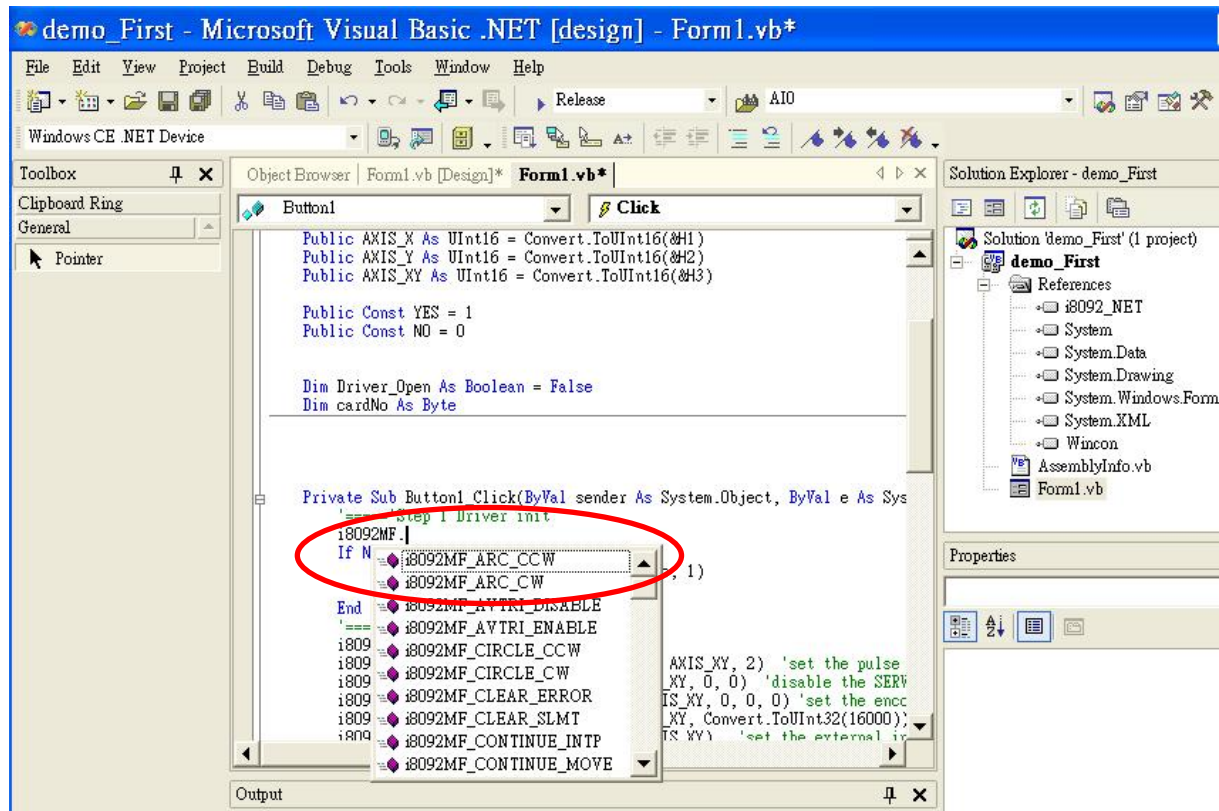

例如:程式輸入為 ➔ **i8092MF.i8092MF\_REGISTRATION(1, 3)**

輸入詳細程式如下:

'=====Step 1 Driver init

i8092MF.

If Not Driver\_Open Then

i8092MF.i8092MF\_REGISTRATION(cardNo, 1)

Driver\_Open = True

End If

'=====Step 2 CONFIG IO

i8092MF.i8092MF\_RESET\_CARD(cardNo)

i8092MF.i8092MF\_SET\_PULSE\_MODE(cardNo, AXIS\_XY, 2) 'set the pulse output mode

i8092MF.i8092MF\_SET\_ALARM(cardNo, AXIS\_XY, 0, 0) 'disable the SERVO ALARM Input

i8092MF.i8092MF\_SET\_ENCODER(cardNo, AXIS\_XY, 0, 0, 0) 'set the encoder input type

i8092MF.i8092MF\_SET\_MAX\_V(cardNo, AXIS\_XY, Convert.ToUInt32(16000)) 'set the max speed for XY

i8092MF.i8092MF\_EXD\_DISABLE(cardNo, AXIS\_XY) 'set the external input Off

i8092MF.i8092MF\_SET\_LP(cardNo, AXIS\_XY, 0) 'set the Logic position =0

i8092MF.i8092MF\_SET\_EP(cardNo, AXIS\_XY, 0) 'set the Encoder position =0

i8092MF.i8092MF\_SET\_A(cardNo, AXIS\_XY, Convert.ToUInt32(1000)) 'set the Acc =1000

i8092MF.i8092MF\_SERVO\_ON(cardNo, AXIS\_XY) 'set the Servo\_ON to servo motors

'=====Step 3 Check ERROR

Dim KK As Long = 0

KK = i8092MF.i8092MF\_GET\_ERROR(cardNo)

Dim MSGG As String

If (KK <> YES) Then

'No ERROR: Step 4 Move X axis

Dim axis As UInt16 = AXIS\_X 'for AXIS\_X it can be to AXIS\_XY

i8092MF.i8092MF\_SET\_MAX\_V(cardNo, axis, Convert.ToUInt32(20000))

i8092MF.i8092MF\_NORMAL\_SPEED(cardNo, axis, Convert.ToUInt16(0)) 'set axis as Symmetrical T curve

mode

i8092MF.i8092MF\_SET\_V(cardNo, axis, Convert.ToUInt32(20000)) 'set v=10000 PPS

i8092MF.i8092MF\_SET\_A(cardNo, axis, Convert.ToUInt32(100000)) 'set acc=100000 PPS/S

i8092MF.i8092MF\_SET\_SV(cardNo, axis, Convert.ToUInt32(10)) 'set start speed=1000 PPS

i8092MF.i8092MF\_SET\_AO(cardNo, axis, 0) 'set offset pulse (at SV speed)= 0 PS

i8092MF.i8092MF\_FIXED\_MOVE(cardNo, axis, 10000) 'run the fixed 10000 Pulse move.

Do While (i8092MF.i8092MF\_STOP\_WAIT(cardNo, axis) = NO)

i8092MF.system.DoEvents()

System.Threading.Thread.Sleep(1)

'wait for axis to stop

Loop

Dim AA As Long = i8092MF.i8092MF\_GET\_LP(cardNo, axis) 'Get X Now position

Else

'Please check the ERROR CODE

'Get X ERROR CODE

KK = Convert.ToInt32(i8092MF.i8092MF\_GET\_ERROR\_CODE(cardNo, AXIS\_X))

'Get Y ERROR CODE

KK = Convert.ToInt32(i8092MF.i8092MF\_GET\_ERROR\_CODE(cardNo, AXIS\_Y))


'=====

End If

詳細請參考: demo\_First 範例

## 4.2.5 建置專案

在功能表上選擇“建置”→“建置專案”如沒問題即可產生執行檔

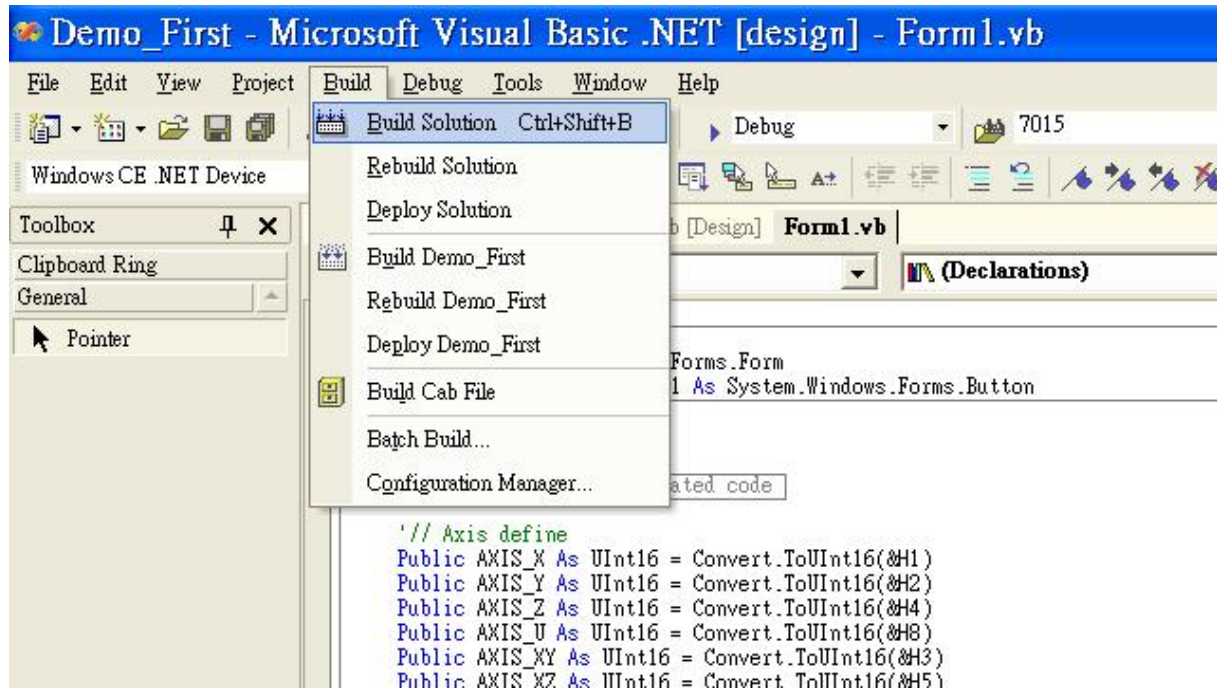

## 4.2.6 下載與執行

請將執行檔“Demo\_First.exe”與動態連結檔“i8092.dll”“i8092\_NET.dll”複製到 WinCon 同一目錄中(可用 VS.NET Online Download，或 FTP，或 USB 行動碟)，執行即可。

## 4.3 I-8000 Turbo C

### 4.3.1 確認相關檔案

請確認您有以下相關檔案：

I8092.lib

I8092.h

I8000.lib

I8000.h


如您沒有,請找 CD 或到我們的網站下載最新版本資料

<http://www.icpdas.com/download/download-list.htm>


### 4.3.2 使用 TC ++ 來編譯程式的方式如下：

### 4.3.3 開一新專案

1. 在 demo100 這個目錄下執行 TC.EXE，建一個新的 Project，  
demo100.prj

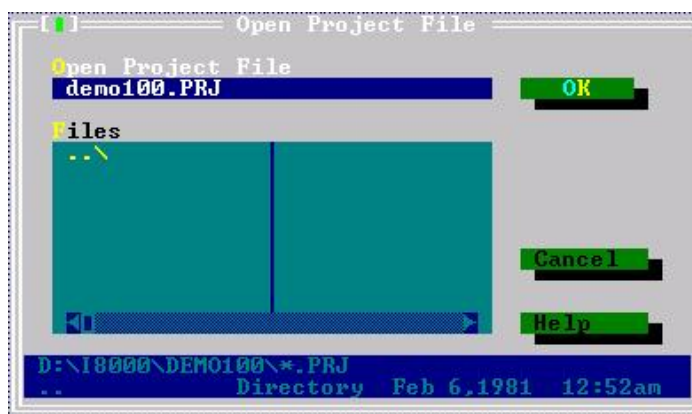


2. 加入 project 的內容：demo100.cpp 及 ..\lib\8000l.lib，I8092.lib

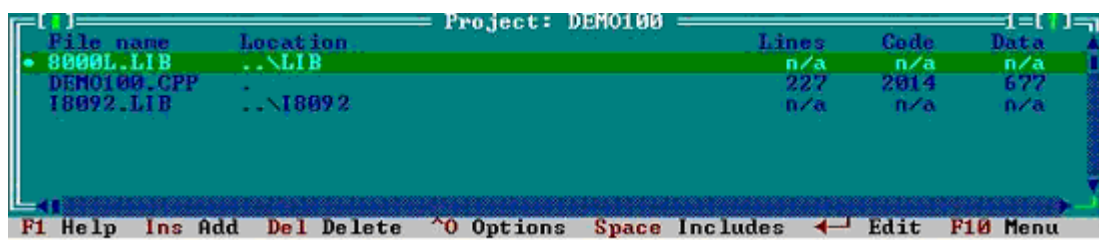


3. 設定有關的選項 (option)。

- **Compiler -> Code Generation** 的選項如下：

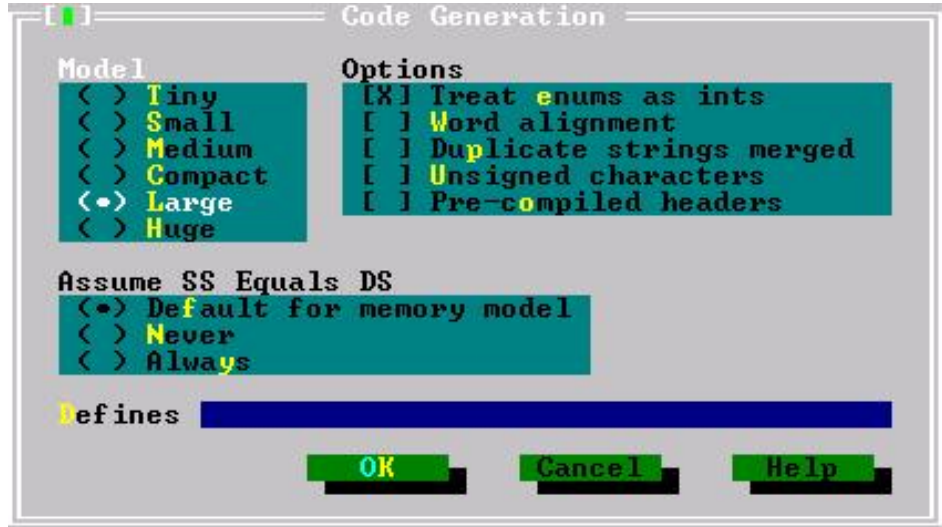

- **Compiler -> Advance Code Generation** 的選項如下：

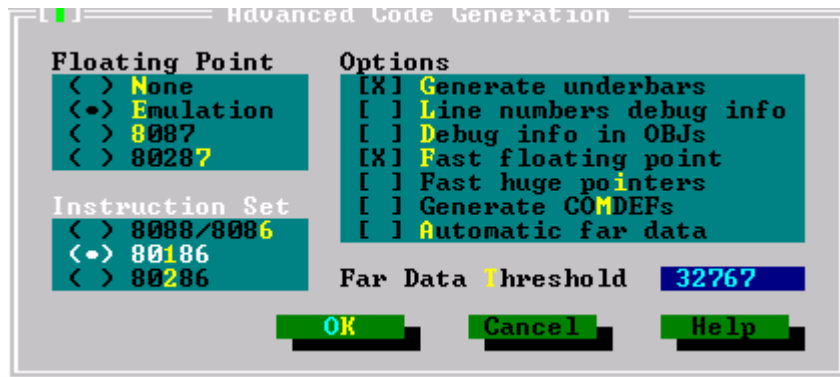

- **Debugger** 的設定如下，把 **Source debugging** 關掉。



### 4.3.4 撰寫程式

1. 在 demo100.cpp 檔頭加入參考宣告:

```
#include <dos.h>
#include <math.h>
#include "8000.h"

#include "I8092.h"
```

2. 在主程式中加入相關程式(請參考demo100.cpp):

```
BYTE cardNo;
long x_value, y_value;
//-----
void main ()
{
    //===== I-8000 =====
    //Set (slot0~slot7) = cardNO (1~8) .
    BYTE slot;
    int Found = 0;
    for (slot = 0; slot < 8; slot++)
    {
        cardNo = slot + 1;
        if (i8092MF_REGISTRATION(cardNo, slot) == YES)
        {
            //Found Axis Card .
            i8092MF_RESET_CARD(cardNo);
            Found++;
        }
    }
    if (Found == 0)
    {
        //Not Found .
        Print("I-8092 card not found ! \r\n");
        return;
    }

    cardNo = 1;
    i8092MF_SET_PULSE_MODE(cardNo, AXIS_XY, 2);
    i8092MF_SET_ALARM(cardNo, AXIS_XY, 1, 1);
    i8092MF_SET_ENCODER(cardNo, AXIS_XY, 0, 0, 0);
```

```
i8092MF_SET_MAX_V(cardNo, AXIS_XY, 16000);
```

```
//=====
```

```
==
```

```
BYTE ret1 = 0;
```

```
BYTE chkey;
```

```
DWORD sv; //PPS
```

```
DWORD v; //PPS
```

```
DWORD a; //PPS/s
```

```
i8092MF_SERVO_ON(cardNo, AXIS_XY);
```

```
do
```

```
{
```

```
Print(" (0:Exit, 3:RATIO, 4:FRnet output, 5:FRnet input) \r\n");
```

```
Print(" (6:Reset Encoder, 7:Stop, 8:Clear Error) \r\n");
```

```
Print(" (X:Jog X, Y:Jog Y, S:Stop Jog) \r\n");
```

```
Print("\n");
```

```
Print("-----LOGIC AND REAL POSITION COUNTER-----\n");
```

```
x_value = i8092MF_GET_LP(cardNo, AXIS_X);
```

```
y_value = i8092MF_GET_LP(cardNo, AXIS_Y);
```

```
Print("LOGIC POSITION: x=%10ld, y= %10ld \r\n", x_value, y_value);
```

```
x_value = i8092MF_GET_EP(cardNo, AXIS_X);
```

```
y_value = i8092MF_GET_EP(cardNo, AXIS_Y);
```

```
Print("REAL POSITION: x=%10ld, y= %10ld \r\n", x_value, y_value);
```

```
while (!Kbhit());
```

```
chkey=Getch();
```

```
Print("%s\r\n",&chkey);
```

```
switch (chkey)
```

```
{
```

```
case '0':
```

```
    i8092MF_RESET_CARD(cardNo);
```

```
    Print("EXIT! \r\n");
```

```
    return;
```

```
//-----
```

```
//-----
```

```
case '3':
```

```
    sv=300;//PPS ◦
```

```
    v=30000;//PPS ◦
```

```
    a=500000;//PPS/s ◦
```

```

int loop1;
int loop2;
float ratio;
i8092MF_SET_MAX_V(cardNo, AXIS_XY,160000L);
Print("RATIO_2D ratio ? \r\n");
Scanf("%f", &ratio);
Print("ratio= %f \r\n",ratio);
i8092MF_RATIO_INITIAL(cardNo, sv, v, a, ratio);
for (loop2 = 0; loop2 < 5; loop2++)
{
    for (loop1 = 0; loop1 < 5; loop1++)
    {
        i8092MF_RATIO_2D(cardNo, 0, 3600, 0);
        i8092MF_RATIO_2D(cardNo, 0, 3600, 1);
    }
    i8092MF_RATIO_2D(cardNo, 0, 7200, 0);
    i8092MF_RATIO_2D(cardNo, 0, 3600, 1);
}
i8092MF_RATIO_2D(cardNo, 1, 7200, 1);
Delay(3000);
Print("RATIO_2D OK ! \r\n");
break;

//-----
case '4':

    WORD wSA;
    WORD data;
    Print("FRnet wSA ? \r\n");
    Scanf("%d", &wSA);
    Print("FRnet 16 bits data ? \r\n");
    Scanf("%d", &data);
    i8092MF_FRNET_SA(cardNo, wSA, data);
    break;

//-----
case '5':

    WORD wRA;
    Print("FRnet wRA ? \r\n");
    Scanf("%d", &wRA);
    long data1 = i8092MF_FRNET_RA(cardNo, wRA);
    Print("FRnet 16 bits data = %10ld \r\n", data1);
    break;

```



```

//-----
case '6':
    i8092MF_SET_LP(cardNo, AXIS_XY, 0);
    i8092MF_SET_EP(cardNo, AXIS_XY, 0);
    Print("RESET Encoder ! \r\n");
    break;

//-----
case '7':
    i8092MF_STOP_SLOWLY(cardNo, AXIS_XY);
    Print("STOP! \r\n");
    break;

//-----
case '8':
    i8092MF_CLEAR_ERROR(cardNo);
    Print("CLEAR ERROR ! \r\n");
    break;

//-----
case 88:
case 120:
    BYTE m_Axis=AXIS_X;
    i8092MF_SET_MAX_V(cardNo, m_Axis, 32000);
    i8092MF_NORMAL_SPEED(cardNo, m_Axis, 0); //set axis as
Symmetrical T curve mode
=50000 PPS/S
    i8092MF_SET_A(cardNo, m_Axis, 50000); //set Acc

    i8092MF_SET_V(cardNo, m_Axis, 50000);
    i8092MF_EXD_MP(cardNo, AXIS_X, 100);
    i8092MF_EXD_DISABLE(cardNo, AXIS_Y);

    break;

//-----
case 89:
case 121:
    m_Axis=AXIS_Y;
    i8092MF_SET_MAX_V(cardNo, m_Axis, 32000);
    i8092MF_NORMAL_SPEED(cardNo, m_Axis, 0); //set axis as
Symmetrical T curve mode
=50000 PPS/S
    i8092MF_SET_A(cardNo, m_Axis, 50000); //set Acc

    i8092MF_SET_V(cardNo, m_Axis, 100000);

```

```

        i8092MF_EXD_MP(cardNo, AXIS_Y, 100);
        i8092MF_EXD_DISABLE(cardNo, AXIS_X);
        break;

//-----
    case 90:
    case 115:
        i8092MF_EXD_DISABLE(cardNo, AXIS_X);
        i8092MF_EXD_DISABLE(cardNo, AXIS_Y);

        break;

//-----
    default:
        break;
}
} while (1);
}

```

詳細請參考: demo100 範例

### 4.3.5 撰編譯連結程式

最後按下 **F9** 就會進行編譯，LINK 成 demo100.EXE。


```
Linking
EXE file : ..\..\TCPP\DEMO100.EXE
Linking : \TCPP\LIB\CL.LIB

      Total      Link
Lines compiled: 0      PASS 2
Warnings: 0          0
Errors: 0            0

Available memory: 1928K
Success : Press any key
```

### 4.3.6 Download 程式到 I-8000 系列 PAC 控制器

1. 請在 PC 端執行 7188x.EXE (這是一個 DOS 模式的執行檔，可以在純 DOS 下或 WIN9x 或 WIN-NT 或 WIN2K 的 DOS BOX 下執行) 或是 7188xw.EXE (這是一個 win32 的執行檔，要在 WIN9x 或 WIN-NT 或 WIN2K 下執行)。
2. 請將依實際接線將 COM PORT 設成 COM1(ALT\_1) 或 COM2(ALT\_2)。傳輸速度設成 115200,N,8,1。
3. 打開 I-8000 的電源。此時有兩種可能的狀況：
  - 如果 INIT\* 接腳有接到 INIT\*COM 將會出現 MiniOs7 的版本訊息。然後出現 I-8000>。
  - 如果 INIT\* 接腳不接，I-8000 將會開始執行 AUTOEXEC.BAT 所設定的命令。執行完後一樣出現 I-8000>。
4. 當出現 I-8000> 後就可以下命令給 I-8000 了如下圖。

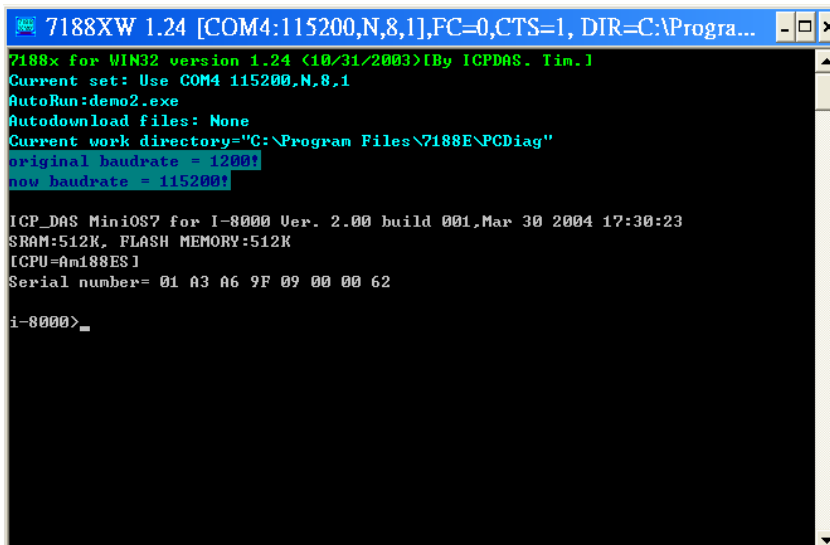


```
7188XW 1.24 [COM4:115200,N,8,1],FC=0,CTS=1, DIR=C:\Progra...
7188x for WIN32 version 1.24 (10/31/2003) [By ICPDAS, Tim.]
Current set: Use COM4 115200,N,8,1
AutoRun:demo2.exe
Autodownload files: None
Current work directory="C:\Program Files\7188E\PCDiag"
original baudrate = 1200
now baudrate = 115200!

ICP_DAS MiniOS7 for I-8000 Ver. 2.00 build 001,Mar 30 2004 17:30:23
SRAM:512K, FLASH MEMORY:512K
[CPU=Am188ES]
Serial number= 01 A3 A6 9F 09 00 00 62

i-8000>_
```

5. 按下 F2 鍵，輸入 demo100.exe，再按 F10 自動 download 並執行 demo100.exe 如下圖：

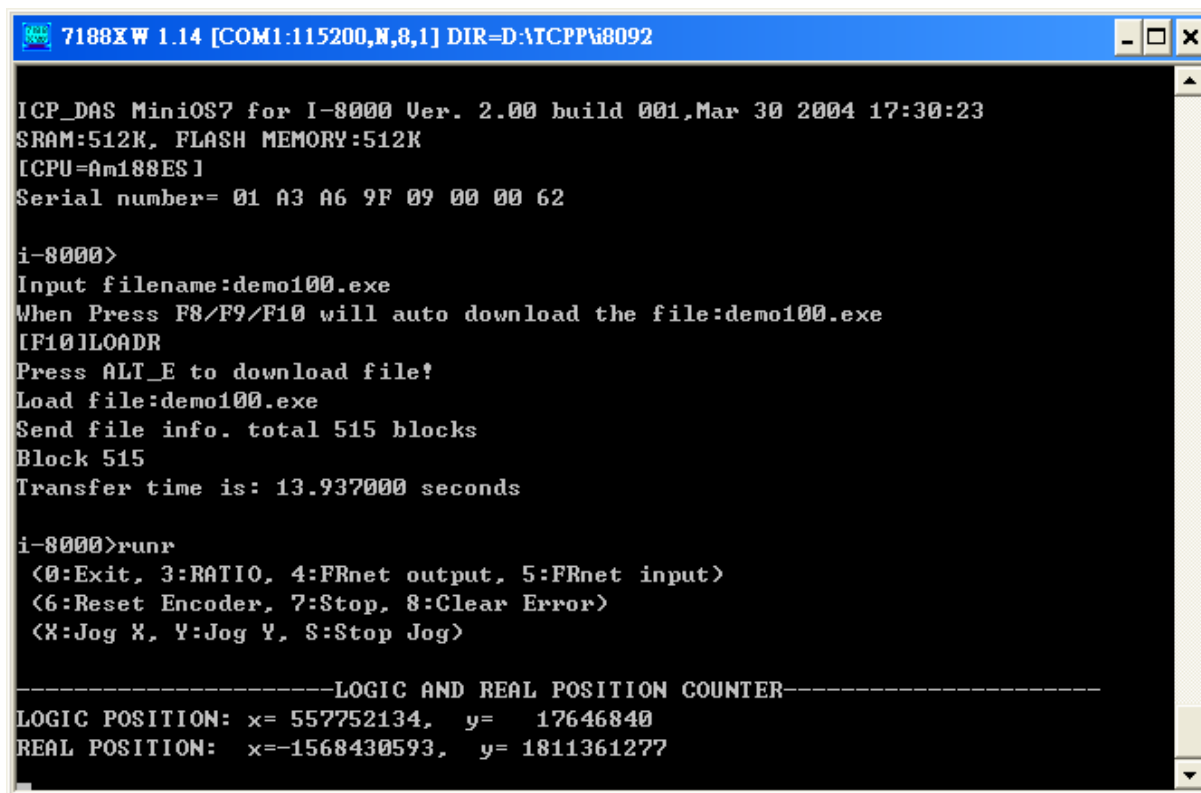

```
7188XW 1.14 [COM1:115200,N,8,1] DIR=D:ATCPP\8092

ICP_DAS MiniOS7 for I-8000 Ver. 2.00 build 001,Mar 30 2004 17:30:23
SRAM:512K. FLASH MEMORY:512K
[CPU=Am188ES]
Serial number= 01 A3 A6 9F 09 00 00 62

i-8000>
Input filename:demo100.exe
When Press F8/F9/F10 will auto download the file:demo100.exe
[F10]LOADR
Press ALT_E to download file!
Load file:demo100.exe
Send file info. total 515 blocks
Block 515
Transfer time is: 13.937000 seconds

i-8000>runr
<0:Exit, 3:RATIO, 4:FRnet output, 5:FRnet input>
<6:Reset Encoder, 7:Stop, 8:Clear Error>
<X:Jog X, Y:Jog Y, S:Stop Jog>

-----LOGIC AND REAL POSITION COUNTER-----
LOGIC POSITION: x= 557752134, y= 17646840
REAL POSITION: x=-1568430593, y= 1811361277
```

詳情請參考:I8000 CD 中 \Napdos\7188e\MiniOS7\doc\big5\index.htm 選左手邊“7188E 入門手冊”有詳盡說明。

---

# A 附錄

---

## A.1 i-8092 開發環境安裝內容

### A.1.1 eVC ++ 4.0

1. 微軟 eVC++ 4.0: 至少到 **ServicePack2**(目前已到 **ServicePack4**)
2. **WinCon8000\_EVC4\_SP1**: WinCon 在 eVC++ 開發環境(SA\_IA)
3. **WinConSDK:WinCon** 軟體開發工具(inc,lib,dll,demo...)

### A.1.2 Visual Studio .NET 2003(VB.NET , C#)

1. 微軟 **Visual Studio.NET 2003** 專業版以上, 須包含有 "智慧型裝置應用程式" (**SmartDeviceApplication**)選項
2. 連線偵錯工具: **Windows CE .NET Utilities v1.1 for Visual Studio .NET 2003**
3. **WinConSDK:WinCon** 軟體開發工具(inc,lib,dll,demo...)

### A.1.3 Turbo C(BC)

1. **Turbo C 2.0** 以上

## A.2 i-8092 概觀




i-8092 運動控制模組圖片



WinCon W-8331 控制器，與 i-8092 運動控制模組，及 DN-8237 接線板圖片

### A.3 外觀尺寸

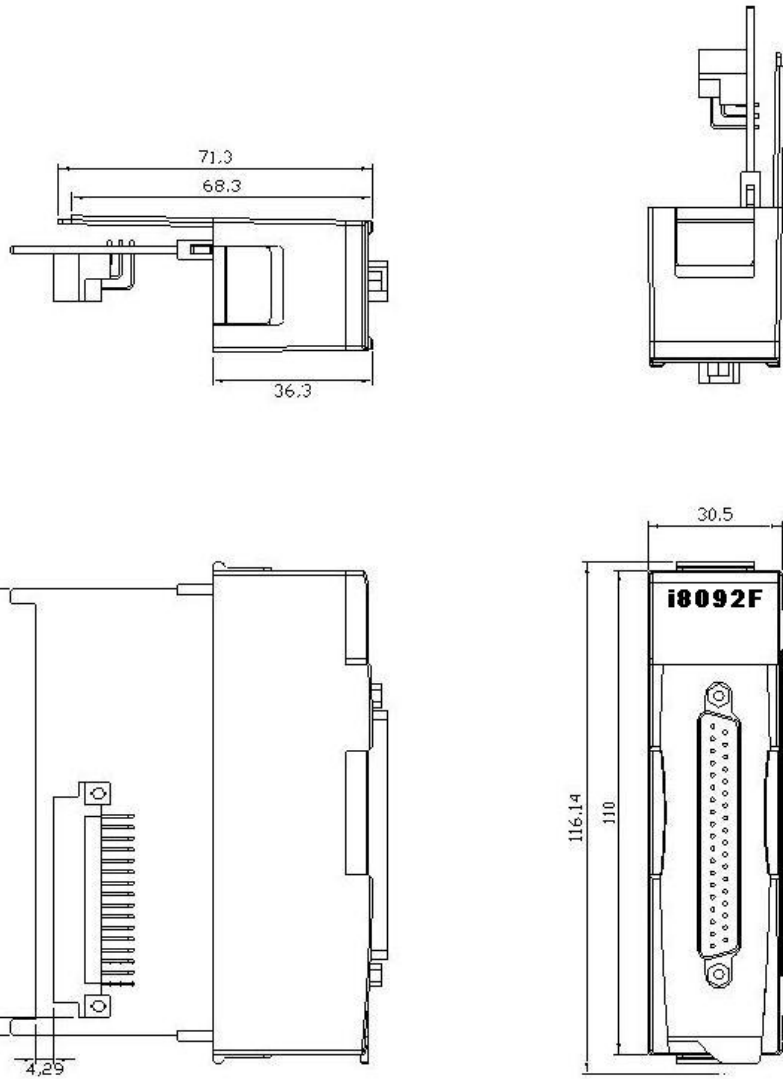

## **A.4 版本更新內容註解**

**New i8092.DLL**

**New i8092.h**

**New i8092\_NET.DLL**



---

## 附錄 B 其他子板

---

### B.1 DN-8237-DB Daughter Board

The DN-8237DB is the daughter board for Delta ASDA-A Series Amplifier. It has 2-axis I/O signals.

#### B.1.1 Board Layout for DN-8237-DB

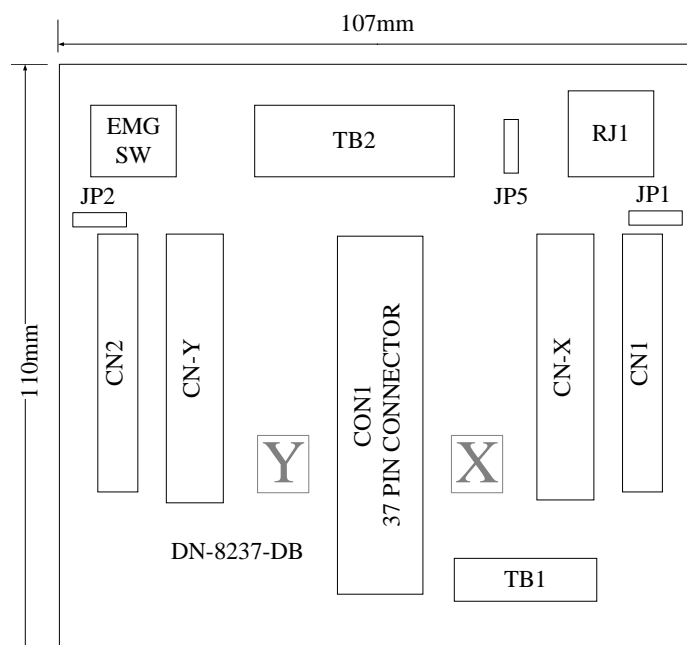


Fig. B1-1 Board layout for the DN-8237-DB

## B.1.2 Signal Connections for DN-8237-DB

Maintaining signal connections is one of the most important factors in ensuring that your application system is sending and receiving data correctly.

### ■ Pin Assignment for CON1

The I/O connector on the DN-8237-DB is a 37-pin connector that enables you to connect to the PISO-PS200 or I-8092F motion card. Fig. B1-2 shows the pin assignment for the 37-pin I/O connector on the DN-8237-DB (or on the motion card), and refer to Table B1-2 for description of each motion I/O signal.

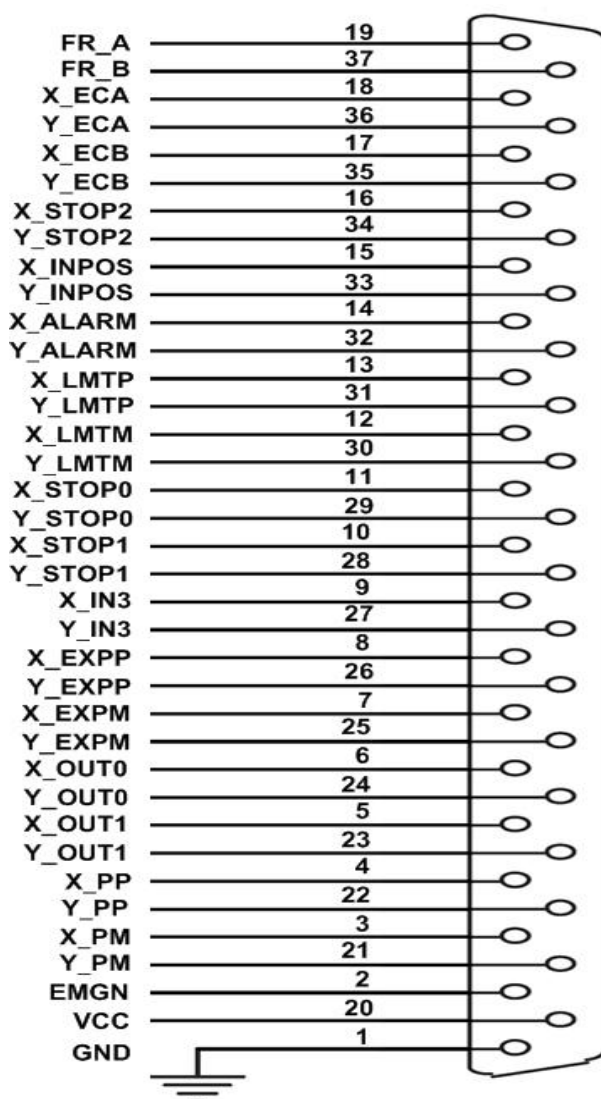


Fig. B1-2 I/O connector pin assignment for the CON1

Table B1-2 DN-8237-DB CON1 I/O connector signal description

| Pin name | Pin number | Description                                  |
|----------|------------|--|
| FR_A     | 19         | FRnet A-phase signal                         |
| FR_B     | 37         | FRnet B-phase signal                         |
| X_ECA    | 18         | Encoder A-phase signal for the X axis        |
| Y_ECA    | 36         | Encoder A-phase signal for the Y axis        |
| X_ECB    | 17         | Encoder B-Phase signal for the X axis        |
| Y_ECB    | 35         | Encoder B-Phase signal for the Y axis        |
| X_STOP2  | 16         | Stop 2 signal for the X axis                 |
| Y_STOP2  | 34         | Stop 2 signal for the Y axis                 |
| X_INPOS  | 15         | In-position signal for the X axis            |
| Y_INPOS  | 33         | In-position signal for the Y axis            |
| X_ALARM  | 14         | Alarm signal for the X axis                  |
| Y_ALARM  | 32         | Alarm signal for the Y axis                  |
| X_LMTP   | 13         | Limit switch input signal (+) for the X axis |
| Y_LMTP   | 31         | Limit switch input signal (+) for the Y axis |
| X_LMTM   | 12         | Limit switch input signal (-) for the X axis |
| Y_LMTM   | 30         | Limit switch input signal (-) for the Y axis |
| X_STOP0  | 11         | Stop 0 signal for the X axis                 |
| Y_STOP0  | 29         | Stop 0 signal for the Y axis                 |
| X_STOP1  | 10         | Stop 1 signal for the X axis                 |
| Y_STOP1  | 28         | Stop 1 signal for the Y axis                 |
| X_IN3    | 9          | Input 3 signal for the X axis                |
| Y_IN3    | 27         | Input 3 signal for the Y axis                |
| X_EXPP   | 8          | EXT pulsar input signal (+) for the X axis   |
| Y_EXPP   | 26         | EXT pulsar input signal (+) for the Y axis   |
| X_EXPM   | 7          | EXT pulsar input signal (-) for the X axis   |
| Y_EXPM   | 25         | EXT pulsar input signal (-) for the Y axis   |
| X_OUT0   | 6          | Output 0 signal for the X axis               |
| Y_OUT0   | 24         | Output 0 signal for the Y axis               |
| X_OUT1   | 5          | Output 1 signal for the X axis               |
| Y_OUT1   | 23         | Output 1 signal for the Y axis               |
| XPP      | 4          | Driving pulsar signal (+) for the X axis     |
| YPP      | 22         | Driving pulsar signal (+) for the Y axis     |
| XPM      | 3          | Driving pulsar signal (+) for the X axis     |
| YPM      | 21         | Driving pulsar signal (+) for the Y axis     |
| EMGN     | 2          | Emergency stop input signal                  |
| VCC      | 20         | Module power (+5V)                           |
| GND      | 1          | Ground                                       |

## ■ TB1

The connector TB1 is 7-pin connector that enables you to connect to the signals of your motor drivers. Fig.B1-3 shows the pin assignment for the 7-pin connector on the DN-8237-DB, and the Table B1-3 shows its I/O connector signal description.

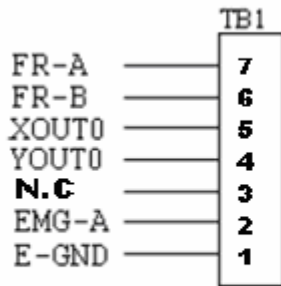


Fig. B1-3 Pin definition for TB1

Table B 1-3 TB1 Signal Connection

| Name       | Description                   |
|------------|-------------------------------|
| FR-A       | FRnet port A                  |
| FR-B       | FRnet port B                  |
| XOUT0      | General Output 0 for X axis   |
| YOUT0      | General Output 0 for Y axis   |
| <b>N.C</b> | <b>No Connection</b>          |
| EMG-A      | EMG input signal for all axes |
| E-GND      | EXT power ground              |

## ■ TB2

The connector TB2 is 5-pin connector that enables you to connect to the signals of your motor drivers. Fig.B1-4 shows the pin assignment for the 5-pin connector on the DN-8237-DB, and the Table B1-4 shows its I/O connector signal description.

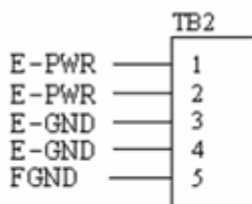


Fig. B1-4 Pin definition for TB2

Table B 1-4 TB2 Signal Connection

| Pin name | Description           |
|----------|-----------------------|
| E-PWR    | EXT power supply +24V |
| E-GND    | EXT power ground      |
| FGND     | Frame ground          |

► **Note:** Don't reverse connect signals with E\_PWR and E\_GND. Serious damage to your motion card and motion controller might be happened.

■ **CN-X & CN-Y (CN1 connector for each AXIS in Driver)**

The connectors CN-X and CN-Y are 50-pin connectors that enable you to connect to the CN1 connector of Delta ASDA-A series motor drivers. Fig.B1-5 shows the pin assignment for the 50-pin connector on the DN-8468-DB, and the Table B1-5 shows its I/O connector signal description.

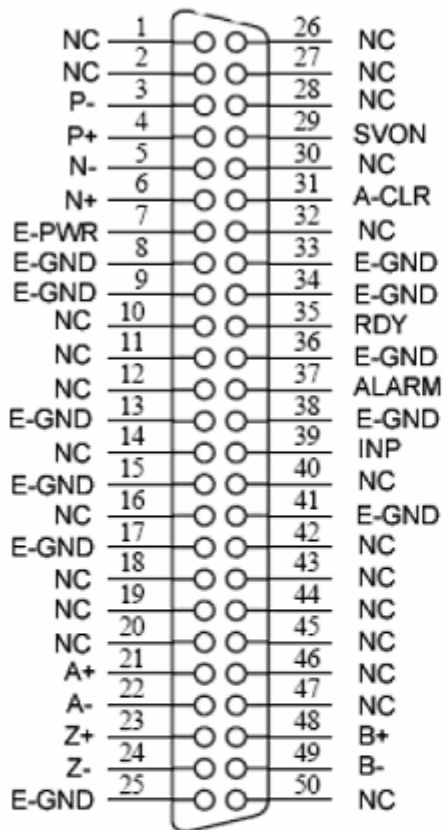


Fig. B1-5 Pin definition for CNX and CNY

Table B1-5 CN1 Signal Connection

| Name  | Number   | Description                        |
|-------|--|------------------------------------|
| A+    | 21   | Encoder A-Phase (+)                |
| A-    | 22   | Encoder A-Phase (-)                |
| B+    | 48   | Encoder B-Phase (+)                |
| B-    | 49   | Encoder B-Phase (-)                |
| Z+    | 23   | Encoder Z-Phase (+)                |
| Z-    | 24   | Encoder Z-Phase (-)                |
| P+    | 4  | Positive Direction Pulse Output(+) |
| P-    | 3  | Positive Direction Pulse Output(-) |
| N+    | 6  | Negative Direction Pulse           |
| N-    | 5  | Negative Direction Pulse Output(-) |
| INP   | 39   | Servo In Position                  |
| RDY   | 35   | Servo Ready                        |
| SVON  | 29   | Servo On                           |
| A-CLR | 31   | Alarm Clear                        |
| ALARM | 37   | Servo Alarm                        |
| E-PWR | 7  | EXT power +24V                     |
| E-GND | 8, 9, 13, 15, 17, 25, 33, 34, 36, 38, 41   | EXT power ground                   |
| NC    | 1, 2, 10, 11, 12, 14, 16, 18, 19, 20, 26, 27, 28, 30, 32, 40, 42, 43, 44, 45, 46, 47, 50 | No connection                      |

► **Note 1:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

■ **CN1 & CN2 (The I/O signals of the X and Y AXIS)**

The connectors CN1 and CN2 are 11-pin connectors that enable you to connect to the

signals of your motor drivers. Fig.B1-6 shows the pin assignment for the 20-pin connector on the DN-8237-DB, and the Table B1-6 shows its I/O connector signal description.

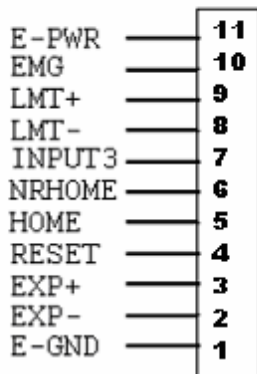


Fig. B1-6 Pin definition for CN1 & CN2

Table B1-6 CN1 & CN2 Signal Connection

| Pin name | Description                      |
|----------|----------------------------------|
| E-PWR    | EXT power supply +24V            |
| EMG      | EMG input signal                 |
| LMT+     | Limit Switch Input Signal (+)    |
| LMT-     | Limit Switch Input Signal (-)    |
| INPUT3   | Input Signal (IN3)               |
| NRHOME   | Near Home Sensor Input Signal    |
| HOME     | Home Sensor Input Signal         |
| RESET    | Reset input signal               |
| EXP+     | EXT Positive Direction Pulse (+) |
| EXP-     | EXT Negative Direction Pulse (-) |
| E-GND    | EXT power ground                 |

### ■ RJ1 (The I/O signals of the FRnet)

The connectors RJ1 is an 8-pin RJ45 connector that enable you to connect to the signals of FRnet. Fig.B1-7 shows the pin assignment for the 8-pin connector on the DN-8237-DB, and the Table B1-7 shows its I/O connector signal description.

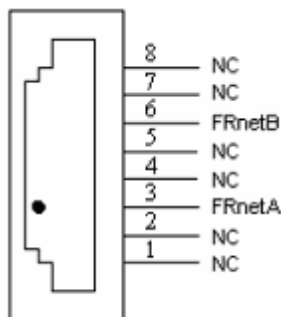


Fig. B1-7 Pin definition for RJ1

Table B1-7 RJ1

| Pin name | Description   |
|----------|---------------|
| FRnetA   | FRnet port A  |
| FRnetB   | FRnet port B  |
| NC       | No connection |

► **Note:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

## B.1.3 Jumper and Switch Settings

### ■ JP5

Jumper 5 controls the EMG-A signal of the TB1 connector. The following diagram is shown the selection condition of the jumper 5.

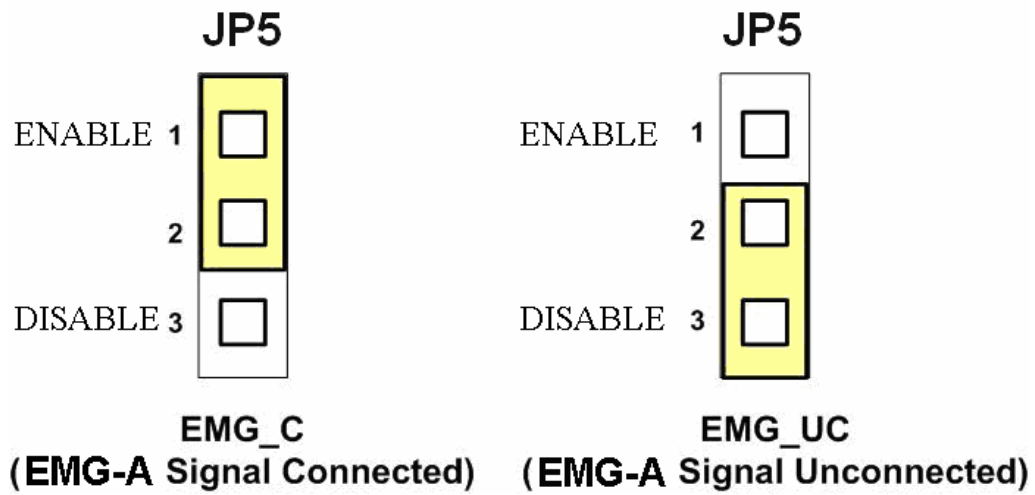


Fig. B1-8 Jumper 5 setting

## ■ SW 1

The emergency stop signal for each servo amplifier can be selected from SW1. The number 1 and 2 on SW1 are denoted as axis X and Y, respectively. The number 3 and 4 on SW1 are reserved for future work. Fig. B1-9 is the default setting to connect the EMG signals to GND. The EMG signals from CN1 and CN2 will not take effect. If the switch is disconnected as shown in Fig. B1-10, the emergency stop signals can be controlled from EMG signals in CN1 and CN2.

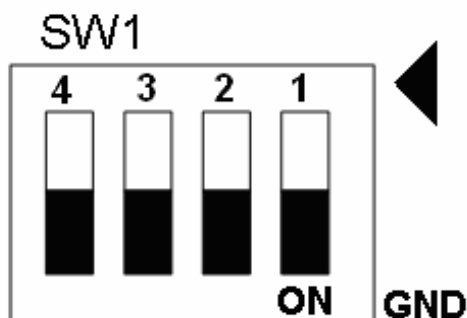


Fig. B1-9 SW1 setting for normally GND (Default setting)

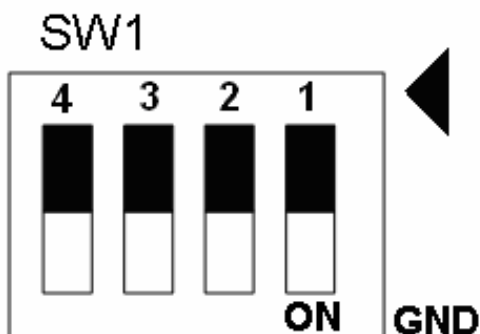


Fig. B1-10 SW1 setting for user controlled signals.



■ JP1 ~ JP2

Jumper 1 ~ Jumper 2 can select the reset function in CN1 and CN2 for each axis. The following diagram is shown the selection condition of the JP1.

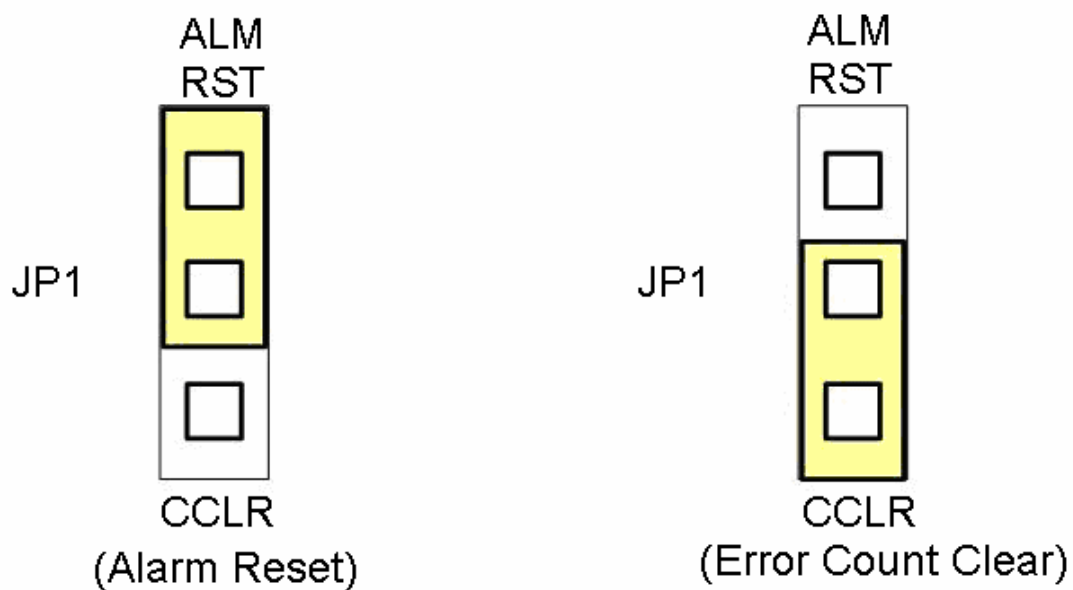


Fig. B1-15 JP 1 and 2 setting

## B.2 DN-8237-MB Daughter Board

The DN-8237MB is the daughter board for Mitsubishi J2 Series Amplifier. It has 2-axis I/O signals.

### B.2.1 Board Layout for DN-8237-MB

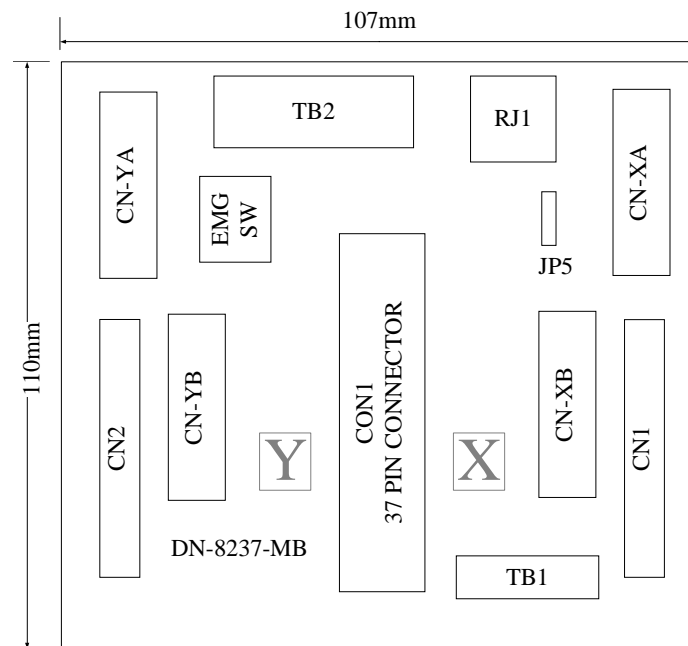


Fig. B2-1 Board layout for the DN-8237-MB

## B.2.2 Signal Connections for DN-8237-MB

Maintaining signal connections is one of the most important factors in ensuring that your application system is sending and receiving data correctly.

### ■ Pin Assignment for CON1

The I/O connector on the DN-8237-MB is a 37-pin connector that enables you to connect to the PISO-PS200 or I-8092F motion card. Fig. B2-2 shows the pin assignment for the 37-pin I/O connector on the DN-8237-MB (or on the motion card), and refer to Table B2-2 for description of each motion I/O signal.

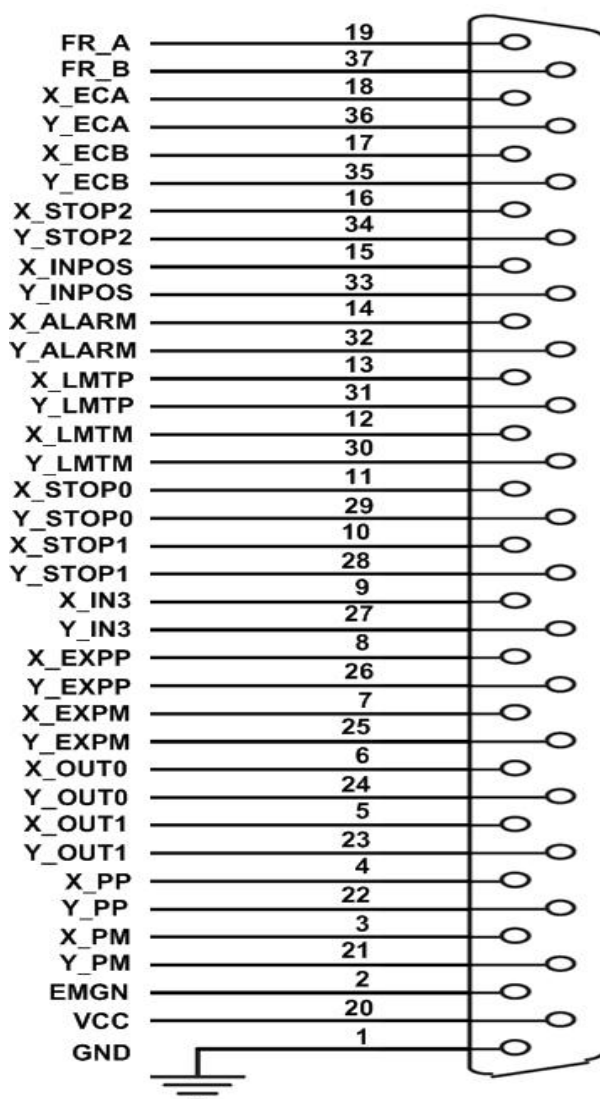


Fig. B2-2 I/O connector pin assignment for the CON1


Table B2-2 DN-8237-MB CON1 I/O connector signal description

| Pin name | Pin number | Description                                  |
|----------|------------|--|
| FR_A     | 19         | FRnet A-phase signal                         |
| FR_B     | 37         | FRnet B-phase signal                         |
| X_ECA    | 18         | Encoder A-phase signal for the X axis        |
| Y_ECA    | 36         | Encoder A-phase signal for the Y axis        |
| X_ECB    | 17         | Encoder B-Phase signal for the X axis        |
| Y_ECB    | 35         | Encoder B-Phase signal for the Y axis        |
| X_STOP2  | 16         | Stop 2 signal for the X axis                 |
| Y_STOP2  | 34         | Stop 2 signal for the Y axis                 |
| X_INPOS  | 15         | In-position signal for the X axis            |
| Y_INPOS  | 33         | In-position signal for the Y axis            |
| X_ALARM  | 14         | Alarm signal for the X axis                  |
| Y_ALARM  | 32         | Alarm signal for the Y axis                  |
| X_LMTP   | 13         | Limit switch input signal (+) for the X axis |
| Y_LMTP   | 31         | Limit switch input signal (+) for the Y axis |
| X_LMTM   | 12         | Limit switch input signal (-) for the X axis |
| Y_LMTM   | 30         | Limit switch input signal (-) for the Y axis |
| X_STOP0  | 11         | Stop 0 signal for the X axis                 |
| Y_STOP0  | 29         | Stop 0 signal for the Y axis                 |
| X_STOP1  | 10         | Stop 1 signal for the X axis                 |
| Y_STOP1  | 28         | Stop 1 signal for the Y axis                 |
| X_IN3    | 9          | Input 3 signal for the X axis                |
| Y_IN3    | 27         | Input 3 signal for the Y axis                |
| X_EXPP   | 8          | EXT pulsar input signal (+) for the X axis   |
| Y_EXPP   | 26         | EXT pulsar input signal (+) for the Y axis   |
| X_EXPM   | 7          | EXT pulsar input signal (-) for the X axis   |
| Y_EXPM   | 25         | EXT pulsar input signal (-) for the Y axis   |
| X_OUT0   | 6          | Output 0 signal for the X axis               |
| Y_OUT0   | 24         | Output 0 signal for the Y axis               |
| X_OUT1   | 5          | Output 1 signal for the X axis               |
| Y_OUT1   | 23         | Output 1 signal for the Y axis               |
| XPP      | 4          | Driving pulsar signal (+) for the X axis     |
| YPP      | 22         | Driving pulsar signal (+) for the Y axis     |
| XPM      | 3          | Driving pulsar signal (+) for the X axis     |
| YPM      | 21         | Driving pulsar signal (+) for the Y axis     |
| EMGN     | 2          | Emergency stop input signal                  |
| VCC      | 20         | Module power (+5V)                           |
| GND      | 1          | Ground                                       |

■ TB2

The connector TB2 is 7-pin connector that enables you to connect to the signals of your motor drivers. Fig.B2-3 shows the pin assignment for the 7-pin connector on the DN-8237-MB, and the Table B2-3 shows its I/O connector signal description.

Table B2-3 TB2 Signal Connection

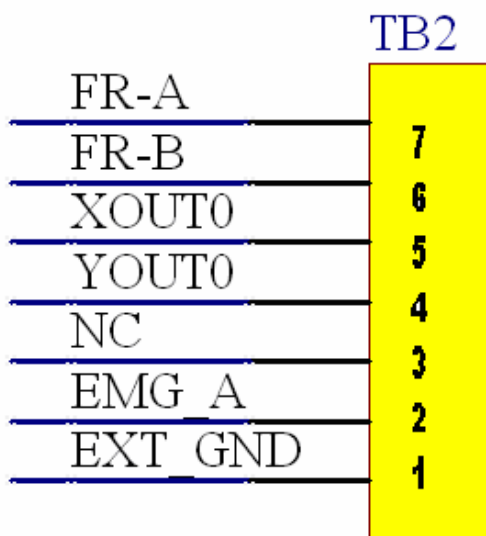

| Name    | Number | Description                   |
|---------|--------|-------------------------------|
| FR-A    | 7      | FRnet port A                  |
| FR-B    | 6      | FRnet port B                  |
| XOUT0   | 5      | General output 0 for X axis   |
| YOUT0   | 4      | General output 0 for X axis   |
| NC      | 3      | No connection                 |
| EMG-A   | 2      | EMG input signal for all axis |
| EXT_GND | 1      | EXT POWER Ground              |

Fig B2-3 Pin definition for TB2

## ■ TB1

The connector TB1 is 5-pin connector that enables you to connect to the signals of your motor drivers. Fig.B2-4 shows the pin assignment for the 5-pin connector on the DN-8237-MB, and the Table B2-4 shows its I/O connector signal description.

Table B2-4 TB1 Signal Connection

| Name    | Number | Description      |
|---------|--------|------------------|
| EXT_PWR | 1      | EXT POWER 24V    |
| EXT_PWR | 2      | EXT POWER 24V    |
| EXT_GND | 3      | EXT POWER Ground |
| EXT_GND | 4      | EXT POWER Ground |
| FGND    | 5      | Frame Ground     |

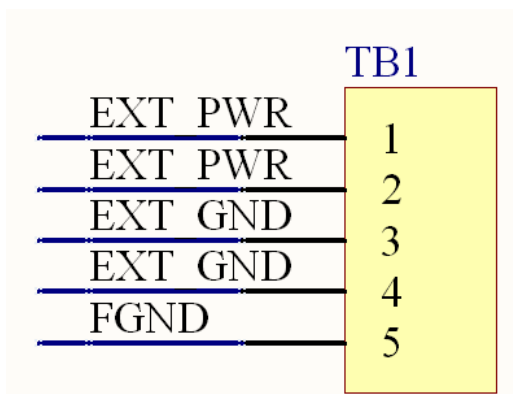


Fig B2-4 Pin definition for TB1

► **Note:** Don't reverse connect signals with E\_PWR and E\_GND. Serious damage to your motion card and motion controller might be happened.

■ CN-XA & CN-YA (Fig B2-5 connector for each AXIS )

The connectors CN-XA and CN-YA are 20-pin connectors that enable you to connect to the CNA connector of Mitsubishi motor drivers. Fig.B2-5 shows the pin assignment for the 20-pin connector on the DN-8237-MB, and the Table B2-5 shows its I/O connector signal description.

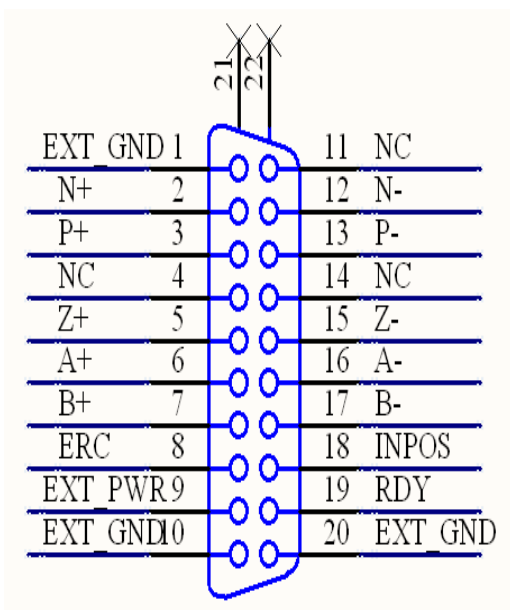


Fig B2-5 Pin definition for CN-XA, CN-YA

Table B2-5 CN-X A,CN-YA

| Name    | Number | Description                  |
|---------|--------|------------------------------|
| EXT_GND | 1      | EXT POWER Ground             |
| N+      | 2      | Negative Direction Pulse(+)  |
| P+      | 3      | Positive Direction Pulse(+)  |
| NC      | 4      | No connection                |
| Z+      | 5      | Encoder Z-phase(+)           |
| A+      | 6      | Encoder A-phase(+)           |
| B+      | 7      | Encoder B-phase(+)           |
| ERC     | 8      | Error Count Clear            |
| EXT_PWR | 9      | EXT POWER 24V                |
| EXT_GND | 10     | EXT POWER Ground             |
| NC      | 11     | No connection                |
| N-      | 12     | Negative Direction Pulse(-)  |
| P-      | 13     | Positive Direction Pulse (-) |
| NC      | 14     | No connection                |
| Z-      | 15     | Encoder Z-phase(-)           |
| A-      | 16     | Encoder A-phase (-)          |
| B-      | 17     | Encoder B-phase (-)          |
| INPOS   | 18     | Servo In Position            |
| RDY     | 19     | Servo Ready                  |
| EXT_GND | 20     | EXT POWER Ground             |

► **Note 1:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

■ **CN-XB & CN-YB (Fig B2-6 connector for each AXIS )**

The connectors CN-XB and CN-YB are 20-pin connectors that enable you to connect to the CNB connector of your motor drivers. Fig.B2-6 shows the pin assignment for the 20-pin connector on the DN-8237-MB, and the Table B2-6 shows its I/O connector signal description.

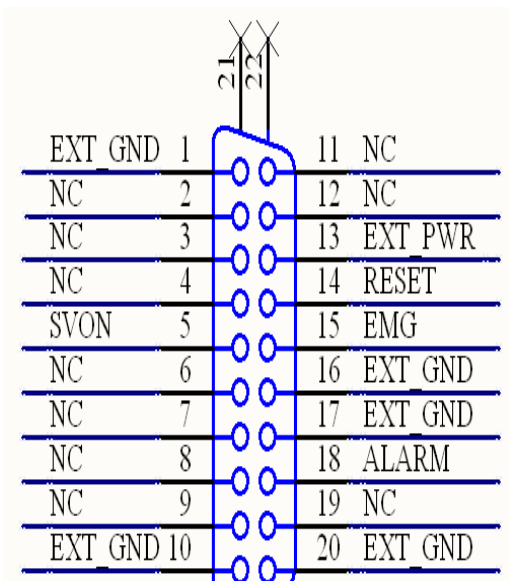


Fig B2-6 Pin definition for CN-XB, CN-YB

Table B2-6 CN-XB ,CN-YB

| Name    | Number | Description      |
|---------|--------|------------------|
| EXT_GND | 1      | EXT POWER Ground |
| NC      | 2      | No connection    |
| NC      | 3      | No connection    |
| NC      | 4      | No connection    |
| SVON    | 5      | Servo On         |
| NC      | 6      | No connection    |
| NC      | 7      | No connection    |
| NC      | 8      | No connection    |
| NC      | 9      | No connection    |
| EXT_GND | 10     | EXT POWER Ground |
| NC      | 11     | No connection    |
| NC      | 12     | No connection    |
| EXT_PWR | 13     | EXT POWER 24V    |
| RESET   | 14     | Servo Reset      |
| EMG     | 15     | Emergent Stop    |
| EXT_GND | 16     | EXT POWER Ground |
| EXT_GND | 17     | EXT POWER Ground |
| ALARM   | 18     | Servo Alarm      |
| NC      | 19     | No connection    |
| EXT_GND | 20     | EXT POWER Ground |

► **Note 1:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.



■ CN1 & CN2 (The I/O signals of the X and Y AXIS )

The connectors CN1 and CN2 are 11-pin connectors that enable you to connect to the signals of your motor drivers. Fig.B2-7 shows the pin assignment for the 20-pin connector on the DN-8237-MB, and the Table B2-7 shows its I/O connector signal description.

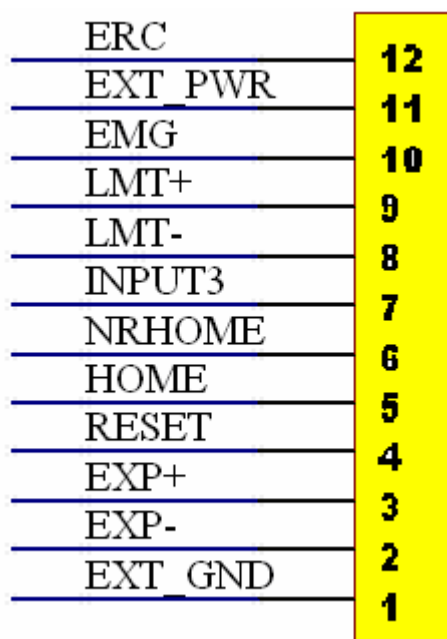


Table B2-7 CN1~CN2

| Name    | Number | Description                        |
|---------|--------|------------------------------------|
| ERC     | 12     | Error Count Clear                  |
| EXT_PWR | 11     | EXT POWER 24V                      |
| EMG     | 10     | Emergent Stop                      |
| LMT+    | 9      | Limit switch Input<br>Signal(+)    |
| LMT-    | 8      | Limit switch Input<br>Signal(-)    |
| INPUT3  | 7      | Input Signal (IN3)                 |
| NRHOME  | 6      | Near HOME Sensor Input<br>Signal   |
| HOME    | 5      | HOME Sensor Input<br>Signal        |
| RESET   | 4      | RESET Input Signal                 |
| EXP+    | 3      | EXT Positive Direction<br>Pulse(+) |
| EXP-    | 2      | EXT Positive Direction<br>Pulse(-) |
| EXT_GND | 1      | EXT POWER Ground                   |

Fig B2-7 Pin definition for CN1~ CN2

## ■ RJ1 (The I/O signals of the FRnet)

The connectors RJ1 is an 8-pin RJ45 connector that enable you to connect to the signals of FRnet. Fig.B2-8 shows the pin assignment for the 8-pin connector on the DN-8237-MB, and the Table B2-8 shows its I/O connector signal description.

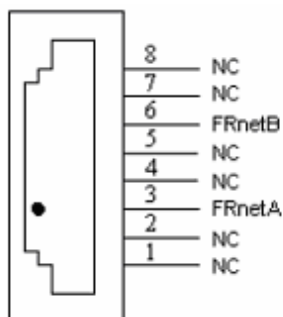


Table B2-8 RJ1

| Pin name | Description   |
|----------|---------------|
| FRnetA   | FRnet port A  |
| FRnetB   | FRnet port B  |
| NC       | No connection |

Fig. B2-8 Pin definition for RJ1

► **Note:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

## B2.3 Jumper and Switch Settings

### ■ JP5

Jumper 5 controls the EMG-A signal of the TB1 connector. The following diagram is shown the selection condition of the jumper 5.

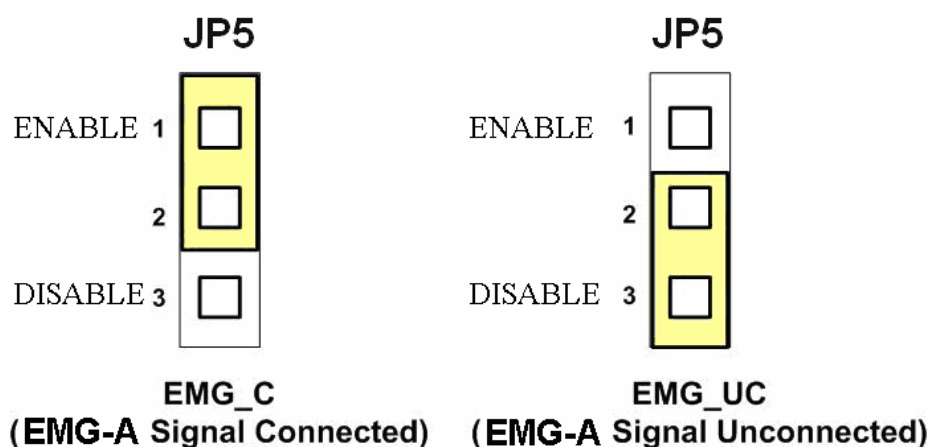


Fig. B2-9 Jumper 5 setting

### ■ SW 1

The emergency stop signal for each servo amplifier can be selected from SW1. The number 1 and 2 on SW1 are denoted as axis X and Y, respectively. The number 3 and 4 on SW1 are reserved for future work. Fig. B2-10 is the default setting to connect the EMG signals to GND. The EMG signals from CN1 and CN2 will not take effect. If the switch is disconnected as shown in Fig. B2-11, the emergency stop signals can be controlled from EMG signals in CN1 and CN2.

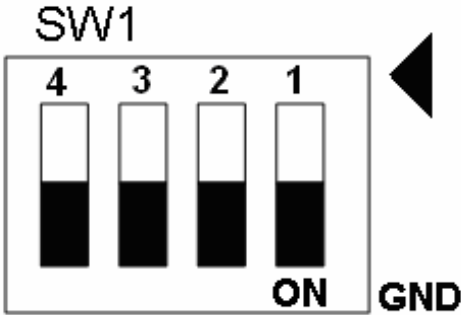


Fig. B2-10 SW1 setting for normally GND (Default setting)

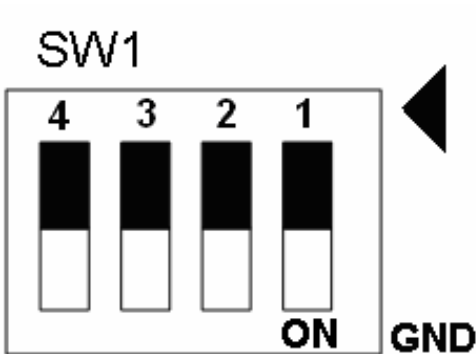


Fig. B2-11 SW1 setting for user controlled signals.

### B.3 DN-8237-PB Daughter Board

The DN-8237PB is the daughter board for Panasonic A4 Series Amplifier. It has 2-axis I/O signals.

#### B.3.1 Board Layout for DN-8237-PB

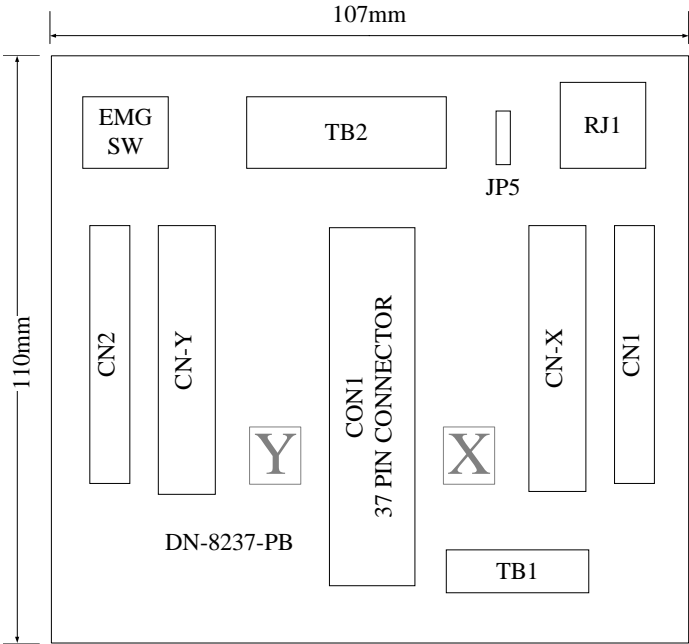


Fig. B3-1 Board layout for the DN-8237-PB

## B.3.2 Signal Connections for DN-8237-PB

Maintaining signal connections is one of the most important factors in ensuring that your application system is sending and receiving data correctly.

### ■ Pin Assignment for CON1

The I/O connector on the DN-8237-PB is a 37-pin connector that enables you to connect to the PISO-PS200(or I-8092F) motion card. Fig. B3-2 shows the pin assignment for the 37-pin I/O connector on the DN-8237-PB (or on the motion card), and refer to Table B3-2 for description of each motion I/O signal.

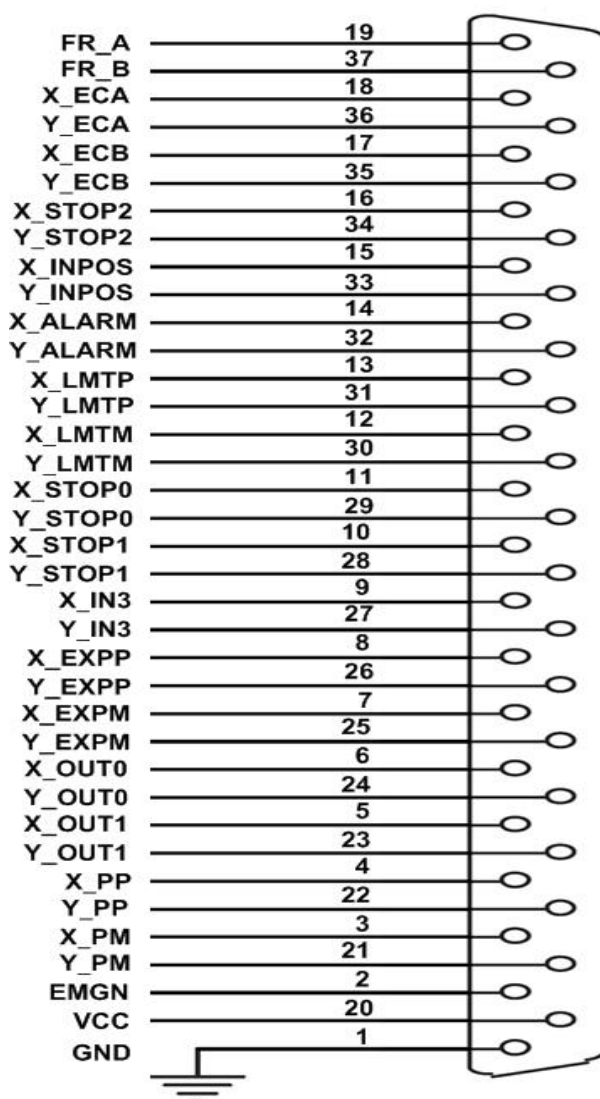


Fig. B3-2 I/O connector pin assignment for the CON1

Table B3-2 DN-8237-PB CON1 I/O connector signal description

| Pin name | Pin number | Description                                  |
|----------|------------|--|
| FR_A     | 19         | FRnet A-phase signal                         |
| FR_B     | 37         | FRnet B-phase signal                         |
| X_ECA    | 18         | Encoder A-phase signal for the X axis        |
| Y_ECA    | 36         | Encoder A-phase signal for the Y axis        |
| X_ECB    | 17         | Encoder B-Phase signal for the X axis        |
| Y_ECB    | 35         | Encoder B-Phase signal for the Y axis        |
| X_STOP2  | 16         | Stop 2 signal for the X axis                 |
| Y_STOP2  | 34         | Stop 2 signal for the Y axis                 |
| X_INPOS  | 15         | In-position signal for the X axis            |
| Y_INPOS  | 33         | In-position signal for the Y axis            |
| X_ALARM  | 14         | Alarm signal for the X axis                  |
| Y_ALARM  | 32         | Alarm signal for the Y axis                  |
| X_LMTP   | 13         | Limit switch input signal (+) for the X axis |
| Y_LMTP   | 31         | Limit switch input signal (+) for the Y axis |
| X_LMTM   | 12         | Limit switch input signal (-) for the X axis |
| Y_LMTM   | 30         | Limit switch input signal (-) for the Y axis |
| X_STOP0  | 11         | Stop 0 signal for the X axis                 |
| Y_STOP0  | 29         | Stop 0 signal for the Y axis                 |
| X_STOP1  | 10         | Stop 1 signal for the X axis                 |
| Y_STOP1  | 28         | Stop 1 signal for the Y axis                 |
| X_IN3    | 9          | Input 3 signal for the X axis                |
| Y_IN3    | 27         | Input 3 signal for the Y axis                |
| X_EXPP   | 8          | EXT pulsar input signal (+) for the X axis   |
| Y_EXPP   | 26         | EXT pulsar input signal (+) for the Y axis   |
| X_EXPM   | 7          | EXT pulsar input signal (-) for the X axis   |
| Y_EXPM   | 25         | EXT pulsar input signal (-) for the Y axis   |
| X_OUT0   | 6          | Output 0 signal for the X axis               |
| Y_OUT0   | 24         | Output 0 signal for the Y axis               |
| X_OUT1   | 5          | Output 1 signal for the X axis               |
| Y_OUT1   | 23         | Output 1 signal for the Y axis               |
| XPP      | 4          | Driving pulsar signal (+) for the X axis     |
| YPP      | 22         | Driving pulsar signal (+) for the Y axis     |
| XPM      | 3          | Driving pulsar signal (+) for the X axis     |
| YPM      | 21         | Driving pulsar signal (+) for the Y axis     |
| EMGN     | 2          | Emergency stop input signal                  |
| VCC      | 20         | Module power (+5V)                           |
| GND      | 1          | Ground                                       |

## ■ TB1

The connector TB1 is 7-pin connector that enables you to connect to the signals of your motor drivers. Fig.B3-3 shows the pin assignment for the 7-pin connector on the DN-8237-PB, and the Table B3-3 shows its I/O connector signal description.

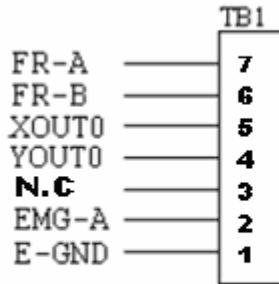


Fig. B3-3 Pin definition for TB1

TableB3-3 TB1 Signal Connection

| Name       | Description                   |
|------------|-------------------------------|
| FR-A       | FRnet port A                  |
| FR-B       | FRnet port B                  |
| XOUT0      | General Output 0 for X axis   |
| YOUT0      | General Output 0 for Y axis   |
| <b>N.C</b> | <b>No Connection</b>          |
| EMG-A      | EMG input signal for all axes |
| E-GND      | EXT power ground              |

## ■ TB2

The connector TB2 is 5-pin connector that enables you to connect to the signals of your motor drivers. Fig.B3-4 shows the pin assignment for the 5-pin connector on the DN-8237-PB, and the Table B3-4 shows its I/O connector signal description.

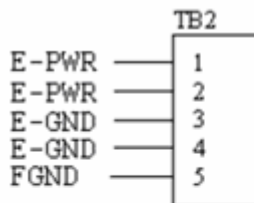


Fig. B3-4 Pin definition for TB2

Table B3-4 TB2 Signal Connection

| Pin name | Description           |
|----------|-----------------------|
| E-PWR    | EXT power supply +24V |
| E-GND    | EXT power ground      |
| FGND     | Frame ground          |

► **Note:** Don't reverse connect signals with E\_PWR and E\_GND. Serious damage to your motion card and motion controller might be happened.

■ CN-X & CN-Y (CN X5 connector for each Axis in Driver)

The connectors CN-X and CN-Y are 50-pin connectors that enable you to connect to the CN X5 connector of Panasonic motor drivers. Fig.B3-5 shows the pin assignment for the 50-pin connector on the DN-8468-PB, and the Table B3-5 shows its I/O connector signal description.

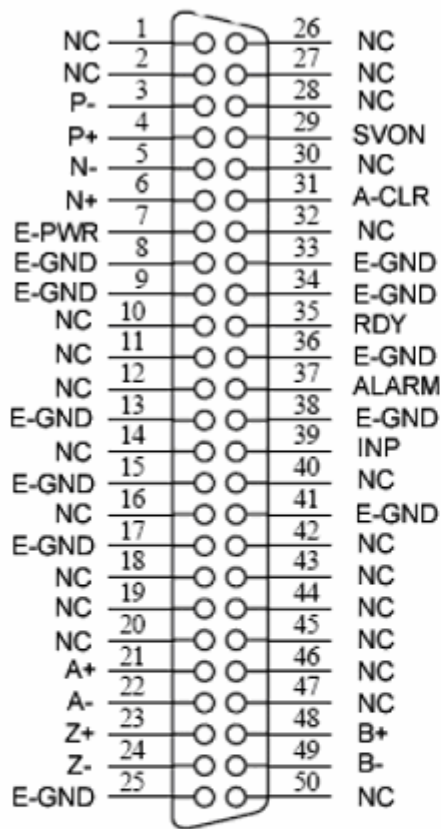


Fig. B3-5 Pin definition for CNX and CNY

Table B3-5 CN X5 Signal Connection

| Name  | Number   | Description                        |
|-------|--|------------------------------------|
| A+    | 21   | Encoder A-Phase (+)                |
| A-    | 22   | Encoder A-Phase (-)                |
| B+    | 48   | Encoder B-Phase (+)                |
| B-    | 49   | Encoder B-Phase (-)                |
| Z+    | 23   | Encoder Z-Phase (+)                |
| Z-    | 24   | Encoder Z-Phase (-)                |
| P+    | 4  | Positive Direction Pulse Output(+) |
| P-    | 3  | Positive Direction Pulse Output(-) |
| N+    | 6  | Negative Direction Pulse           |
| N-    | 5  | Negative Direction Pulse Output(-) |
| INP   | 39   | Servo In Position                  |
| RDY   | 35   | Servo Ready                        |
| SVON  | 29   | Servo On                           |
| A-CLR | 31   | Alarm Clear                        |
| ALARM | 37   | Servo Alarm                        |
| E-PWR | 7  | EXT power +24V                     |
| E-GND | 8, 9, 13,<br>15,17, 25,<br>33,34, 36,<br>38,41   | EXT power ground                   |
| NC    | 1,2,10,11,<br>12,14,16,<br>18,19,20,<br>26,27,28,<br>30,32,40,<br>42,43,44,<br>45,46,47,<br>50 | No connection                      |

► **Note 1:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.



■ **CN1& CN2 (The I/O signals of the X and Y axis)**

The connectors CN1 and CN2 are 11-pin connectors that enable you to connect to the signals of your motor drivers. Fig.B3-6 shows the pin assignment for the 20-pin connector on the DN-8237-PB, and the Table B3-6 shows its I/O connector signal description.

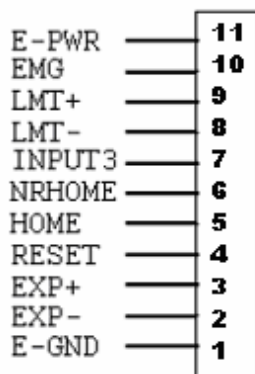


Fig B3-6 Pin definition for CN1 & CN2

Table B3-6 CN1 & CN2 Signal Connection

| Pin name | Description                      |
|----------|----------------------------------|
| E-PWR    | EXT power supply +24V            |
| EMG      | EMG input signal                 |
| LMT+     | Limit Switch Input Signal (+)    |
| LMT-     | Limit Switch Input Signal (-)    |
| INPUT3   | Input Signal (IN3)               |
| NRHOME   | Near Home Sensor Input Signal    |
| HOME     | Home Sensor Input Signal         |
| RESET    | Reset input signal               |
| EXP+     | EXT Positive Direction Pulse (+) |
| EXP-     | EXT Negative Direction Pulse (-) |
| E-GND    | EXT power ground                 |

■ **RJ1 (The I/O signals of the FRnet)**

The connectors RJ1 is an 8-pin RJ45 connector that enable you to connect to the signals of FRnet. Fig.B3-7 shows the pin assignment for the 8-pin connector on the DN-8237-PB, and the Table B3-7 shows its I/O connector signal description.

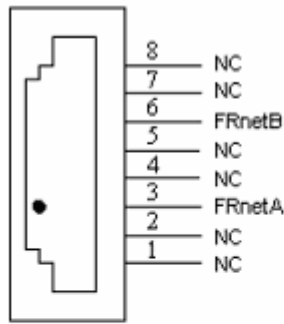


Table B3-7 RJ1

| Pin name | Description   |
|----------|---------------|
| FRnetA   | FRnet port A  |
| FRnetB   | FRnet port B  |
| NC       | No connection |

Fig. B3-7 Pin definition for RJ1

▶ **Note:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

### B.3.3 Jumper and Switch Settings

#### ■ JP5

Jumper 5 controls the EMG-A signal of the TB1 connector. The following diagram is shown the selection condition of the jumper 5.

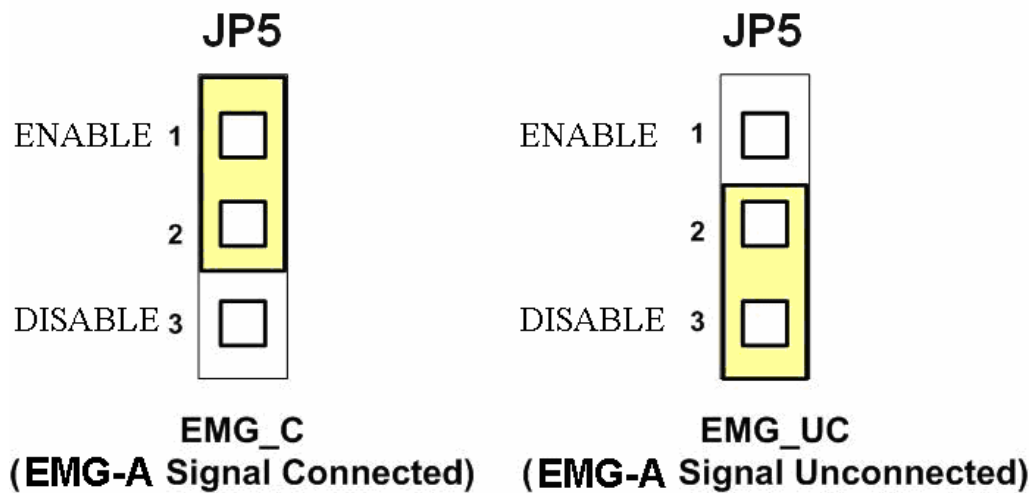


Fig. B3-8 Jumper 5 setting

## ■ SW 1

The emergency stop signal for each servo amplifier can be selected from SW1. The number 1 and 2 on SW1 are denoted as axis X and Y, respectively. The number 3 and 4 on SW1 are reserved for future work. Fig. B3-9 is the default setting to connect the EMG signals to GND. The EMG signals from CN1 and CN2 will not take effect. If the switch is disconnected as shown in Fig. B3-10, the emergency stop signals can be controlled from EMG signals in CN1 and CN2.

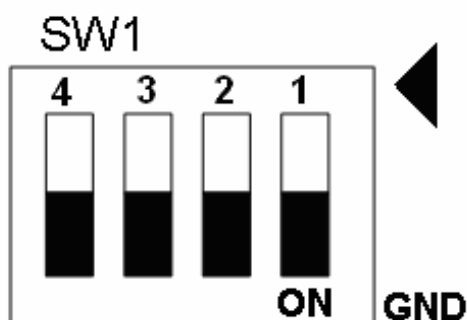


Fig. B3-9 SW1 setting for normally GND (Default setting)



Fig. B3-10 SW1 setting for user

# B.4 DN-8237-YB Daughter Board

The DN-8237YB is the daughter board for Yaskawa Series Amplifier. It has 2-axis I/O signals.

## B.4.1 Board Layout for DN-8237-YB

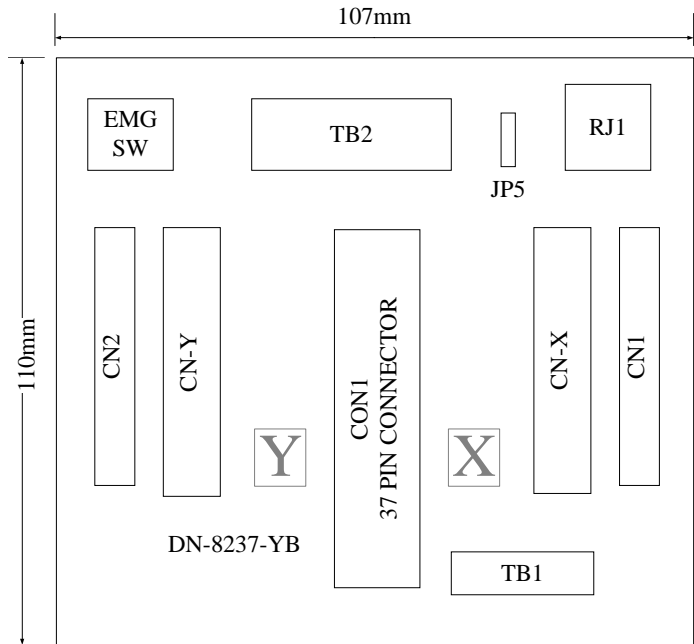


Fig. B4-1 Board layout for the DN-8237-YB

## B.4.2 Signal Connections for DN-8237-YB

Maintaining signal connections is one of the most important factors in ensuring that your application system is sending and receiving data correctly.

### ■ Pin Assignment for CON1

The I/O connector on the DN-8237-YB is a 37-pin connector that enables you to connect to the PISO-PS200 or I-8092F motion card. Fig. B4-2 shows the pin assignment for the 37-pin I/O connector on the DN-8237-YB (or on the motion card), and refer to Table B4-2 for description of each motion I/O signal.

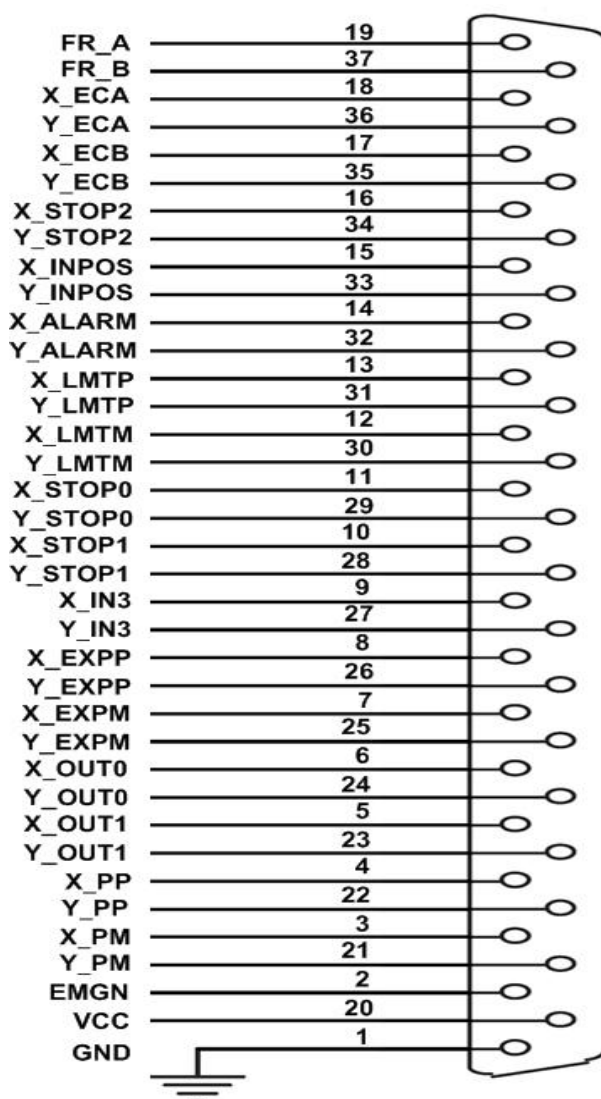


Fig. B4-2 I/O connector pin assignment for the CON1

Table B4-2 DN-8237-YB CON1 I/O connector signal description

| Pin name | Pin number | Description                                  |
|----------|------------|--|
| FR_A     | 19         | FRnet A-phase signal                         |
| FR_B     | 37         | FRnet B-phase signal                         |
| X_ECA    | 18         | Encoder A-phase signal for the X axis        |
| Y_ECA    | 36         | Encoder A-phase signal for the Y axis        |
| X_ECB    | 17         | Encoder B-Phase signal for the X axis        |
| Y_ECB    | 35         | Encoder B-Phase signal for the Y axis        |
| X_STOP2  | 16         | Stop 2 signal for the X axis                 |
| Y_STOP2  | 34         | Stop 2 signal for the Y axis                 |
| X_INPOS  | 15         | In-position signal for the X axis            |
| Y_INPOS  | 33         | In-position signal for the Y axis            |
| X_ALARM  | 14         | Alarm signal for the X axis                  |
| Y_ALARM  | 32         | Alarm signal for the Y axis                  |
| X_LMTP   | 13         | Limit switch input signal (+) for the X axis |
| Y_LMTP   | 31         | Limit switch input signal (+) for the Y axis |
| X_LMTM   | 12         | Limit switch input signal (-) for the X axis |
| Y_LMTM   | 30         | Limit switch input signal (-) for the Y axis |
| X_STOP0  | 11         | Stop 0 signal for the X axis                 |
| Y_STOP0  | 29         | Stop 0 signal for the Y axis                 |
| X_STOP1  | 10         | Stop 1 signal for the X axis                 |
| Y_STOP1  | 28         | Stop 1 signal for the Y axis                 |
| X_IN3    | 9          | Input 3 signal for the X axis                |
| Y_IN3    | 27         | Input 3 signal for the Y axis                |
| X_EXPP   | 8          | EXT pulsar input signal (+) for the X axis   |
| Y_EXPP   | 26         | EXT pulsar input signal (+) for the Y axis   |
| X_EXPM   | 7          | EXT pulsar input signal (-) for the X axis   |
| Y_EXPM   | 25         | EXT pulsar input signal (-) for the Y axis   |
| X_OUT0   | 6          | Output 0 signal for the X axis               |
| Y_OUT0   | 24         | Output 0 signal for the Y axis               |
| X_OUT1   | 5          | Output 1 signal for the X axis               |
| Y_OUT1   | 23         | Output 1 signal for the Y axis               |
| XPP      | 4          | Driving pulsar signal (+) for the X axis     |
| YPP      | 22         | Driving pulsar signal (+) for the Y axis     |
| XPM      | 3          | Driving pulsar signal (+) for the X axis     |
| YPM      | 21         | Driving pulsar signal (+) for the Y axis     |
| EMGN     | 2          | Emergency stop input signal                  |
| VCC      | 20         | Module power (+5V)                           |
| GND      | 1          | Ground                                       |

## ■ TB1

The connector TB1 is 7-pin connector that enables you to connect to the signals of your motor drivers. Fig.B4-3 shows the pin assignment for the 7-pin connector on the DN-8237-YB, and the Table B4-3 shows its I/O connector signal description.

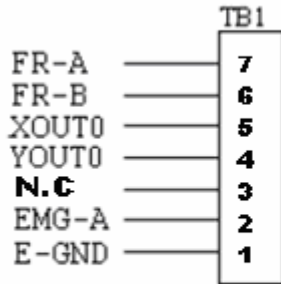


Fig. B4-3 Pin definition for TB1

Table B4-3 TB1 Signal Connection

| Name       | Description                   |
|------------|-------------------------------|
| FR-A       | FRnet port A                  |
| FR-B       | FRnet port B                  |
| XOUT0      | General Output 0 for X axis   |
| YOUT0      | General Output 0 for Y axis   |
| <b>N.C</b> | <b>No Connection</b>          |
| EMG-A      | EMG input signal for all axes |
| E-GND      | EXT power ground              |

## ■ TB2

The connector TB2 is 5-pin connector that enables you to connect to the signals of your motor drivers. Fig.B4-4 shows the pin assignment for the 5-pin connector on the DN-8237-YB, and the Table B4-4 shows its I/O connector signal description.

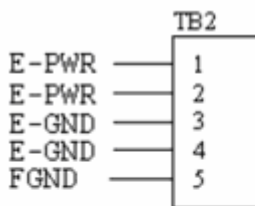


Fig. B4-4 Pin definition for TB2

Table B4-4 TB2 Signal Connection

| Pin name | Description           |
|----------|-----------------------|
| E-PWR    | EXT power supply +24V |
| E-GND    | EXT power ground      |
| FGND     | Frame ground          |

► **Note:** Don't reverse connect signals with E\_PWR and E\_GND. Serious damage to your motion card and motion controller might be happened.

## ■ CN-X & CN-Y (CN1 connector for each AXIS in Driver)

The connectors CN-X and CN-Y are 50-pin connectors that enable you to connect to the CN1 connector of Yaskawa motor drivers. Fig.B4-5 shows the pin assignment for the 50-pin connector on the DN-8468-YB, and the Table B4-5 shows its I/O connector signal description.

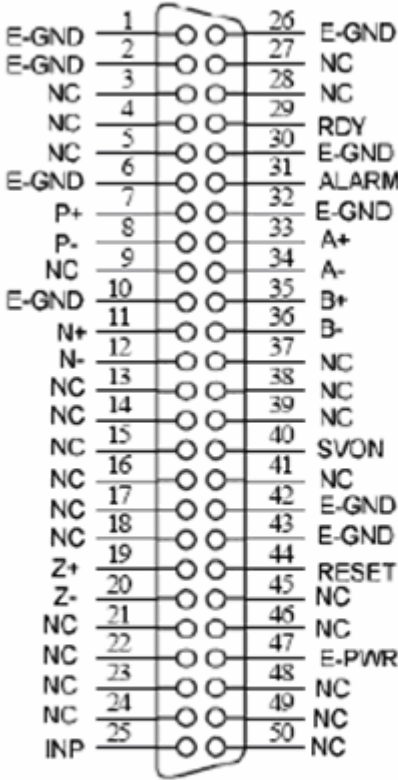


Fig. B4-5 Pin definition for CNX, CNY, CNZ, CNU

Table B4-5 CN1 Signal Connection

| Name  | Number   | Description                        |
|-------|--|------------------------------------|
| A+    | 33   | Encoder A-Phase (+)                |
| A-    | 34   | Encoder A-Phase (-)                |
| B+    | 35   | Encoder B-Phase (+)                |
| B-    | 36   | Encoder B-Phase (-)                |
| Z+    | 19   | Encoder Z-Phase (+)                |
| Z-    | 20   | Encoder Z-Phase (-)                |
| P+    | 7  | Positive Direction Pulse Output(+) |
| P-    | 8  | Positive Direction Pulse Output(-) |
| N+    | 11   | Negative Direction Pulse           |
| N-    | 12   | Negative Direction Pulse Output(-) |
| INP   | 25   | Servo In Position                  |
| RDY   | 29   | Servo Ready                        |
| SVON  | 40   | Servo On                           |
| RESET | 44   | Parameter Reset                    |
| ALARM | 31   | Servo Alarm                        |
| E-PWR | 47   | EXT power +24V                     |
| E-GND | 1,2,6,10, 26, 30,32, 42,43   | EXT power ground                   |
| NC    | 3,4,5,9, 13,14,15, 16,17,18, 21,22,23, 24,27,28, 37,38,39, 41,45,46, 48,49,50, | No connection                      |



■ CN1 & CN2 (The I/O signals of the X and Y AXIS )

The connectors CN1 and CN2 are 11-pin connectors that enable you to connect to the signals of your motor drivers. Fig.B4-6 shows the pin assignment for the 20-pin connector on the DN-8237-YB, and the Table B4-6 shows its I/O connector signal description.

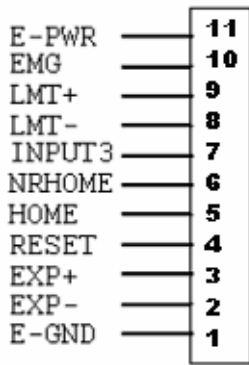


Fig. B4-6 Pin definition for CN1 & CN2

Table B4-6 CN1 & CN2 Signal Connection

| Pin name | Description                      |
|----------|----------------------------------|
| E-PWR    | EXT power supply +24V            |
| EMG      | EMG input signal                 |
| LMT+     | Limit Switch Input Signal (+)    |
| LMT-     | Limit Switch Input Signal (-)    |
| INPUT3   | Input Signal (IN3)               |
| NRHOME   | Near Home Sensor Input Signal    |
| HOME     | Home Sensor Input Signal         |
| RESET    | Reset input signal               |
| EXP+     | EXT Positive Direction Pulse (+) |
| EXP-     | EXT Negative Direction Pulse (-) |
| E-GND    | EXT power ground                 |

■ RJ1 (The I/O signals of the FRnet)

The connectors RJ1 is an 8-pin RJ45 connector that enable you to connect to the signals of FRnet. Fig.B4-7 shows the pin assignment for the 8-pin connector on the DN-8237-YB, and the Table B4-7 shows its I/O connector signal description.

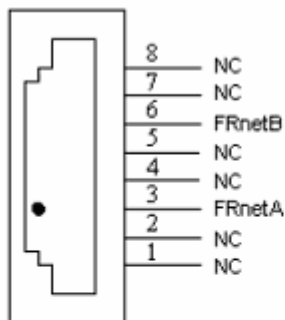


Fig.B4-7 Pin definition for RJ1

Table B4-7 RJ1

| Pin name | Description   |
|----------|---------------|
| FRnetA   | FRnet port A  |
| FRnetB   | FRnet port B  |
| NC       | No connection |

► **Note:** Don't connect NC (not connected) signals. Connecting these signals could cause permanent damage to your motion controller.

## B.4.3 Jumper and Switch Settings

### ■ JP5

Jumper 5 controls the EMG-A signal of the TB1 connector. The following diagram is shown the selection condition of the jumper 5.

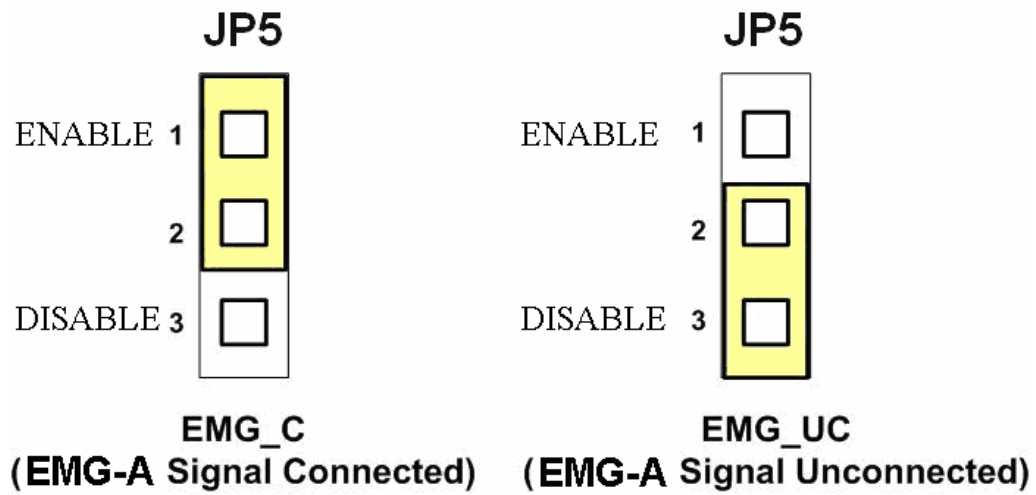


Fig. B4-8 Jumper 5 setting

## ■ SW 1

The emergency stop signal for each servo amplifier can be selected from SW1. The number 1 and 2 on SW1 are denoted as axis X and Y, respectively. The number 3 and 4 on SW1 are reserved for future work. Fig. B4-9 is the default setting to connect the EMG signals to GND. The EMG signals from CN1 and CN2 will not take effect. If the switch is disconnected as shown in Fig. B4-10, the emergency stop signals can be controlled from EMG signals in CN1 and CN2.

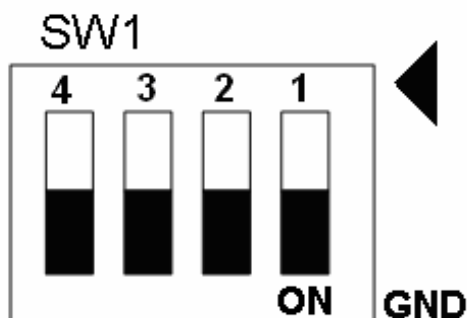


Fig. B4-9 SW1 setting for normally GND (Default setting)

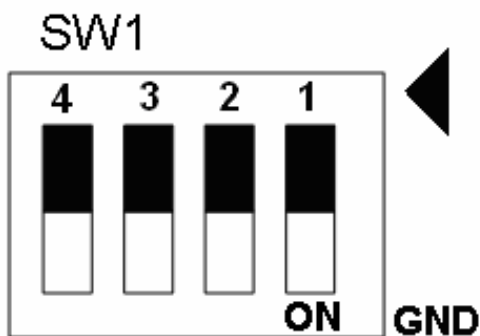


Fig. B4-10 SW1 setting for user controlled signals.