


Table of Contents

1. Un-install DAQCard for Win2000.....	2
1.1 Remove hardware.....	2
1.2 Remove software.....	8
1.3 Delete oem?.inf & oem?.pnp.....	12
2. Un-install DAQCard for Win95	15
2.1 Remove Hardware.....	15
2.2 Remove software.....	18


1. Un-install DAQCard for Win2000

1.1 Remove hardware

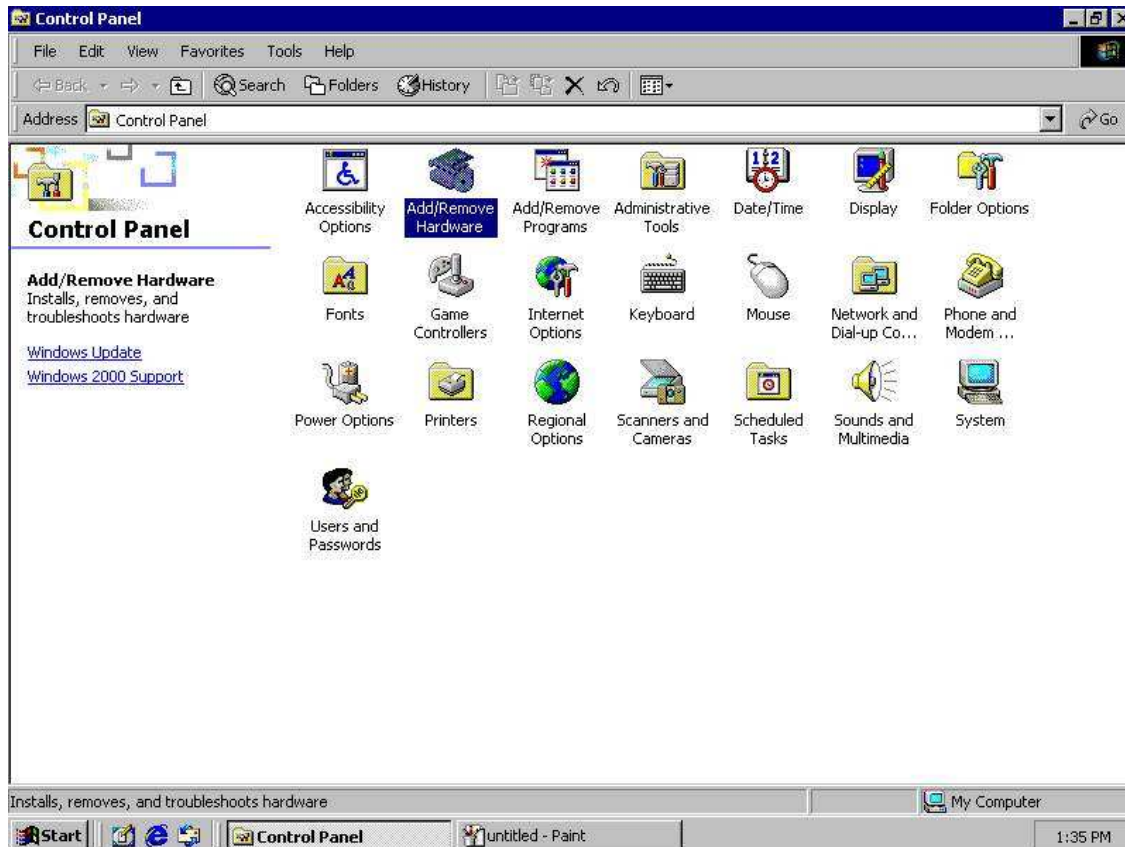


1. Open control panel, select Add/Remove Hardware


Uninstall DAQCard

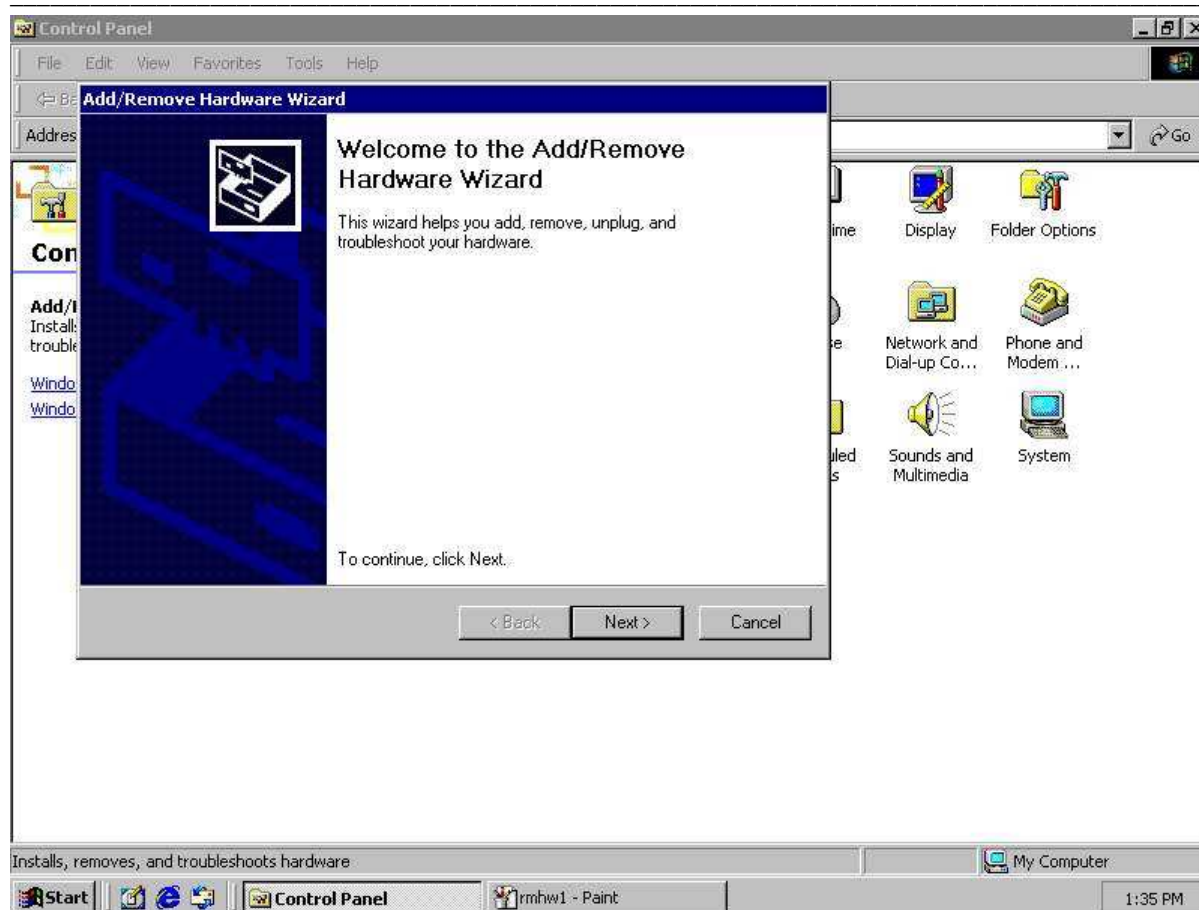


2.click "Next"

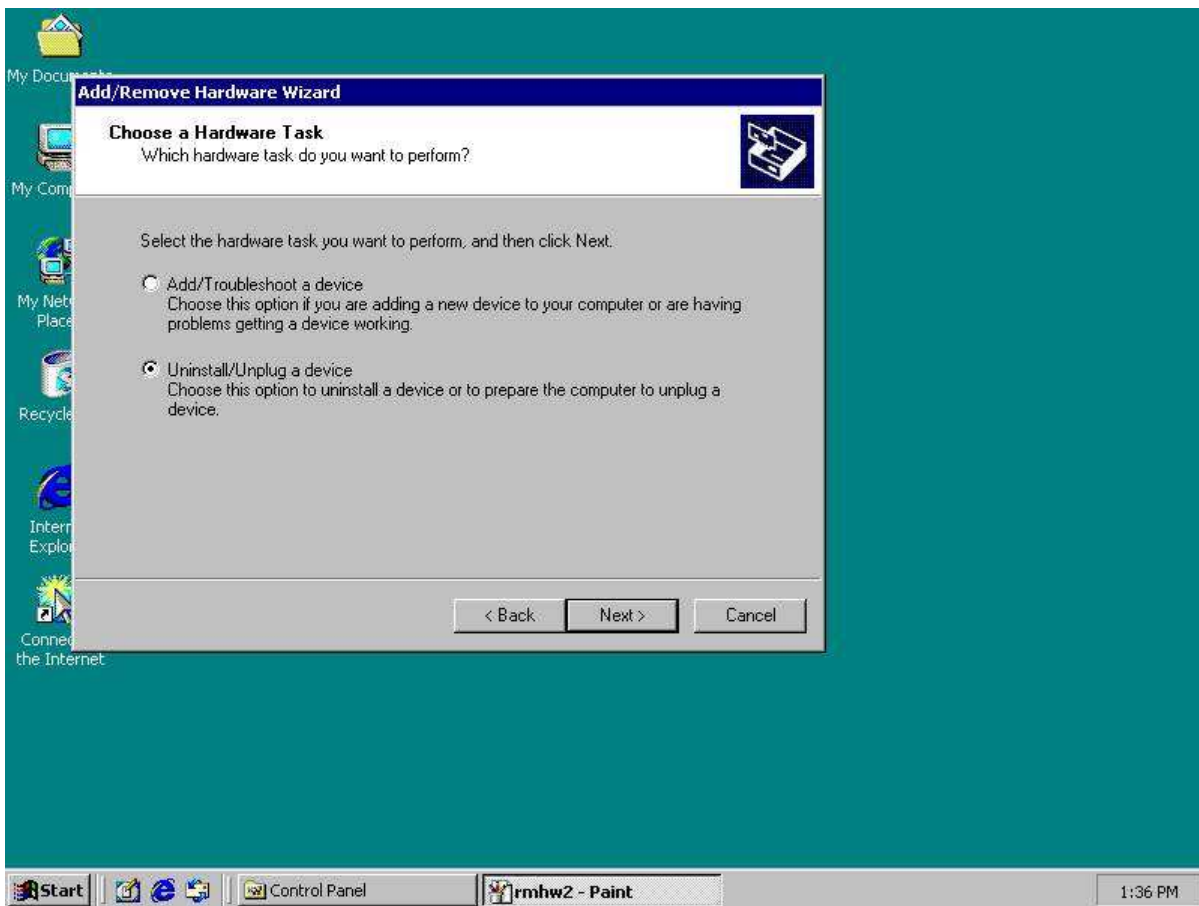


3. select uninstall/unplug a device, then click “Next”

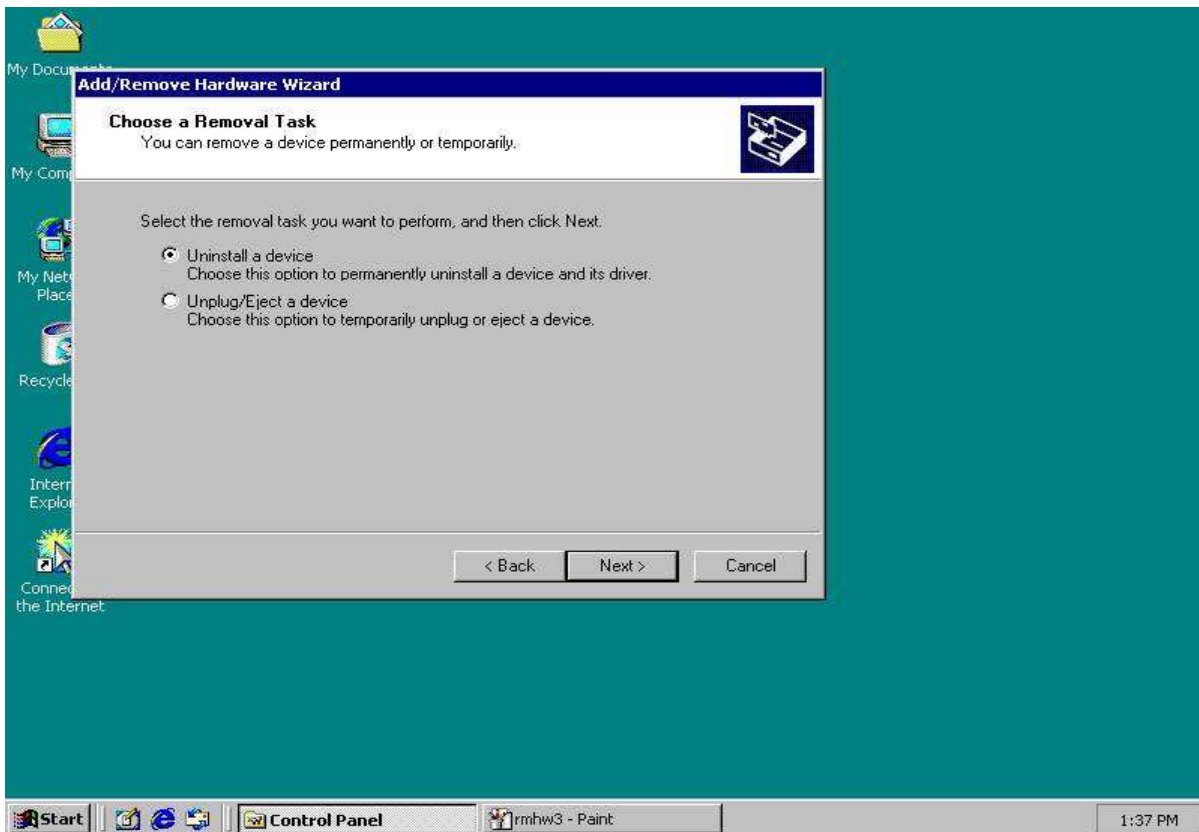


4. select uninstall a device, click “Next”

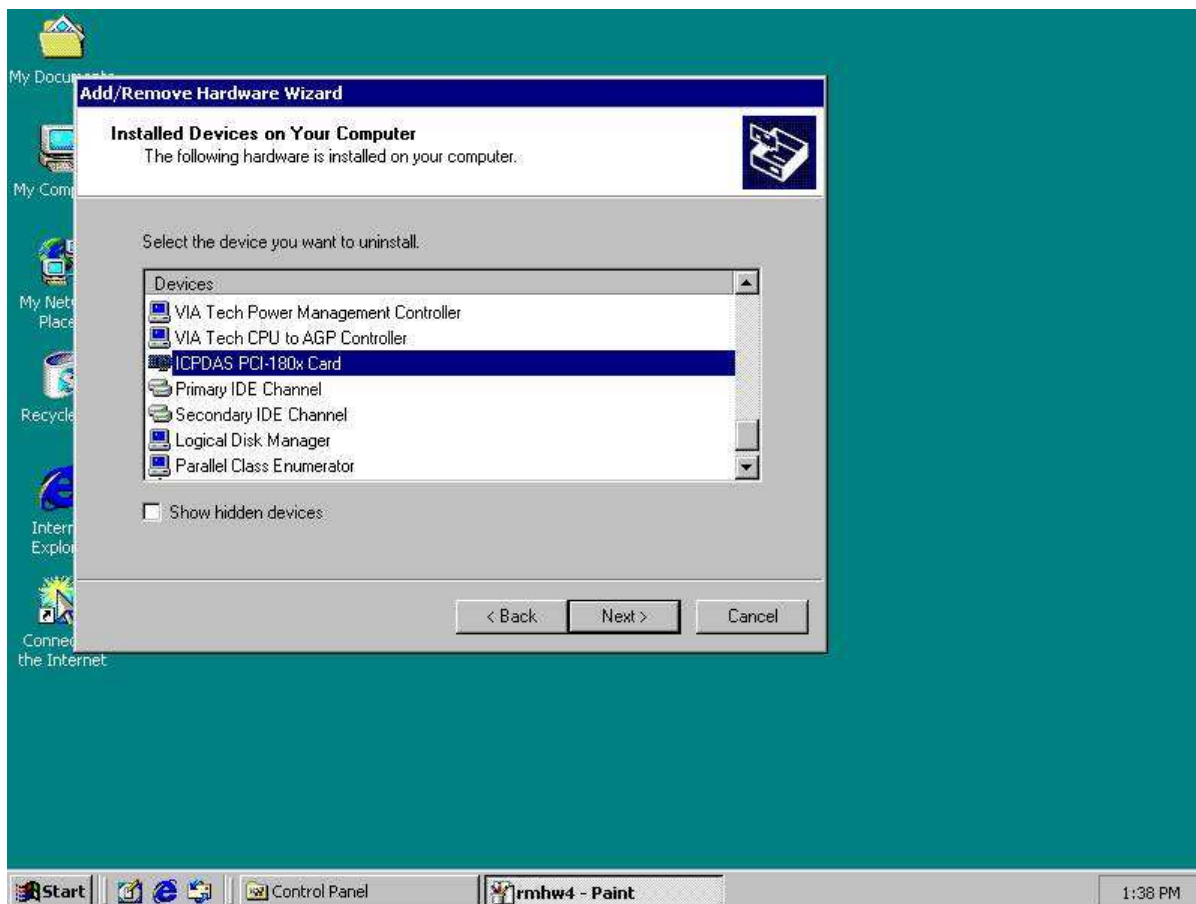

5. Select ICPDAS DAQCard, then click "Next"

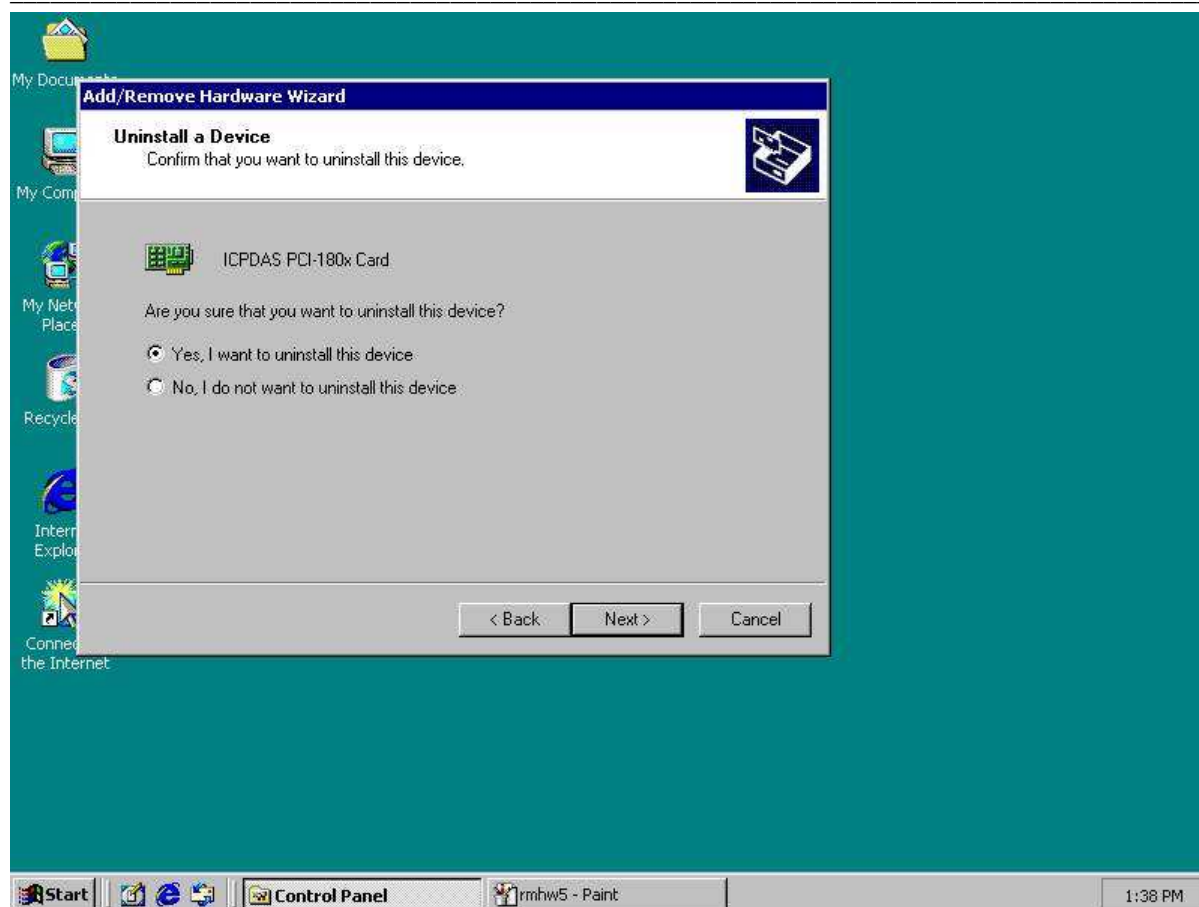


6. Select "Yes", then click "Next"

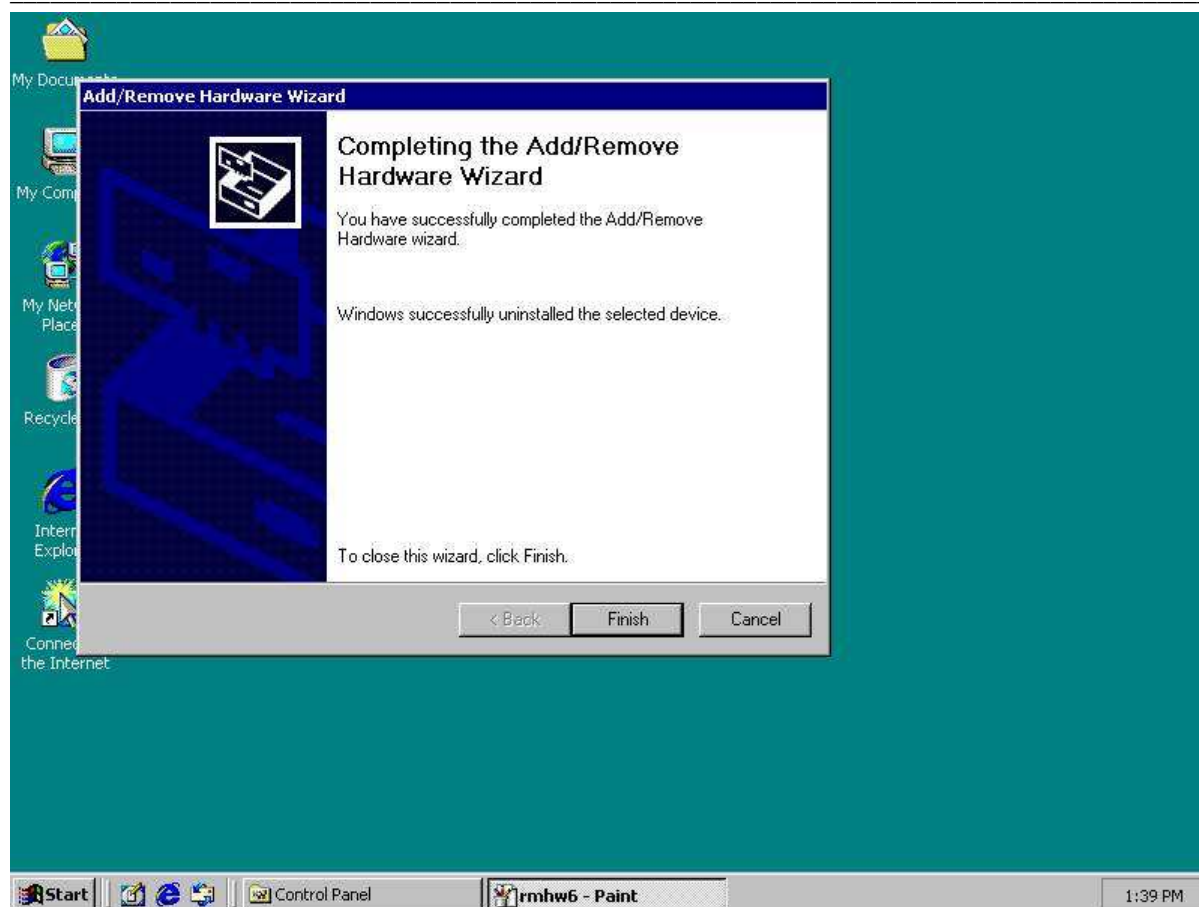


7. Click “Finish”.

1.2 Remove software

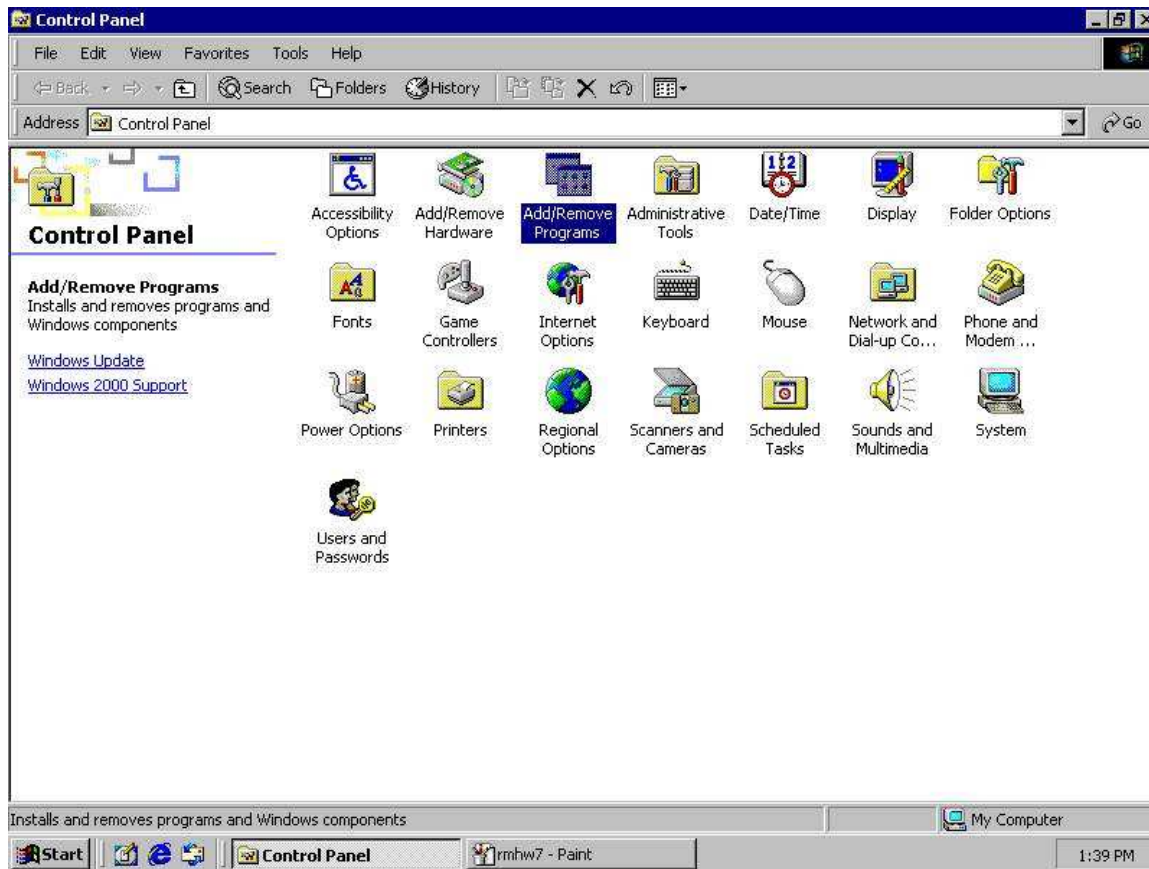


1. open control panel, then select Add/Remove program


Uninstall DAQCard

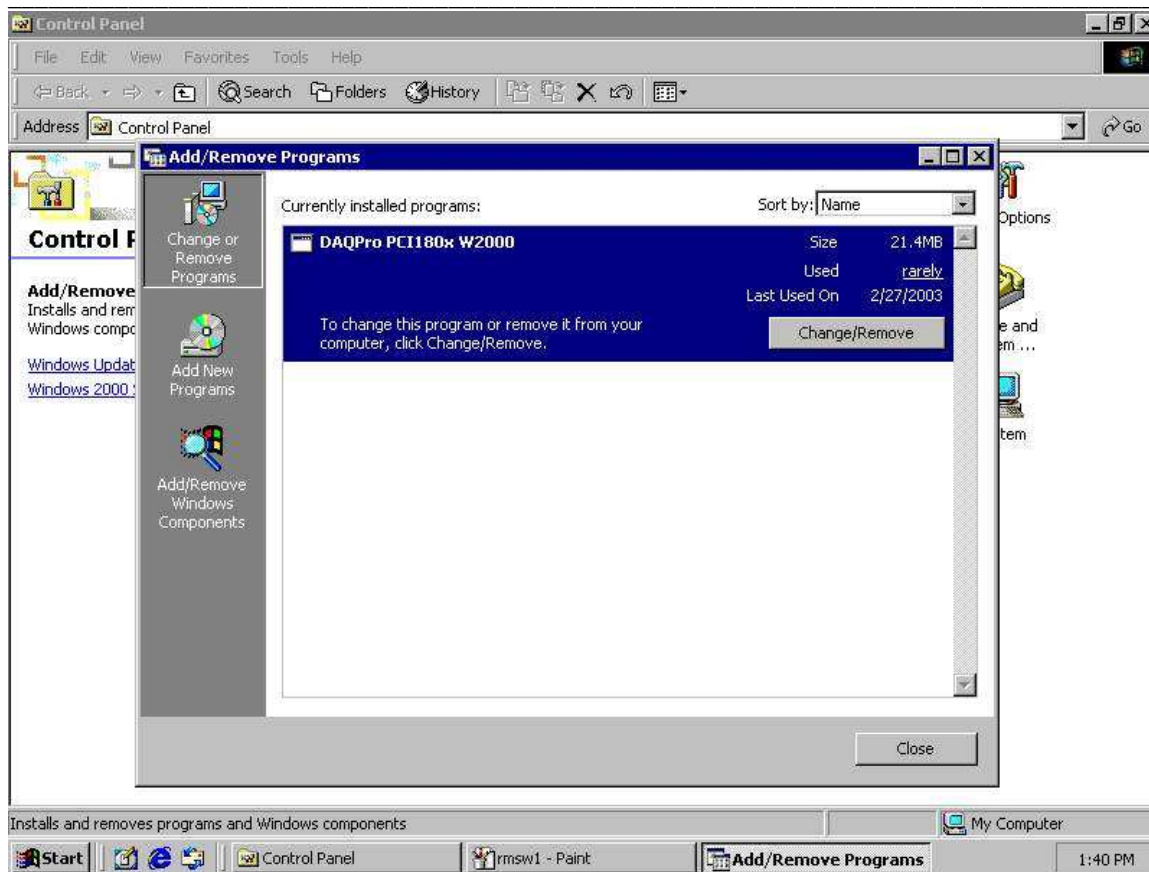

2. select DAQCard, then click "Change/Remove"

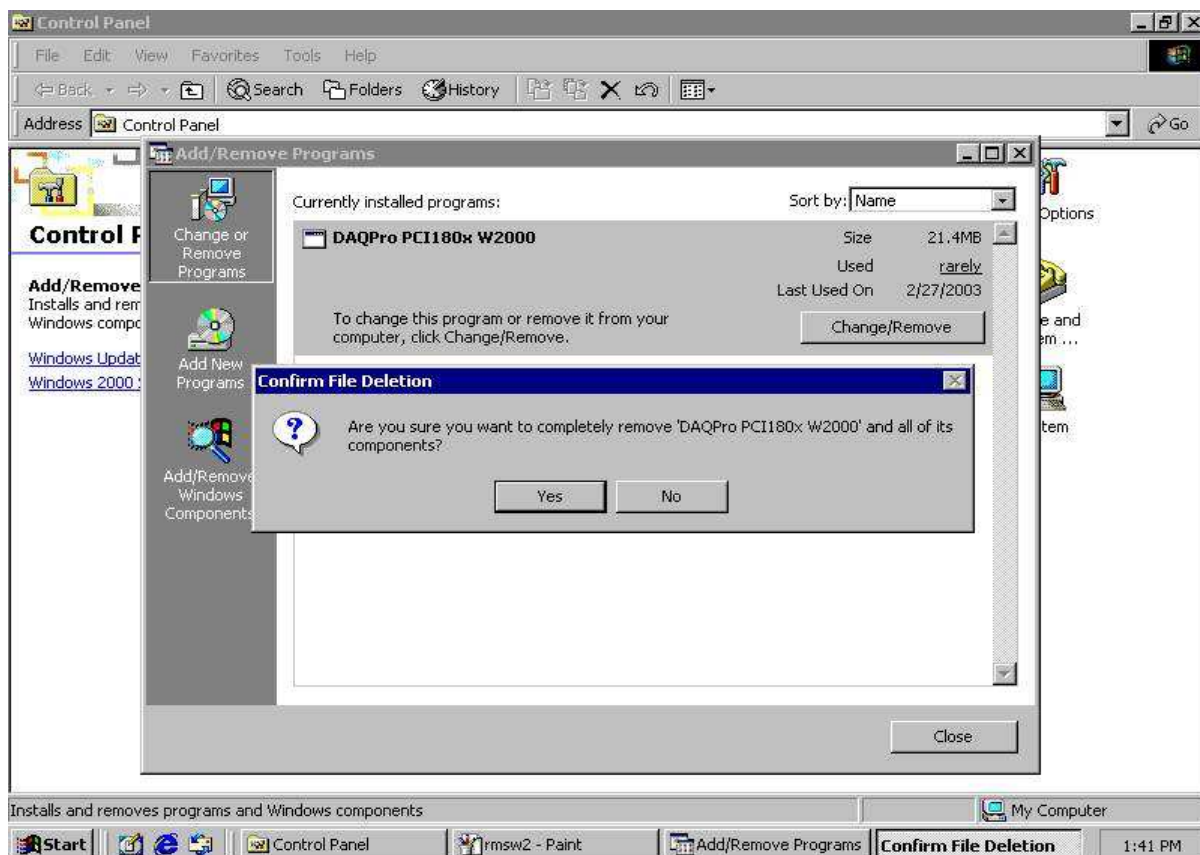


3. Click "Yes"

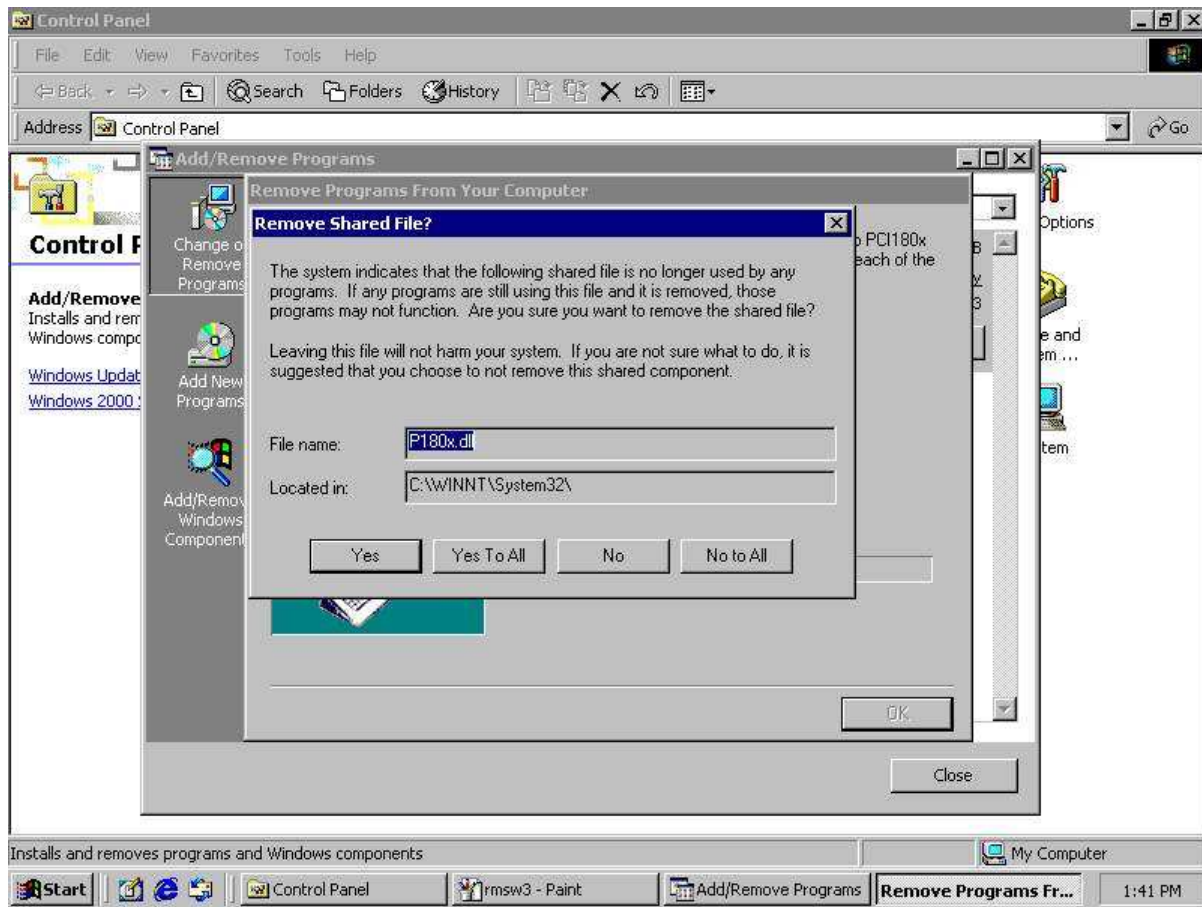


4. Click "Yes to All"

Uninstall DAQCard

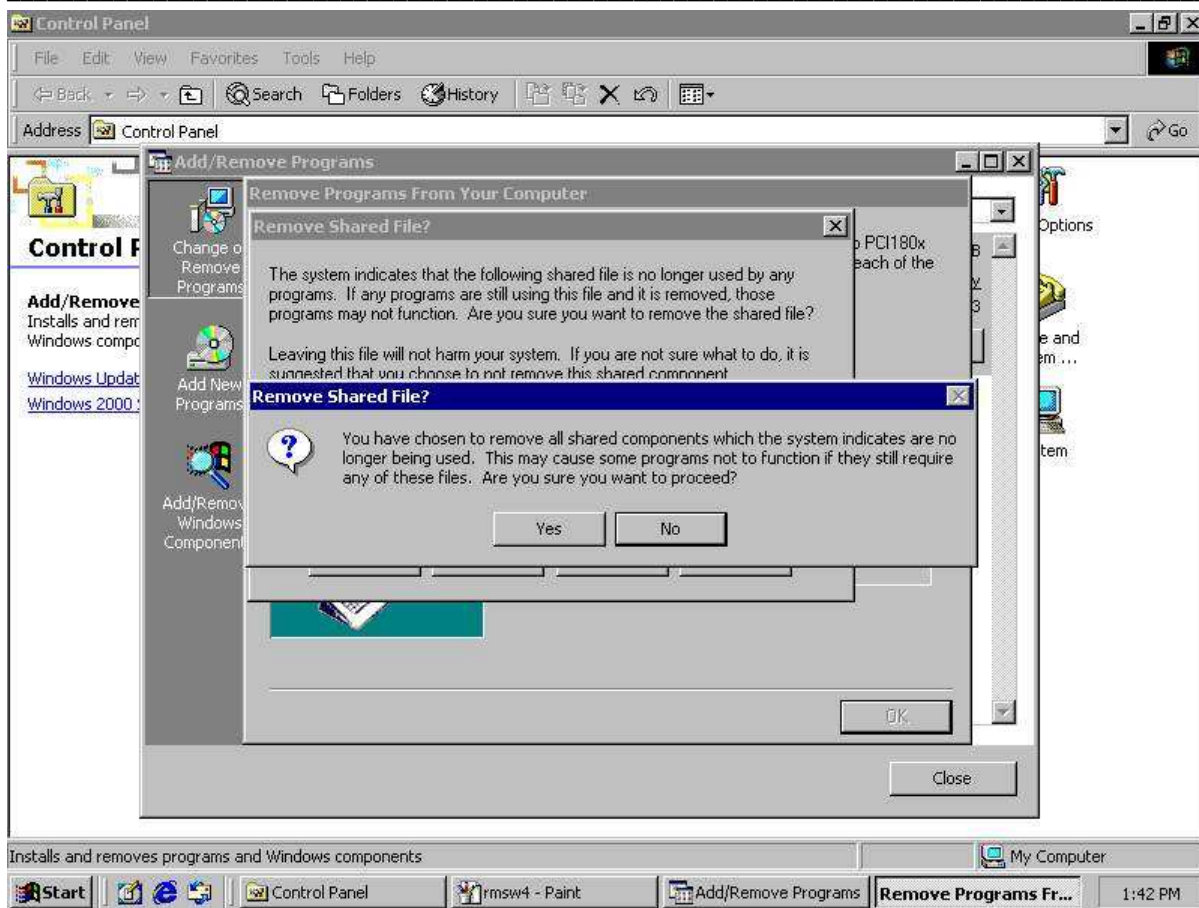


5. Click "Yes"

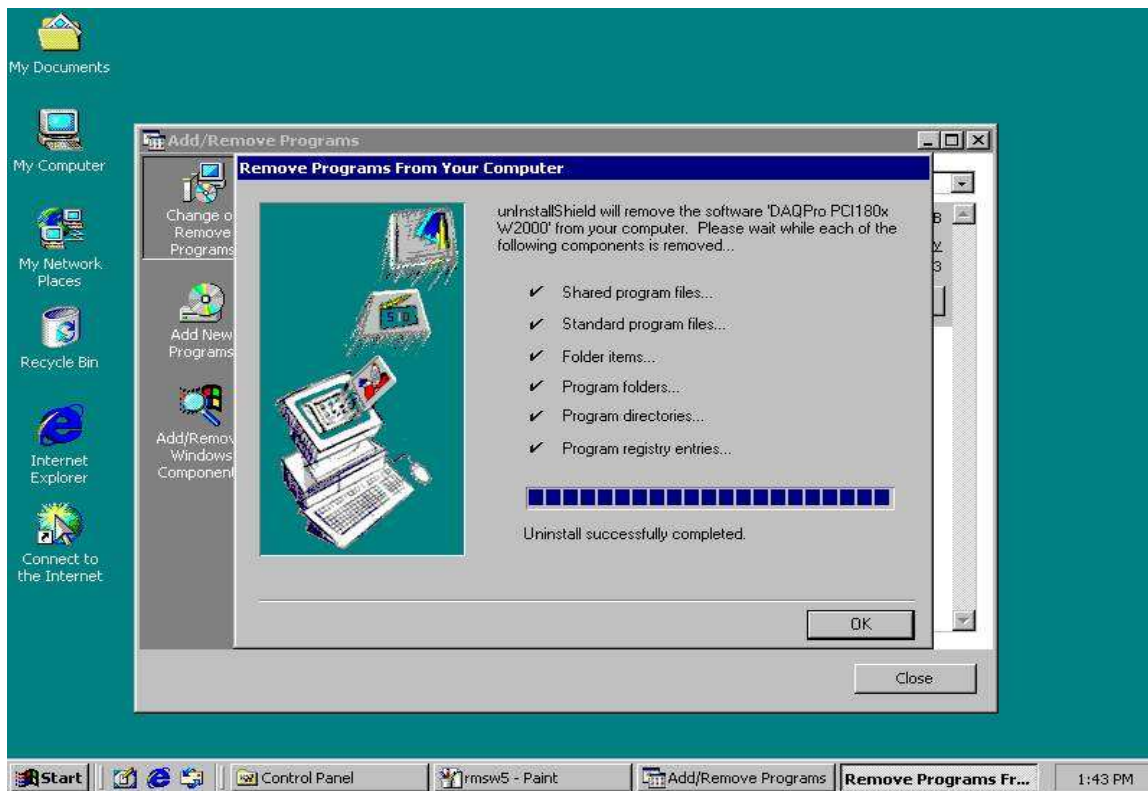


6. Click "OK", then click "Close"

1.3 Delete oem?.inf & oem?.pnp

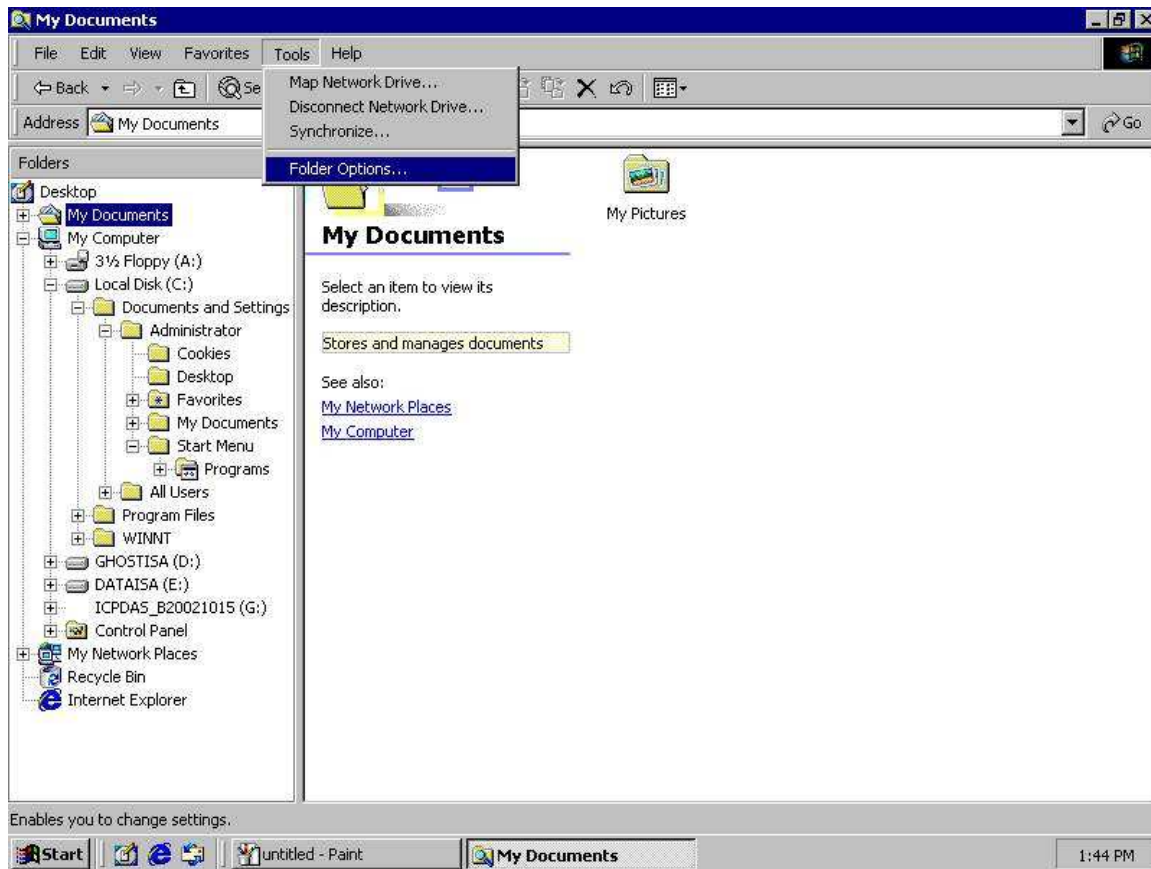


1. Open explore, select Tools->Folder Options..


Uninstall DAQCard

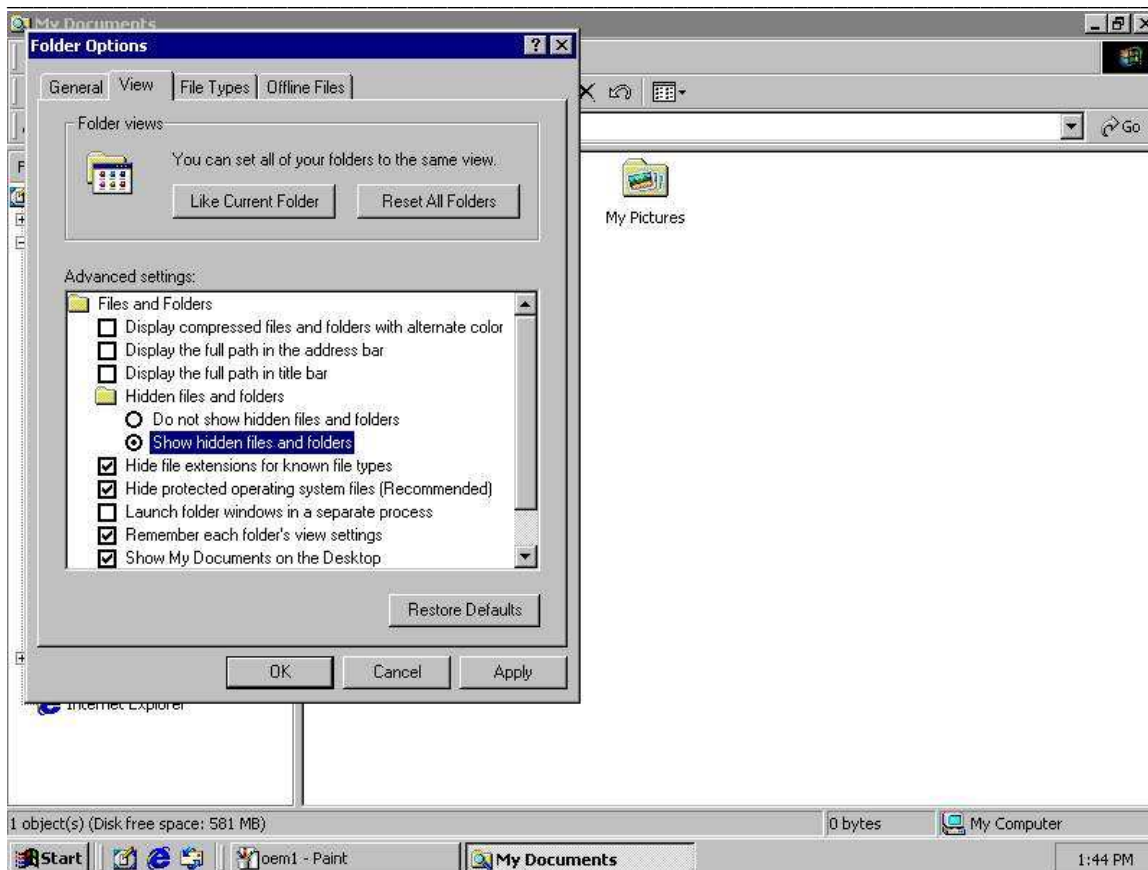

2. Select Show hidden files and folder, then click "OK"

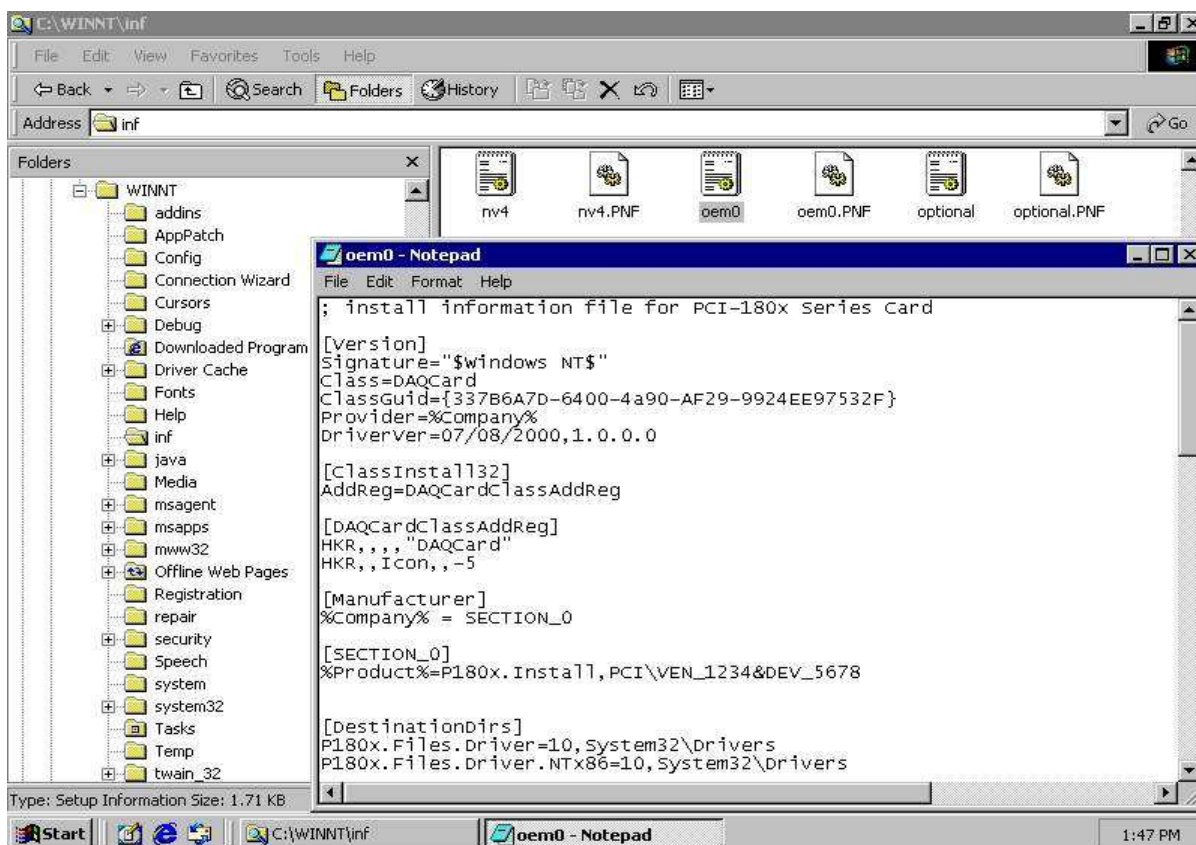


3. find oem?.inf which contains the DAQCard install information.

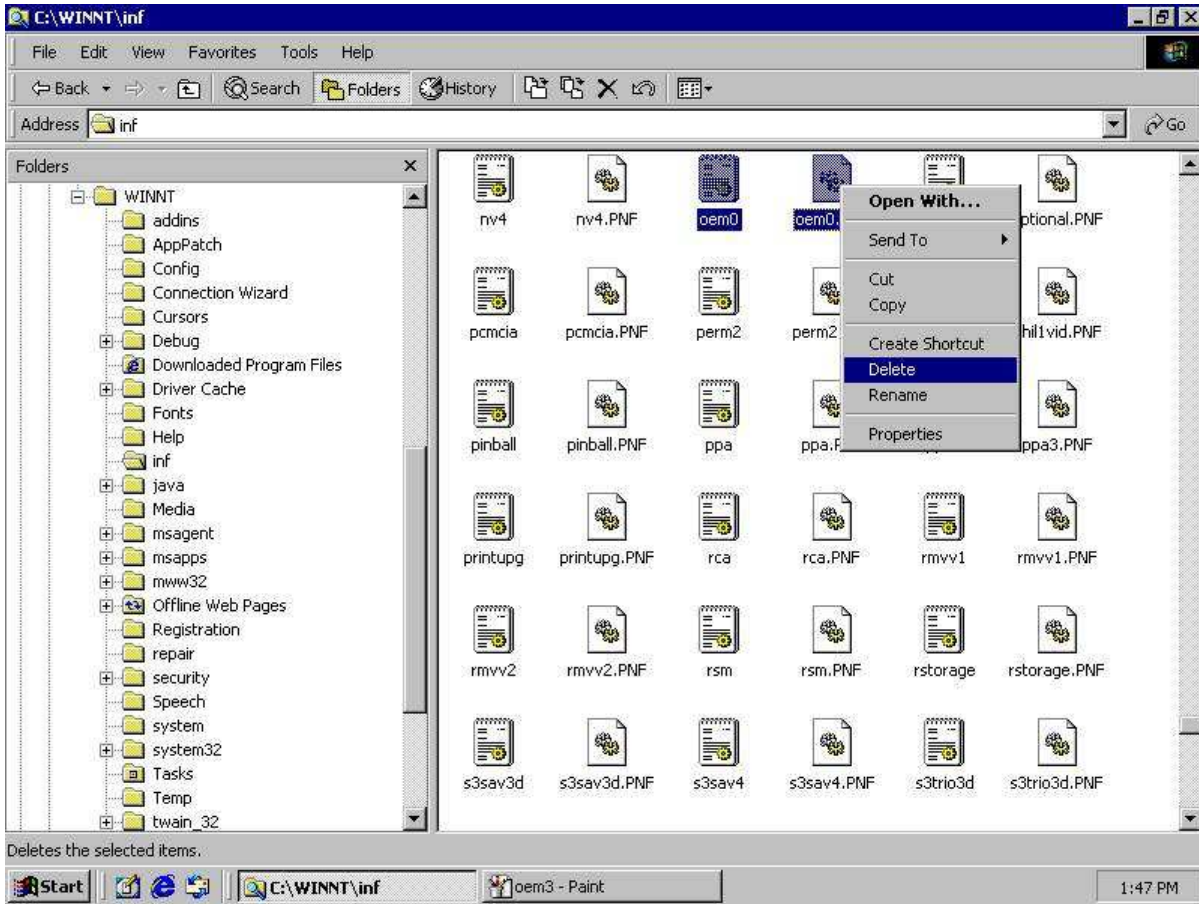

4. Select oem?.inf & oem?.PNF then delete them.


2. Un-install DAQCard for Win95

2.1 Remove Hardware

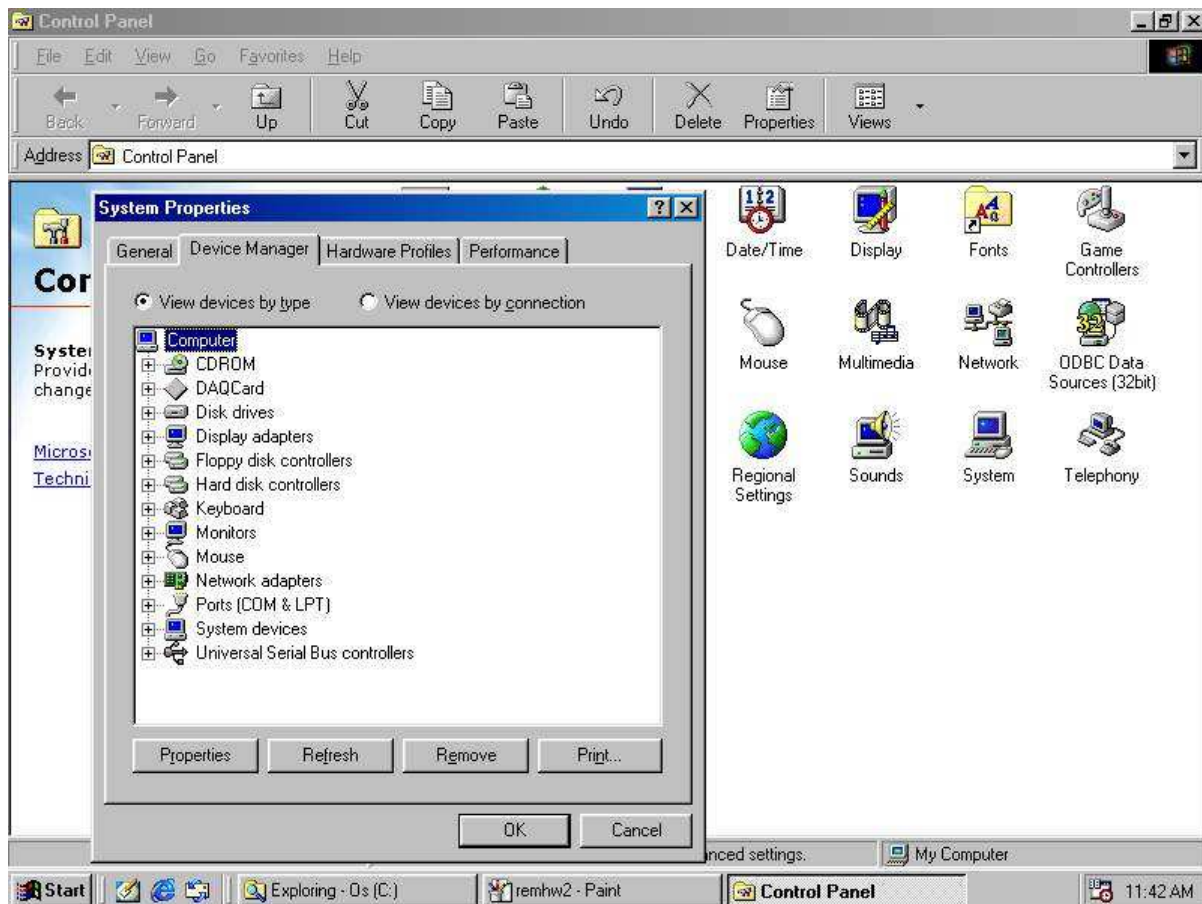


1. Open control panel->select system

Uninstall DAQCard

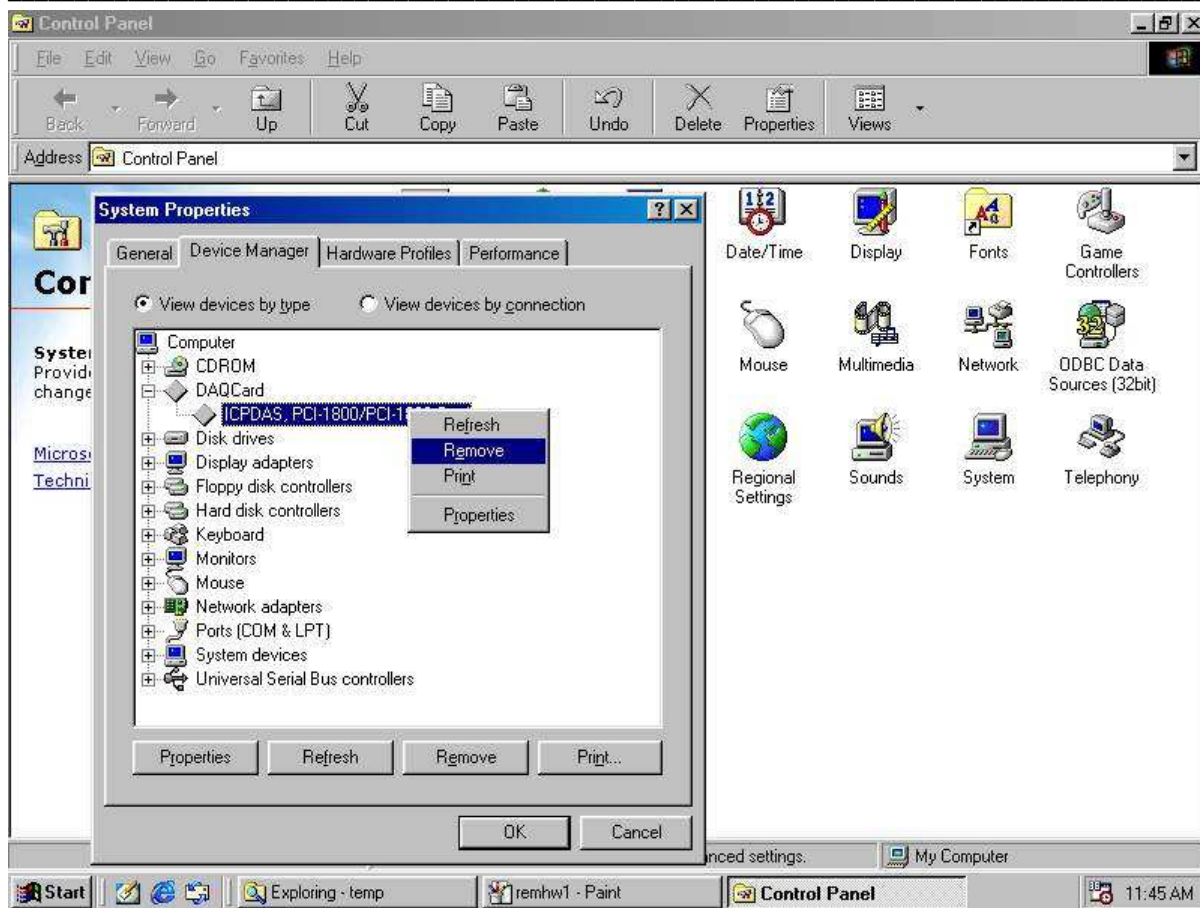


2. Select DAQCard, then Remove

Uninstall DAQCard

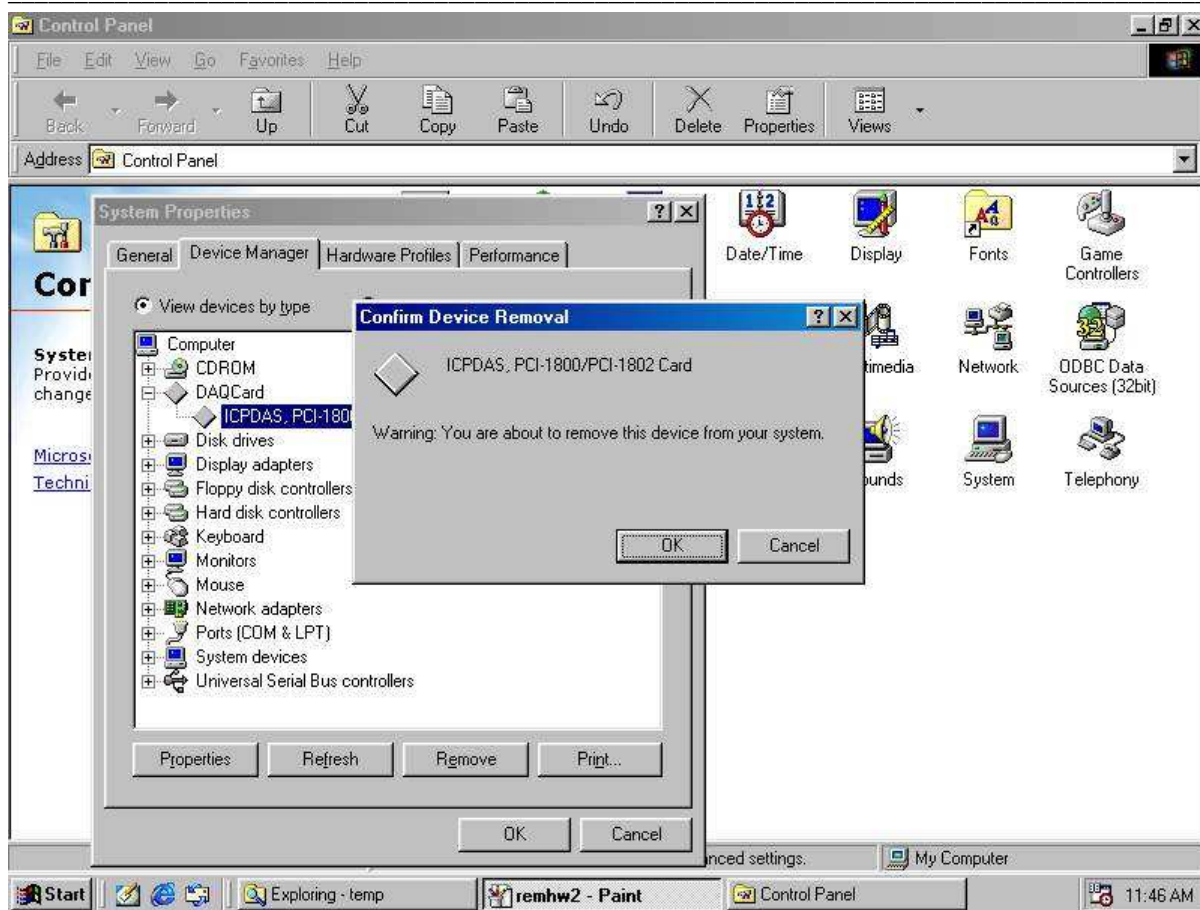


3.click “OK”,then click “OK” and finish.

2.2 Remove software

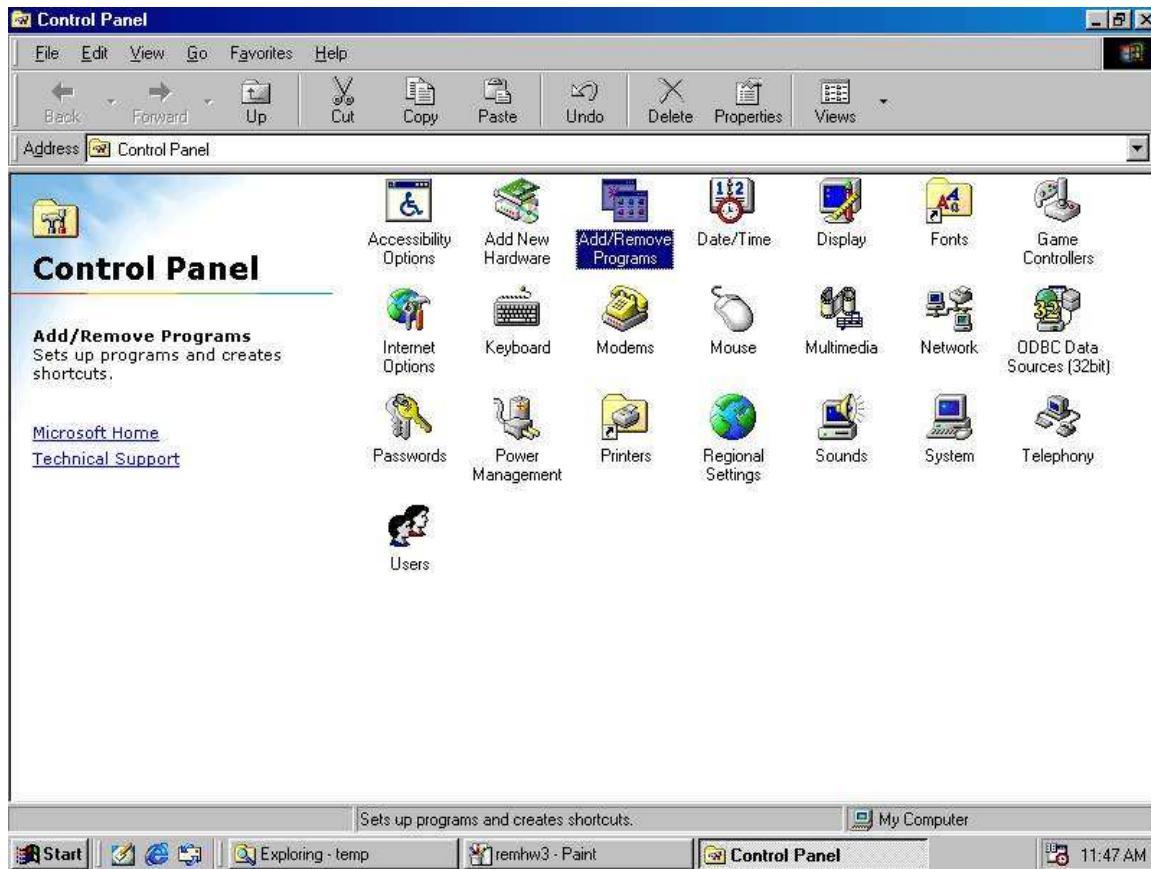


1. Open control panel->select Add/Remove Program


Uninstall DAQCard

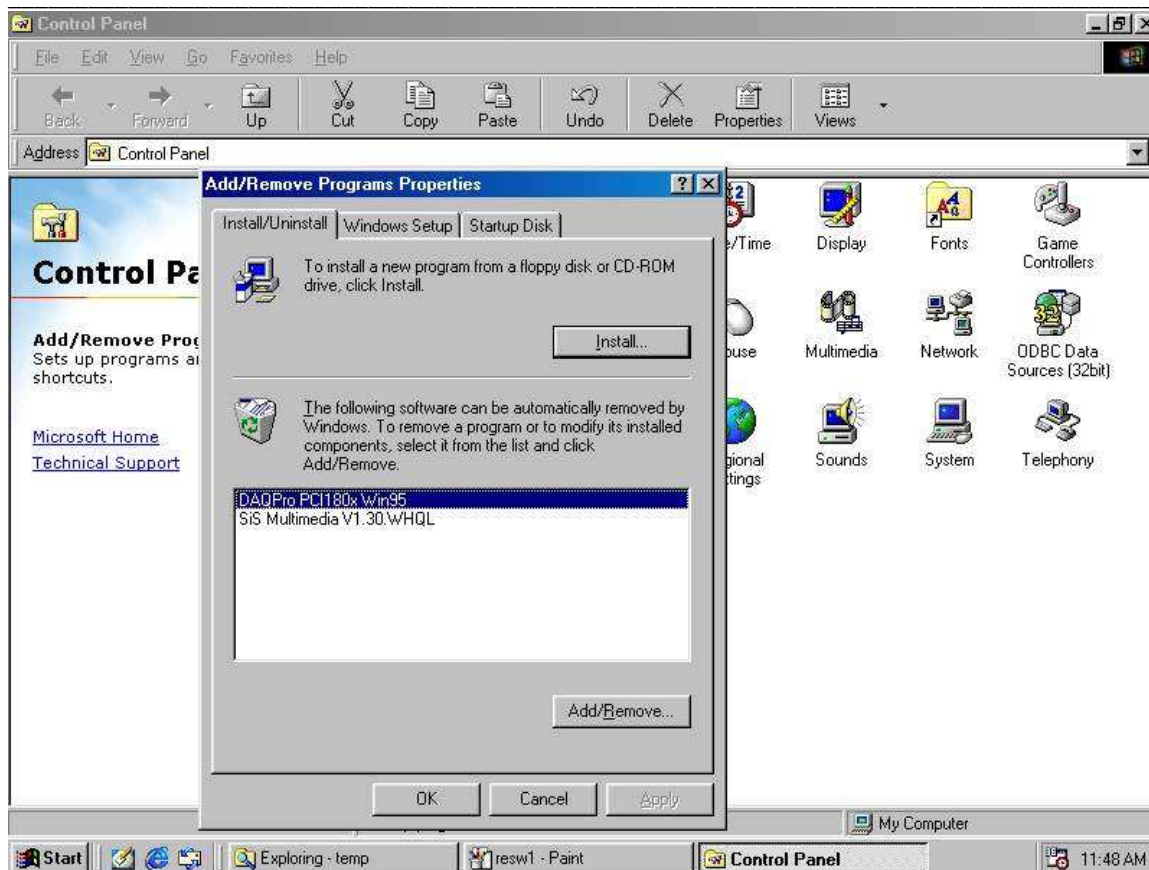


2. Select DAQCard, then click "Add/Remove"

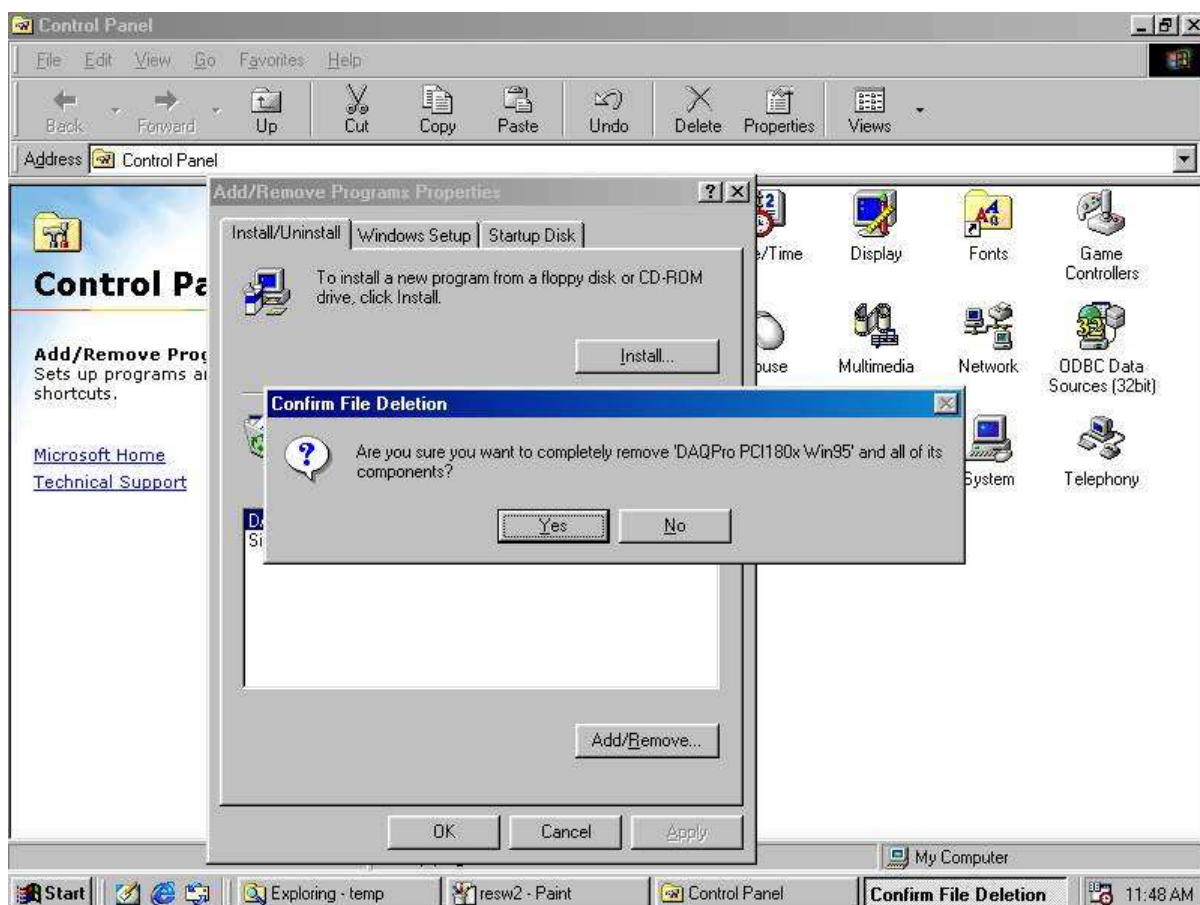

3. Click "Yes"

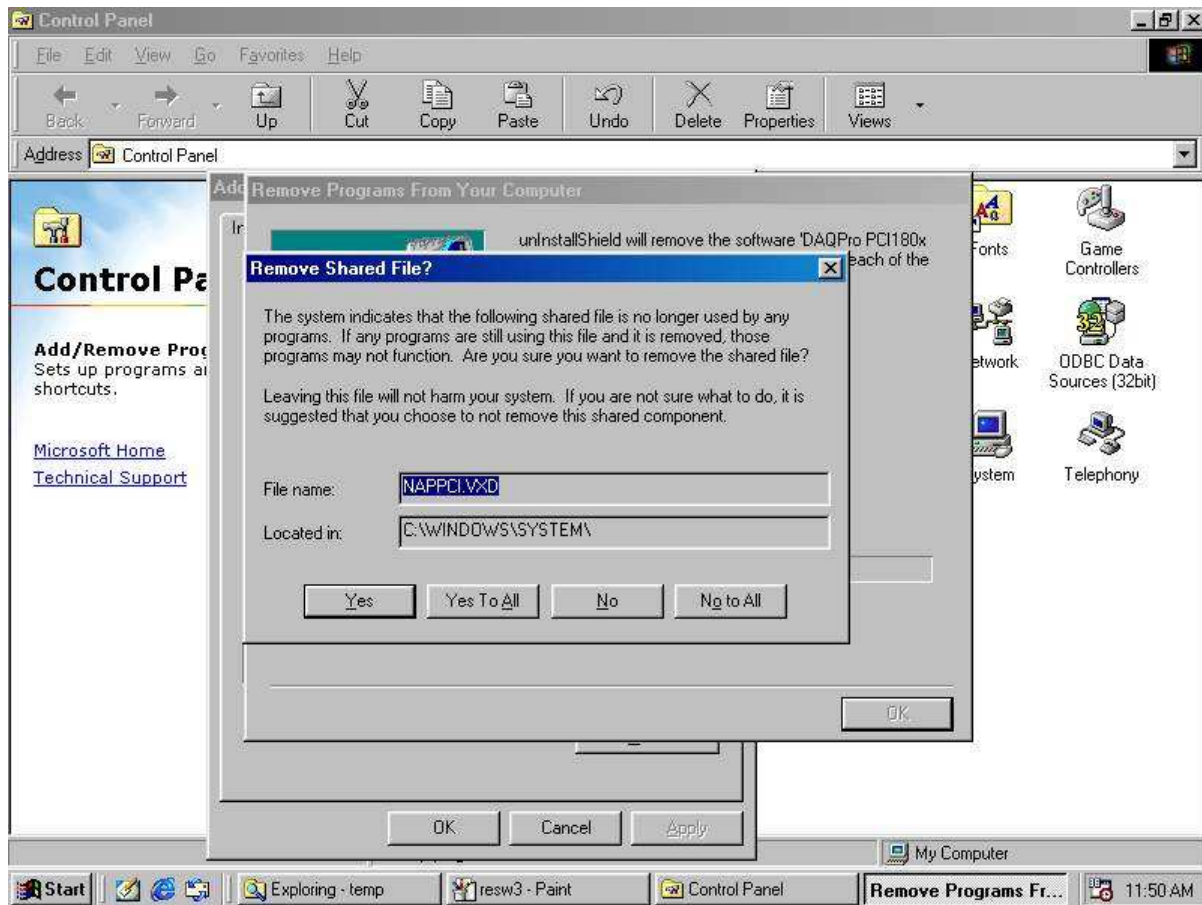

4. Click "Yes To All"

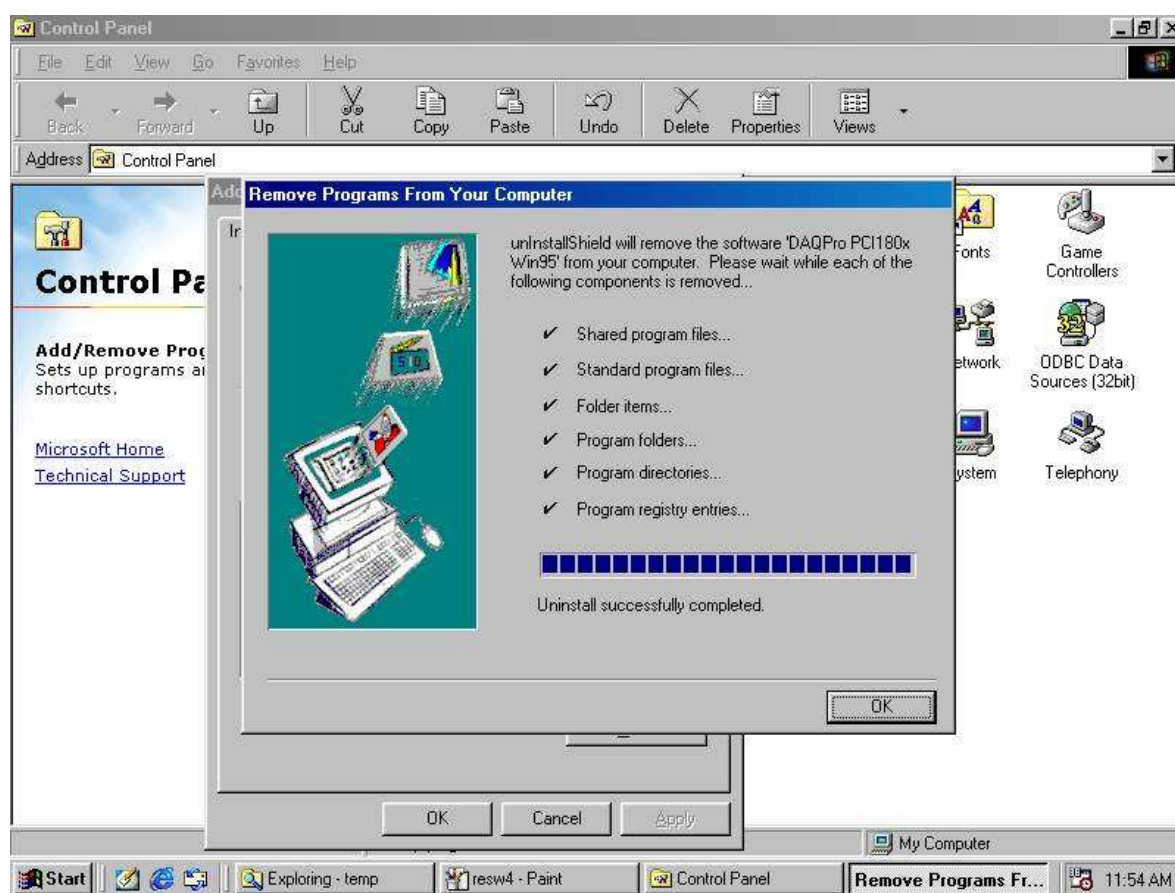

5. Click "OK", then click "OK" and finish