

Classification	System and Application FAQ on XPAC				No.	1-002-02	
Author	Cid	Version	1.0.0	Date	2010/2/12	Page	1/1

## How to use GSM/GPRS modems?

*Applied to:*

<i>Platform</i>	<i>OS version</i>	<i>XPAC utility version</i>
<i>XPAC series</i>	<i>All versions (WinCE6)</i>	<i>All versions</i>

We have this product to solution, reference this web for the product.

<http://m2m.icpdas.com/gtm-201.html>

And then reference the PDF form page36.

[ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/gprs\\_gsm\\_modem/gtm-201\\_modem/manual/gtm-201\\_user\\_manual.pdf](ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/gprs_gsm_modem/gtm-201_modem/manual/gtm-201_user_manual.pdf)

**Note: Please contact us for this product's driver at XPAC.**