

|                |                                    |         |       |      |           |          |     |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC |         |       |      | No.       | 1-003-02 |     |
| Author         | Weikai                             | Version | 1.0.1 | Date | 2012/6/25 | Page     | 1/3 |

## How to set up a printer via USB

Applies to:

| <i>Platform</i>    | <i>OS Version</i>            | <i>XPAC Utility Version</i> |
|--------------------|------------------------------|-----------------------------|
| <i>XPAC Series</i> | <i>All Versions (WinCE6)</i> | <i>All Versions</i>         |
|                    |                              |                             |
|                    |                              |                             |
|                    |                              |                             |

## Tips & Warnings



XPAC only operates with HP Laser Jet Printers that support the PCL6 driver.



HP provides driver support for the following printers

- HP LaserJet 4000 series/HP LaserJet 4100 series
- HP LaserJet 2100 series/HP LaserJet 2200 series
- HP LaserJet 1200
- HP LaserJet 3200/HP LaserJet 3300
- HP LaserJet 4200 series/HP LaserJet 4300 series
- HP LaserJet 5000 series/HP LaserJet 5100 series
- HP LaserJet 8000 series
- HP LaserJet 9000 series printers

For the latest drivers for HP PCL6 printers, refer to the following:

<http://h20000.www2.hp.com/bizsupport/TechSupport/Document.jsp?objectID=bpl04568>


|                |                                    |         |       |      |           |          |     |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC |         |       |      | No.       | 1-003-02 |     |
| Author         | Weikai                             | Version | 1.0.1 | Date | 2012/6/25 | Page     | 2/3 |

To use a printer via USB, follow the steps below:


**1:** On the XPAC, execute INotepad from the "/System\_Disk/tool/INotepad" folder.



**2:** Click "File" → "Open" and open a text file, then click the "OK" button.

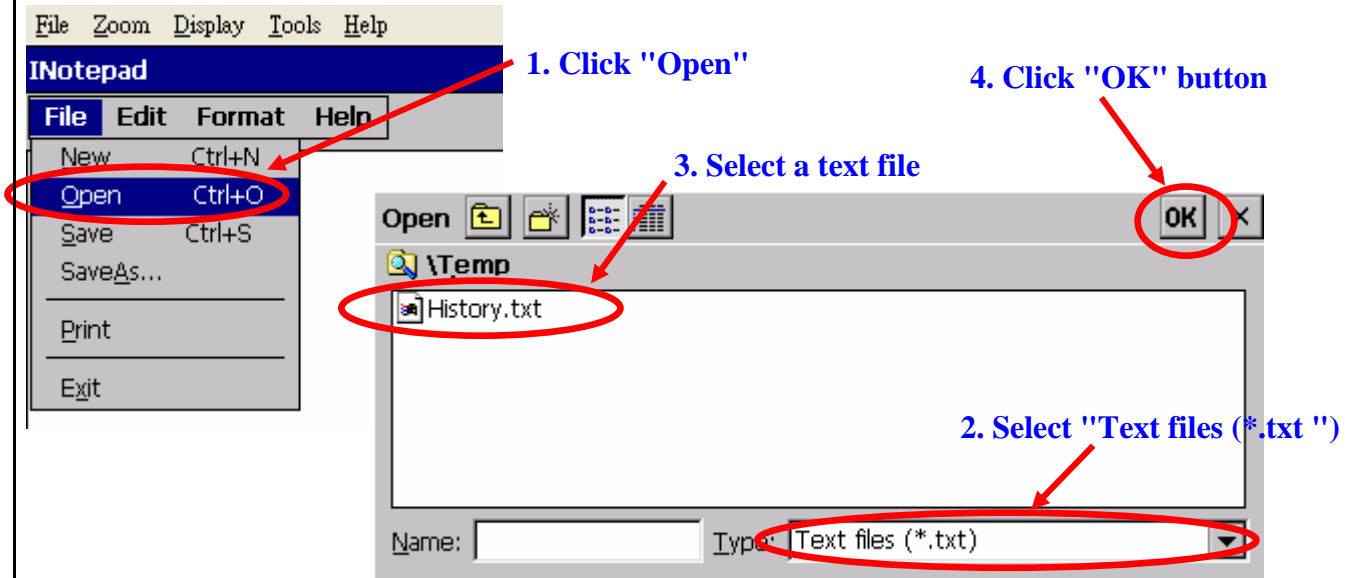


**3:** Click "File" → "Print".

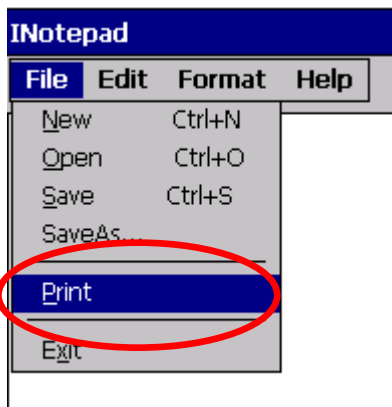

|                |                                    |         |       |      |           |          |     |
|----------------|------------------------------------|---------|-------|------|-----------|----------|-----|
| Classification | System and Application FAQ on XPAC |         |       |      | No.       | 1-003-02 |     |
| Author         | Weikai                             | Version | 1.0.1 | Date | 2012/6/25 | Page     | 3/3 |

4: Select the printer from the "printer" dropdown menu.

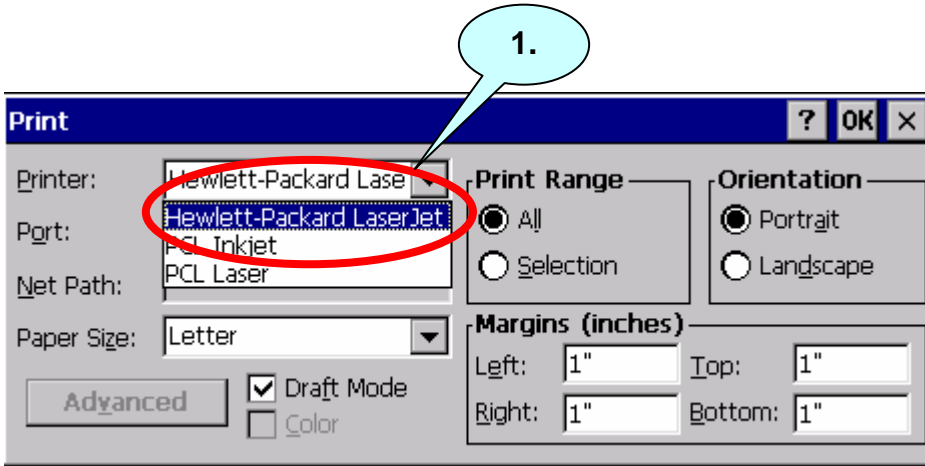

Select the port from the "port" dropdown menu, and then click the "OK" button

