

PMC-2841M Quick Start

Packing List

In addition to this guide, the package includes the following items:



Resources

Technical Support

service@icpdas.com www.icpdas.com How to search for drivers, manuals and spec information on ICP DAS website.

• For Mobile Web



• For Desktop Web



PRODUCTS SOLUTIONS NEWS & EVENTS SUPPORT CORPORAT

1. Configuring the boot mode

Before starting PMC-2841M at the first time, be sure that the switch is placed in the "0" position.



2. Checking the network setting

The PMC-2841M comes with the default IP setting:



LAN1	Default
Network Setting	DHCP
LAN2	Default
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1

3. Go to PMC-2841M's web site

• Open a browser, and type in the URL address of the PMC-2841M.



• You have to set the password before the first time to login.

	When using PMC for the first time, please set up a new passwor for the administrator:	d
	New Password	
Power Monitoring & Management Solution ICP DAS Co., Ltd.	Length must be between 8 and 20 characters	
	X At least 1 uppercase letter (A-Z)	
	Retype New Password	
	Language: English	~
	Change password	

 For more detail information, please refer to PMC-2841M's User Manual.