

# Industrial Tri-band 3G Modem GTM-201-3GWA

#### **Quick Start**

#### **Package Checklist**


The package includes the following items:


- One GTM-201-3GWA hardware module
- One Quick Start (this manual)
- One companion CD
- One USB Type A to Type B connector cable (CA-USB18)
- One 3G/GSM antenna (ANT-421-02)
- One GPS antenna (ANT-115-03) (only for GTM-201P-3GWA)

# Related Documents and Software Utilities Documents


- User manual: GTM-201-3GWA User Manual
- Quick start: GTM-201-3GWA QuickStart
- CD: \napdos\3G\_Modem\GTM-201-3GW A\Manual
- http://ftp.icpdas.com/pub/cd/usbcd/napdos/3G\_modem/ GTM-201-3GWA/manual/

#### View of the GTM-201-3GWA Panel

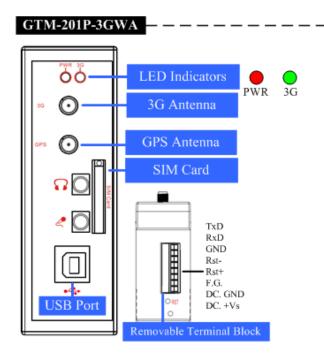

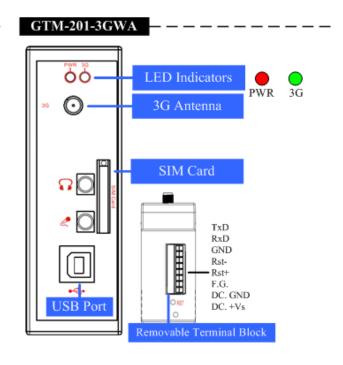


## **Pin Assignments**

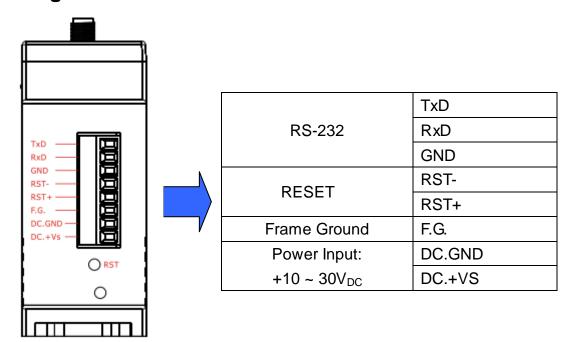


#### > Reset Wire Connection

Input Type	Reset State ON	Reset State OFF
Reset	RST-	RST-
Input	RST+	RST+

Reset Input	
ON Voltage Level	+3.5 V <sub>DC</sub> ~ +30 V <sub>DC</sub>
OFF Voltage Level	+1 V <sub>DC</sub> max.

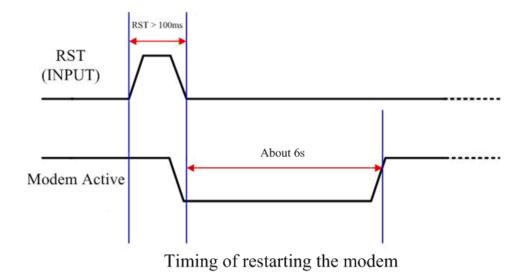

#### > Connect the GTM-201-3GWA to PC

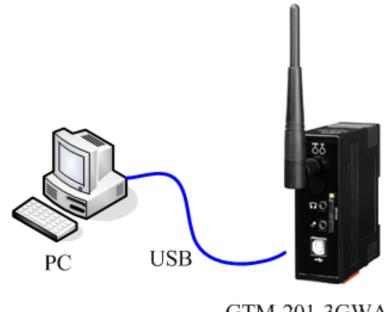

GTM-201-3GWA

#### > SIM card and Antenna Installation






#### USB Driver Installation(XP)

Step1. Double Click GTM-201-3GWA driver "GTM-201-3GWA.exe" to install the driver.

Step2. Click "Next".

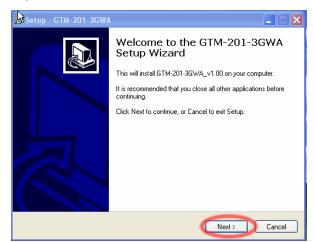

Step3. Click "Next" until finishing installation



Step4. Connect the USB of GTM-201-3GWA with the PC

Step5. The "Found New Hardware Wizard" window will pop-out. Please click "Next" until finishing installation

\*All 5 items for installation:

"GTM-201-3GWA Diagnostics"

"GTM-201-3GWA NMEA"

"GTM-201-3GWA AT Port"

"GTM-201-3GWA Modem"


"GTM-201-3GWA Wireless HS-USB Ethernet Adapter"



Step6. Finish the all install steps. Please open "Device manager", and you will found 5 new items in your computer.

The "GTM-201-3GWA AT Port" is a "AT command port" for GSM library.

The "GTM-201-3GWA Modem" is a Modem for dial-up to 3G/GPRS Network.

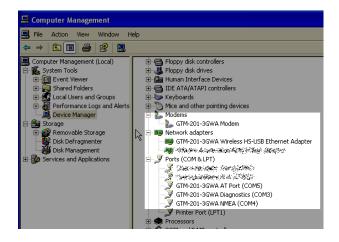

### Quick Test (Hyper Terminal)

Step1. Start → All Programs →
Accessories → Communications →
Hyper Terminal → Input new connection
name → Click "OK" → Select
"GTM-201-3GWA AT PORT" for USB or
your PC serial port for RS-232
communication → Click "OK"



### Create a new modem connection on PC (for RS-232 dial-up)

Step1. Control Panel → Double-click 
"Phone and Modem Options" → Modem 
→ Click "Add"

Step2. Select "Standard Modem Types" → Select "Standard 19200 bps Modem" → Click "Next"

Step3. Select your COM Port to connect the modem → Click "Next"→Click"Finish"

Step2. Please refer to the following settings

•	
Bits per second	115200
Data bits	8
Parity	None
Stop bits	1
Flow control	None

Step3. File → Properties → Settings → Click "ASCII Setup..." → Select "Echo typed character locally" → OK

Step4. Input "AT" and press "Enter", then you will receive "AT OK"




Step4. Control Panel → Double-click "Phone and Modem Options" → Modem

- → Select "Standard 19200 bps Modem"
- → Click "Properties"


Step5. Control Panel → Double-click "Phone and Modem Options" → Modem

- → Select "Standard 19200 bps Modem"
- → Click "Properties" → Modem → Maximum Port Speed → 115200

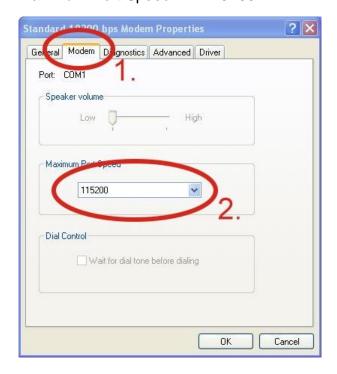

Step7. Diagnostics  $\rightarrow$  Query Modem  $\rightarrow$  Click "OK"

Note: If user queries modem that gets a Error, please try again.

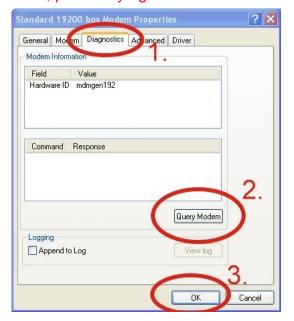

Step6. Advanced → Extra initialization commands:


Note: GPRS's APN must be provided from your Telecom. CO., LTD.

For example in Taiwan:


AT+CGDCONT=1,"IP","INTERNET"

For example in China:

AT+CGDCONT=1,"IP"," CMNET"

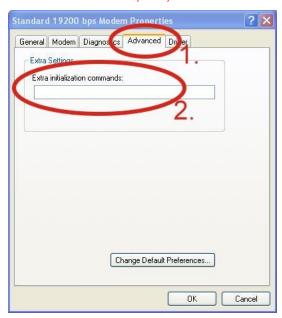

Step8. Click "OK"

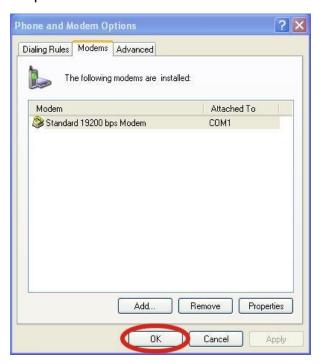


# Create a new dial-up on a PC

Step1. Control Panel → Network

Connections → Click "Create a new

connection" → Click "Next" → Select

"Connect to the Internet" → Click "Next"

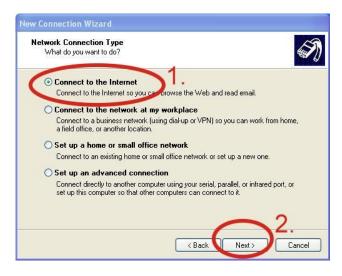

Step2. Select "Connect using a dial-up modem" → Click "Next"



Step3. Your GPRS's name → Click "Next" → Phone Number: → Click "Next" Note: Phone Number must be provided from your Telecom. CO., LTD.

For example in Taiwan: \*99\*\*\*1#

Phone Number to Dial
What is your ISP's phone number?

Type the phone number:

Phone number:

Was unight need to include the of the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modern sound, the number dialed is correct.

< Back

Step4. GPRS's User name and GPRS's Password → Click "Next" → Click "Finish"

Note: GPRS's User name and GPRS's Password must be provided from your Telecom. CO., LTD.



Step5. Control Panel → Network Connections →

Click "Your GPRS's name" → File

- → Properties → General →
- → Click "Configure"

Select "GTM-201-3GWA Modem"

(\* Select "Standard 19200 bps Modem" For RS-232)



Step6.Maximum speed(bps) → Select "115200" → Enable hardware flow control (Note) → Click "OK" Note:

Please don't select "Enable hardware flow GTM-201-3GWA control"



Step7. Contral Panel → Network Connections → Double-Click "Your GPRS's name" → Click "Dial"



Step8. If you connect to internet successfully, your toolbar has new logo 3:49 PM

# Technical Support

- 1. ICP DAS Service : service@icpdas.com
- 2. GTM-201-3GWA software Website: http://m2m.icpdas.com/gtm-201-3gwa.html