

## 1. 快速上手

### 1.1 設定 IP

1.一開機 LED Display 會顯示 IP, Mask, Gateway

Item	Description
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1

如果您的電腦 IP 前兩碼是 192.168 請跳過此小節。  
如果不是，將無法對 MD104 做連線動作。請依以下操作。

請先開啓「控制台」



點擊「網路連線」




點選「區域連線」  
接著（右鍵）「內容」


#### 區域網路或高速網際網路



1. (選擇)  
「Internet Protocol (TCP/IP)」
2. (點擊)「內容」

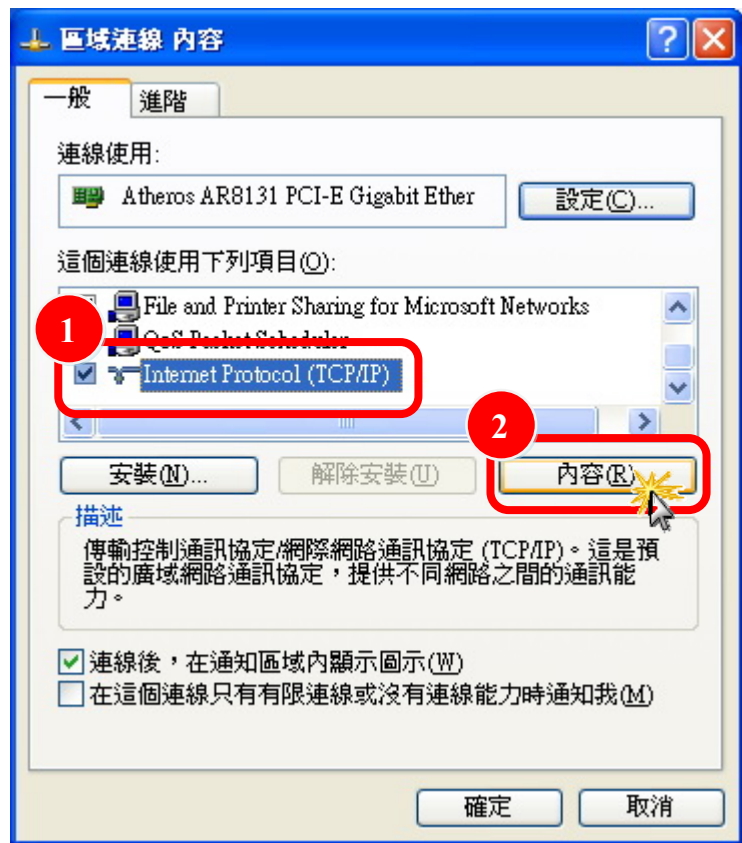

1. (選擇)「使用下列 IP 位置」
2. 進行修改
3. (點擊)「確定」

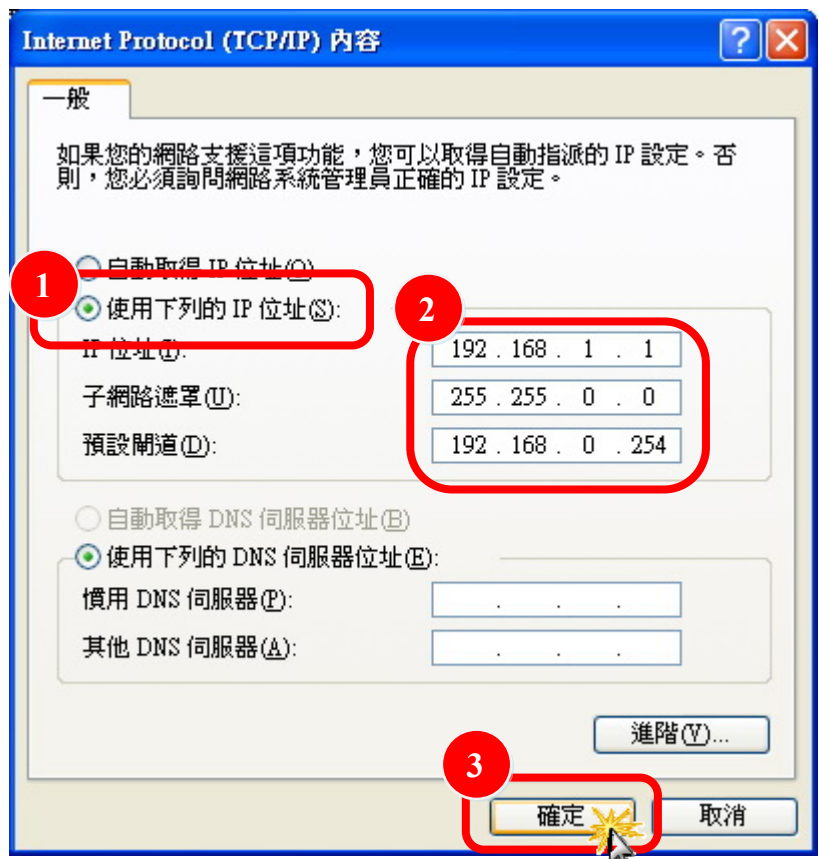

## 1.2 登入 MD104

STEP1: 開啓您的瀏覽器(IE, Firefox, chrome 等等)



STEP2: 在網址列輸入 MD104 的 IP



STEP3: 一開始會要求您輸入密碼

The screenshot shows the 'MD104-W - Login - Microsoft Internet Explorer' window. The address bar contains '192.168.255.104' and is highlighted with a red box. The main content area displays the message: 'The system is logged out. To access the web configuration page, enter your password in the Login field.' Below this is a 'Login password:' label, an input field, and a 'Login' button. A blue arrow points from the input field to a table in the bottom right corner. The table has two columns: 'Item' and 'Default'. The first row contains 'Password' and 'Admin'.

Item	Default
Password	Admin

## 1.3 輸入訊息

當您登入後，會在網頁最上面看到索引

1. 在「訊息欄位」輸入文字
2. 左鍵點擊「Update Message」按鈕

輸入的文字即會在上面顯示!