

Update Firmware Instructions from SD Card

- 一、Unzip the firmware folder downloaded from the website to get the firmware into the SD card, as shown in Figure 1.1

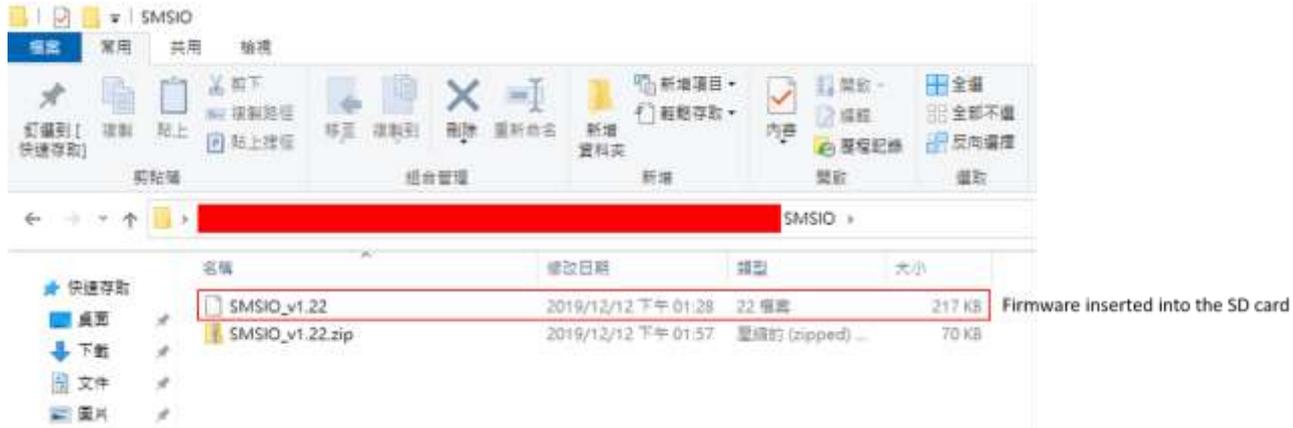


Figure 1.1

- 二、Place the burned file

Place the version file to be updated in the update folder inside the SD card, and change the name to "fw", as shown in Figure 1.2

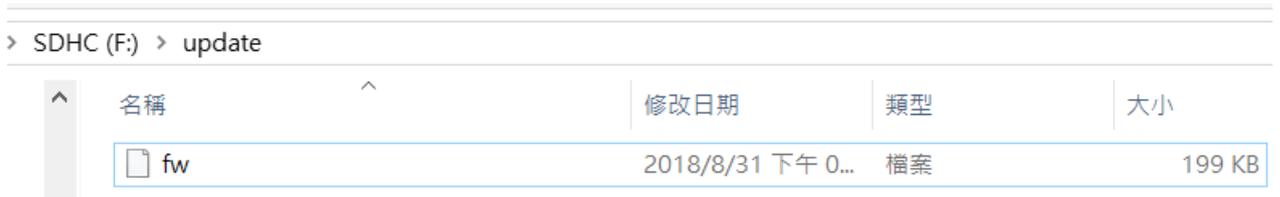


Figure 1.2

- 三、first insert the SD card that has been placed in the Firmware file into the GTP-541M. After the power is successfully updated, the STA light and the GPS light will flash at the same time every 0.1 seconds for 10 seconds. If the update fails, the update will be The flashing speed is continued for 10 seconds every 0.9 seconds, then the GTP-541M will automatically restart. At this time, the internal file of the SD card will become the internal firmware file and config.ini file of the GTP-541M and the auxiliary file name will be changed to .bak. Figure 1.4

Note: config.ini.bak is the parameter data used by fw.bak



Figure 1.3

SDHC (F:) > update

名稱	修改日期	類型	大小
config.ini.bck	2018/9/4 下午 07	BCK 檔案	21 KB
fw.bck	2018/9/4 下午 07	BCK 檔案	199 KB

Figure 1.4