WF-2000 Series Wi-Fi I/O Module

AIO User Manual





www.icpdas.com

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for damages resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, or for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright 2016 by ICP DAS. All rights are reserved.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Document Revision

Version	Date	Description of changes
RevB1.0	2016-10-20	First Release for "WF-2000 RevB" series

Table of Contents

1.	Int	roduct	tion	5
	1.1		Wireless connection mode	5
	1.2		Features	5
		1.2.1	Features Description	6
	1.3		Specifications	7
2.	Ha	rdware		.12
	2.1		Front Panel	. 12
		2.1.1	LED Indicator	. 13
		2.1.2	I/O Connector	. 13
	2.2		Top Panel	. 16
	2.3		Dimensions	. 17
	2.4		Hardware Connection	. 18
		2.4.1	Power and Serial port connection	. 18
		2.4.2	I/O connection	. 19
	2.5		Jumper Settings	. 22
		2.5.1	Watchdog Timer Settings	. 22
		2.5.2	Al Settings	. 22
	2.6		FW / OP Dip-switch	. 23
		2.6.1	Firmware Update Mode	. 23
		2.6.2	Firmware Operation Mode	
3.	So	ftware		.27
	3.1		WF IO Utility (RevB1.0 or later)	. 27
		3.1.1	Main Screen	. 28
		3.1.2	Configuration Screen	. 29
		3.1.3	Analog Input Screen	. 32
4.	Аp	plicati	on Notes	.40
	4.1		Hardware Installation	
	4.2		WF-2000 series Configuration	
		4.2.1	WF-2000 Series Wireless Network Configuration	. 41
		4.2.2	PC Connection Configuration	. 42
		4.2.3	Access I/O data	
5.	Mo	dbus	Applications	
	5.1		What is Modbus TCP/IP?	
	5.2		Protocol Description	. 48
		5.2.1	MBAP	. 49
		5.2.2	Function Code	. 49
		5.2.3	Data	. 50

	5.2.4	Response	50			
	5.2.5	Data Encoding	51			
	5.3	Address Mapping	52			
	5.3.1	WF-2015 I/O Address Mapping	52			
	5.3.2	WF-2017 I/O Address Mapping	52			
	5.3.3	WF-2019 I/O Address Mapping	53			
	5.3.4	WF-2026 I/O Address Mapping	53			
6.	Troubles	hooting	55			
Αp	pendix A.		57			
_	A.1 Analog	Input Type and Data Format Table	57			
	A.2 Analog	Output Type and Data Format Table	59			
	A.3 CJC (cold junction compensation) Definition					
	A.4 RTD Input Type and Data Format Table6					

1. Introduction

The WF-2000 RevB series I/O modules have WLAN connection complies with the IEEE802.11b/g/n standards. With the popularity of 802.11 network infrastructure, the WF-2000 RevB series I/O modules make an easy way to incorporate wireless connectivity into monitoring and control systems. They also support Modbus/TCP and UDP protocol and the network encryption configuration, which makes perfect integration to SCADA software and offer easy and safe access for users from anytime and anywhere.

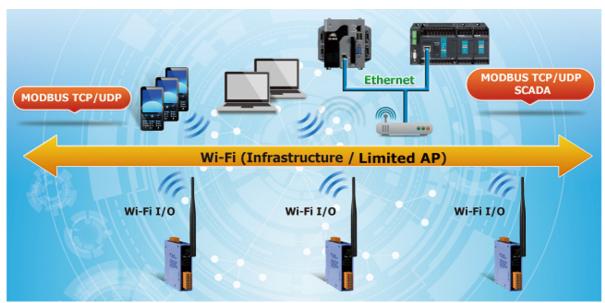


Figure 1-1 Application architecture for the WF-2000 RevB series

1.1 Wireless connection mode

WF-2000 RevB series support Infrastructure and Limited-AP wireless connection modes of WLAN.

1.2 Features

- RoHS Design
- Compatible with IEEE 802.11b/g/n standards
- Support Infrastructure and ad Limited-AP modes for wireless networks
- Support WEP, WPA and WPA2 wireless encryption
- Support Modbus/TCP and UDP protocols
- Support DHCP network configuration
- Wide operating temperature range
- Built-in Watchdog

1.2.1 Features Description

The WF-2000 module offers the most comprehensive configuration to meet specific application requirements. The following list shows the features designed to simplify installation, configuration and application.

Compatible with IEEE 802.11b/g/n standards

WF-2000 RevB module complied with IEEE 802.11b/g/n standard from 2.4~2.5 GHz, and it can be used to provide up to 11 Mbps for IEEE 802.11b, 54 Mbps for IEEE 802.11g and 72 Mbps for IEEE 802.11n to connect your wireless LAN.

Support infrastructure and Limited-AP modes for wireless networks

Limited-AP mode lets you create a Limited AP network with the specified SSID to communicate directly with each other without the need for a wireless access point.

Infrastructure mode is the more common network configuration where all wireless hosts (clients) connect to the wireless network via a WAP (Wireless Access Point).

Support WEP, WPA and WPA2 wireless encryption

WEP and WPA are common types of security that are used to protect wireless networks. When WEP or WPA is turned on, WF-2000 module uses a special security key combination to allow only devices that know this key to connect to its wireless network. This applies to laptops, smart device, or any other wireless device.

Support Modbus/TCP and UDP protocols

The Modbus/TCP and UDP slave function on the WF-2000 module can be used to provide data to remote HMI/SCADA software built with Modbus/TCP driver. ICP DAS also provides NAPOPC_ST DA Server for Modbus/TCP to integrate WF-2000 I/O series real-time data value with OPC client enabled software.

Built-in Multi-function I/O

Various I/O components are mixed with multiple channels in a single module, which provides the most cost effective I/O usage and enhances performance of the I/O operations.

Built-in Watchdog

Module Watchdog is a built-in hardware circuit that monitors the operating status of the module and will reset the module if a failure occurs in the hardware or the software.

1.3 Specifications

Table 1-1 System Specifications

Modules	WF-2015 WF-2017 WF-2019 WF-2026					
Wi-Fi Interface						
Antenna	5 dBi (Omni-Directional)					
Output Power		14 dBm @	2 11Mbps			
Receive Sensitivity		-93 dBm (@ 11Mbps			
Standard Supported		IEEE 80	2.11b/g/n			
Wireless Mode		Infrastructure	& Limited AP			
Encryption		WEP, WPA	and WPA2			
UART Interface						
Connector	5-pin screw terminal connector(TxD, RxD, GND)					
COM1		RS-	232			
Baud Rate (bps)	115200					
Power	Power					
Input Voltage Range		10 ~ 3	0 VDC			
Power Consumption	1.5 W 2.0 W 2.2 W 2.2 W					
Mechanism						
Installation		DIN	-Rail			
Dimensions (W.v.I. v.II)	33mm x 106mm	33mm x 106mm	33mm x 95mm x	33mm x 106mm		
Dimensions (W x L x H)	x 120mm	x 120mm	120mm	x 120mm		
Environment						
Operating Temperature	-25°C ~ +75°C					
Storage Temperature	-30°C ~ +80°C					
Humidity	10% ~ 90%					

Table 1-2 WF-2015 I/O Specification

Modules	WF-2015
Analog Input	
Channels	6
Input Type	2/3-wire RTD
RTD Type	Pt100, Pt1000, Ni120, Cu50, Cu100, Cu1000
Resolution	16 bit
Accuracy	±0.05% of FSR
Zero Drift	0.5 μV/°C
Span Drift	20 μV/°C
Sampling Rate	12 Hz (Total)
Overvoltage Protection	120 VDC
Intra-Module Isolation, Field-to-Logic	3000 VDC
Individual Channel Configuration	Yes
Open Wire Detection	Yes
3-wire RTD Lead Resistance Elimination	Yes
Resistance Measurement	3.2 kΩ Max.

Table 1-3 WF-2017 I/O Specification

s	WF-2017				
Input					
els 8	8-ch Differential / 16-ch Single-ended(Note), Jumper Selectable				
	Voltage: ±150 m	V, ±500 mV, ±1	V, ±5 V, ±10 V		
Гуре	Current : 0 ~ +20 mA, +4 ~ +20 mA, ±20 mA (Jumper Selectable)				
ition 1	16 bit				
acy	±0.1% FSR				
ing Rate	10 Hz (Total)				
Prift ±	±20 μV/°C				
Drift ±	±25 ppm/°C				
on Mode Rejection	86 dB Min.				
al Mode Rejection	100 dB				
mpedance	D'66 (1)	$> 2 M\Omega$	G: 1 1 1	> 1 M Ω	
oltage protection	Differential Single-ended 240 Vrms		Single-ended	150 Vrms	
Module Isolation, Field-to-Logic 3	ogic 3000 VDC				
Individual Channel Configuration Yes					
Intra-Module Isolation, Field-to-Logic 3000 VDC					

Single-Ended mode can be used for voltage input only.

Table 1-4 WF-2019 I/O Specification

Modules Modules	WF-2019
Analog Input	
Channels	10
	Voltage: ±15 mV, ±50 mV, ±100 mV, ±500 mV, ±1 V, ±2.5 V, ±5 V,
	±10 V
Input Type	Current: ±20 mA (External resistor is required)
	Thermocouple: J, K, T, E, R, S, B, N, C
Resolution	16 bit
Accuracy	±0.1% FSR
Sampling Rate	10 Hz (Total)
Zero Drift	±20 μV/°C
Span Drift	±25 ppm/°C
Common Mode Rejection	86 dB Min.
Normal Mode Rejection	100 dB
Input Impedance	Voltage Input: >400 k Ω , Current Input: 125 Ω
Intra-Module Isolation, Field-to-Logic	3000 VDC
Overvoltage protection	240 Vrms
Individual Channel Configuration	Yes
Open Wire Detection	Yes (Software programmable)

Table 1-5 WF-2026 I/O Specification

Modules		WF-2026			
Analog Input					
Channels		5			
Wiring		Differential			
Innut Dance	Voltage	±150 mVDC, ±500 mVDC, ±1 VDC, ±5 VDC, ±10 VDC			
Input Range	Current	$0 \sim +20 \text{ mA}$, $+4 \sim +20 \text{ mA}$, $\pm 20 \text{ mA}$ (Jumper Selectable)			
Resolution		16 bit			
Accuracy		±0.1% FSR			
Sampling Rate		10 Hz (Total)			
Zero Drift		±20 μV/°C			
Span Drift		±25 ppm/°C			
Common Mode Rej	ection	86 dB Min.			
Normal Mode Rejection		100 dB			
Tour A Touris Touris	Voltage	2 ΜΩ			
Input Impedance	Current	140 Ω			
Common Voltage P	rotection	±200 V			
Overvoltage Protect	tion	240 Vrms			
Overcurrent Protect	ion	Yes, 50 mA @ 110 VDC			
Virtual Channel to 0	Channel Isolation	Yes, 400 VDC			
Individual Channel	Configuration	Yes			
Analog Output					
Channels		2			
Outroot Dance	Voltage	+0 ~ +5 VDC, +0 ~ +10 VDC, ±5 VDC, ±10 VDC			
Output Range Current		$+0 \sim +20$ mA, $+4 \sim +20$ mA (Jumper Selectable)			
Resolution		12 bit			
Accuracy		±0.1% FSR			
Voltage Output Capability		10 V @ 20 mA			
Power-on Value		Yes, Programmable			
Safe Value		Yes, Programmable			

2.Hardware

2.1 Front Panel

The WF-2000 AIO modules front panel contains the antenna, I/O connectors and LEDs.

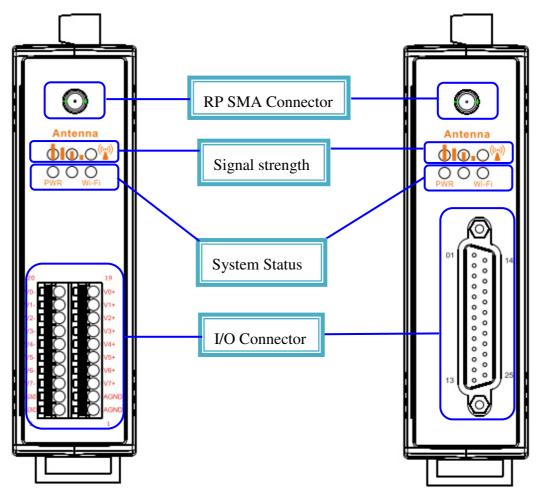


Figure 2-1 Front Panel of the WF-2000 AIO modules

2.1.1 **LED Indicator**

Table 2-1 System Status Indicator

System Status Indicator				
LED	Module Status	LED Status		
	Wi-Fi communication error	Blink per 100 ms		
	Wi-Fi associate error	Every 1 second flashes twice per 100 ms		
PWR	Wi-Fi unable to connect error	Blink per 1000 ms		
	Wi-Fi network configurations error	Every 1 second flashes three times per 100 ms		
	Power failure	Off		
Wi-Fi	Data transmission	Blink		
VV 1-F1	Bus Idle	Off		

Table 2-2 Signal Strength LED Indicator

Signal Strength LED Indicator				
LED Status	Signal strength			
OO	High			
0 0 •	Medium			
000	Low			
000	Bad or No Signal			

2.1.2 I/O Connector

2.1.2.1 WF-2015

Pin Assignment Name		Termir	nal No.	Pin Assignment Name	
A3	20			19	A0
B3	18			17	B0
/B3	16			15	/B0
A4	14			13	A1
B4	12			11	B1
/B4	10			9	/B1
A5	8			7	A2
B5	6			5	B2
/B5	4			3	/B2
N/A	2			1	N/A

Figure 2-2 I/O Connector of WF-2015

2.1.2.2 WF-2017

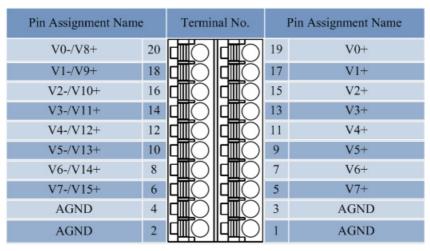


Figure 2-3 I/O Connector of WF-2017

2.1.2.3 WF-2019

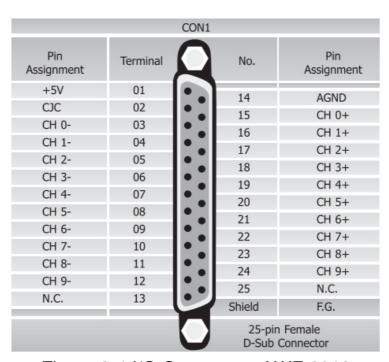


Figure 2-4 I/O Connector of WF-2019

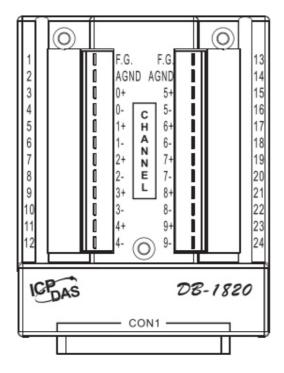


Figure 2-5 Pin Assignment of DB-1820

2.1.2.4 WF-2026

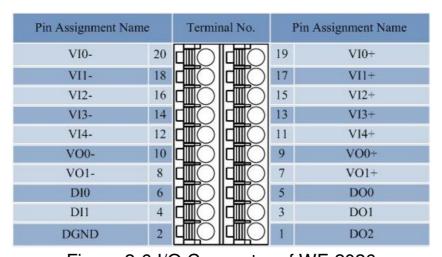


Figure 2-6 I/O Connector of WF-2026

2.2 Top Panel

The WF-2000 top panel contains the Power/Signal connector and operating mode Selector switch.

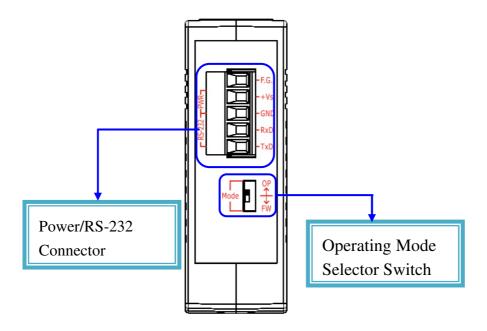


Figure 2-3 Top Panel of the WF-2000

Operating Mode Selector Switch

<u>FW mode:</u> Firmware update mode

Move the switch to the OP position after the upgrade is complete.

OP mode: Firmware operation mode

In the WF-2000, the switch is always in the OP position. Only when updating the WF-2000 firmware, the switch can be moved from the OP position to the FW position.

Table 2-3 Power/Signal Connector

Power/Signal connector					
Pin Assignment	Description				
F.G	Frame Ground				
+Vs	+10 ~ +30 VDC				
GND	Power / RS-232 GND				
RxD	RS-232 RxD				
TxD	RS-232 TxD				

2.3 Dimensions

The diagrams below provide the dimensions of the WF-2000 to use in defining your enclosure specifications. All dimensions are in millimeters.

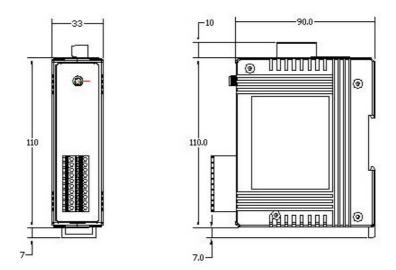


Figure 2-4 Front / Left Side dimension of the WF-2015/WF-2017/WF-2026

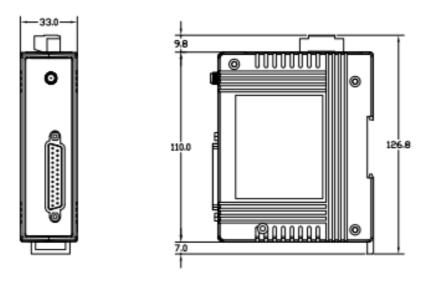
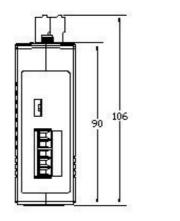


Figure 2-5 Front / Left Side dimension of the WF-2019



 
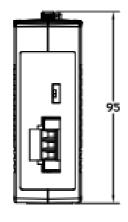


Figure 2-6 Top / Bottom dimension of the WF-2015/WF-2017/WF-2026



 


Figure 2-7 Top / Bottom dimension of the WF-2019

2.4 Hardware Connection

2.4.1 Power and Serial port connection

The following figures describe the Power and the COM port to a serial device via serial network.

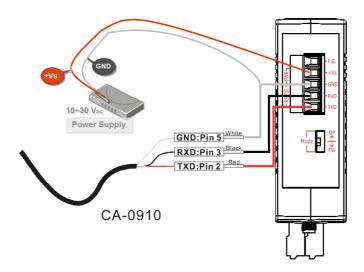


Figure 2-8 Power and Serial port wire connection

2.4.2 I/O connection

2.4.2.1 WF-2015

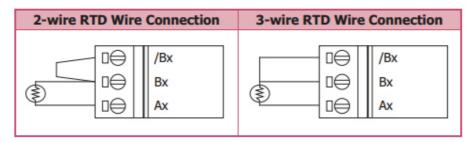


Figure 2-9 AI wire connection of WF-2015

2.4.2.2 WF-2017

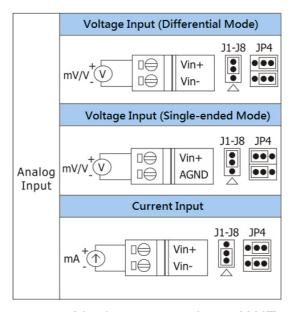


Figure 2-13 Al wire connection of WF-2017

2.4.2.3 WF-2019

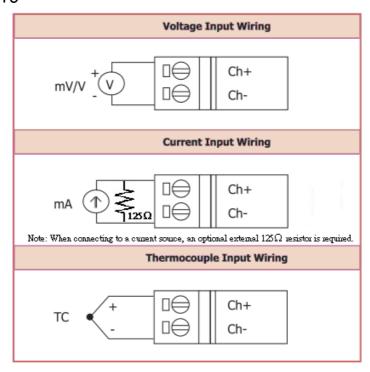


Figure 2-14 Al wire connection of WF-2019

2.4.2.4 WF-2026

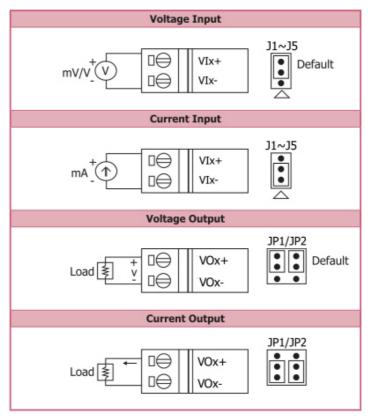


Figure 2-15 AIO wire connection of WF-2026

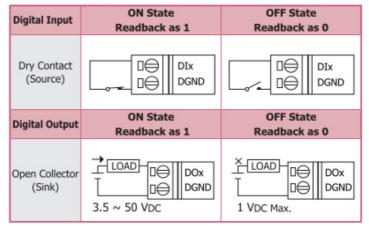


Figure 2-16 DIO wire connection of WF-2026

2.5 Jumper Settings

2.5.1 Watchdog Timer Settings

A watchdog timer (WDT) is a device that performs a specific operation after a certain period of time if something goes wrong and the system does not recover on its own. A watchdog timer can perform a warm boot(restarting the system) after a certain number of milliseconds.

The WF-2000 series module supplies a jumper for users to active the watchdog timer or not. If users want to use this WDT, can open the WF-2000 cover and use the Jumper to activate the WDT built in the module, as the Figure 2-13. Note that the default setting is active.

Table 2-4 WDT Jumper Position

Mode	Jumper Number
WF-2015	JP2
WF-2017	JP2
WF-2019	JP1
WF-2026	JP4



Figure 2-10 Watchdog timer Jumper Position

2.5.2 Al Settings

Table 2-5 WF-2017 Al Input Type/Mode Jumper configuration

Modules	Input Type	Jumper Position	Input Mode	Jumper Position
WF-2017	Voltage	J1-J8 ♣	Differential	JP4 •••• ••••
			Single-ended	JP4
	Current	J1-J8	Differential	JP4 ●●● ●●●

Table 2-6 WF-2026 Analog Input/Output Type Jumper configuration

Modules	Input Type	Jumper Position	Output Type	Jumper Position
Modules WF-2026	Voltage	J1~J5 Default	Voltage	JP1/JP2 Default
	Current	J1~J5 ● △	Current	JP1/JP2

2.6 FW / OP Dip-switch

On the top of the WF-2000 series module, there is a dip-switch used for <u>firmware operation</u> or <u>firmware update</u> of the module. The following steps show how to use this dip-switch.

2.6.1 Firmware Update Mode

Please set the dip-switch to the "FW" position as Figure 2-7, and then the WF-2000 series will work in the "<u>Firmware Update Mode</u>" after reset the power of the module. In this mode, users can update the firmware of the WF-2000 module from computer's RS-232 port via CA-0910 cable shown as Figure 2-19.

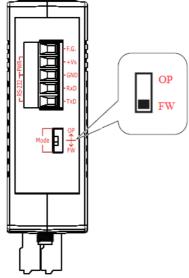


Figure 2-11 FW Position of Dip-Switch



Figure 2-12 CA-0910 Cable

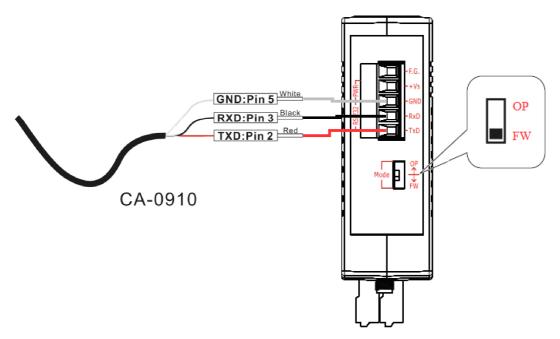


Figure 2-13 Downloads cable connection

Users just need to execute "Firmware_Update_Tool.exe" and follow the below steps to complete the firmware updating process.

- [1] Choose "COM" interface and "COM Port".
- [2] Click "Browser" button to choose firmware file. (e.g. WF20xx.fw)
- [3] Click "Firmware Update" button to start firmware updating process.

FW_Update_Tool v1.06 1. Download Interface COM Port : COM **2**0M1 ▼ USB 2. Firmware Path D:\PJ\Wi-Fi IO\Firmware\WF-2055\WF-2055\FLASH\WF2055.fw 3. Firmware Update Click "Firmware Update" button to start firmware updating !! Firmware Update 🥑 開啟 搜尋位置(I): 🔑 FLASH 修改日期 名種 WF2055.fw 2012/9/19 下午 02:02 檔案名称(M)/| WF2055.fw 開啟(○) 檔案類型(L): Firmware File(*.fw)

The result will be shown in "Firmware Update" field.

Figure 2-14 WF-2000 firmware update process

□ 以唯讀方式開啟(R)

The WF-2000 firmware can be downloaded from ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/wifi/io/wf-20xx/firmware

The Firmware_Update_Tool program can be downloaded from ttp://ftp.icpdas.com/pub/cd/usbcd/napdos/wifi/io/wf-20xx/software/tool/

2.6.2 Firmware Operation Mode

In the operation mode, users need to set the dip-switch to the "OP" position as Figure 2-22 and reset the power, and the WF-2000 can run in operation mode. In this mode, user can use the WF-2000 series with a computer or with another WF-2000 series module for wireless connection.

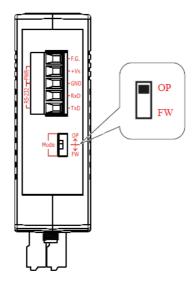


Figure 2-15 OP Position of Dip-Switch

3. Software

The WF-2000 Utility provides a simple way to test and acquire data easily and instantly for all ICP DAS WF-2000 series I/O modules without programming. WF-2000 Utility can be used to configure the wireless network interface, establish a TCP connection, I/O control and I/O monitoring of WF-2000 series I/O modules.

WF-2000 I/O Utility (v2.0 or later) is a Microsoft Windows application that compatibles with Microsoft Windows XP, Vista and 7 (.NET framework 4.0 is required). You can download this program from: ftp://ftp.icpdas.com/pub/cd/usbcd/napdos/wifi/wf-2015/software/utility/

The WF IO Utility (RevB) is designed for "WF-2000 RevB" series only, not for "WF-2000" series (without "RevB" mark). Make sure there is a "RevB" mark after the model name on the left cover.

The "WF-2000 RevB" and "WF-2000" series are using different Wi-Fi module, so the Utility are not compatible with each other.

3.1 WF IO Utility (RevB1.0 or later)

The following is the main screens provided by WF IO Utility, this utility tool can be thought as a useful tool for I/O control and monitoring on the WF-2000 RevB series. It supplies several functions, such as UDP search, module connection and Wi-Fi configuration setting, etc.

To access the ICP DAS WF-2000 RevB I/O module user can double click the module listed in "Device List", and then you will see the I/O page come out. In the I/O page, it is used to access I/O data and configure parameters.

3.1.1 Main Screen

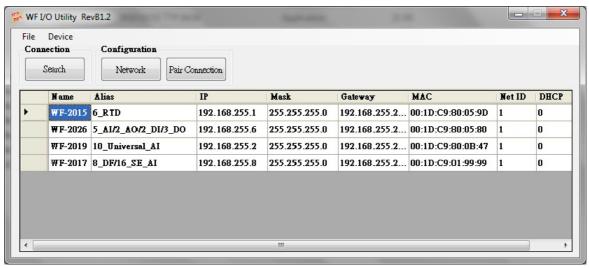


Figure 3-1 WF IO Utility (RevB1.0 or later) main screen

Menu Function:

[1] File

Exit Press this button to exit WF-2000 I/O Utility.

[2] Device

- Connection→Search This function can search all of WF-2000 devices that support UDP search communication.
- Configuration Network
 This function can enter the basic wireless network
 configuration interface, as shown in Figure 3-2.
- Configuration → Pair Connection This function can enter the basic Pair Connection configuration interface, as shown in Figure 3-5.

[3] Search List

Search list provides each item that scans from UDP and display the related information about the device, includes host name, alias name, IP address, Mask, Gateway, MAC address, Modbus Net ID and its DHCP state.

3.1.2 Configuration Screen

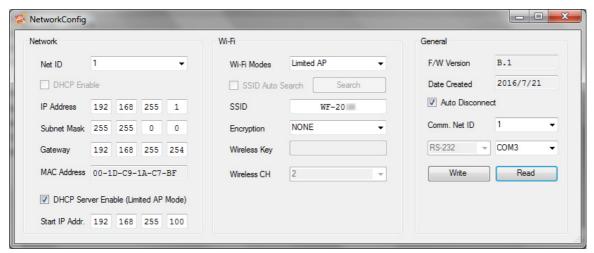


Figure 3-2 WF IO Utility (RevB1.0 or later) configuration screen

[1] Network

Net ID

The Unit Identifier in Modbus TCP/IP application data unit. (Range:1~247, Default:1)

DHCP Enable

If a DHCP server is present on the network, the WF-2000 will automatically obtain the network settings from the DHCP server when the DHCP function is enabled.

(Limited AP mode don't support DHCP configuration)

IP Address

WF-2000 IP setting (Default:192.168.255.1)

Subnet Mask

WF-2000 Net Mask setting (Default: 255.255.0.0)

Gateway

WF-2000 Gateway setting (Default: 192.168.255.254)

MAC Address

WF-2000 MAC Address display

■ DHCP Server Enable

This function is used to start/stop the DHCP server, prior to starting the server, the adapter should be configured with a valid static IP address, both Start IP address and Gateway should be same and created or configure to create a limited AP network

■ Start IP Addr.

This DHCP server can support maximum 8 client connections with server IP as the statically configured IP address and client IP address starts from the next IP address of the configured static IP address

[2] Wi-Fi

SSID Auto Search

Auto search the broadcast SSID in the air, and list SSID names in the drop-down menu.

(It must establish a Wi-Fi connection first, and communicate with Wi-Fi Interface)

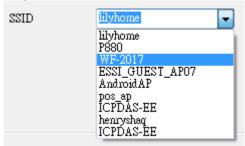


Figure 3-3 Auto search SSID list

■ Wi-Fi Configuration

Table 3-1: Infrastructure Mode

Wi-Fi Mode	Infrastructure: Use the wireless access point way for connection and	
WI-FI Mode	transmission. (Must have Wi-Fi AP)	
SSID	Service Set Identifier: Connected devices must be with the same SSID, SSID	
3310	length must not exceed 20 characters.	
	0~11: Wi-Fi transmission channel setting, connected devices must with the	
Wireless CH	same channel. (In Infrastructure mode, the Wireless channel can be	
	automatically selected)	
Enamentian	NONE / WEP(Open) / WEP(Shared) / WPA-PSK / WPA2-PSK: Encryption	
Encryption	of Wi-Fi, connected devices must with the same encryption.	
	Key of Encryption, connected devices must with the same Key.	
	WEP(Open) : Key length must be 10 characters.	
Wireless Key	WEP(Shared): Key length must be 26 characters.	
	WPA-PSK : Key length must between 8~63 characters.	
	WPA2-PSK : Key length must between 8~63 characters.	
	Characters of key should be in range of: $[0 \sim 9]$ or $[A \sim F]$ or $[a \sim f]$.	

Table 3-2: Limited-AP Mode

Wi-Fi Mode	Limited-AP: Limited-AP mode lets WF-2000 create a Limited AP network	
	with the specified SSID to communicate directly with each other.	
SSID	Service Set Identifier: Connected devices must be with the same SSID, SSID	
	length must not exceed 20 characters.	
WLCH	1~11: Wi-Fi transmission channel setting, connected devices must with the	
WLCH	same channel.	
Engraption	NONE / WEP(Open) / WEP(Shared) / WPA-PSK / WPA2-PSK: Encryption	
Encryption	of Wi-Fi, connected devices must with the same encryption.	
	Key of Encryption, connected devices must with the same Key.	
	WEP(Open) : Key length must be 10 characters.	
Wireless Key	WEP(Shared): Key length must be 26 characters.	
	WPA-PSK : Key length must between 8~63 characters.	
	WPA2-PSK : Key length must between 8~63 characters.	
	Characters of key should be in range of: $[0 \sim 9]$ or $[A \sim F]$ or $[a \sim f]$.	

[3] General

■ F/W Version

Display the firmware version of the WF-2000

Date created

Display the date created of the WF-2000

■ Auto Disconnect

Once the connection is established, if there is no data exchange within 60 sec the socket will be closed automatically when the this function is enabled

Communication Net ID

Modbus Net ID of WF-2000

Parameter Transmission Interface

The parameter transmission interface, that provides wireless and RS-232 interface for connection.

■ Write Parameter

It allows users to upload the parameters to WF-2000 series

■ Read Parameter

It allows users to download the parameters form WF-2000 series.

3.1.3 Analog Input Screen

In the I/O page of the AI, the real-time value and module configuration can be read or written in this page. The detail of all items in this form will be introduced in this section.

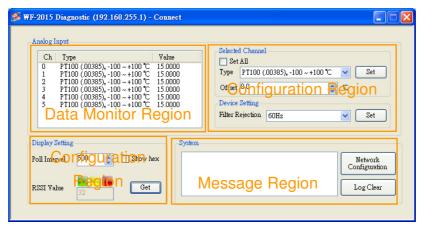


Figure 3-4 WF-2015 diagnostic screen

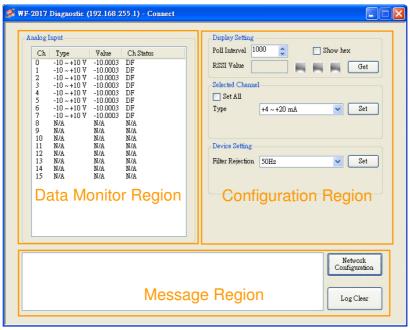


Figure 3-5 WF-2017 diagnostic screen



Figure 3-6 WF-2019 diagnostic screen

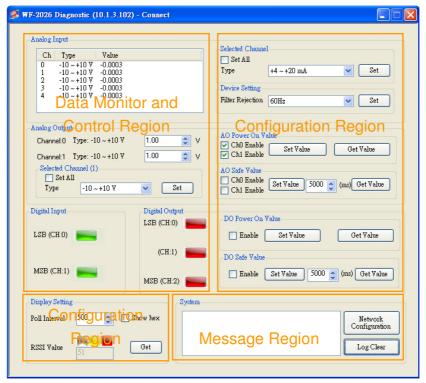


Figure 3-7 WF-2026 diagnostic screen

Configuration Region

All I/O related configurations can be set in this region. This region is divided into two parts, channel and module related setting. The channel related setting is in the "Selected Channel". The rest are module related settings.

Set All

All Al or AO channels related setting will follow current selection.

◆ Type

The WF-2000 series I/O modules provide programmable input type for analog input/output. Users can set different type for each analog input/output channel. For more detail for type of analog /output modules, please refer to Appendix A.

◆ Channel CJC Offset

Setting the CJC offset for the specific channel. The behavior of the setting is the same as the CJC Offset, but it only affects specific channel.

Note: The CJC offset can be any in the range of -30.00 to +100.00 °C.

◆ Filter Rejection

In order to remove the noise from the power supply, some analog input modules feature build-in noise filter. Two filters, 50Hz and 60Hz, are provided to remove noise generated from power source.

Wire Detection

Enable / Disable the open-wire detection for thermocouple.

CJC Enable

Enable / Disable the CJC (Cold-Junction Compensation).

◆ CJC Offset

Setting the CJC offset value for all AI channels. The offset value is used to add or subtract the reading value. Changing of this value will not affect calibration, but will affect the reading value of temperature type.

Note: The CJC offset can be any in the range of -30.00 to +100.00 °C.

Polling Interval

This value is the period to poll data to the WF-2000 I/O module.

Note: The valid value is 100 ~ 5000ms.

◆ Show Hex

Convert the I/O value from decimal to hexadecimal.

◆ RSSI

This area will display the signal strength information by RSSI value and LED indicator when press the "Get" button.

Table 3-1 Signal Strength Information Display Table

Signal Strength LED Indicator			
LED Status	RSSI value	Signal strength	
	1 ~ 40	High	
	41 ~ 60	Medium	
	61 ~ 80	Low	
	0	Bad or No Signal	

Monitor Region

The I/O related data and configurations will be listed here. Users can select the channel to configure in the "I/O Monitor Region". The setting of this selected channel will show in "I/O configuration region".

Message Region

This area will display information for the system connection.

Control Region

In the controlling region, the real-time value and module configuration can be read or written in this page. The detail of all items in this form will be introduced in this section.

Digital Input Monitor Region

The digital input value can be read in this region.

Digital Output Monitor and Control Region

The digital output value can be read and write in this region.

Power On Value of DO

The power on value of DO can be Set and Get in this region. It is loaded into the DO under 3 conditions: power on, reset by Module Watchdog, reset by reset command.

- Enable: Enabled or disabled this function.
- Set Value: Set the current output status as Power on value.
- Get Value: Get the current configuration of Power on value.

Safe Value of DO

The safe value of DO can be Set and Get in this region. When the communication timeout occurs, the "Safe Value" is loaded into the DO.

- Enable: Enabled or disabled this function.
- Set Value: Set the current output status as Safe Value.
- Get Value: Get the current configuration of Safe Value.
- Active Time (ms): This function is active when the communication timeout reach this setting.

Analog Output Monitor and Control Region

The analog output value can be read and write in this region.

Power On Value of AO

The power on value of AO can be Set and Get in this region. It is loaded into the AO under 3 conditions: power on, reset by Module Watchdog, reset by reset command.

- Enable: Select which channel to enable or disable this function.
- Set Value: Set the current output value as Power on value.
- Get Value: Get the current configuration of Power on value.

Safe Value of AO

The safe value of AO can be Set and Get in this region. When the communication timeout occurs, the "Safe Value" is loaded into the AO.

- **Enable:** Select which channel to enable or disable this function.
- **Set Value:** Set the current output value as Safe Value.
- **Get Value:** Get the current configuration of Safe Value.
- Active Time (ms): This function is active when the communication timeout reach this setting.

4. Application Notes

Users can use a computer to communicate with the WF-2000 devices in the application. It can complete the purpose of I/O control to wireless network by this way.

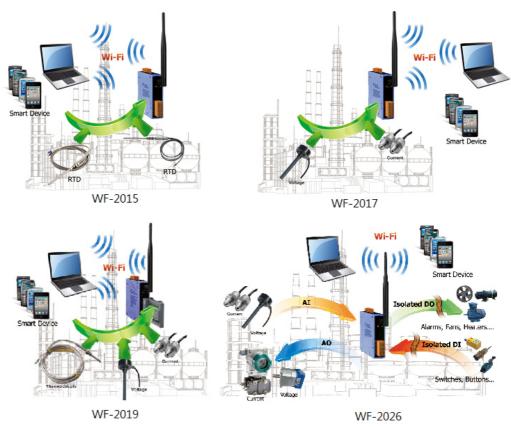


Figure 4-1 WF-2000 application architecture

4.1 Hardware Installation

Before use, associated hardware configuration, the steps described as follows:

Step 1: Checking the WF-2000 series firmware operation mode

It needs to set the DIP switch to the "OP" position (operating mode), as resetting the power, WF-2000 series will be in the operation mode.

Step 2: Serial port connection

WF-2000 series supports RS-232 serial communication. The circuit configuration is as shown in Figure 2-19.

If you do not need parameter setting, this step can be omitted.

Step 3: Power connection

Connect the power supply to WF-2000 series' power terminator, as shown in Figure 2-5.

4.2 WF-2000 series Configuration

4.2.1 WF-2000 Series Wireless Network Configuration

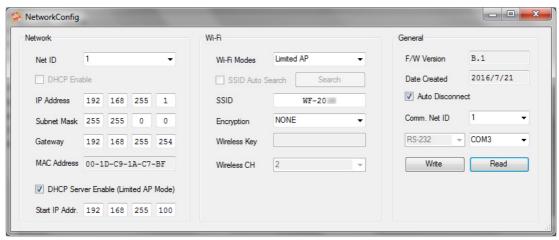


Figure 4-2 Configuration Interface

- 01 Net ID: The Unit Identifier in Modbus TCP/IP application data unit. This case is set as "1" in Figure 4-2.
- 02 IP Address: Set the local WF-2000 series' IP. Here set to "192.168.255.1".
- 03 · Subnet Mask: Net Mask settings. Here set to "255.255.0.0".
- 04 · Gateway: Gateway settings. Here set to "192.168.255.254".
- 05 · DHCP Server Enable: Enable DHCP Server.
- 06 Start IP Addr.: The client IP address starts from the configured static IP address. Here set to "192.168.255.100".
- 07 Wi-Fi Mode: Wireless network connection mode settings. Here set to "Limited AP" mode. (If select the "Limited AP" mode, the "DHCP Server" function is enabled)
- 08 SSID : Service set identifier. Here set to "WF-20xx".
- 09 Encryption : Encryption mode settings. Here set "NONE" (without encryption).
- 10 · Wireless Key: Wireless encryption Key. Here does not have the setting.
- 11 · Wireless CH: Wi-Fi connection channel settings. Here set to "2".

12 • Upload parameters: After completing the settings above, select the "RS-232" interface, communication "Net ID" and "COM Num". Press "Write Parameter" button to upload the parameters.

4.2.2 PC Connection Configuration

- 01 . TCP/IP Setting:
 - a. Open Network connections and entry the properties setting of wireless network connections.

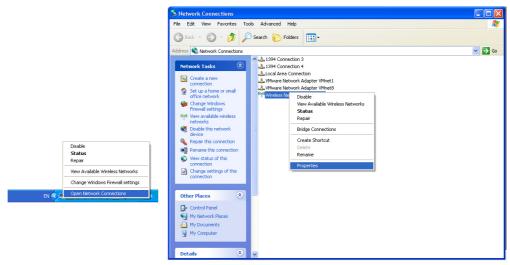


Figure 4-3 Properties setting of wireless network connections

b. Select the Internet Protocol (TCP/IP) and press the "Properties" button.

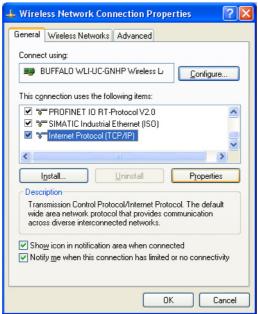


Figure 4-4 Properties setting of Internet Protocol (TCP/IP)

c. Configuring your computer to "**Obtain an IP address automatically**" allows WF-2000 module to assign a dynamic IP address to it.

Once the wireless network connection is successful, the computer will obtain an IP address as "192.168.255.100".



Figure 4-5 IP address setting interface

02 · Wireless network connection:

- a. View available wireless networks and you can see the "WF-20xx" wireless network in the list.
- b. Select the "WF-20xx" and press the "Connect" button.

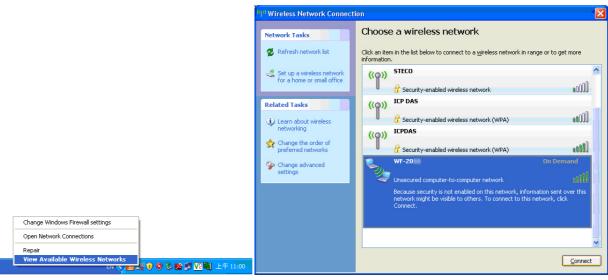


Figure 4-6 Wireless network connection

c. Press the "Connect Anyway" button for the next step.



Figure 4-7 Connection confirm interface

d. After waiting for a while, there will appear connection success screen.

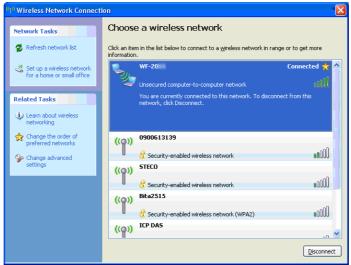


Figure 4-8 Connection successful interface

4.2.3 Access I/O data

01 . Connection with WF I/O utility (RevB1.0 or later)

a. Open WF I/O utility and click the "Search" button, choose the network interface that connect with the WF-2000 device, search list will provide each item that scan from UDP Port.

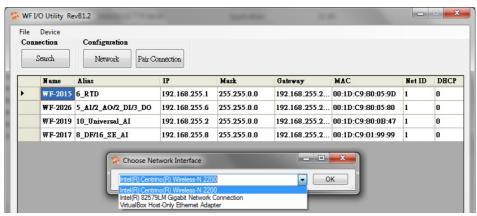


Figure 4-9 Choose Network Interface

 To access the WF-2000 I/O module user can double click the module listed in "Device List".

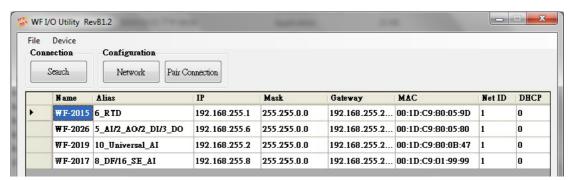


Figure 4-10 WF-2000 search list

c. Then you will see the I/O page come out. In the I/O page, it is used to access I/O data and configure parameters.

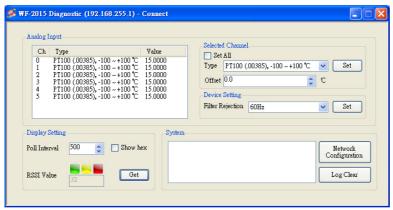


Figure 4-11 I/O page interface(WF-2015)

02 . Connection with Modbus TCP utility

- a. Open Modbus TCP utility and key in the IP address as "192.168.255.1", Port as "502". Finally, click the "Connect" button.
- b. If the network settings are correct, this will immediately establish a connection.

 


Figure 4-12 Modbus TCP utility Connection interface

c. The following Modbus command function codes are available for WF-2000 series control.

Table 4-1 Modbus request command list

Request	FC1 Read multiple coils status (0xxxx) for DO	FC2 Read multiple input discrete (1xxxx) for DI	FC3 Read multiple registers (4xxxx) for AO	FC4 Read multiple input registers (3xxxx) for AI	FC15 Force multiple coils (0xxxx) for DO	FC16 Write multiple registers (4xxxx) for AO	
Byte 0	Net ID						
Byte 1	FC=0x01	FC=0x02	FC=0x03	FC=0x04	FC=0x0F	FC=0x10	
Byte 2-3		Reference number					
Byte 4-5	Bit count	Bit count	Word count	Word count	Bit count	Word count	
Byte 6	N/A	N/A	N/A	N/A	Byte count (B)	Byte count (B)	
Byte 7-(B+6)	N/A	N/A	N/A	N/A	Data to be written	Register values	

d. Modbus TCP request command examples.



Figure 4-13 Read multiple coils status (0xxxx) for DO

 


Figure 4-14 Force multiple coils (0xxxx) for DO

 


Figure 4-15 Read multiple input discretes (1xxxx) for DI



Figure 4-16 Read multiple input registers (3xxxx) for AI



Figure 4-17 Read multiple registers (4xxxx) for AO

 


Figure 4-18 Write multiple registers (4xxxx) for AO

5. Modbus Applications

The WF-2000 is a Modbus device that allows you to access terminals data via Wi-Fi and communicates using a master-slave technique in which only one device (the master) can initiate transactions (called queries). The other devices (slaves) respond by supplying the requested data to the master, or by taking the action requested in the query.

Most SCADA Supervisor Control And Data Acquisition and HMI software can easily integrate serial devices via the Modbus protocol, such as Citect, ICONICS, iFIX, InduSoft, Intouch, Entivity Studio, Entivity Live, Entivity VLC, Trace Mode, Wizcon, Wonderware, etc.

5.1 What is Modbus TCP/IP?

Modbus is a communication protocol developed by Modicon in 1979. Different versions of Modbus used today include Modbus RTU (based on serial communication like RS485 and RS232), Modbus ASCII and Modbus TCP, which is the Modbus RTU protocol embedded into TCP packets.

Modbus TCP is an internet protocol. The protocol embeds a Modbus frame into a TCP frame so that a connection oriented approach is obtained thereby making it reliable. The master query's the slave and the slave responds with the reply. The protocol is open and hence highly scalable.

5.2 Protocol Description

The Modbus protocol defines a simple protocol data unit independent of the underlying communication layers. The mapping of Modbus protocol on network can introduce some additional fields on the application data unit.

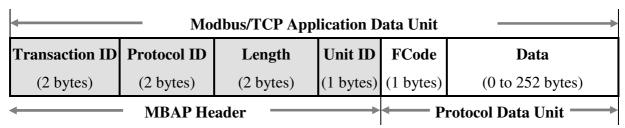


Figure 5-1 Modbus/TCP Application Data Unit

5.2.1 **MBAP**

The Modbus/TCP extension includes 7 additional bytes to the original Modbus protocol, which allows for transport over the TCP/IP layers.

A dedicated header is used on TCP/IP to identify the Modbus Application Data Unit. It is called the MBAP Header (MODBUS Application Protocol Header). The MBAP Header consists of 7 bytes of information:

Table 5-1 MODBUS Application Protocol Header

Fields	Length	Description
Transaction Identifier	2 bytes	Identification of Request/Response transaction – Copied from request to response
Protocol Identifier	2 bytes	0 = Modbus protocol
Length	2 bytes	Number of following bytes - Includes the Unit Identifier
Unit Identifier	1 byte	Identification of remote slave

5.2.2 Function Code

The function code field of a Modbus data unit is coded in one byte. Valid codes are in the range of 1 ... 255 decimal (the range 128 - 255 is reserved and used or exception responses). When a Modbus request is sent from a Modbus Client to a Server device the function code field tells the Server what kind of action to perform.

The Modbus/TCP feature of WF-2000 series module supports 7 function codes, which allows the reading and writing of data contents of registers.

Table 5-2 Supports Function Codes of WF-2000 series

Function Code	Descriptions
01 (0x01)	Read Coil Status
02 (0x02)	Read Input Status
03 (0x03)	Read Holding Registers
04 (0x04)	Read Input Registers
05 (0x05)	Force Single Coil
15 (0x0F)	Force Multiple Coils
16 (0x10)	Preset Multiple Registers

Any other function code request will be returned with an error response indicating the function code is not supported, as well as a request for too much data or data at a register address that not present.

5.2.3 **Data**

The data field of Modbus request sent from a client to server devices contains additional information that the server uses to take the action defined by the function code. This can include items like discrete and register addresses, the quantity of items to be handled, and the count of actual data bytes in the field.

The data field may be nonexistent (of zero length) in certain kinds of requests; in this case the server does not require any additional information. The function code alone specifies the action.

5.2.4 **Response**

If no error occurs related to the Modbus function requested in a properly received Modbus PDU (Protocol Data Unit) the data field of a Modbus response from a server to a client contains the data requested. If an error related to the Modbus function requested occurs, the field contains an exception code that the server application can use to determine the next action to be taken.

For example a client can read the ON/OFF states of a group of digital input or output or it can read/write the data contents of a group of registers. When the server responds to the client, it uses the function code field to indicate either a normal response or that some kind of error occurred (called an exception response). For a normal response, the server simply echoes to the request the original function code.

For an exception response, the server returns a code that is equivalent to the original function code from the request PDU with its most significant bit set to logic 1.

5.2.5 Data Encoding

Modbus uses a "big-endian" representation for address and data items. This means that when a numerical quantity larger than single byte is transmitted, the most significant byte (MSB, also called the high-order byte) is send first. The following sub-topics describe the different byte of encoding and show how the data is encoded as it is within the Modbus/TCP packet.

5.2.5.1 Binary

A binary item is represented as a single bit within a data word. All binary is packed into 16-bits data words, which are accessed using function code 01 and 02. Therefore, a single register contains 16 bits of binary data, each having a specific meaning.

Table 5-3 A single register contains 16 bits of binary data

Value	1st	2nd
0xAA55	0xAA	0x55
(1010101001010101)	(10101010)	(01010101)

5.2.5.2 16-bits Word

A 16-bits word item is transmitted with the most significant byte first. Function code 03 and 04 read 16-bits items at a time; therefore, each of these data items will fit within one register that is read.

Table 5-4 A 16-bits word item

Value	1st	2nd
0x1234	0x12	0x34

5.3 Address Mapping

5.3.1 WF-2015 I/O Address Mapping

Table 5-5 (3xxxx) Al address

Begin Address	Points	Descriptions	Range	Access Type
30001	1~6	Analog Input	-32768 ~ +32767 (Bipolar)	R

Table 5-6 (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
			1= Reset System	
40248	1	Reset System	247= Restore to Factory	W
			Default Settings	

5.3.2 WF-2017 I/O Address Mapping

Table 5-7 (3xxxx) Al address

Begin Address	Points	Descriptions	Range	Access Type
20001	1 16	A 1 T	-32768 ~ +32767 (Bipolar)	D
30001	1~16	Analog Input	0 ~ +65535 (Unipolar)	R
			0 ~ 1	
30017	1	AI Wire Selected	0 => Differential	R
			1 => Single-Ended	

Table 5-8 (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
			1= Reset System	
40248	1	Reset System	247= Restore to Factory	W
			Default Settings	

5.3.3 WF-2019 I/O Address Mapping

Table 5-9 (3xxxx) Al address

Begin Address	Points	Descriptions	Range	Access Type
20001	1 10	A 1 T /	-32768 ~ +32767 (Bipolar)	D
30001	1~10	Analog Input	0 ~ +65535 (Unipolar)	K
30011	1	CJC data	-300 ~ +1000	R

Table 5-10 (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
40248	1	Reset System	1= Reset System 247= Restore to Factory Default Settings	W

5.3.4 WF-2026 I/O Address Mapping

Table 5-11 (3xxxx) Al address

Begin Address	Points	Descriptions	Range	Access Type
20001	1 5	A1 T4	-32768 ~ +32767 (Bipolar)	D
30001	1~5	Analog Input	0 ~ +65535 (Unipolar)	K

Table 5-12 (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
40001	1 0	A1 O	-32768 ~ +32767 (Bipolar)	D/W/
40001	1~2	Analog Output	0 ~ +65535 (Unipolar)	R/W

Table 5-13 (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
40248	1	Reset System	1= Reset System 247= Restore to Factory Default Settings	W

Table 5-14 (0xxxx) DO address

Begin Address	Points	Descriptions	Range	Access Type
00001	1~3	Digital Output	0=OFF, 1=ON	R/W

Table 5-15 (1xxxx) DI address

Begin Address	Points	Descriptions	Range	Access Type
10001	1~2	Digital Input	0=OFF, 1=ON	R

6. Troubleshooting

Item	Problem Description	Solution
1	Power Failure (PWR LED Off)	Please return to the ICP DAS for inspection and repair
2	WLAN connection can not be established	 Make sure that the service set identifier device (SSID) settings are the same. Make sure Wi-Fi transmission Channel settings are the same. Make sure encryption is set, encryption keys are the same way Make sure antenna is connected Please confirm whether there are barriers on the scene. That could result in poor signal quality.
3	TCP connection can not be established	Make sure WLAN connection is established successfully Make sure the network configuration is good (TCP / IP Port, Local IP, Net Mask)
4	How to restore factory default Step1 Step2 Step3 Step4 OP FW OP FW OP FW OP FW OP FW	 Power on the WF-2000 series I/O module Change the Dip-Switch position of the WF-2000 series and to complete the following steps in 5 seconds. Step1. From "OP" to "FW" position. Step2. From "FW" to "OP" position. Step3. From "OP" to "FW" position. Step4. From "FW" to "OP" position. When the correct implementation of the above steps, the Signal Strength LEDs and PWR/Wi-Fi LEDS of the WF-2000 series should be turn on, and that should be turn off after 500 ms later. Reset the power the WF-2000 series would back to factory defaults.

Item	Problem Description	Solution
5	Cannot execute WF Utility(RevB1.0 or later) with the message like the following Figure 6-1	Because the ICP DAS WF Utility(RevB1.0 or later) requires .NET Framework v4.0,this program will automatically detect the .NET Framework v4.0 installed as well or not. Users can install .NET Framework v4.0 in the following website. Microsoft .NET Framework 4 (Web Installer) http://www.microsoft.com/en-us/download/details.aspx?id=17851 Microsoft .NET Framework 4 (Standalone Installer) http://www.microsoft.com/en-
		us/download/details.aspx?id=17718



Figure 6-1 .NET Framework Initialization Error

Technical Support

If you have problems about using the WF-2000 series I/O module, please contact ICP DAS Product Support.

Email: service@icpdas.com

Appendix A.

A.1 Analog Input Type and Data Format Table

Type Code	Input Range	Data Format	+F.S	-F.S
00h	-15 to +15 mA	Engineering Unit	+15.000	-15.000
Oon	-13 to +13 IIIA	2's comp HEX	7FFF	8000
01h	-50 to +50 mA	Engineering Unit	+50.000	-50.000
OIII	-30 to +30 IIIA	2's comp HEX	7FFF	8000
02h	-100 to +100 mV	Engineering Unit	+100.00	-100.00
0211	-100 to +100 mv	2's comp HEX	7FFF	8000
03h	-500 to +500 mV	Engineering Unit	+500.00	-500.00
OSII	-300 to +300 mv	2's comp HEX	7FFF	8000
04h	-1 to +1 V	Engineering Unit	+1.0000	-1.0000
0411	-1 t0 +1 V	2's comp HEX	7FFF	8000
05h	-2.5 to +2.5 V	Engineering Unit	+2.5.000	-2.5.000
OSII	-2.3 to +2.3 V	2's comp HEX	7FFF	8000
06h	-20 to +20 mA	Engineering Unit	+20.000	-20.000
Oon	-20 to +20 IIIA	2's comp HEX	7FFF	8000
07h	+4 to +20 mA	Engineering Unit	+20.000	+04.000
0711	+4 to +20 mA	2's comp HEX	FFFF	0000
08h	-10 to +10 V	Engineering Unit	+10.000	-10.000
Uon	-10 to +10 v	2's comp HEX	7FFF	8000
09h	5 to 15 V	Engineering Unit	+5.0000	-5.0000
0311	-5 to +5 V	2's comp HEX	7FFF	8000

Type Code	Input Range	Data Format	+F.S	-F.S
0Ah	-1 to +1 V	Engineering Unit	+1.0000	-1.0000
OAII	-1 to +1 v	2's comp HEX	7FFF	8000
ODb	0Bh -500 to +500 mV	Engineering Unit	+500.00	-500.00
OBII		2's comp HEX	7FFF	8000
0Ch	-150 to +150 mV	Engineering Unit	+150.00	-150.00
OCII	-130 to +130 mv	2's comp HEX	7FFF	8000
0Dh	-20 to +20 mA	Engineering Unit	+20.000	-20.000
ODII	-20 to +20 IIIA	2's comp HEX	7FFF	8000
0Eh	Type J	Engineering Unit	+760.00	-210.00
OEII	Thermocouple -210 to 760°C	2's comp HEX	7FFF	DCA2
0Fh	Type K	Engineering Unit	+1372.0	-0270.0
Ol·li	Thermocouple -270 to 1372°C	2's comp HEX	7FFF	E6D0
10h	Type T	Engineering Unit	+400.00	-270.00
Ton	Thermocouple -270 to 400°C	2's comp HEX	7FFF	A99A
11h	Type E	Engineering Unit	1000.0	-0270.0
1111	Thermocouple -270 to 1000°C	2's comp HEX	7FFF	DD71
12h	Type R	Engineering Unit	+1768.0	+0000.0
1211	Thermocouple 0 to 1768°C	2's comp HEX	7FFF	0000
13h	Type S	Engineering Unit	+1768.0	+0000.0
1311	Thermocouple 0 to 1768°C	2's comp HEX	7FFF	0000
	Type B	Engineering Unit	+1820.0	+0000.0
14h	Thermocouple 0 to 1820°C	2's comp HEX	7FFF	0000

Type Code	Input Range	Data Format	+F.S	-F.S
15h	Type N Thermocouple	Engineering Unit	+1300.0	-0270.0
1311	-270 to 1300°C	2's comp HEX	7FFF	E56B
	Type C Thermocouple 0 to 2320°C	Engineering Unit	+2320.0	+0000.0
		2's comp HEX	7FFF	0000
1Ah	0 to +20 mA	Engineering Unit	+20.000	+00.000
		2's comp HEX	FFFF	0000

Note:

Getting the 0x7FFF value in all of the thermocouple type codes, it means that the thermocouple wires are broken.

A.2 Analog Output Type and Data Format Table

Type Code	Input Range	Data Format	+F.S	-F.S
30h	0 to +20 mA	Engineering Unit	+20.000	+00.000
3011	0 to +20 mA	2's comp HEX	FFFF	0000
31h	+4 to +20 mA	Engineering Unit	+20.000	+04.000
3111	+4 t0 +20 IIIA	2's comp HEX	FFFF	0000
32h	32h 0 to +10 V	Engineering Unit	+10.000	+00.000
3211		2's comp HEX	FFFF	0000
33h	-10 to +10 V	Engineering Unit	+10.000	-10.000
3311	-10 to +10 v	2's comp HEX	7FFF	8000
34h	0 to +5 V	Engineering Unit	+05.000	+00.000
3411	0 to +3 v	2's comp HEX	FFFF	0000
35h	-5 to +5 V	Engineering Unit	+05.000	-05.000
3311	-5 10 +5 7	2's comp HEX	7FFF	8000

A.3 CJC (cold junction compensation) Definition

Type	Input Range	Data Format	+F.S	-F.S
CIC	CJC -30 to +100 ℃	Engineering Unit	+100.00	-030.00
CJC		2's comp HEX	03E8	FED4

A.4 RTD Input Type and Data Format Table

	pat Typo and	Data i Offiat	14010	
Type Code	Input Range	Data Format	+F.S	-F.S
	Platinum 100	Engineering unit	+100.00	-100.00
20h	$\alpha = 0.00385$	2's comp HEX	7FFF	8000
	-100 ∼ 100°C	Ohm	+138.50	+060.25
	Platinum 100	Engineering unit	+100.00	+000.00
21h	$\alpha = 0.00385$	2's comp HEX	7FFF	0000
	0 ~ 100°C	Ohm	+138.50	+100.00
	Platinum 100	Engineering unit	+200.00	+000.00
22h	$\alpha = 0.00385$	2's comp HEX	7FFF	0000
	0 ~ 200°C	Ohm	+175.84	+100.00
	Platinum 100 $\alpha = 0.00385$ $0 \sim 600^{\circ}$ C	Engineering unit	+600.00	+000.00
23h		2's comp HEX	7FFF	0000
		Ohm	+313.59	+100.00
	Platinum 100 $\alpha = 0.003916$ -100 ~ 100°C	Engineering unit	+100.00	-100.00
24h		2's comp HEX	7FFF	8000
		Ohm	+139.16	+059.58
	Platinum 100	Engineering unit	+100.00	+000.00
25h	$\alpha = 0.003916$	2's comp HEX	7FFF	0000
	0 ~ 100°C	Ohm	+139.16	+100.00
	Platinum 100	Engineering unit	+200.00	+000.00
26h	$\alpha = 0.003916$	2's comp HEX	7FFF	0000
	0 ~ 200°C	Ohm	+177.13	+100.00
	Platinum 100,	Engineering unit	+600.00	+000.00
27h	$\alpha = 0.003916$	2's comp HEX	7FFF	0000
	0 ~ 600°C	Ohm	+317.28	+100.00

28h	Nickel 120 -80 ~ 100°C	Engineering unit	+100.00	-080.00
		2's comp HEX	7FFF	999A
		Ohm	+200.64	+066.60
29h	Nickel 120 0 ~ 100°C	Engineering unit	+100.00	+000.00
		2's comp HEX	7FFF	0000
		Ohm	+200.64	+120.60
2Ah	Platinum 1000 $\alpha = 0.00385$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556
		Ohm	+3137.1	+0185.2
2Bh	Cu 100 $\alpha = 0.00421$ -20 ~ 150°C	Engineering unit	+150.00	-020.00
		2's comp HEX	7FFF	EEEF
		Ohm	+163.17	+091.56
2Ch	Cu 100 α = 0.00427 0 ~ 200°C	Engineering unit	+200.00	+000.00
		2's comp HEX	7FFF	0000
		Ohm	+167.75	+090.34
2Dh	Cu 1000 $\alpha = 0.00421$ -20 ~ 150°C	Engineering unit	+150.00	-020.00
		2's comp HEX	7FFF	EEEF
		Ohm	+1631.7	+0915.6
2Eh	Platinum 100 $\alpha = 0.00385$ -200 ~ 200°C	Engineering unit	+200.00	-200.00
		2's comp HEX	7FFF	8000
		Ohm	+175.84	+018.49
2Fh	Platinum 100 $\alpha = 0.003916$ -200 ~ 200°C	Engineering unit	+200.00	-200.00
		2's comp HEX	7FFF	8000
		Ohm	+177.14	+017.14
80h	Platinum 100 $\alpha = 0.00385$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556
		Ohm	+313.59	+018.49
81h	Platinum 100 $\alpha = 0.003916$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556
		Ohm	+317.28	+017.14

Note:

Getting the 0x7FFF value in all of the RTD type codes, it means that the RTD wires are broken.