
ZT-USBC

Linux User Manual

Warranty

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

Warning

ICP DAS assume no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright 2015 by ICP DAS. All rights are reserved.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Tables of Contents

| | |
|---|----------|
| 1. ZT-USBC Linux Driver Installation | 3 |
| 1.1 LINUX DRIVER INSTALLING PROCEDURE..... | 3 |
| 1.2 LINUX DRIVER UNINSTALLING PROCEDURE..... | 4 |

1. ZT-USBC Linux Driver Installation

The ZT-USBC can be used in Linux OS. For Linux O.S, the recommended installation and uninstall steps are given in Sec 1.1 ~ 1.2


1.1 Linux Driver Installing Procedure

Linux PC or ICP DAS LinPAC

- Type below command to install linux driver

ZT-USBC module (Please refer to Figure 1-1):

```
#modprobe ftdi_sio  
#echo 1b5c 0210 > /sys/bus/usb-serial/drivers/ftdi_sio/new_id
```

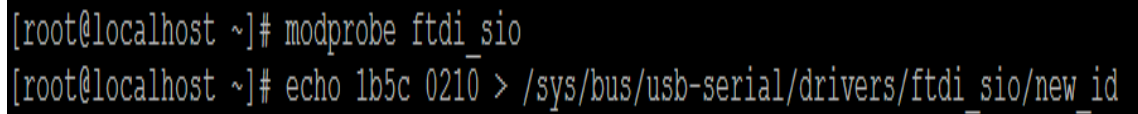

```
[root@localhost ~]# modprobe ftdi_sio  
[root@localhost ~]# echo 1b5c 0210 > /sys/bus/usb-serial/drivers/ftdi_sio/new_id
```

Figure 1-1

- Type command “**dmesg**” to check ZT-USBC device file(Please refer to Figure 1-2)

```
#dmesg
```

```
Nov 5 16:27:11 localhost kernel: usbcore: registered new interface driver usbserial
Nov 5 16:27:11 localhost kernel: USB Serial support registered for generic
Nov 5 16:27:11 localhost kernel: usbcore: registered new interface driver usbserial_generic
Nov 5 16:27:11 localhost kernel: usbserial: USB Serial Driver core
Nov 5 16:27:11 localhost kernel: USB Serial support registered for FTDI USB Serial Device
Nov 5 16:27:11 localhost kernel: usbcore: registered new interface driver ftdi_sio
Nov 5 16:27:11 localhost kernel: ftdi_sio: v1.5.0:USB FTDI Serial Converters Driver
Nov 5 16:27:14 localhost kernel: ftdi_sio 5-1:1.0: FTDI USB Serial Device converter detected
Nov 5 16:27:14 localhost kernel: usb 5-1: Detected FT232RL
Nov 5 16:27:14 localhost kernel: usb 5-1: Number of endpoints 2
Nov 5 16:27:14 localhost kernel: usb 5-1: Endpoint 1 MaxPacketSize 64
Nov 5 16:27:14 localhost kernel: usb 5-1: Endpoint 2 MaxPacketSize 64
Nov 5 16:27:14 localhost kernel: usb 5-1: Setting MaxPacketSize 64
Nov 5 16:27:14 localhost kernel: usb 5-1: FTDI USB Serial Device converter now attached to ttyUSB0
```

1.2 Linux Driver Uninstalling Procedure

Linux PC or ICP DAS LinPAC

- Type below command to remove ZT-USBC Linux driver

```
#modprobe -r ftdi_sio
```

or

```
#rmmod ftdi_sio
```