

Upgrade Win-GRAF Libraries :

Users can download the latest version of Win-GRAF libraries (e.g., "win-graf-lib-1.xx.zip") from http://www.icpdas.com/root/product/solutions/softplc_based_on_pac/win-graf/download/win-graf-driver.html. The Win-GRAF Libraries (Including Function, Function Block and I/O Board definitions) are saved in the folder of "ICP DAS - XP-WP-VP" under the directory of "C:\Win-GRAF\DATA\HWDEF". In some situations, you need to upgrade the Win-GRAF Libraries to the new version for supporting more Functions or new I/O Board. Please follow the steps below:

1. First, close all Win-GRAF Workbench windows.
2. You can compress the original "ICP DAS - XP-WP-VP" folder and backup to the other directory (e.g., D:\temp\xxx.zip), and then delete the folder.
3. Copy the new "ICP DAS - XP-WP-VP" folder into the directory "C:\Win-GRAF\DATA\HWDEF", and execute the Win-GRAF Workbench again.

Note:

If you want to know the version number of the Win-GRAF library. As the figure below, open the "Library Manager" and click "A_Version" in the "I/Os" tab, and then click "Description" to see the version number (e.g., "1.01").

