

## How to Install the Expansion I/O Socket


v1.2, August 2017

The ViewPAC (including VP-211x, VP-23Wx and VP-25Wx) have a slot cover to protect the internal components from damage during shipping. Before starting any installation, please first remove the slot cover.




## **Step 1: Remove the slot Cover**

The ViewPAC has a slot cover to protect the internal components from damage during shipping.

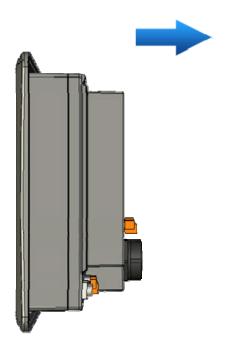


- 1) Hold the top of ViewPAC
- 2) Pull the plastic wrap

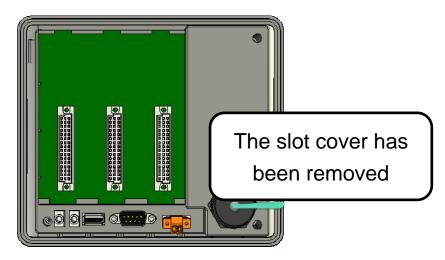


## Step 2: Installing the Expansion I/O Sockets

The case (a socket and a top case) is included in the package.

1) Take the socket out from the case

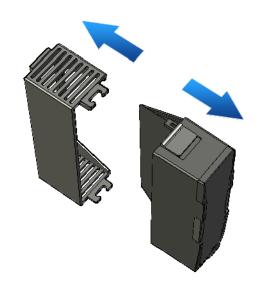

- 2) Padlock the bottom of the socket into the ViewPAC
- 3) Slide the socket into the ViewPAC until it clicks

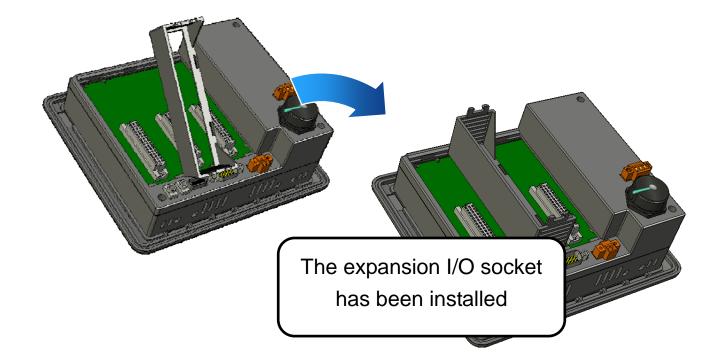



If there is any other question, please feel free to contact us.

Email: <a href="mailto:service@icpdas.com">service@icpdas.com</a>