

Classification	System and Application FAQ on WinCE PAC				No.	2-020-00	
Author	Tunglu-Yu	Version	1.0.0	Date	2013/05/16	Page	1/2


How to get the operating frequency of CPU

Applies to:


Platform	OS version	WinPAC/ViewPAC utility version
WinPAC series	All versions (WinCE5)	All versions
ViewPAC series	All versions (WinCE5)	All versions

Please perform the follow steps to get the CPU frequency of WinPAC/ViewPAC.

Step1: Click Start ->Settings -> Control Panel, and then double click the icon for system

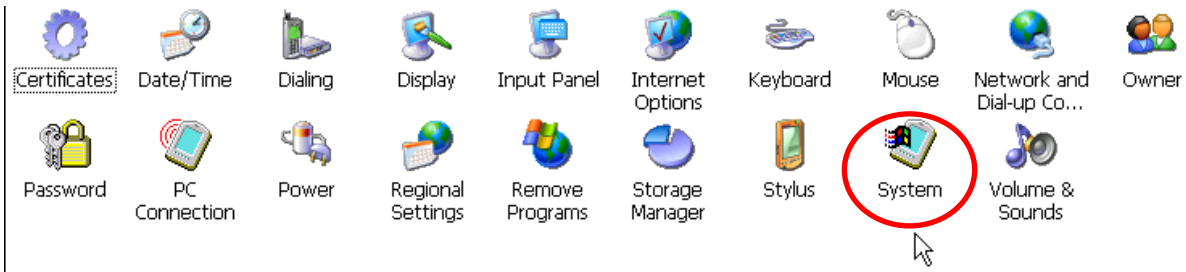

Step2: Get the CPU frequency shown in the Processor column on the General tab.

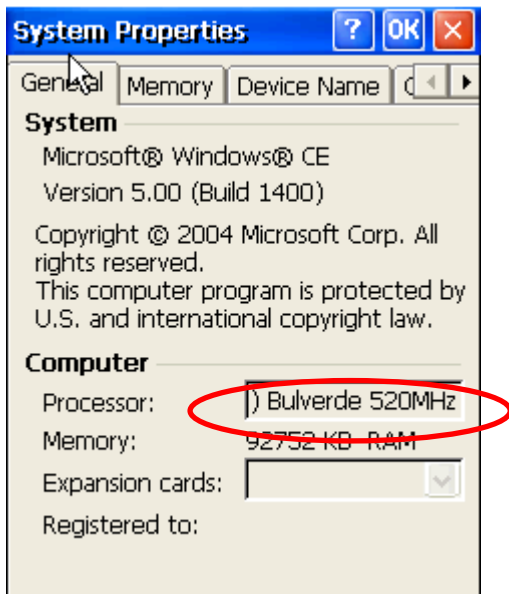

Classification	System and Application FAQ on WinCE PAC				No.	2-020-00	
Author	Tunglu-Yu	Version	1.0.0	Date	2013/05/16	Page	2/2

Revision History

Revision	Date	Description
1.0.0	2013/05/16	Initial release