

Classification	System and Application FAQ on WinCE PAC				No.	1-003-02	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	1/2

How to use printer via USB

Applies to:

<i>Platform</i>	<i>OS version</i>	<i>WinPAC/ViewPAC utility version</i>
<i>WP-8x3x</i>	<i>All versions</i>	<i>All versions</i>
<i>WP-8x4x</i>	<i>All versions</i>	<i>All versions</i>
<i>VP-25W1</i>	<i>All versions</i>	<i>All versions</i>
<i>VP-23W1</i>	<i>All versions</i>	<i>All versions</i>

Tips & Warnings




WinPAC/ViewPAC only supports HP Laser Jet Printers that support the PCL6 driver



To use a printer via USB, perform the following steps:

Step 1: On the WinPAC/ViewPAC, open a WordPad format file (*.txt, *.ini...) and click the **"File" → "Print"**. (or Ctrl + P)

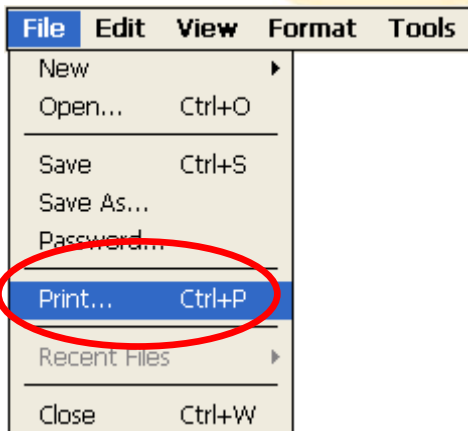

Classification	System and Application FAQ on WinCE PAC				No.	1-003-02	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	2/2

Step 2: Set up the printer as following.



Test !!!

