Classification	System and Application FAQ on WinCE PAC					No.	1-005-01
Author	Tunglu-Yu	Version	1.0.1	Date	2013/08/06	Page	1/4

How to calibrate an Egalax USB touch panel

Appli	es to:		
	Platform	OS version	WinPAC/ViewPAC utility version
	WP-8x3x/ WP-8x4x	All versions	All versions
	WP-5000	All versions	All versions
	VP-23W1/ VP-25W1	N/A	N/A
	VP-4131	N/A	N/A

N/A: Not applicable to this platform and OS.

Tips & Warnings

To use a touch panel and a keyboard at the same time on WP-8x4x, you need a USB hub to expand the single USB port into several.



Classification	System and Application FAQ on WinCE PAC					No.	1-005-01
Author	Tunglu-Yu	Version	1.0.1	Date	2013/08/06	Page	2/4

To calibrate an Egalax USB touch panel, perform the following steps:

Step 1: Execute the calibration program.

1.1. Click Start \rightarrow Programs \rightarrow USB_TOUCH \rightarrow Egalax \rightarrow TouchKit.



1.2. Click the "4 Pts Cal" button.

(Pressing "25 Pts Cal" button could process a more accurate calibration)

		OK			
TUB1:		Sound			
Draw Test	4 Pts Cal	Touch Down			
25 Pts Cal	Quit	🔵 Lift Up			
Update EEPROM From File					

Classification	System and Application FAQ on WinCE PAC					No.	1-005-01
Author	Tunglu-Yu	Version	1.0.1	Date	2013/08/06	Page	3/4

1.3. Touch the "X" icons on the monitor to perform the calibration process.



Step 2: Save and Reboot your WinPAC.

- 2.1. Start the Win PAC utility on the desktop and click the "File" \rightarrow "Save and Reboot".
- 2.2. Click the " $\ensuremath{\textbf{Yes}}$ " button and wait for reboot.



Classification	System and Application FAQ on WinCE PAC					No.	1-005-01
Author	Tunglu-Yu	Version	1.0.1	Date	2013/08/06	Page	4/4

Revision History

Revision	Date	Description
1.0.1	2013/08/06	NEW: Added support information for WP-5000 series
1.0.0	2010/02/12	Initial release