

Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	1/3

How to calibrate a Penmount serial touch panel

Applies to:


Platform	OS version	WinPAC/ViewPAC utility version
WP-8x3x	All versions	All versions
WP-8x4x	All versions	All versions
VP-25W1	N/A	N/A
VP-23W1	N/A	N/A

N/A: Not applicable to this platform and OS.


Tips & Warnings

! Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports. If COM3 is used to connect to the touch panel, you will need a "NULL MODEM".

Standard Wiring

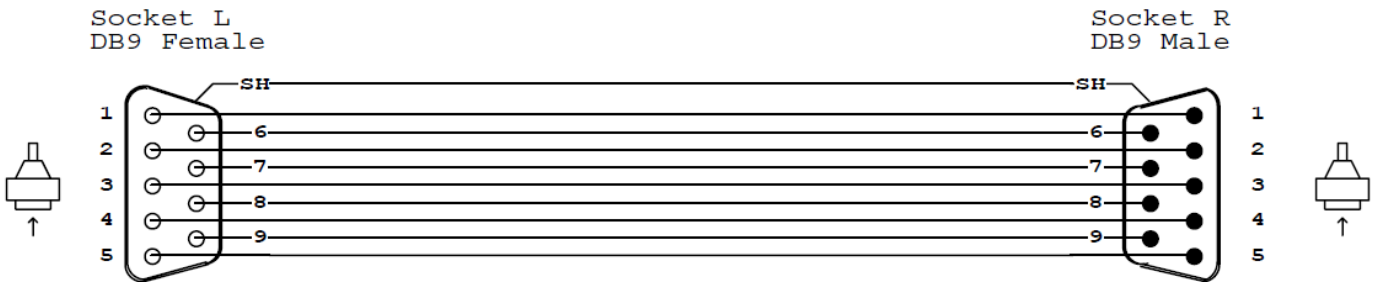


Connecting to COM1

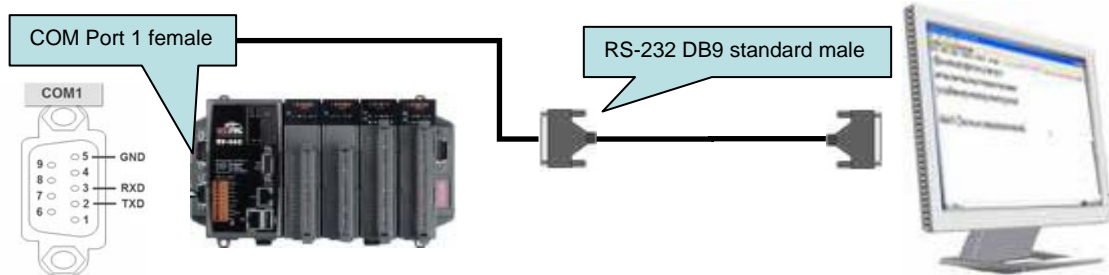


Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	2/3

Connecting to COM4

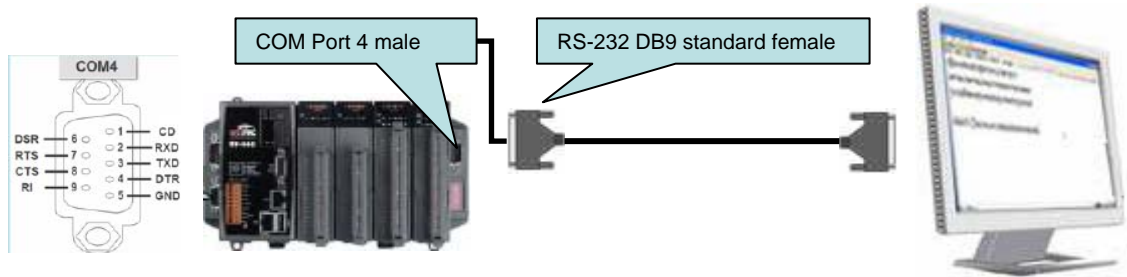


Connecting to COM3

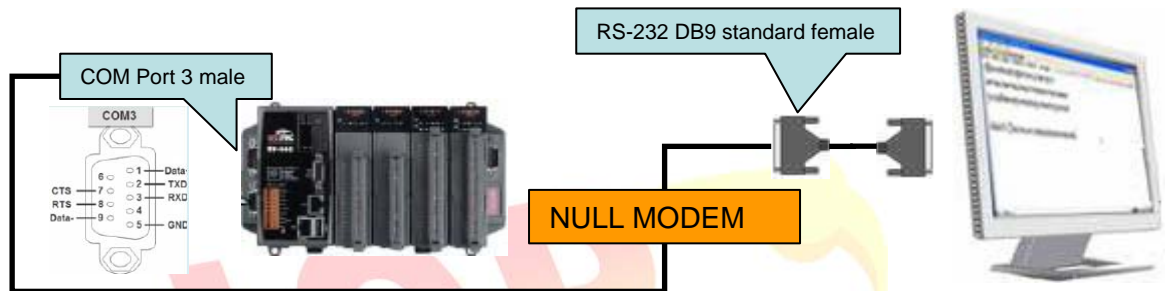

To calibrate a Penmount serial touch panel, perform the following steps:


Step 1: Execute the calibration program.

1.1. Click Start → Programs → Serial_TOUCH → Penmount → Calibration.

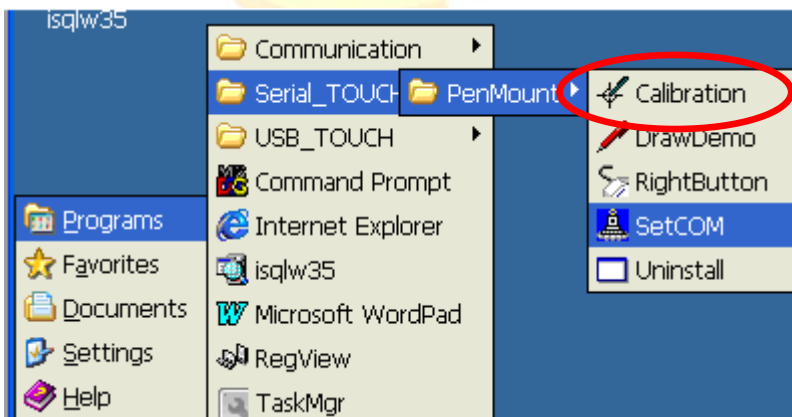

Classification	System and Application FAQ on WinCE PAC				No.	1-005-06	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	3/3

1.2. Touch the arrowhead one by one and then touch the “+” icon on the monitor till the program finish.

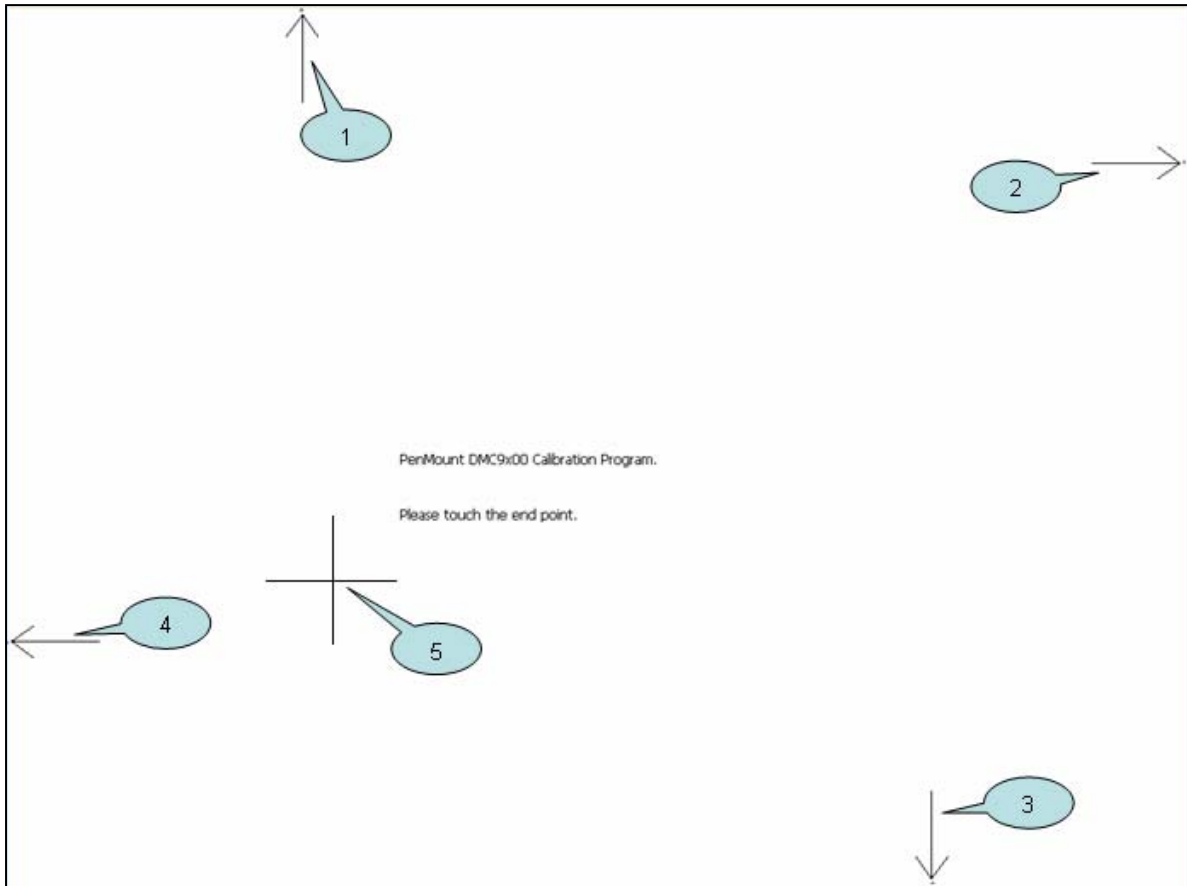

Step 2: Save the settings and reboot your WinPAC.

2.1. Start the Win PAC utility on the desktop and click the “File” → “Save and Reboot”.

2.2. Click the “Yes” button and wait for the device to reboot.

