Classification	System and Application FAQ on WinCE PAC					No.	2-021-00
Author	Tunglu-Yu	Version	1.0.0	Date	2013/05/16	Page	1/3

How to turn off the monitor automatically

Applies to:							
Platform	OS version	WinPAC/ViewPAC utility version					
WinPAC series	All versions (WinCE5)	All versions					
ViewPAC series	All versions (WinCE5)	All versions					

The PAC controller provides 3 states in power properties to manager the display output voltage for extending the life of your monitor. The states only make changes of display output voltage.

Setting Never in "Switch state to User idle" and "Switch state to System Idle" will never turn off the monitor while the PAC is powered on. In the state of User Idle, it will decrease the brightness of the monitor; and in the state of System Idle, it will turn off the monitor.

When the PAC is switched to the state of User Idle or System Idle, moving mouse or pressing the keyboard button can wake up the display (turn the monitor on).

Enable the Power Schemes

Step1: Click Start -> Settings ->Control Panel in to the control panel, double-click the icon for Power.

Power F	Properties		?	OK 🗙
Battery	Schemes	Device	Statu	JS
Power S	Scheme:			4
AC Pow	/er		~	Z.
Cusitable		w Idlau		
Switchs		er Iule;		
After 1	minute			~
Switch s	state to S <u>y</u> s	tem Idle	∋:	
After 5	minutes			~
Switch s	state to <u>S</u> us	pend:		
Never				~
-				

Step2: Select AC Power in Power Scheme

Step3: Select the switching condition in "Switch state to User Idle" and "Switch state to System Idle"

Step4: Run WinPAC utility (ViewPAC Utility), click "File" -> "Save and Reboot" to save the settings.

Note: The default value for system Idle is 5 minutes

ICP DAS Co., Ltd. Technical document

Classification	System and Application FAQ on WinCE PAC					No.	2-021-00
Author	Tunglu-Yu	Version	1.0.0	Date	2013/05/16	Page	2/3

Disable the Power Schemes

With this setting, the system will never turn off the monitor while the PAC is powered on.

Step1: Click Start -> Settings -> Control Panel, and then double-click the icon for Power.

Step2: Select AC Power in Power Scheme on the Schemes tab.

Step3: Set Never in "Switch state to System Idle" and "Switch state to User Idle".

Step4: Run WinPAC Utility (ViewPAC Utility) and click "File" -> "Save and Reboot".

Power Properties	🥐 ОК 🔀
Battery Schemes De	evice Status
Power Scheme:	
AC Power	💌 🎺
Switch state to Liser I	dle:
Never	vie:
, Switch state to System	n Idle:
Never	Tricle.
Switch state to Suspe	nd:
Jivever	M

Classification	System and Ap	plication F	AQ on WinCE	PAC		No.	2-021-00
Author	Tunglu-Yu	Version	1.0.0	Date	2013/05/16	Page	3/3
Devision Llie	1 o m 1						
Revision His	tory						
Revision	Date	Descri	ption				
1.0.0	2013/05/16	Initial re	elease				

ICP DAS Co., Ltd. Technical document