


Classification	System and Application FAQ on WinCE PAC				No.	1-005-03	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	1/3


How to calibrate a Penmount USB touch panel

Applies to:

Platform	OS Version	PAC Utility Version
WinPAC	All Versions	All Versions

Tips & Warnings

 To use a touch panel and a keyboard at the same time on WP-8x4x, you need a USB hub to expand the single USB port into several.



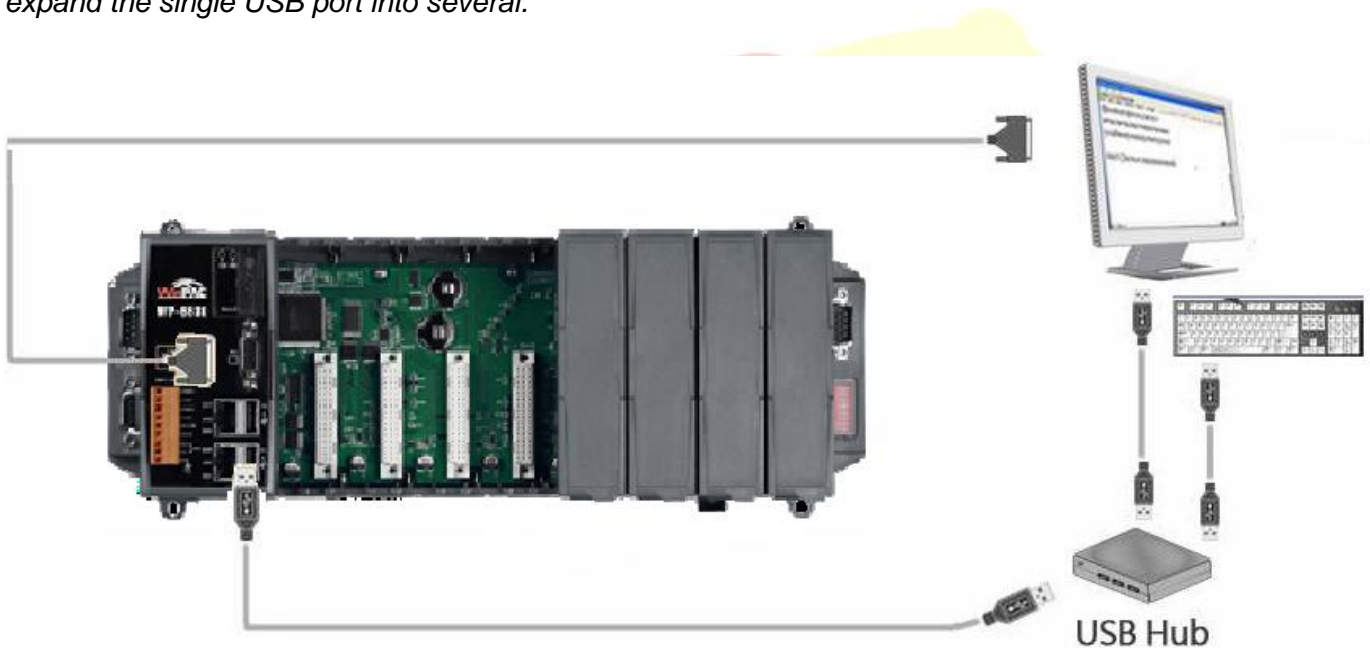


To calibrate a Penmount USB touch panel, perform the following steps:

Step 1: Execute the calibration program.

1.1. Click My Device → System_Disk → Drivers → USB_TOUCH → PenMount → LNK → Calibration.

  Address \System_Disk\Drivers\USB_TOUCH\PenMount\LNK

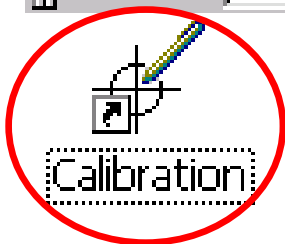

Calibration

DrawDemo


RightButton

Uninstall


Classification	System and Application FAQ on WinCE PAC				No.	1-005-03	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	2/3

1.2. Click the “4 Points” button.

(Pressing the “9 Points” or “16 Points” button could process a more accurate calibration)

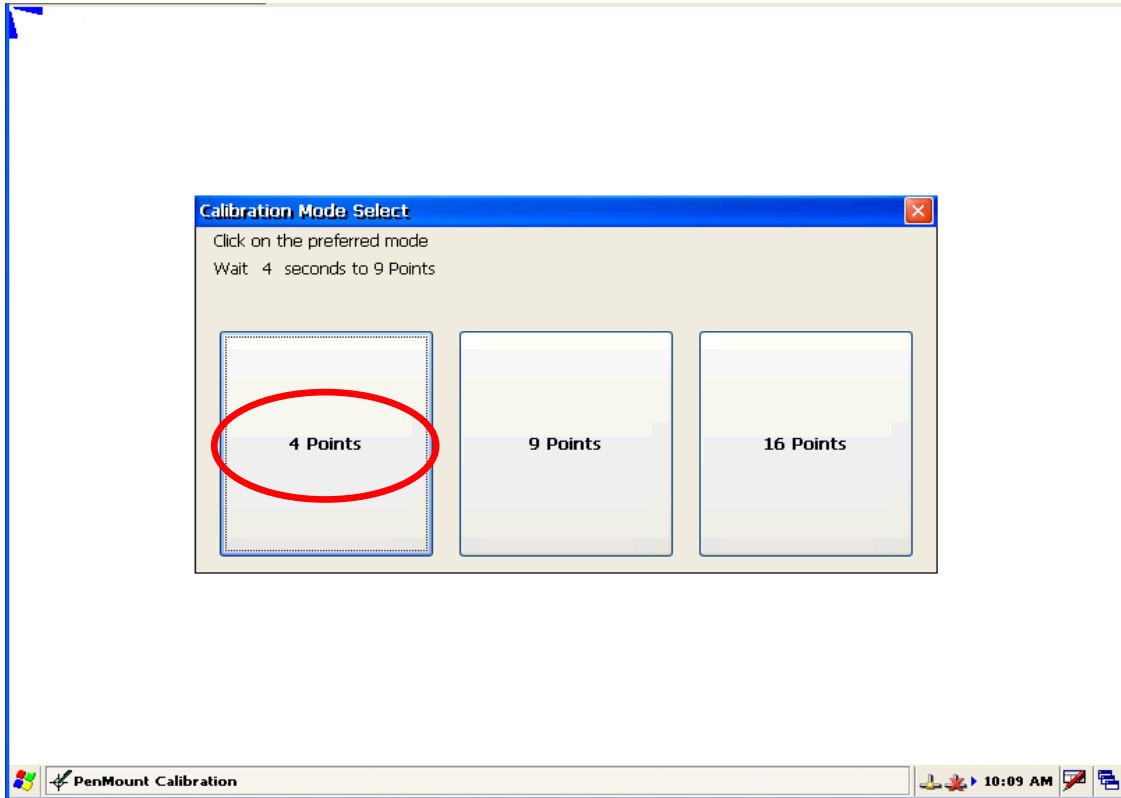


1.3. Touch the “” icons on the monitor to perform the calibration process.

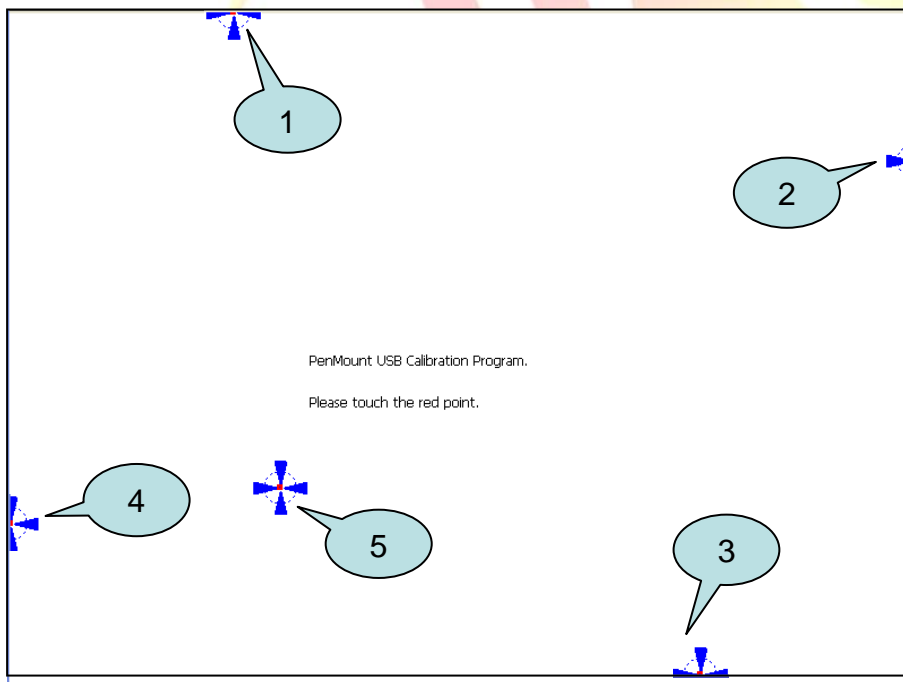

Classification	System and Application FAQ on WinCE PAC				No.	1-005-03	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	3/3

Step 2: Reboot your WinPAC.

- 2.1. Start the PAC utility and click the **“File”** → **“Reboot”** menu option.
- 2.2. Click the **“Yes”** button and wait for reboot.

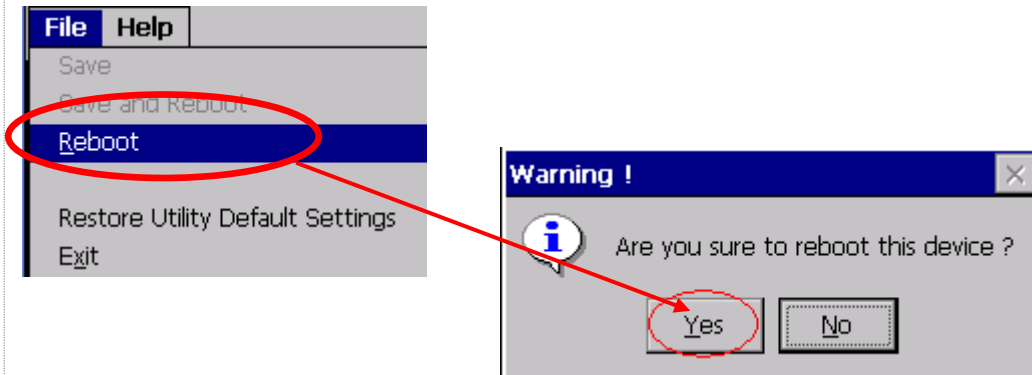

ICP
DAS