Classification	WinPAC Develop	oment F	AQ			No.	5-013-00
Author	Tunglu-Yu	/ersion	1.0.0	Date	2018/03/23	Page	1/3
如何使用自動撥接GPRS網路與斷線自動重撥							
Applies to:							
平台		OS 版		<u> </u>	VinPAC/ViewP	PAC utility 版	τ <i>φ</i>
WP-9x2x	х Х	門有成	《平首週用	1	Yu uuuuy 汉有江	门り卅勝	
WP-523	x	-					
VP-2242 VP-x231	<u>x</u>						
VP-x201							
Auto Dialan 🚟		日日本体人	/ ウチレジトオのの /				00/10%时间在
AutoDialer,可」 發生斷線時,自	以讓使用者設定 動重新撥接上網	,	全目動搬接3G/	4G網路 乍	各, 建	路。业仕,	3G/4G網路
注: 安裝 SIM 卡	前,請先將 Pin 碼	馬鎖定 SI	M卡的功能取	消 , 不	然會無法撥接」	上網	
Step 1: 在 <u>\\syst</u>	tem_disk\tools\A	utoDial	er資料夾中,	執行Au	toDialer.exe		
<u>File Edit Viev</u>	w <u>G</u> o F <u>a</u> vorites						
Address \System_	_Disk\Tools\AutoDialer	_					
	*						
(AutoDialer) Pow	er3G Power3GNet						
\sim							
Step 2: 輸入資料	et 🔰						
(1) Connection	: 3G/4 <mark>G</mark> 網絡連約	泉名稱, ゼ	在"Start->Set	tings->	Network and	Dialup Con	inections"
注: 3G/4G 網絡 FAQ: w2-026-1	設正力式,請參 ⁵ How to conne	亏 ct with	the mobile r	networl	k tc.pdf		
http://ftp.icpdas	.com/pub/cd/win	pac an	1335x/wp-523	1/docu	ment/faq/syste	em mainte	nance/
File Edit view Advanced X 🗃 🖭							
Connection Connection							
AutoDialer V1.00 for WEC 7							
Connection: My Connection Dial up							
Username: guest Hang up Save Config							
Passworu: guest							
Fail Limit: 10							
Ping interval: 5 S							
Status:							
ICP DAS Co., Ltd. Technical document							

Classification	WinPAC Development FAQ					No.	5-013-00
Author	Tunglu-Yu	Version	1.0.0	Date	2018/03/23	Page	2/3

(2) Username: 3G/4G 撥接網路,使用者名稱,通常你可以從你的 3G/4G 服務提供商得到它。例如:如果你的 3G/4G 服務提供商中華電信在台灣,請輸入 guest

(3) Password3G/4G:撥接網路,使用者密碼,通常你可以從你的 3G/4G 網絡服務提供者得到它。 例如:如果你的 3G/4G 服務提供商中華電信在台灣,請輸入 guest

(4) Ping IP: 連接到互聯網後,它會定期 ping 此 IP->預設為 211.76.107.27(www.google.com)

(5) Fail Limit: 如果 ping IP 失敗次數超過該值,認定為網路斷線,會自動重撥 3G/4G 網路連接。

(6) Ping interval: 每次 Ping IP 的間隔時間(單位為秒)。

(7) Statu: 連接狀態說明。

Step 3: 點擊"Save Config"按鈕,儲存設定值。

AutoDialer V1.	00 for WEC 7	_ ×	
Connection:	My Connection	Dial un	
Username:	quest	Hang up	
Password:	quest	Save Config	
Ping IP:	211.76.107.24		
Fail Limit:		🗌 no PW	
Ping interval:	5 A S		
Status:			
_			

Step 4: 點擊"Dial up"按鈕,連接 3G/4G 網路,撥號成功後,會出現 Ping IP 成功訊息。 注: 點擊 Hang up,中斷 3G/4G 網路連線

Connection: My Connectio	n	Dial up	
Username: guest		Hanq up	
Password: guest		Save Config	
Ping IP: 211.76.107.2	1		
Fail Limit: 10	▲ ▼		
Ping interval: 5	∳ s		
Status: Ping 211.76.107.24	success at 2	2016/06/26	

Classification	WinPAC Deve	elopment F	AQ			No.	5-013-00
Author	Tunglu-Yu	Version	1.0.0	Date	2018/03/23	Page	3/3
Step 5: 執行桌面上的PAC_utility,設定開機自動執行AutoDialer.exe							
My Device taskm	PAC Utility File Help	[1.2.1.6]					_ 🗆 ×
	General D	isplay 🛛 IP Con	fig Network Dev	rice Informa	ation Auto Execut	tion Rotary	Execution Sy
	ility	_	Program 1: 🌈	ystem_Disk	<\Tools\AutoDialer1	AutoDialer.e	exe Browse
Explorer			Program 2:				Browse
*		3	Program 3:				Browse
Microsoπ WordPad		-	Program 4:				Browse
,	At most can be	: 10 programs specified to	Program 5:				Browse
My Documents	execute at syste	automatically m startup.	, Program 6:				Browse
18	,		Program 7:				Browse
dcon_utilit			Program 9:				Browse
Y _{ce}			Program10:				Browse
vcep				Clean			Anniv
ri i				Cicari			
Stan Gi信力手即	1 ¹ 燃化,合白垂		10 2000		X		
Step 0.母八里田	100位,昌日到	理按 30/	+0 和可止合				
AutoDialer V1.00	for WEC 7		_ ×				
Connection: M	y Connection		Dial up				
Username: gu	Jest		ang up				
Password: gu	Jest	Sav	/e Config				
Ping IP: 21	11.76.107.24	Ξ_					
Fail Limit: 10)	n	PW				
Ping interval: 5	A	s					
Status: Ping 211	L.76,107.24 succe	ss at 2016/0	6/26				
18							
dcon_utilit							
V							
vcep							
		ICP DAS	Co., Ltd. Tech	nnical do	cument		