

Classification	System and Application FAQ on WinCE PAC				No.	1-005-05	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	1/3

How to calibrate an ELO serial touch panel


Applies to:

Platform	OS Version	PAC Utility Version
WinPAC	All Versions	All Versions


Tips & Warnings

⚠ Serial COM Ports 1 and 4 on WP-8000 are standard female/male RS-232 COM Ports. If COM3 is used to connect to the touch panel, you will need a "NULL MODEM".


Standard Wiring

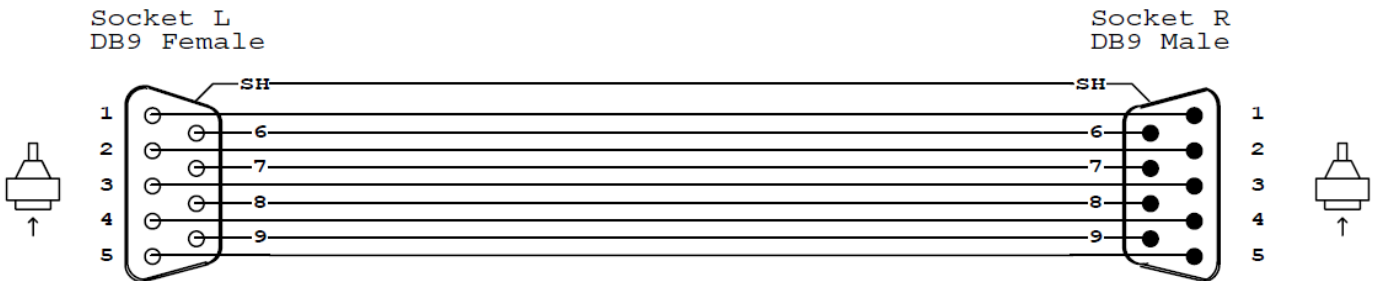

Connecting to COM1

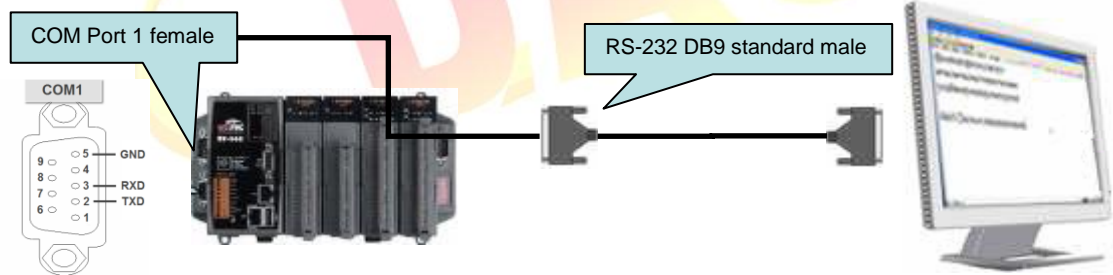


Connecting to COM4

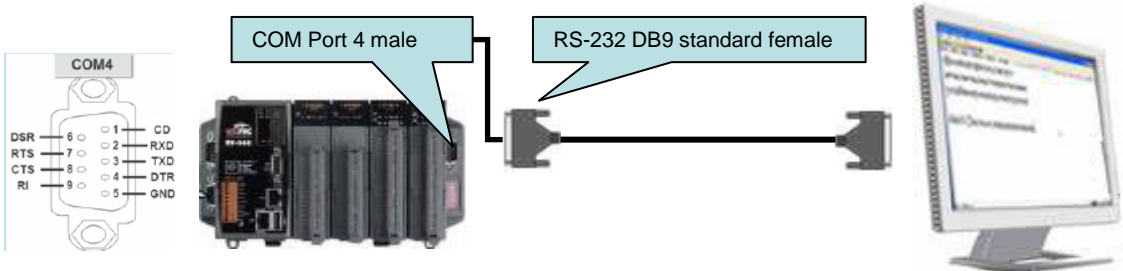

Classification	System and Application FAQ on WinCE PAC				No.	1-005-05	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	2/3

Connecting to COM3

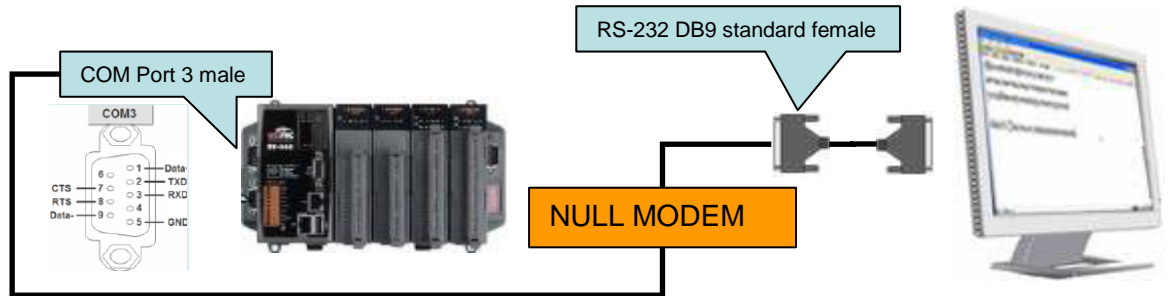


To calibrate an ELO serial touch panel, perform the following steps:

Step 1: Execute the calibration program.


1.1. Click the My Device → System_Disk → Drivers → Serial_TOUCH → ELO → LNK → Serial_EloVa.



1.2. Touch the “+” icons on the monitor one by one to perform the calibration process.

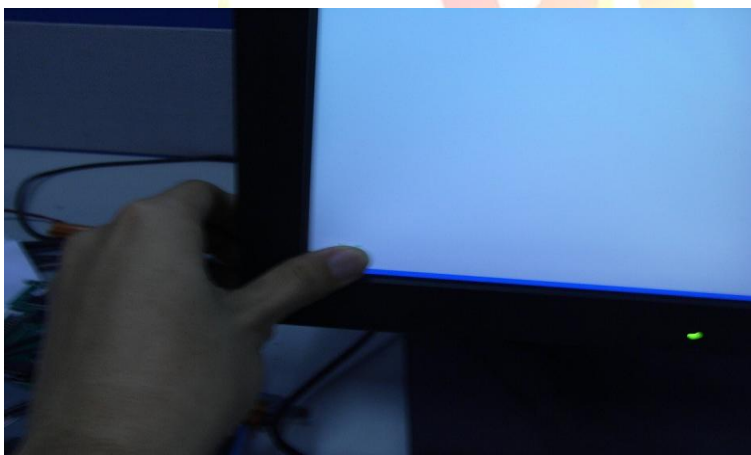

Classification	System and Application FAQ on WinCE PAC				No.	1-005-05	
Author	Eric_Shiu	Version	1.0.0	Date	2018/4/27	Page	3/3

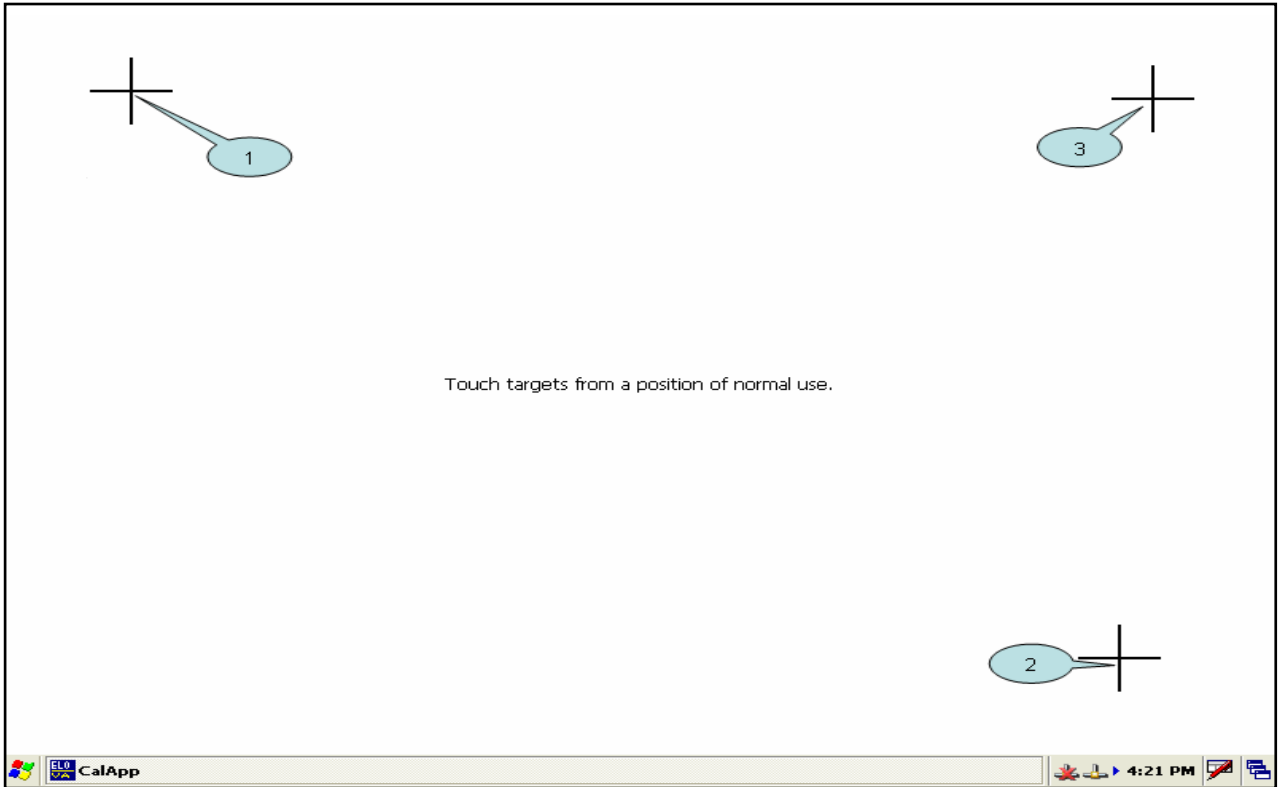

Step 2: Reboot your WinPAC.

- 2.1. Start the PAC utility and click the “File” → “Reboot” menu option.
- 2.2. Click the “Yes” button and wait for reboot.

