



XP-8000-CE6 Series User Manual (for WinCE 6.0 Based XPAC)

V1.0.0, October 2016



XP-8x31-CE6/XP-8x41-CE6/XP-8x41-Atom-CE6

Written by Sean Hsu

Edited by Anna Huang

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, beginning from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2016 by ICP DAS Co., Ltd. All rights are reserved.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Contact US

If you have any problem, please feel free to contact us.

You can count on us for quick response.

Email: service@icpdas.com

Contents

| | |
|---|-----------|
| 1. INTRODUCTION | 6 |
| 1.1. Features..... | 7 |
| 1.2. Specifications | 9 |
| 1.2.1. XP-8x31-CE6 | 9 |
| 1.2.2. XP-8x41-CE6 | 11 |
| 1.2.3. XP-8x41-Atom-CE6 | 13 |
| 1.3. Overview | 15 |
| 1.4. Dimensions..... | 23 |
| 1.5. Companion CD..... | 26 |
| 2. GETTING STARTED..... | 27 |
| 2.1. Mounting the XP-8000-CE6..... | 28 |
| 2.2. Deploying a Basic XP-8000-CE6 System | 31 |
| 2.3. Inserting the I/O Modules..... | 33 |
| 2.4. Configuring the Boot Mode..... | 35 |
| 2.5. Changing the User Interface Language | 37 |
| 2.6. Using XPAC Utility to Manage the XP-8000..... | 39 |
| 2.7. Using DCON Utility Pro Configure I/O Modules | 40 |
| 3. TOOLS AND TASKS..... | 43 |
| 3.1. XPAC Utility..... | 44 |
| 3.1.1. Menu Bar – File..... | 45 |
| 3.1.2. Menu Bar – Help..... | 46 |
| 3.1.3. Property Tab - General..... | 47 |
| 3.1.4. Property Tab – General2..... | 49 |
| 3.1.5. Property Tab – Display | 50 |
| 3.1.6. Property Tab – IP Config | 51 |
| 3.1.7. Property Tab – Network..... | 52 |
| 3.1.8. Property Tab – Device Information..... | 55 |
| 3.1.9. Property Tab – Auto Execution | 56 |
| 3.1.10. Property Tab – Rotary Execution | 57 |
| 3.1.11. Property Tab – Multi-IO Modules | 58 |
| 3.2. DCON Utility Pro..... | 59 |
| 3.3. TaskMgr..... | 60 |
| 3.4. VCEP | 61 |
| 3.5. Remote_Display | 62 |
| 3.6. SendToCOM..... | 63 |

| | | |
|-----------|---|------------|
| 3.7. | RegEdit | 64 |
| 3.8. | ISQLW35 | 65 |
| 3.9. | INotepad..... | 66 |
| 4. | YOUR FIRST XP-8000-CE6 PROGRAM | 67 |
| 4.1. | Setting up the Development Environment..... | 67 |
| 4.1.1. | Preparing the Development Tools | 68 |
| 4.1.2. | Installing the XP-8000-CE6 SDK | 69 |
| 4.2. | First XP-8000-CE6 Program in VB.NET..... | 70 |
| 4.2.1. | Create a new project | 71 |
| 4.2.2. | Specify the path of the PAC reference..... | 74 |
| 4.2.3. | Add the control to the form | 76 |
| 4.2.4. | Add the event handling for the control..... | 78 |
| 4.2.5. | Upload the application to XP-8000-CE6 | 79 |
| 4.2.6. | Execute the application on XP-8000-CE6 | 81 |
| 4.3. | First XP-8000-CE6 Program in Visual C#..... | 82 |
| 4.3.1. | Create a new project | 83 |
| 4.3.2. | Specify the path of the PAC reference..... | 86 |
| 4.3.3. | Add the control to the form | 88 |
| 4.3.4. | Add the event handling for the control..... | 90 |
| 4.3.5. | Upload the application to XP-8000-CE6 | 91 |
| 4.3.6. | Execute the application on XP-8000-CE6 | 93 |
| 4.4. | First XP-8000-CE6 Program in Visual C++ | 94 |
| 4.4.1. | Create a new project | 95 |
| 4.4.2. | Configure the Platform | 100 |
| 4.4.3. | Specify the Libraries of the PAC SDK..... | 101 |
| 4.4.4. | Add the control to the form | 103 |
| 4.4.5. | Add the event handling for the control..... | 106 |
| 4.4.6. | Upload the application to XP-8000-CE6 | 108 |
| 4.4.7. | Execute the application on XP-8000-CE6 | 110 |
| 5. | I/O EXPANSION MODULES AND SDKS SELECTION | 111 |
| 6. | APIS AND DEMO REFERENCES | 116 |
| 6.1. | PAC Standard APIs for System Operation..... | 117 |
| 6.1.1. | VB.NET Demos for PAC Standard APIs..... | 118 |
| 6.1.2. | C# Demos for PAC Standard APIs..... | 119 |
| 6.1.3. | Visual C++ Demos for PAC Standard APIs | 120 |
| 6.2. | PAC Standard APIs for PAC Expansion I/O | 121 |
| 6.2.1. | VB.NET Demos for PAC Expansion I/O..... | 122 |
| 6.2.2. | C# Demos for PAC Expansion I/O..... | 124 |

| | | |
|---------------------------|---|------------|
| 6.2.3. | Visual C++ Demos for PAC Expansion I/O | 126 |
| 7. | RECOVERY AND RESTORE | 128 |
| 7.1. | XP-8000-CE6 Recovery | 129 |
| 7.1.1. | Recovering the XP-8x31-CE6 | 130 |
| 7.1.2. | Recovering the XP-8x41-CE6 | 134 |
| 7.1.3. | Recovering the XP-8x41-Atom-CE6 | 138 |
| 7.2. | Restore the Rescue CF Card | 142 |
| 8. | XP-8000-CE6 UPDATES | 146 |
| 8.1. | OS Updates..... | 147 |
| 8.2. | SDK Updates..... | 149 |
| 8.2.1. | SDK Updates for VB.NET or C# | 149 |
| 8.2.2. | SDK Updates for VB.NET or Visual C++ | 151 |
| 9. | XP-8000-CE6 DOWNLOAD CENTER | 153 |
| TIPS – HOW TO..... | | 154 |
| A. | How to Use the Printer | 155 |
| A.1. | How to Use a Network Printer..... | 156 |
| A.2. | How to Use a USB printer | 158 |
| B. | How to Online Debug the XP-8000-CE6 Program..... | 159 |
| C. | How to Automatically Synchronize XP-8000-CE6 Clock with an Internet Time Server | 165 |
| D. | How to Control the User Account Control in XP-8000-CE6 | 167 |
| D.1. | How to Create a User Account..... | 168 |
| D.2. | How to Telnet to Remote Login the XP-8000-CE6 from PC..... | 170 |
| D.3. | How to Remove a User Account from the Login List | 172 |
| E. | How to change COM4 as RS-232/RS-485 | 174 |
| F. | Revision History | 175 |

1. Introduction

This chapter provides an overview of the XP-8000-CE6 series and its components, and introduces the fundamental concepts for user familiar with the XP-8000-CE6.

XP-8000-CE6 series PACs, the new generation Windows Embedded Compact 6.0 based XPACs, consists of the following models:

- XP-8x31-CE6: XP-8131-CE6, XP-8331-CE6, and XP-8731-CE6
- XP-8x41-CE6: XP-8041-CE6, XP-8341-CE6, and XP-8741-CE6
- XP-8x41-Atom-CE6: XP-8141-Atom-CE6, XP-8341-Atom-CE6, and XP-8741-Atom-CE6



XP-8000-CE6 Series is the new generation Windows CE 6.0 based PACs of ICP DAS. It is equipped with with a variety of CPU options (AMD LX800, 500 MHz/Intel Atom Z510, 1.1 GHz/R3600), various connectivity (VGA, USB, Ethernet, RS-232/485) and 0/1/3/7 I/O slot(s) for high performance parallel I/O modules (high profile I-8K Series) and serial I/O modules (high profile I-87K series). The benefits of running Windows CE 6.0 on XPAC include hard real-time capability, small core size, fast boot speed, interrupt handling at a deeper level and achievable deterministic control. XPAC is also capable of running PC-based control software such as Visual Basic .NET, Visual C#,..... etc. It has all of the best features of both traditional PLCs and Windows capable PCs.

1.1. Features

The XP-8000-CE6 offers the most comprehensive configuration to meet specific application requirements. The following list shows the hardware and software features designed to simplify installation, configuration and application.

Hardware Features

- Powerful CPU module:

| XP-8x31-CE6 | XP-8x41-CE6 | XP-8x41-Atom-CE6 |
|-------------------------------|---------------------------------------|----------------------------------|
| x86 CPU (1 GHz), dual core | AMD LX800 CPU (32-bit and 500 MHz) | Intel Atom Z510 CPU (1.1 GHz) |

- Rich Memories:

| | XP-8x31-CE6 | XP-8x41-CE6 | XP-8x41-Atom-CE6 |
|-----------------------------|-----------------------------------|-------------|------------------|
| System Memory | 2GB DDR3 | 512 MB | 512 MB DDR2 |
| Built-in Flash Disk | 32 GB | 4 GB | 8 GB |
| EEPROM | 16 KB | | |
| Dual Battery-Backup SRAM | 512 KB | | |
| CF card | one CF card (support up to 32 GB) | | |

- VGA Port x 1, USB 2.0 port x 2/4, Series port (RS-232/RS-485) x 4/5
- 64-bit Hardware Serial Number
- Dual Watchdog Timers
- Dual Ethernet Ports (10 M/100 M/1000 M)
- Redundant Power Input
- Operating Temperature: -25 to +75 °C

Software Features

- Windows Compact Edition 6.0
- ASP
- SQL Compact Edition 3.5
- .NET Compact Framework 3.5
- Remote Display
- Built-in OPC Server (Quicker)
- Rich Software Solution – SDK for Microsoft Visual Studio 2005/2008

1.2. Specifications

The table below summarizes the specifications of the XP-8000-CE6.

1.2.1. XP-8x31-CE6

| Models | XP-8131-CE6 | XP-8331-CE6 | XP-8731-CE6 |
|--------------------------------------|--|-------------|-------------|
| OS | | | |
| OS | Windows CE 6.0 | | |
| .Net Compact Framework | 3.5 | | |
| Embedded Service | FTP Server, ASP (Java Script, VB Script), SQL Compact Edition 3.5 | | |
| SDK Provided | DII for Visual Studio .Net 2005/2008 | | |
| Multilanguage Support | English, German, French, Spanish, Russian, Italian, Czech, Japanese, Korean, Simplified Chinese, Traditional Chinese | | |
| CPU Module | | | |
| CPU | x86 CPU, 1 GHz, dual-core | | |
| SDRAM | 2 GB DDR3 | | |
| Dual Battery Backup SRAM | 512 KB; data valid up to 5 years | | |
| Flash | 32 GB | | |
| EEPROM | 16 KB | | |
| CF Card | CF slot with one CF card (support up to 32 GB) | | |
| RTC (Real Time Clock) | Provide second, minute, hour, date, day of week, month, year | | |
| 64-bit Hardware Serial Number | Yes, for software copy protection | | |
| Dual Watchdog Timers | Yes (0.8 second) | | |
| Rotary Switch | Yes (0 to 9) | | |
| DIP Switch | Yes (8 bits) | | |
| Programmable LED Indicator | 2 (L1 and L2) | | |
| VGA & Communication Ports | | | |
| VGA Resolution | 1024 x 768, 800 x 600 , 640 x 480 | | |
| Dual Ethernet Port | RJ-45 x 2, 10/100/1000 Base-T (Auto-negotiating, Auto MDI/MDI-X, LED indicators) | | |
| USB 2.0 | 4 | | |

| | | | |
|----------------------------------|---|-----------------|-----------------|
| COM 1 | Internal communication with high profile I-87K series modules in slots | | |
| COM 2 | RS-232 (RxD, TxD and GND); non-isolated | | |
| COM 3 | RS-485 (Data+, Data-) with internal self-tuner ASIC; 3000 V _{DC} isolated | | |
| COM 4 | RS-232/RS-485 (RxD, TxD, CTS, RTS and GND for RS-232, Data+ and Data- for RS-485); non-isolated | | |
| COM 5 | RS-232 (RxD, TxD, CTS, RTS, DSR, DTR, CD, RI and GND); non-isolated | | |
| Audio | Microphone-in and Earphone-out | | |
| I/O Expansion Slots | | | |
| Number of I/O slots | 1 | 3 | 7 |
| Supported I/O modules | I-8K and I-87K series I/O Modules | | |
| Mechanical | | | |
| Dimensions (W x L x H), unit: mm | 169 x 132 x 125 | 231 x 132 x 125 | 355 x 132 x 125 |
| Installation | DIN-Rail or Wall Mounting | | |
| Environmental | | | |
| Operating Temperature | -25 °C to +75 °C | | |
| Storage Temperature | -30 °C to + 80 °C | | |
| Ambient Relative Humidity | 10 % to 90 % RH (non-condensing) | | |
| Power | | | |
| Input Range | +10 V _{DC} to +30 V _{DC} | | |
| Redundant Power Inputs | Yes, with one power relay (1 A @ 24 V _{DC}) for alarm | | |
| Isolation | 1 kV | | |
| Capacity | 25 W | 35 W | |
| Consumption | 16.6 W | 16.8 W | 18 W |

1.2.2. XP-8x41-CE6

| Models | XP-8041-CE6 | XP-8341-CE6 | XP-8741-CE6 |
|--------------------------------------|--|--|-------------|
| OS | | | |
| OS | Windows CE 6.0 R3 Core | | |
| .Net Compact Framework | 3.5 | | |
| Embedded Service | FTP Server, ASP (Java Script, VB Script), SQL Compact Edition 3.5 | | |
| SDK Provided | DII for Visual Studio .Net 2005/2008 | | |
| Multilanguage Support | English, German, French, Spanish, Russian, Italian, Czech, Japanese, Korean, Simplified Chinese, Traditional Chinese | | |
| CPU Module | | | |
| CPU | AMD LX800 CPU, 500 MHz | | |
| SDRAM | 512 MB DDR | | |
| Dual Battery Backup SRAM | 512 KB; data valid up to 5 years | | |
| Flash | 4 GB as IDE Master | | |
| EEPROM | 16 KB | | |
| CF Card | CF slot with one CF card (support up to 32 GB) | | |
| RTC (Real Time Clock) | Provide second, minute, hour, date, day of week, month, year | | |
| 64-bit Hardware Serial Number | Yes, for software copy protection | | |
| Dual Watchdog Timers | Yes (0.8 second) | | |
| Programmable LED Indicator | 2 (L1 and L2) | | |
| Rotary Switch | Yes (0 to 9) | | |
| DIP Switch | - | Yes (8 bits) | |
| VGA & Communication Ports | | | |
| VGA Resolution | 1024 x 768, 800 x 600 , 640 x 480 | | |
| Dual Ethernet Port | RJ-45 x 2, 10/100 Base-T (Auto-negotiating, Auto MDI/MDI-X, LED indicators) | | |
| USB 2.0 | 2 | | |
| COM 1 | RS-232 (RxD, TxD and GND); non-isolated | Internal communication with the high profile I-87K series modules in slots | |
| COM 2 | RS-232 (RxD, TxD and GND); non-isolated | | |
| COM 3 | RS-485 (Data+, Data-) with internal self-tuner ASIC; 3000 V _{DC} isolated | | |

| | | | |
|----------------------------------|---|---|---|
| COM 4 | RS-232/RS-485 (RxD, TxD, CTS, RTS and GND for RS-232, Data+ and Data- for RS-485); non-isolated | | |
| COM 5 | RS-232 (RxD, TxD, CTS, RTS, DSR, DTR, CD, RI and GND); non-isolated | | |
| I/O Expansion Slots | | | |
| Number of I/O slots | 0 | 3 | 7 |
| Supported I/O modules | I-8K and I-87K series I/O Modules | | |
| Mechanical | | | |
| Dimensions (W x L x H), unit: mm | 137 x 132 x 125 | 231 x 132 x 125 | 355 x 132 x 125 |
| Installation | DIN-Rail or Wall Mounting | | |
| Environmental | | | |
| Operating Temperature | -25 °C to +75 °C | | |
| Storage Temperature | -30 °C to + 80 °C | | |
| Ambient Relative Humidity | 10 % to 90 % RH (non-condensing) | | |
| Power | | | |
| Input Range | +10 V _{DC} to +30 V _{DC} | | |
| Redundant Power Inputs | Yes, with one power relay (1 A @ 24 V _{DC}) for alarm | | |
| Isolation | 1 kV | | |
| Capacity | 1.8 A, 5 V supply to CPU and backplane, 15 W in total | 1.8 A, 5 V supply to CPU and backplane, 5.2 A, 5 V supply to I/O expansion slots, 35 W in total | 2.0 A, 5 V supply to CPU and backplane, 5.0 A, 5 V supply to I/O expansion slots, 35 W in total |
| Consumption | 14.4 W (0.6 A @ 24 VDC) | | 16.8 W (0.7 A @ 24 VDC) |

1.2.3. XP-8x41-Atom-CE6


| Models | XP-8141-Atom-CE6 | XP-8341-Atom-CE6 | XP-8741-Atom-CE6 |
|--------------------------------------|--|------------------|------------------|
| OS | Windows CE 6.0 | | |
| .Net Compact Framework | 3.5 | | |
| Embedded Service | FTP Server, ASP (Java Script, VB Script), SQL Compact Edition 3.5 | | |
| SDK Provided | DII for Visual Studio .Net 2005/2008 | | |
| Multilanguage Support | English, German, French, Spanish, Russian, Italian, Czech, Japanese, Korean, Simplified Chinese, Traditional Chinese | | |
| CPU Module | | | |
| CPU | Intel Atom Z510 CPU, 1.1 GHz | | |
| SDRAM | 512 MB DDR2 | | |
| Dual Battery Backup SRAM | 512 KB; data valid up to 5 years | | |
| Flash | 8 GB as IDE Master | | |
| EEPROM | 16 KB | | |
| CF Card | CF slot with one CF card (support up to 32 GB) | | |
| RTC (Real Time Clock) | Provide second, minute, hour, date, day of week, month, year | | |
| 64-bit Hardware Serial Number | Yes, for software copy protection | | |
| Dual Watchdog Timers | Yes (0.8 second) | | |
| Rotary Switch | Yes (0 to 9) | | |
| DIP Switch | Yes (8 bits) | | |
| Programmable LED Indicator | 2 (L1 and L2) | | |
| VGA & Communication Ports | | | |
| VGA Resolution | 1024 x 768, 800 x 600 , 640 x 480 | | |
| Dual Ethernet Port | RJ-45 x 2, 10/100/1000 Base-T (Auto-negotiating, Auto MDI/MDI-X, LED indicators) | | |
| USB 2.0 | 4 | | |
| COM 1 | Internal communication with high profile I-87K series modules in slots | | |
| COM 2 | RS-232 (RxD, TxD and GND); non-isolated | | |
| COM 3 | RS-485 (Data+, Data-) with internal self-tuner ASIC; 3000 V _{DC} isolated | | |
| COM 4 | RS-232/RS-485 (RxD, TxD, CTS, RTS and GND for RS-232, Data+ and Data- for RS-485); non-isolated | | |

| | | | |
|-------------------------------------|---|-----------------|-----------------|
| COM 5 | RS-232 (RxD, TxD, CTS, RTS, DSR, DTR, CD, RI and GND); non-isolated | | |
| Audio | Microphone-in and Earphone-out | | |
| I/O Expansion Slots | | | |
| Number of I/O slots | 1 | 3 | 7 |
| Supported I/O modules | I-8K and I-87K series I/O Modules | | |
| Mechanical | | | |
| Dimensions (W x L x H), unit: mm | 169 x 132 x 125 | 231 x 132 x 125 | 355 x 132 x 125 |
| Installation | DIN-Rail or Wall Mounting | | |
| Environmental | | | |
| Operating Temperature | -25 °C to +75 °C | | |
| Storage Temperature | -30 °C to + 80 °C | | |
| Ambient Relative Humidity | 10 % to 90 % RH (non-condensing) | | |
| Power | | | |
| Input Range | +10 V _{DC} to +30 V _{DC} | | |
| Redundant Power Inputs | Yes, with one power relay (1 A @ 24 V _{DC}) for alarm | | |
| Isolation | 1 kV | | |
| Capacity | 25 W | 35 W | |
| Consumption | 16.6 W | 16.8 W | 18 W |


1.3. Overview

The XP-8000-CE6 is equipped with several interfaces and peripherals that can be integrated with external systems. Here is an overview of the components and its descriptions.


XP-8041-CE6

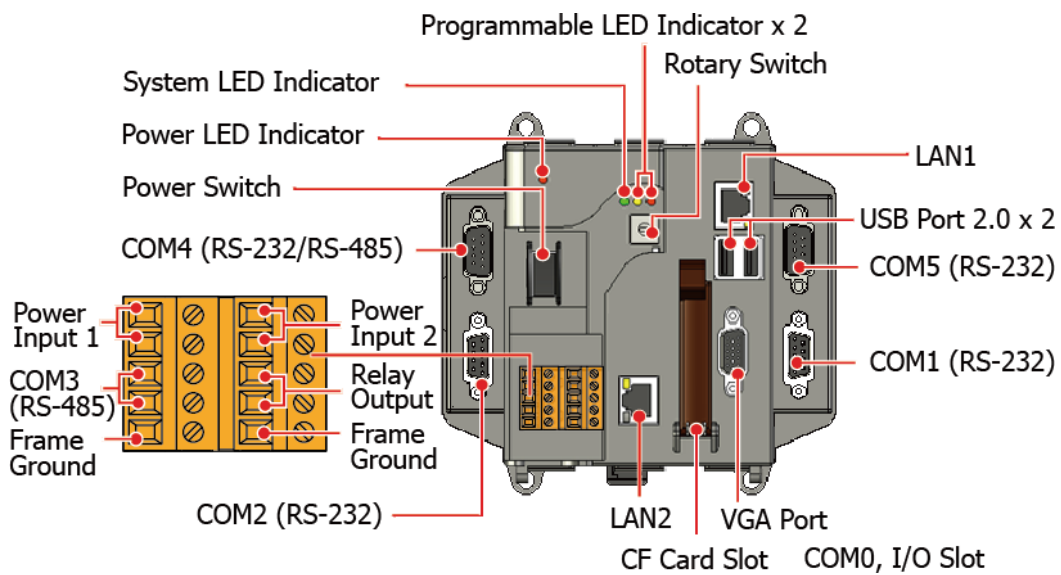


XP-8131-CE6/XP-8141-Atom-CE6

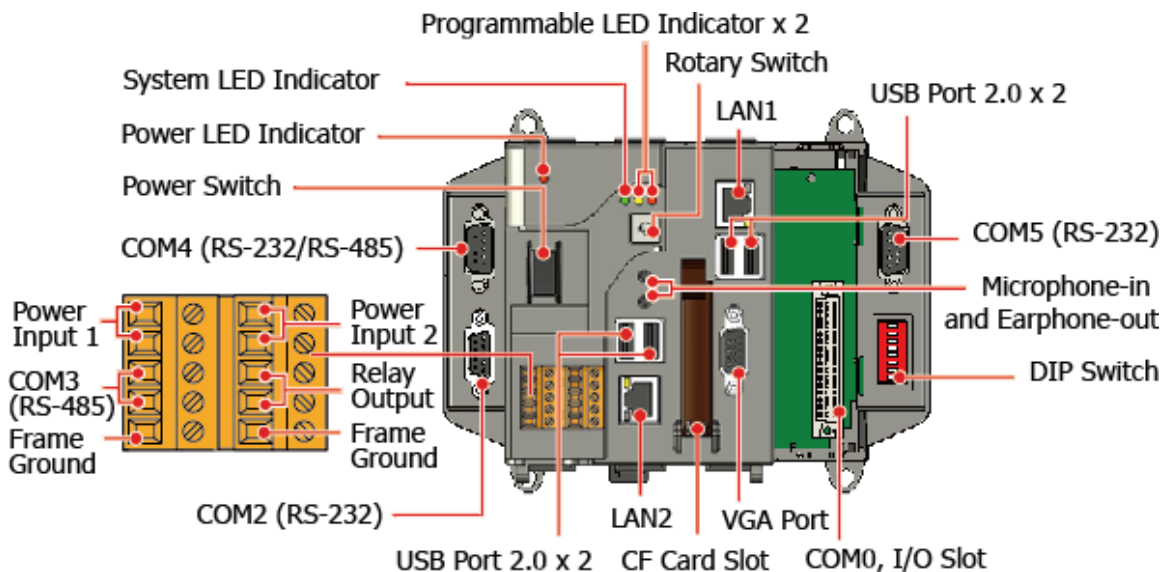

XP-8331-CE6/XP-8341-CE6/XP-8341-Atom-CE6

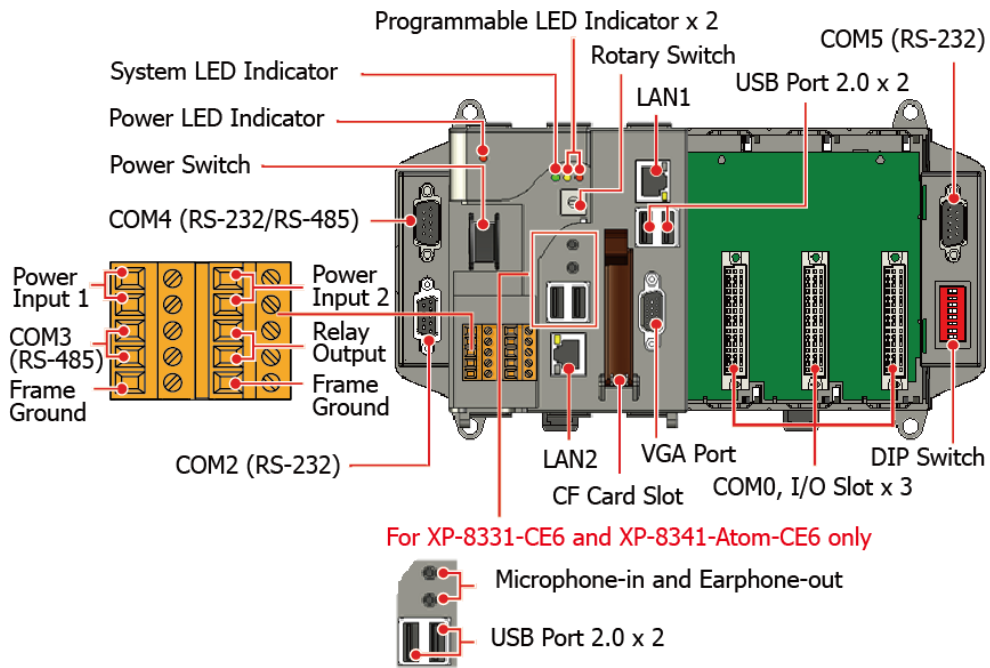


XP-8731-CE6/XP-8741-CE6/XP-8741-Atom-CE6

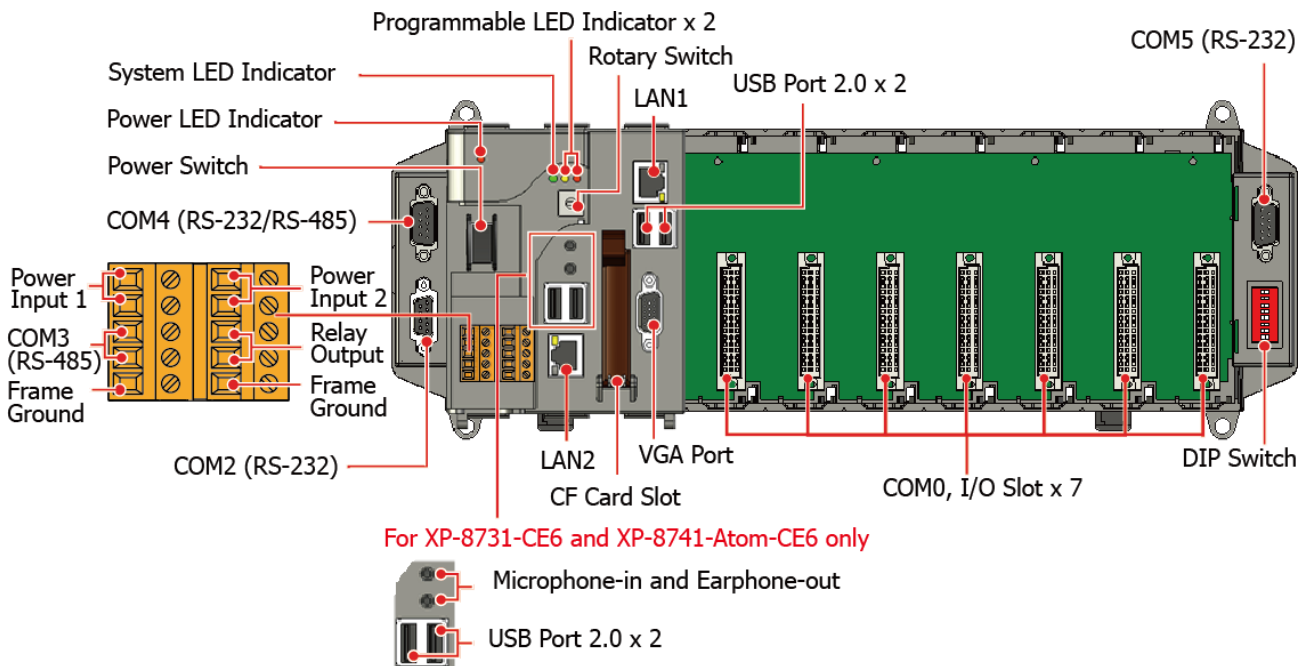

The details of these items are as follows:


LED Indicators

The XP-8000-CE6 has 4 LED indicators. The first is labeled PWR, located near the power switch and shows the power status. The three other are located next the rotary switch, the left one is labeled RUN and shows the operation status, the two other are denoted L1 and L2 and used for user defined.

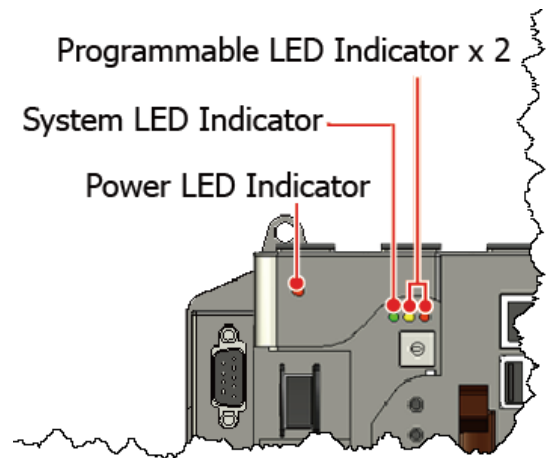

| LED Indicator | Label | State (Color) | Meaning |
|-----------------------------|-----------|---------------|-----------------------------|
| Programmable LED Indicators | L1 and L2 | - | Programmable LED indicators |
| System LED indicator | RUN | Orange | OS is running |
| Power LED Indicator | PWR | Green | Power 1 is on |


Operating mode Selector

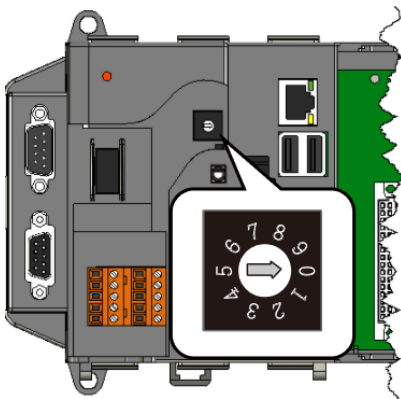

Rotary Switch is an operating mode selector. The XP-8000-CE6 has several operating modes, for more detailed information about these operating mode, please refer to “2.4 Configuring the Boot Mode”


Power Switch

The power switch is a small switch that enables or disables power to electric circuits and loads in the XP-8000-CE6.

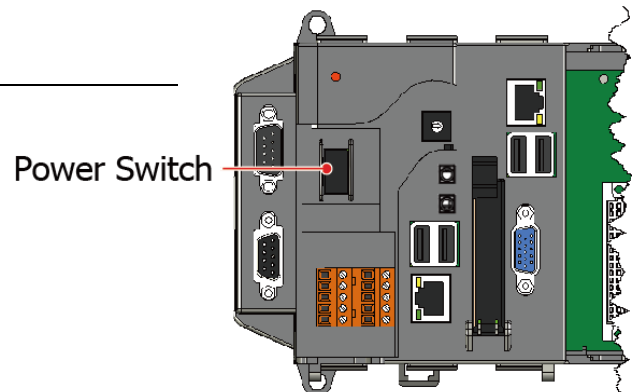

Redundant Power (PWR1 and PWR2) and relay output

The XP-8000-CE6 has a 2-row 10-wire terminal block; there has 4-wire for redundant power inputs and 2-wire for relay output. The details of the redundant power are shown to the side.

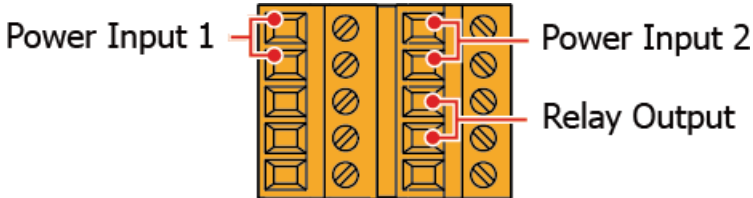


- **Redundant Power**

The XP-8000-CE6 provides redundant power that can keep the device running if a problem occurs in the power supply.

- **Relay Output**

The XP-8000-CE6 has a relay output that can be used to control a light, siren, or other low voltage device when an alarm occurs.

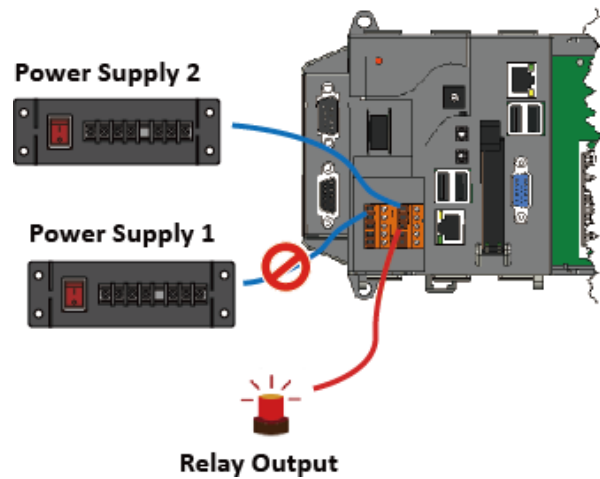


Communication Ports

The XP-8000-CE6 is equipped with several interfaces and peripherals that can be integrated with external systems.

- **VGA Port**

 The VGA connector is a 3-row 15-pin connector that can be used to connect a monitor at a variety of supported VGA resolutions. and the output resolution covers, 800 x 600, 1024 x768.



- **CF slot**

The CF slot comes with a free CF card that can be used to restore the system, and expand the memory up to 32 GB.

- **Ethernet Ports (LAN1 and LAN2)**

The XP-8000-CE6 has 2 Ethernet ports that can be used to connect the router to the Internet or to other devices.


Each Ethernet port has 2 LED indicators, which are used to indicate the network speed and Link/Acting, as described below.

| LED Indicator | State (Color) | Meaning |
|---------------|-----------------|---------------------------|
| 10/100M | ON (Yellow) | Network Speed: 100 MB GB |
| | OFF | Network Speed: 10 MB |
| 1G | ON (Yellow) | Network Speed: 1000 MB GB |
| | OFF | Network Speed: 10/100 MB |
| Link/Act | ON (Green) | The Link is active |
| | OFF | The Link is inactive |
| | Blinking(Green) | Network activity |

For XP-8x41-CE6:



 For XP-8x31-CE6 and XP-8x41-Atom-CE6:



- **USB Ports (P1, P2, P3 and P4, P3 and P4 are for XP-8x31-CE6 and XP-8x41-Atom-CE6 only)**

The XP-8000-CE6 has 2/4 USB 2.0 ports that can be used to connect the USB devices such as mouse, keyboard or an external USB hard drive.

- **COM0, Expansion I/O Slot**

The XP-8000-CE6 has 0/1/3/7 I/O slot(s) that can be used to integrate high performance parallel I/O modules (high profile I-9K Series) or serial I/O modules (high profile I-97K series).

- **Microphone-in and Earphone-out (for XP-8x31-CE6 and XP-8x41-Atom-CE6 only)**

The XP-8000-CE6 has a microphone-in and an earphone-out that can be used to process the input and the output of sound.

- **COM1, Expansion I/O Slot (Except XP-8041-CE6)**

The XP-8000-CE6 has 1/3/7 I/O slot(s) that can be used to integrate high performance parallel I/O modules (high profile I-8K Series) or serial I/O modules (high profile I-87K series).

- **COM1 (RS-232) (for XP-8041-CE6 only)**

The COM1 port is a 9-pins RS-232 connector. The details of the COM1 port specifications are shown to the side.

Note: 16C550 compatible

Port Type: Male


Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 128 bytes

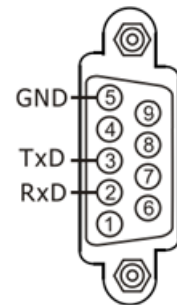

- **COM2 (RS-232)**

The COM2 port is a 9-pins RS-232 connector. The details of the COM2 port specifications are shown to the side.

Note: 16C550 compatible

Port Type: Female


Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 7, 8

Parity: None, Even, Odd

Stop Bits: 1

FIFO: 1 byte

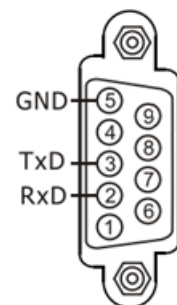

COM3 (2-wire RS-485)

Note: 16C550 compatible

Port Type: Terminals


Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 128 bytes

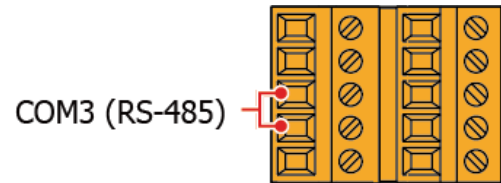

● COM4 (RS-232/RS-485)

The COM4 port is a 9-pins RS-232/RS-485 connector. The details of the COM4 port specifications are shown to the side.


Note: 16C550 compatible

Port Type: Male

Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

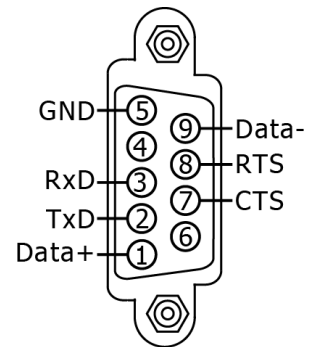

COM4 can be configured as either RS-232 or RS-485, that only can select one at a time and its configuration depends on the pin connections as follows:

- **RS-232** (RXD, TXD, CTS, RTS and GND)
- **RS-485** (Data+ and Data-)

There is no software configuration or hardware jumper needed.

Tips & Warnings



The default setting of COM4 is RS-232, if you want to set COM4 as RS-485, you can set by using XPAC Utility. For more details, please refer to the Appendix E How to change COM4 as RS-232/RS-485.

- **COM5 (RS-232)**

The COM5 port is a 9-pins RS-232 connector. The details of the COM5 port specifications are shown to the side.

Note: 16C550 compatible

Port Type: Male


Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 16 bytes

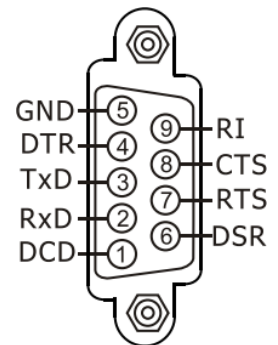

Tips & Warnings




The table below shows the data bit and their corresponding stop bit for COM2, COM3, COM4, and COM5

| Word Length | Number of Stop Bits |
|-------------|---------------------|
| 5, 6, 7, 8 | 1 |
| 5 | 1.5 |
| 6, 7, 8 | 2 |

1.4. Dimensions


The diagrams below provide the dimensions of the XP-8000-CE6 to use in defining your enclosure specifications. Remember to leave room for potential expansion if you are using other components in your system.

The height dimension is the same for all XP-8000-CE6. The width depending on your choose of I/O expansion slots. All dimensions are in millimeters.

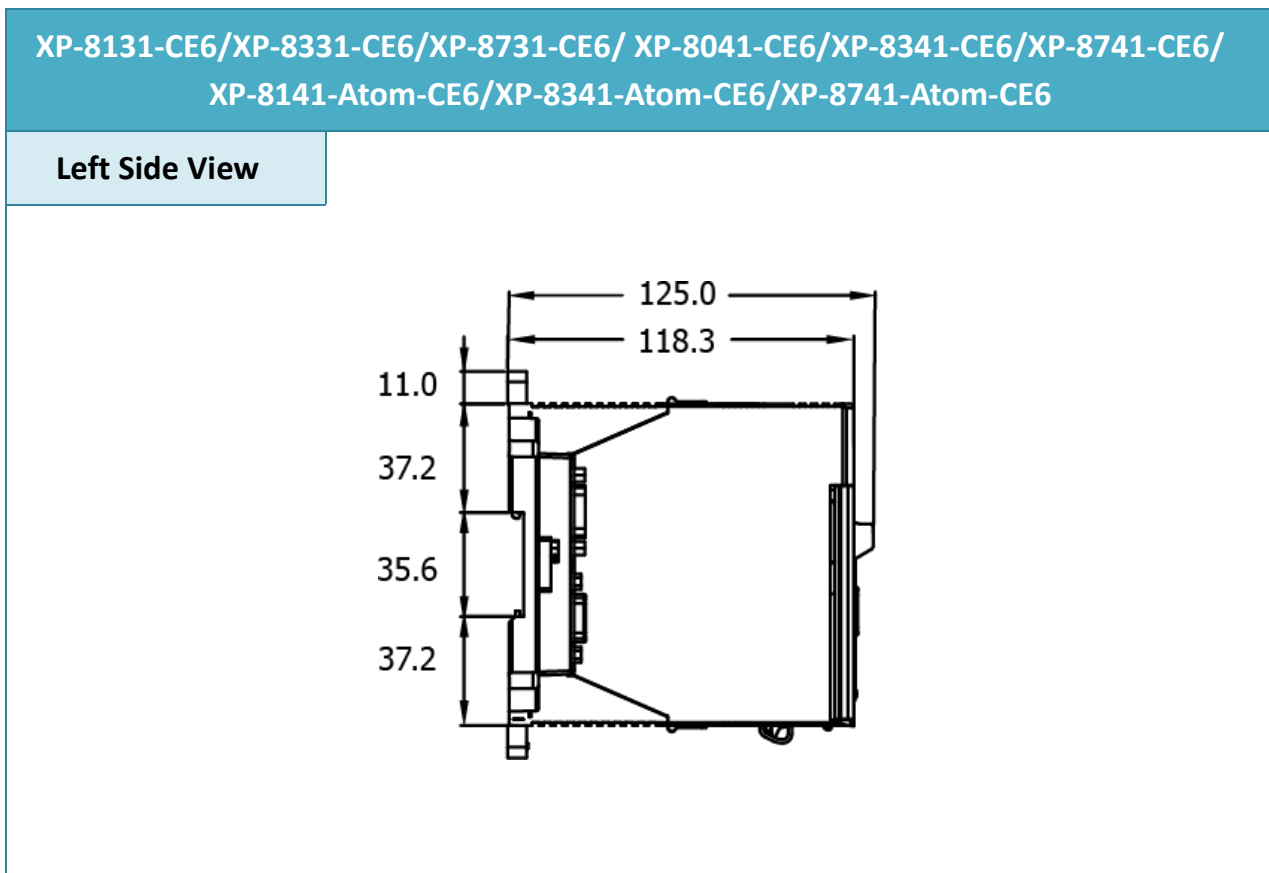


XP-8041-CE6

Front View

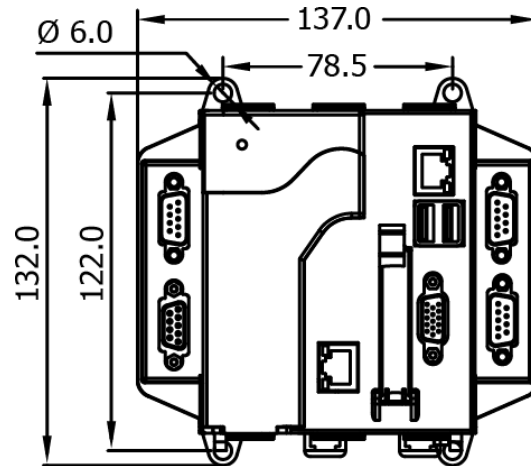


XP-8131-CE6/XP-8141-Atom-CE6

Front View

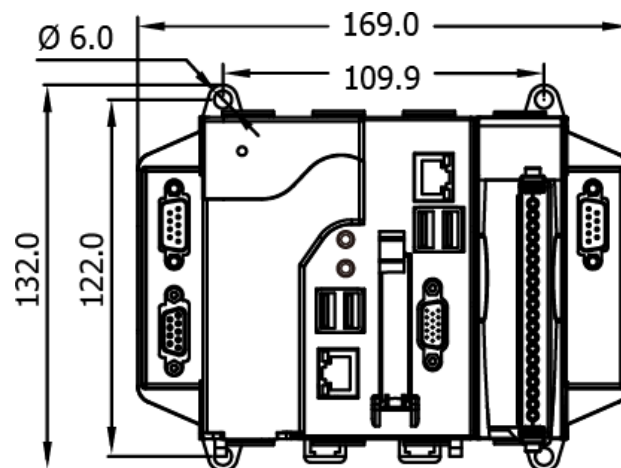


XP-8331-CE6/XP-8341-CE6/XP-8341-Atom-CE6

Front View

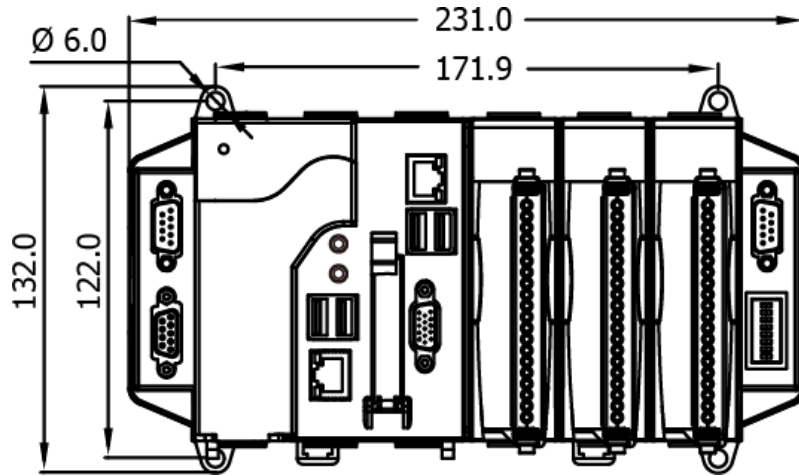

XP-8731-CE6/XP-8741-CE6/XP-8741-Atom-CE6

Front View

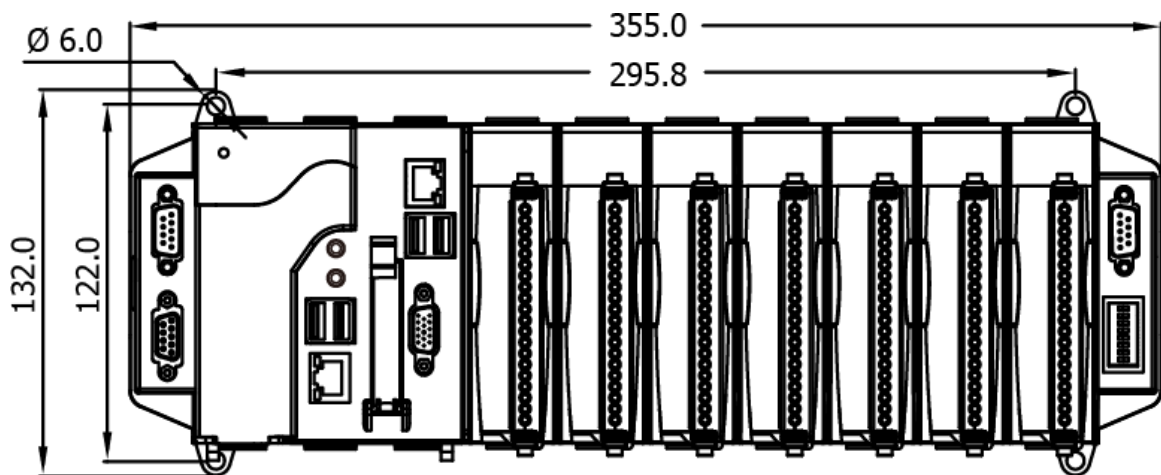

1.5. Companion CD

This package comes with a CD that provides a collection of the software utility, documentation, drivers, demo program and application.

- For XP-8x31-CE6:
CD:\XP-8X3X-CE6\
 - For XP-8x41-CE6:
CD:\XP-8000-CE6\
 - For XP-8x41-Atom-CE6:
CD:\XPAC-ATOM-CE6\
 - Backup
 - demo
 - Document
 - OS_image
 - PC_Tools
 - RESCUE
 - Rescue_Disk
 - SDK
 - System_Disk

Backup

The file packages for each release.

demo

The demo programs for examples of use in the application.

Document

The technical support documents for installation, operation, maintenance, development and application.

OS_image

The related information for OS releases and technology.

PC_Tools

The tools and utilities for operation with PC.

RESCUE

The files for system installation.

Rescue_Disk

The ghost files for OS backups and restores.

SDK

The sources for development and application in your application.

System_Disk

The tools and drivers related to System_Disk that install on XP-8000-CE6.

2. Getting Started

This chapter provides a guided tour of the XP-8000-CE6 installation and configuration that describes the steps needed to download, install, configure, and run the basic procedures for user working with the XP-8000-CE6 for the first time.


Before starting any task, please check the package contents. If any of the following package contents are missing or damaged, contact your dealer, distributor.



XP-8x31-CE6/XP-8x41-CE6/XP-8x41-Atom-CE6



CF Slot with one CF card

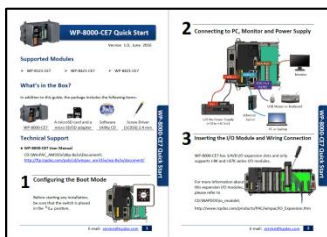

Quick Start Guide



Software Utility CD



Screw Driver (1C016) 2.4 mm


2.1. Mounting the XP-8000-CE6

The XP-8000-CE6 can be mounted either directly to a wall/panel, or onto a standard 35mm DIN rail.

Wall/Panel mounting

Step 1: Install the four mounting screws into the 4 keyhole mounting holes


Step 2: Fasten the screws securely

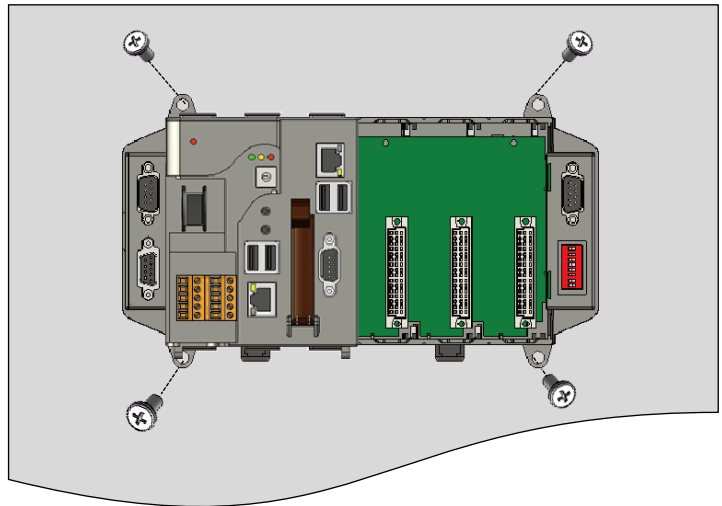

Tips & Warnings




There must be a minimum clearance of 50mm between the XP-8000-CE6 and the top and bottom side of the enclosure panel.

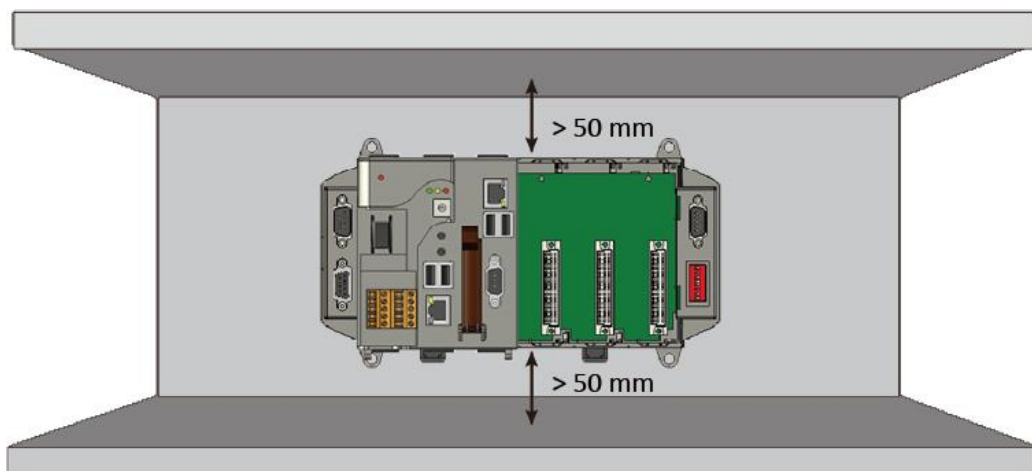

Step 1: Hook upper tab over upper flange of DIN rail


Step 2: Tilt the module toward DIN rail until it snaps securely to DIN rail

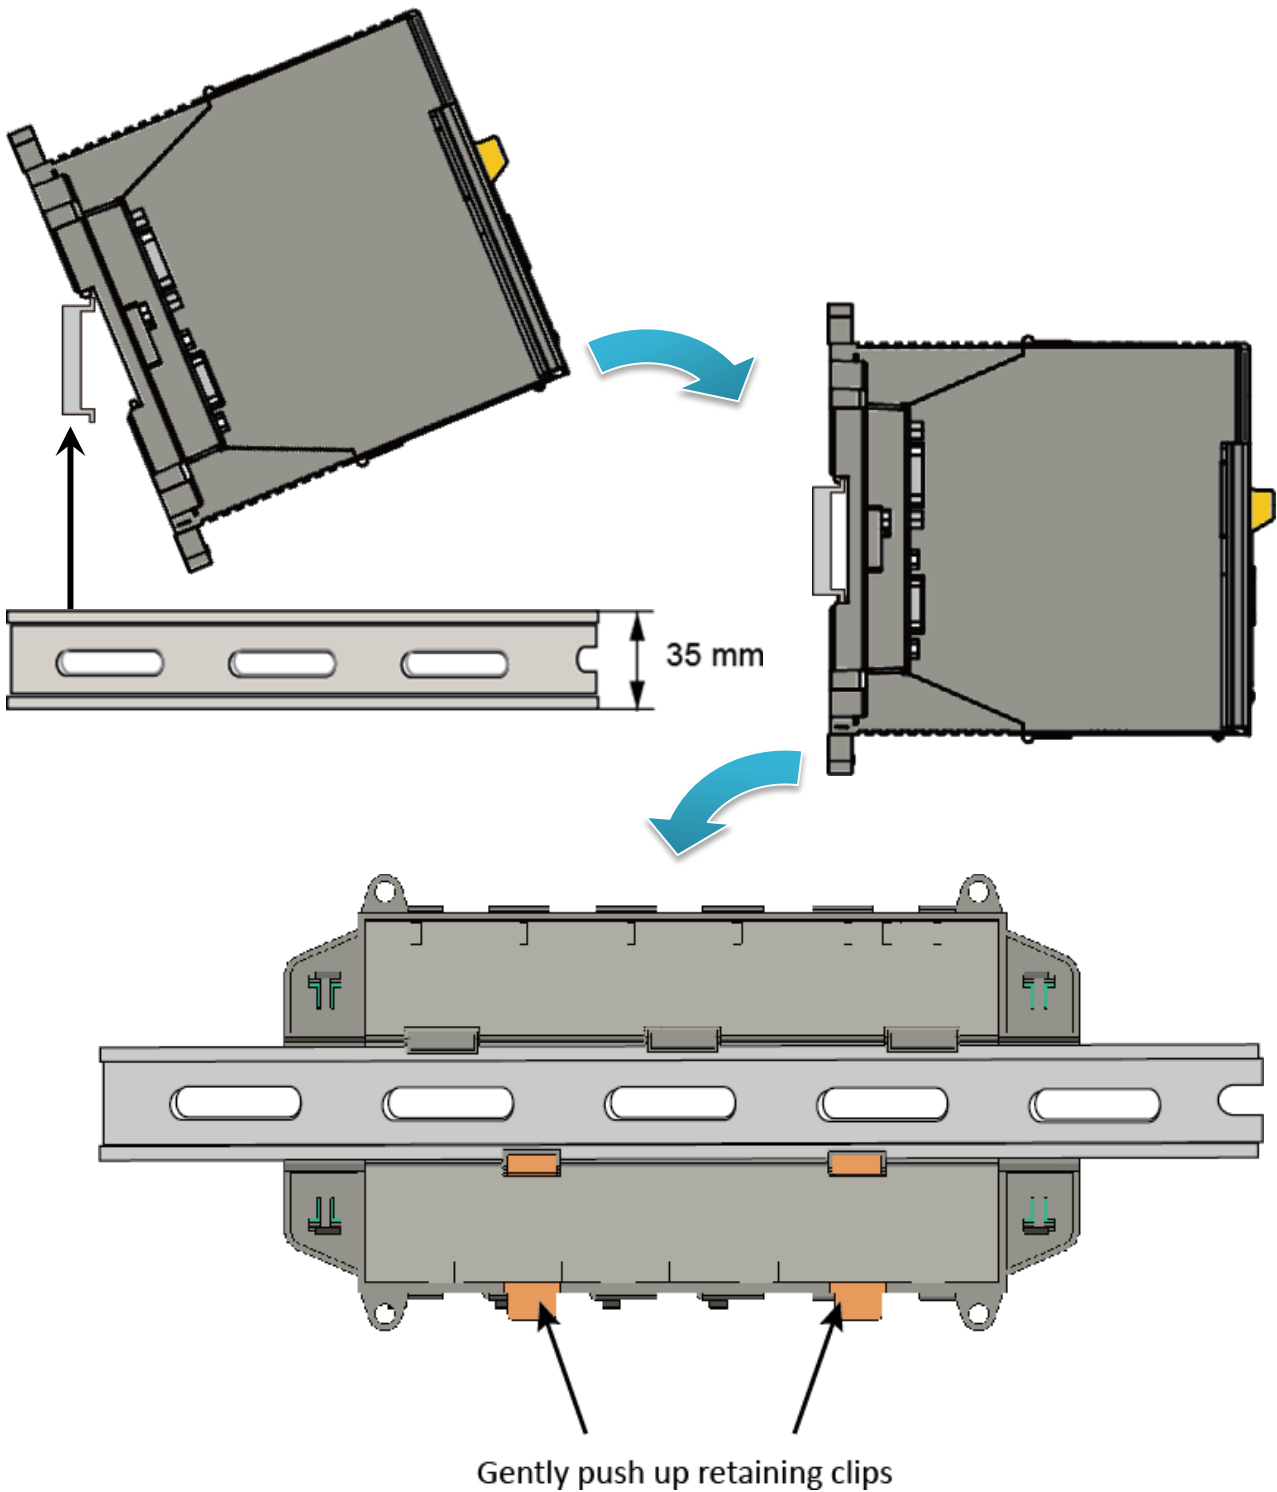

Tips & Warnings



A good common ground reference (earth ground) is essential for proper operation of the XP-8000-CE6. One side of all control circuits, power circuits and the ground lead must be properly connected to earth ground by either installing a ground rod in close proximity to the enclosure or by connecting to the incoming power system ground. There must be a single-point ground (i.e. copper bus bar) for all devices in the enclosure that require an earth ground.

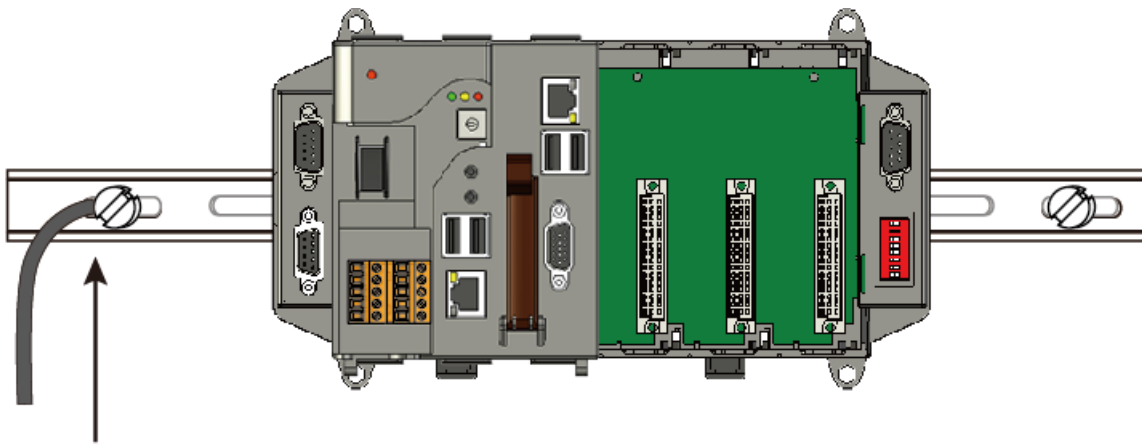

Connect the ground lead to the ground screw

2.2. Deploying a Basic XP-8000-CE6 System


The XP-8000-CE6 provides a variety of communication interface to suit a range of application. Here is a simple application for using the XP-8000-CE6.

Step 1: Connect the positive terminal (+) of the power supply to the terminal PWR1/2 and the negative terminal (-) of the power supply to the P.GND

Tips & Warnings




1. The input range of power supply is +10 to +30 V_{DC}.
2. The XP-8000-CE6 have two power inputs that can be connected simultaneously to the two independent power sources. If one power source fails, the other source takes over automatically. Redundant power inputs help assure non-stop operation of the XP-8000-CE6.

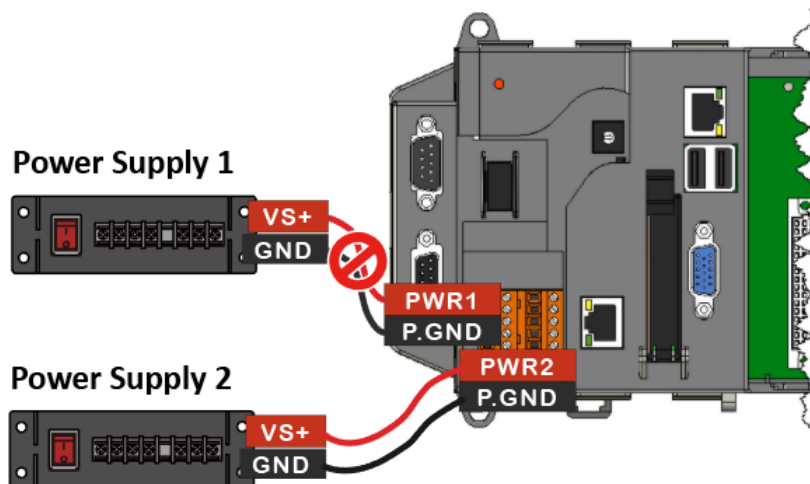

Step 2: Connect the USB mouse or the USB keyboard to the USB port

Step 3: Connect the monitor to the VGA port

Step 4: Connect to PC or the laptop to the LAN port via an Ethernet switch

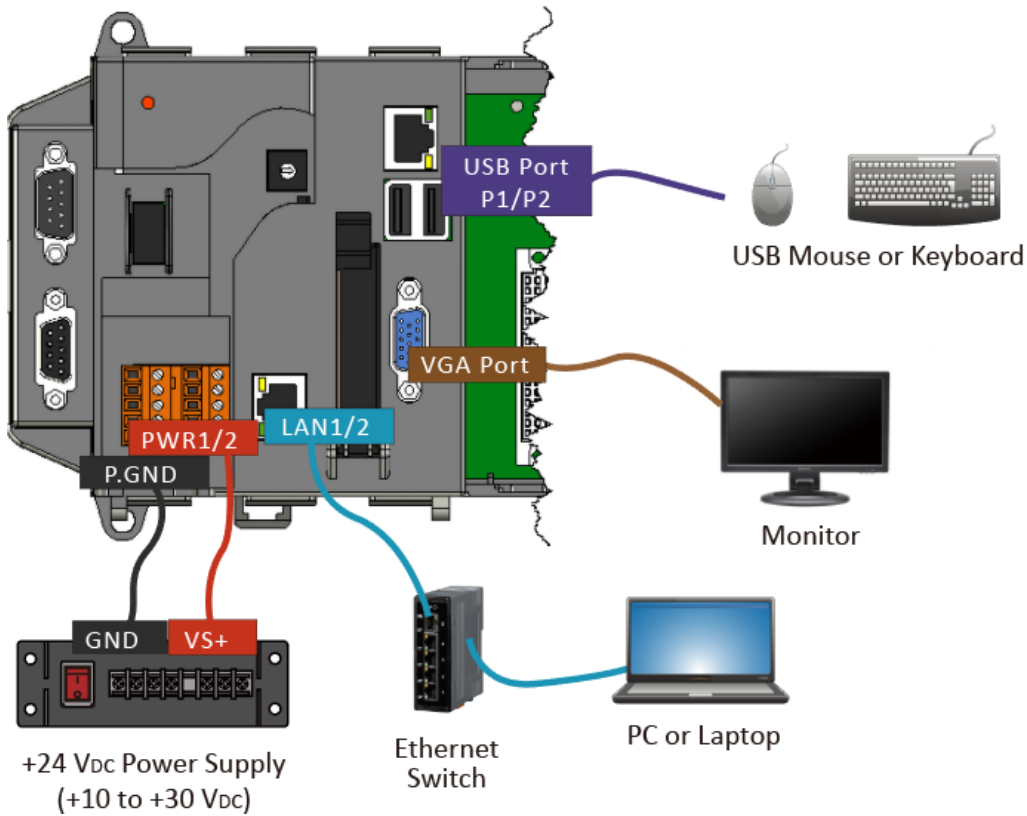


2.3. Inserting the I/O Modules

XP-8000-CE6 has 0/1/3/7 I/O expansion slot(s) and only supports I-8K and I-87K series I/O modules.

Before choosing the right I/O modules, you first need to know the I/O expansion capacities in order to choose the best expansion module for achieving maximal efficiency. For more information about the I/O expansion modules that are compatible with the XP-8000-CE6, please refer to:

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/i-8k_i-87k/i-8k_i-87k_selection.html

Step 1: Align circuit card with slot and press firmly to seat module into connector

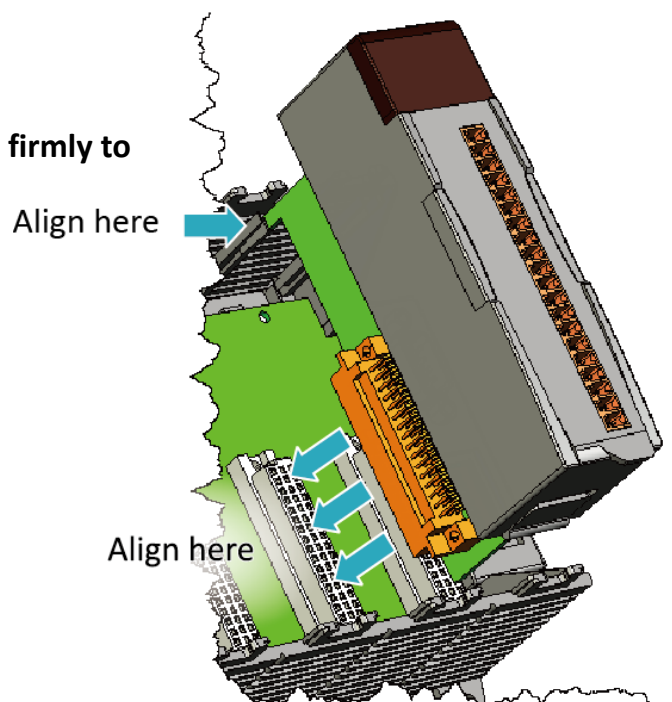


Tips & Warnings



It is recommended that the power to the XP-8000-CE6 is switched off when wiring the I/O module which are plugging in the XP-8000-CE6 slots.

Step 2: Pull top and bottom locking tabs toward module face. Click indicates lock is engaged

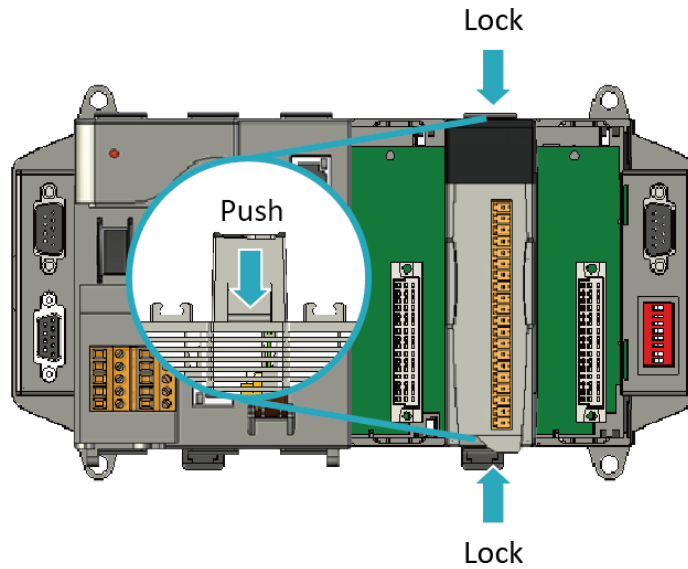


Step 3: Attach field wiring using the terminal block, and then insert the terminal block

All I/O Web Page include the I/O module specifications, pin assignments and wiring connections.


For example, Pin Assignments and Wiring connections for the I-87054W module are as follows:

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/i-8k_i-87k/i-87054w.html

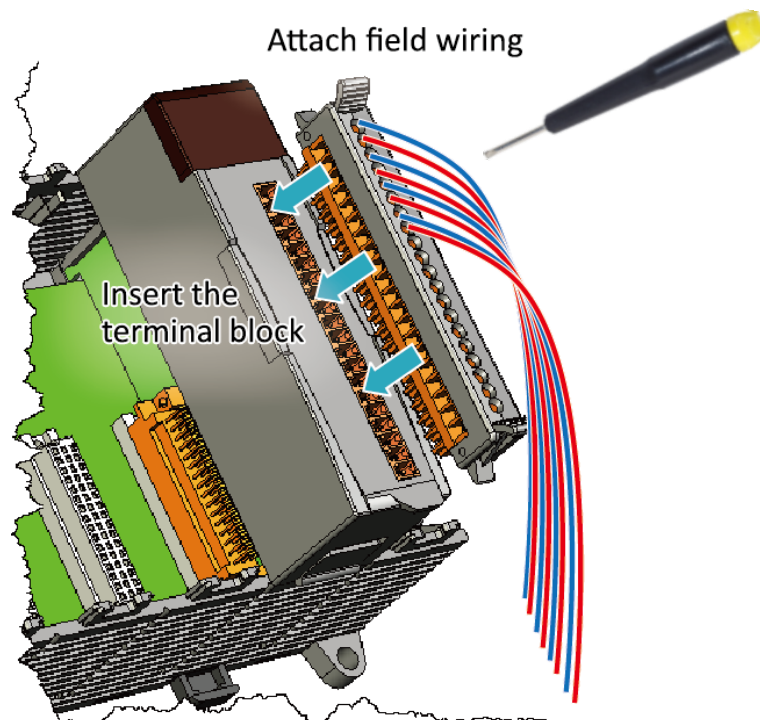

2.4. Configuring the Boot Mode

The XP-8000-CE6 has several operating modes, which can be selected by a rotary switch.

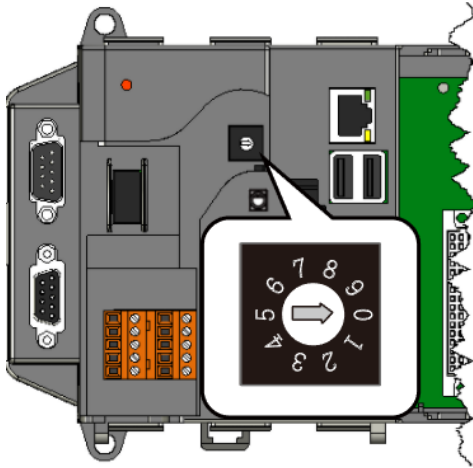

The table below lists the operation modes available with the XP-8000.

| Position | Operating Mode |
|----------|-------------------------------|
| 0 | Normal mode (Default) |
| 1 | Safe mode |
| 2 | Debug mode |
| 3 | OS update mode by Ethernet |
| 4 | Reserve |
| 5 | OS update mode by SD |
| 6 | Reserve (OS Development Mode) |
| 7 ~ 9 | User Mode |

The following is a brief introduction of these modes.

Normal Mode (Default mode)

Normal mode is the default mode of operation and the one you will use most of the time. Use this mode for more tasks and configurations. Programs also are executed in this mode.

Safe Mode

Safe mode is a troubleshooting mode. The mode loads the minimum required device drivers and system services to boot the XP-8000.

If you have malicious software or a program caused the XP-8000-CE6 cannot be boot or run the normal mode, you can boot in safe mode to solve the problem.

Debug Mode

Debug mode is a special environment in which program debug functions can be used in addition to normal system functions.

Debug mode is unsupported.

OS Update Mode

OS update mode is a way used to update OS. For more information on updating the XP-8000-CE6 OS image, please refer to section 7.1. OS updates

Reserve → OS Development Mode

The positions 4, 6, of rotary switch are reserved for OS development.

User Mode

The positions 7, 8, 9 of rotary switch are reserved for user's applications.


When XP-8000-CE6 is boot with one of these positions, it is boot at normal mode.

User's application can check the position of the rotary switch position to run at different mode.

2.5. Changing the User Interface Language

The **Regional and Language Settings** is a Windows CE functionality that allows users to change the XP-8000-CE6 user interface with your native language.


Step 1: Click Start menu, point to Settings, click Control Panel, and then click Regional Settings

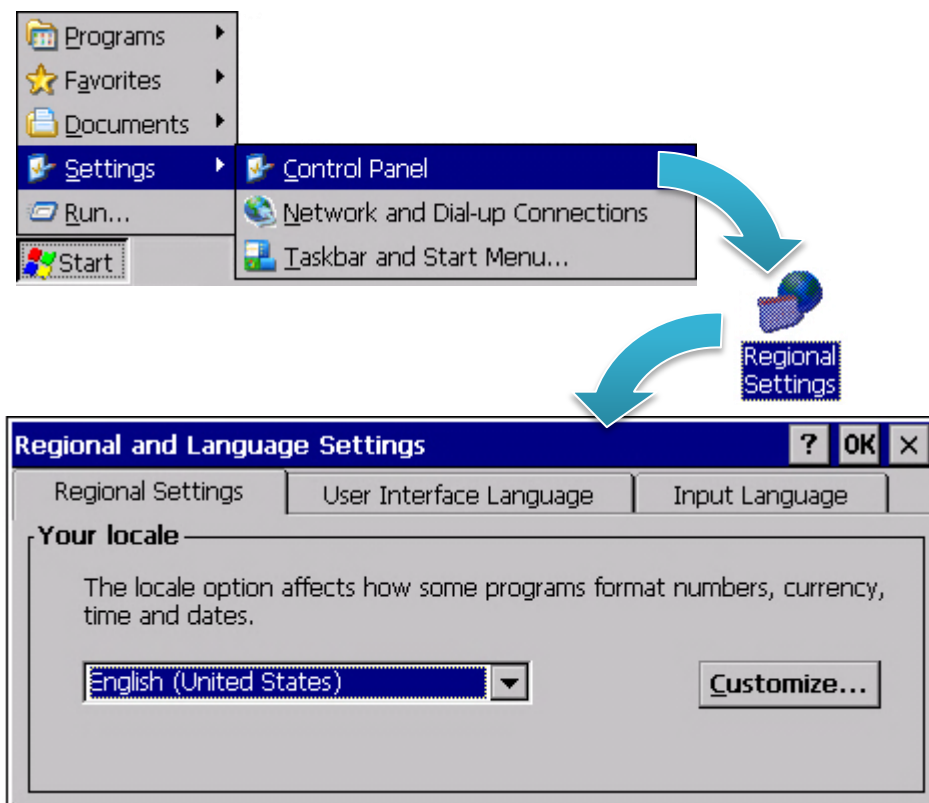

Step 2: Click User Interface Language tab, choose to your local language, and then click OK button



Step 3: Double-click the XPAC Utility on the desktop, and then reboot the XP-8000-CE6 for changes to take effect

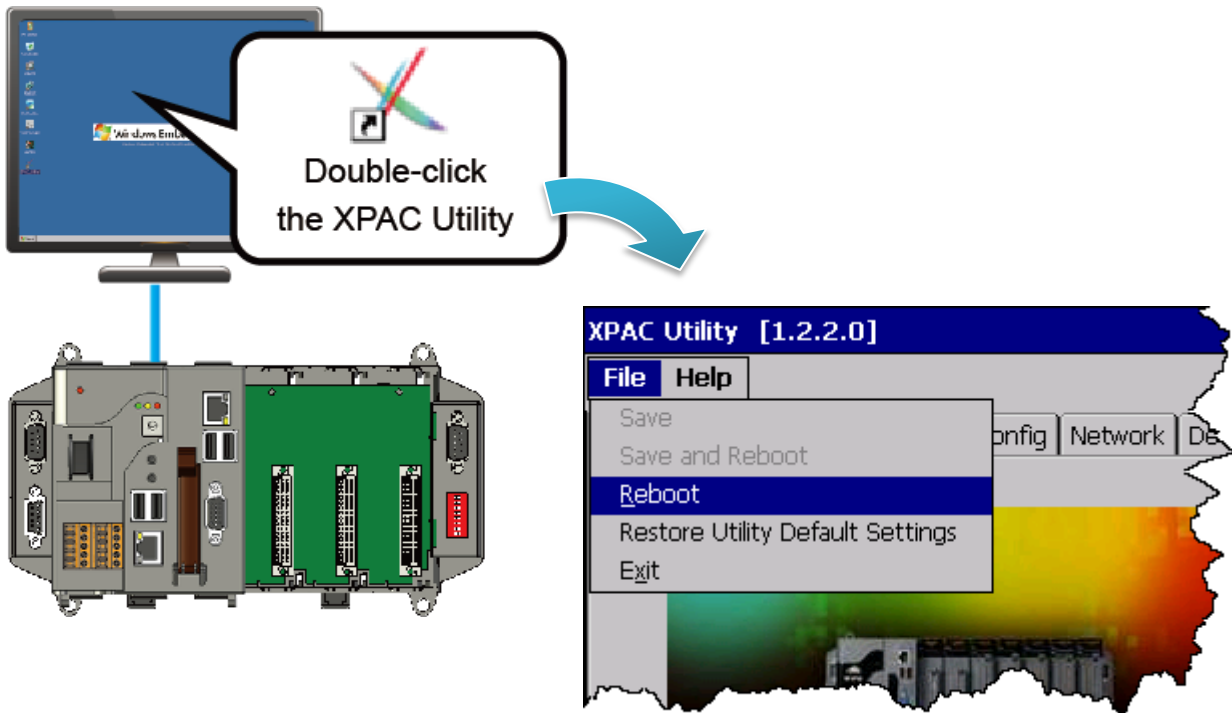


2.6. Using XPAC Utility to Manage the XP-8000

The XPAC Utility is a collection of the XP-8000-CE6 system tool that allows users to manage and configure the XP-8000-CE6 quickly and easily.


For more detailed information on XPAC Utility applications, please refer to “3.1. XPAC Utility”

Step 1: Double-click the XPAC Utility on the desktop

Step 2: Configure IP address (DHCP), FTP Server, Auto Execution files..., etc.

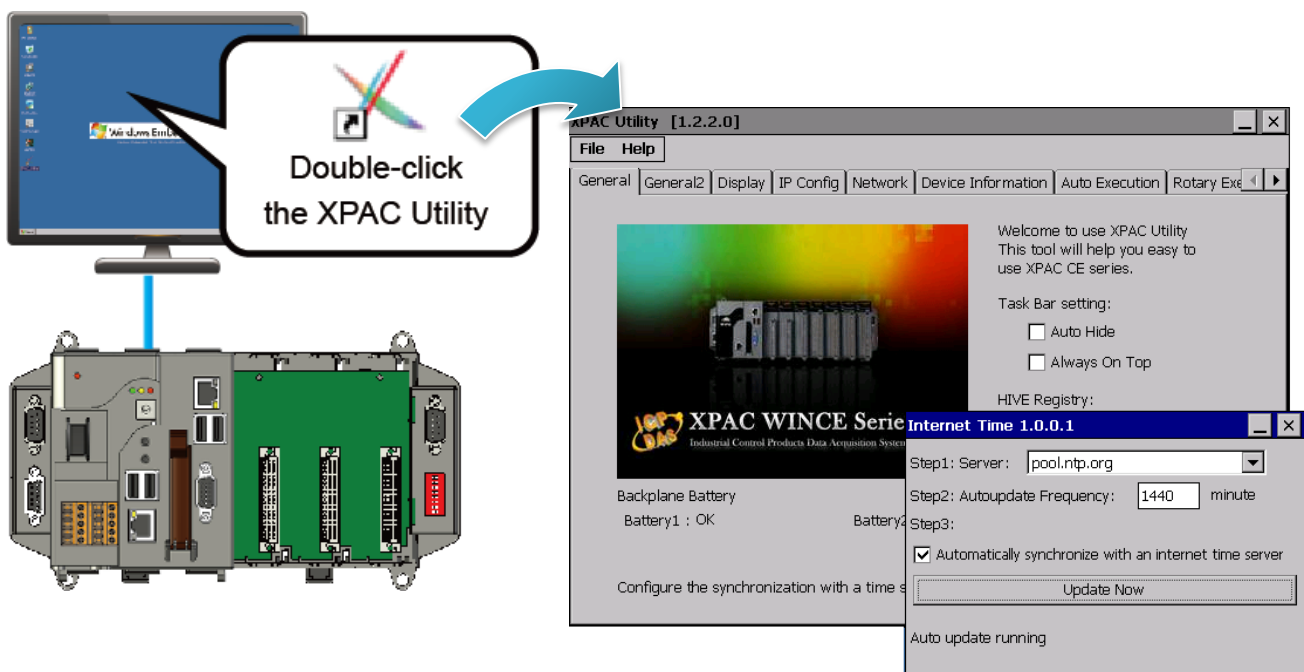


Step 3: Reboot the XP-8000-CE6 for changes to take effect

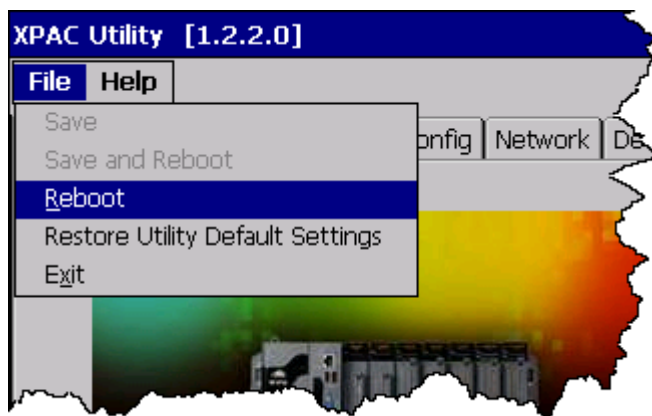


2.7. Using DCON Utility Pro Configure I/O Modules

DCON Utility Pro allows users to configure and manage the I/O modules via Ethernet or serial ports (RS-232/RS-485).


Step 1: Double-click the DCON_Utility_Pro on the desktop

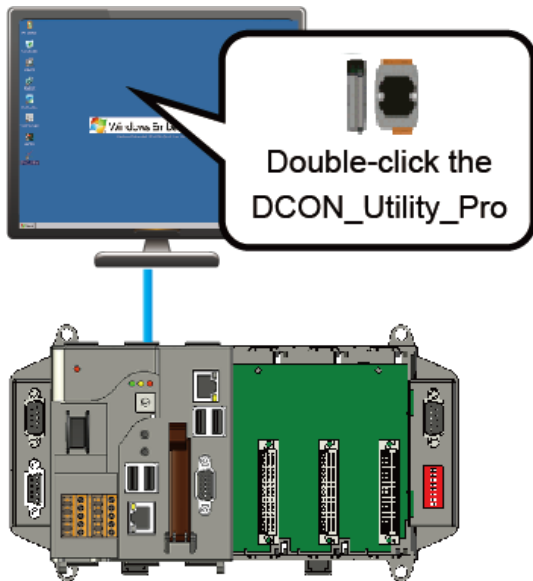

Step 2: Click the  button

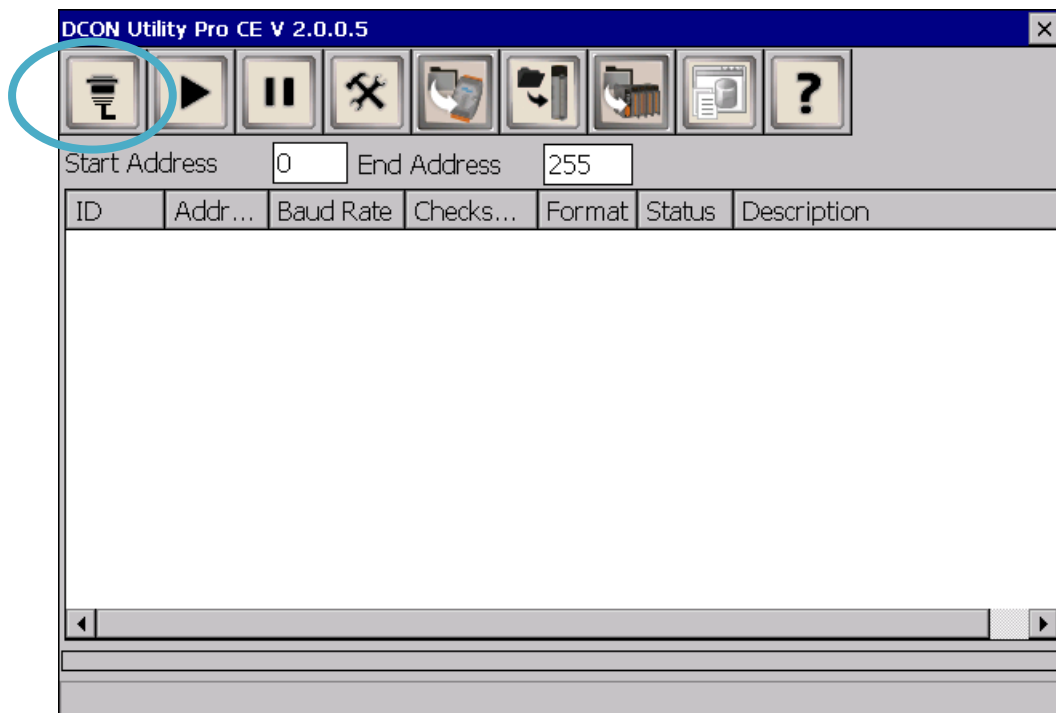


Step 3: Configure the communication settings

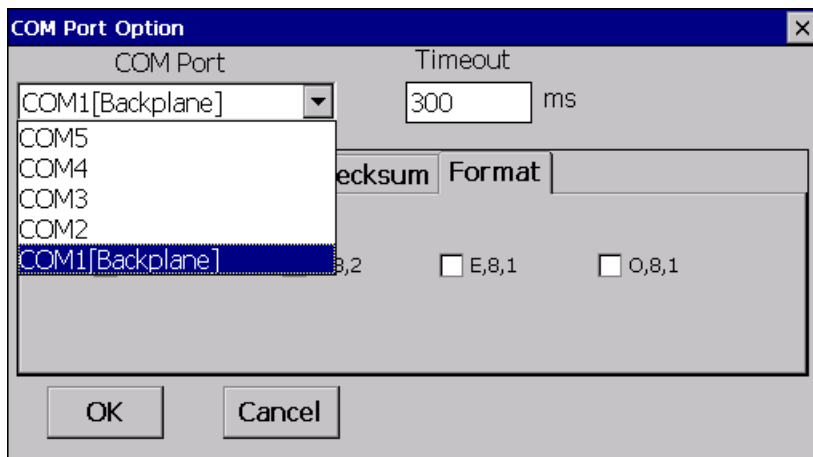

Tips & Warnings



The COM port settings for expansion I/O modules are listed below.

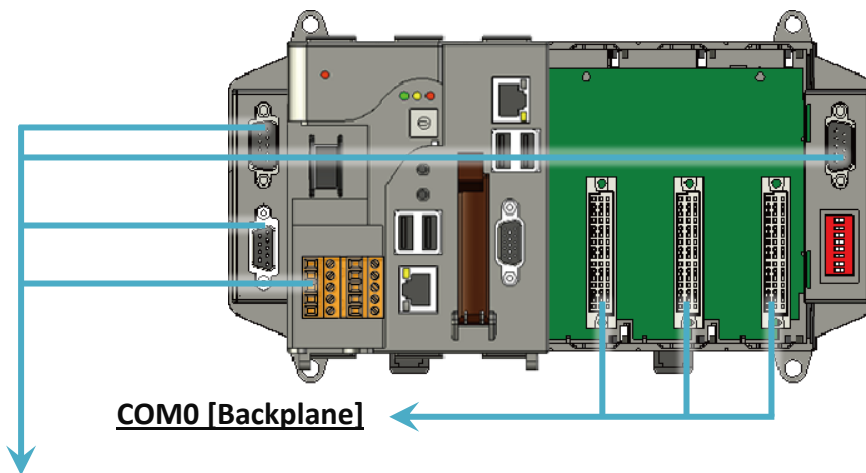


COM1/2/3/4

For more information on these COM port selections, please refer to the specification of the pin assignments in section 1.3. Overview

Step 4: Click the  button to scan the I/O module

Step 5: Click the module name to configure the I/O module

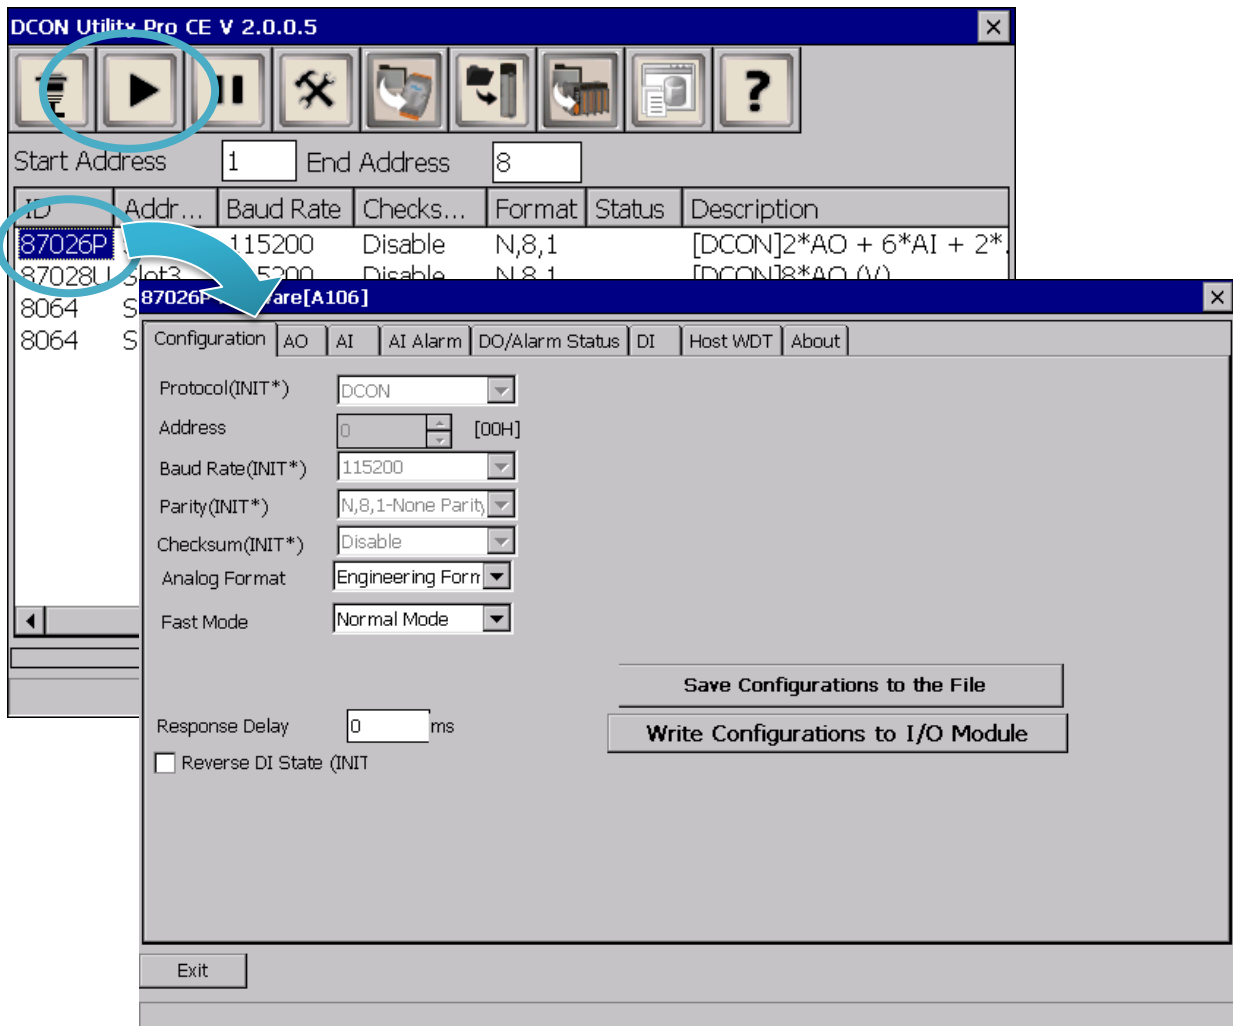


3. Tools and Tasks

This chapter provides a brief introduction of the XP-8000-CE6 service tools and its benefits.

There are several tools and utilities built-in and designed for use with XP-8000. Some of these are pre-installed on XP-8000-CE6 and can work directly on XP-8000, and some of these are supporting tools and can help you to manage the XP-8000-CE6 remotely on a PC.

The following tools are pre-installed on XP-8000-CE6 and can work directly on XP-8000-CE6 that can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- For XP-8x31-CE6:
CD:\XP-8X3X-CE6\System_Disk\Tools\
http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/system_disk/tools/
- For XP-8x41-CE6:
CD:\XP-8000-CE6\System_Disk\Tools\
http://ftp.icpdas.com/pub/cd/xp-8000-ce6/system_disk/tools/
- For XP-8x41-Atom-CE6:
CD:\XPAC-ATOM-CE6\System_Disk\Tools\
http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/system_disk/tools/

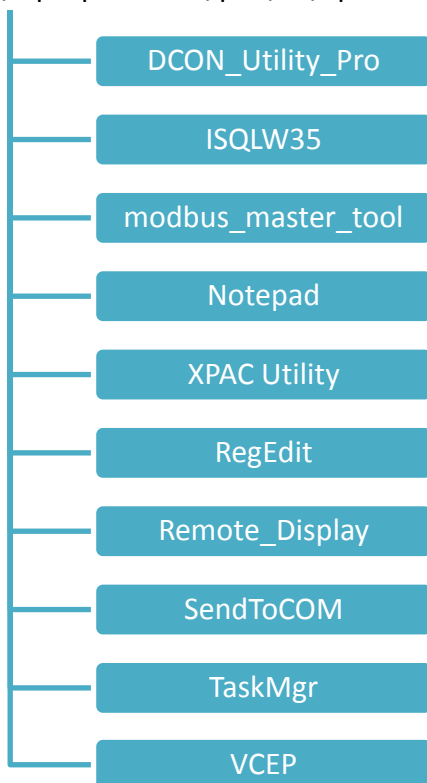

3.1. XPAC Utility

XPAC Utility is a collection of software applications that enable management and configuration of XP-8000-CE6 system and features.




The XPAC Utility includes the following menu bars and property tabs. All of these functions will be explained later.



| Menu bar | Property Tab |
|----------|-------------------------|
| File | General |
| Help | General2 |
| | Display |
| | IP Config |
| | Network |
| | Device Information |
| | Auto Execution |
| | Rotary Execution |
| | Multi-IO Module |
| | Backplane Compatibility |

3.1.1. Menu Bar – File

By default, the available default items are shown to the right.

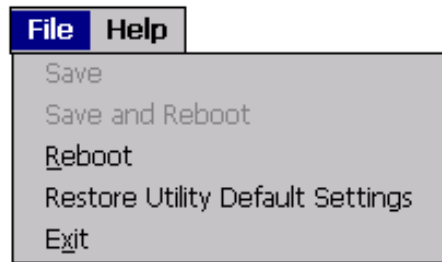


All menu items will be enabled when the **Manual Save To Flash** option is selected.

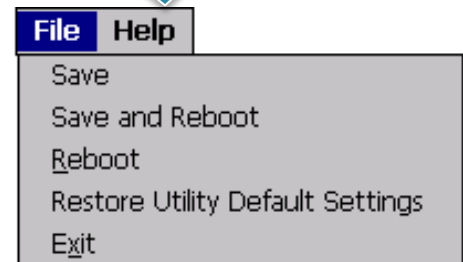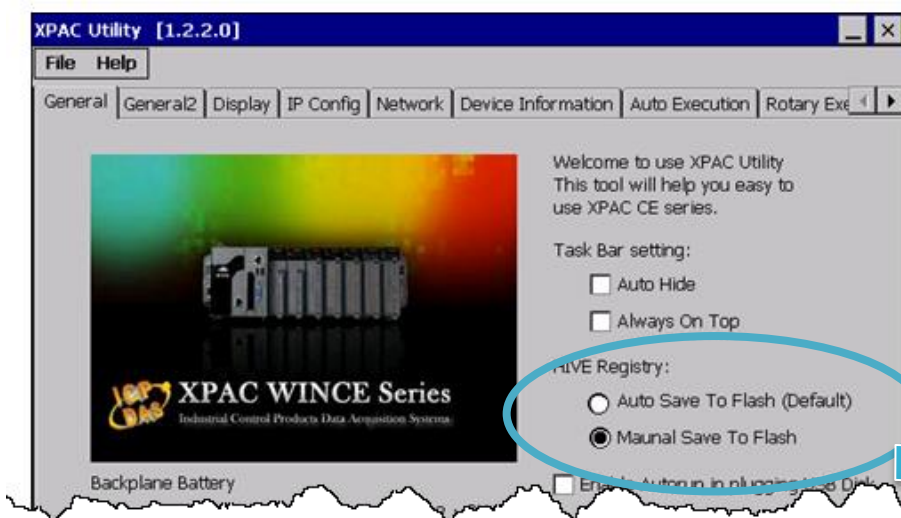

| The menus use to | How to use |
|----------------------------------|--|
| Save | By default, this item is disabled until the Manual Save To Flash option is selected. Saves the changes. |
| Save and Reboot | By default, this item is disabled until the Manual Save To Flash option is selected. Saves the changes and reboots the XP-8000-CE6. |
| Reboot | Restarts the XP-8000-CE6. |
| Restore Utility Default Settings | Restore the XP-8000-CE6 to default settings. |
| Exit | Exits the XPAC Utility. |

3.1.2. Menu Bar – Help

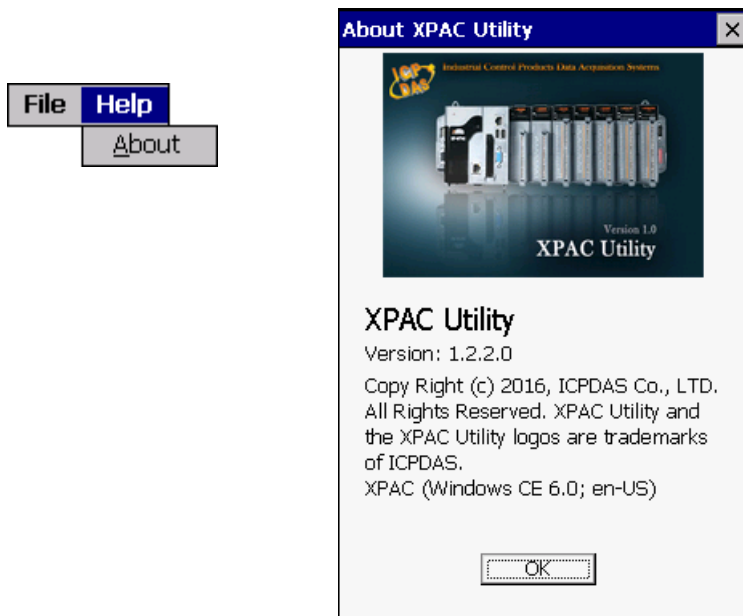


| The menus use to | How to use |
|------------------|---|
| About | Displays a dialog box with information about XPAC Utility, including the current version and copyright information. |

3.1.3. Property Tab - General

The **General** tab provides functions to configure the task bar, check the status of the battery..., etc.

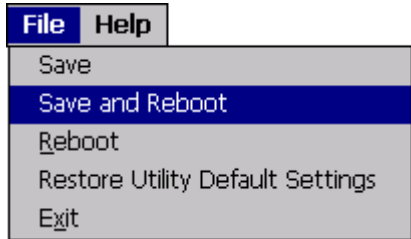

| The tab use to | How to use |
|-----------------------------------|--|
| Lock or Auto-Hide the taskbar | <p>Auto-Hide the taskbar: Select the Auto Hide check box.</p> <p>Lock the taskbar: Select the Always On Top check box.</p> |
| Auto save or manual save to flash | <p>Auto save to flash: Select the Auto Save To Flash (Default) check box. Any changes made to the XP-8000-CE6 will be saved and only take effect after the XP-8000-CE6 reboots.</p> <p>Manual save to flash: Select the Manual Save to Flash check box. Any changes made to the XP-8000-CE6 will be saved by clicking the Save and Reboot from File menu.</p>  |

| The tab use to | How to use |
|--|--|
| Enable USB autorun | Select the Enable Autorun in plugging USB Disk check box. |
| Monitor the information of battery 1 and battery 2 | See the Battery1 and Battery2 field that displays the battery status. |
| Automatic synchronization of system time | Refer to the Appendix A.2. How to configure the service for automatically synchronizing with the internet time server. |

3.1.4. Property Tab – General2


The **General2** tab provides functions to specify the name of the USB disk.



| The tab use to | How to use |
|----------------------------------|--|
| Specify the name of the USB disk | Enter a name in the USB Hard Disk: field, and then click the Set button. |
| Set COM4 as RS-232/485 | Set COM4 as RS-232: Select RS-232 from the COM Port mode drop-down list, and then click the Set button. Set COM4 as RS-485: Select RS-485 from the COM Port mode drop-down list, and then click the Set button. |

3.1.5. Property Tab – Display


The **Display** tab provides functions to configure the monitor settings.

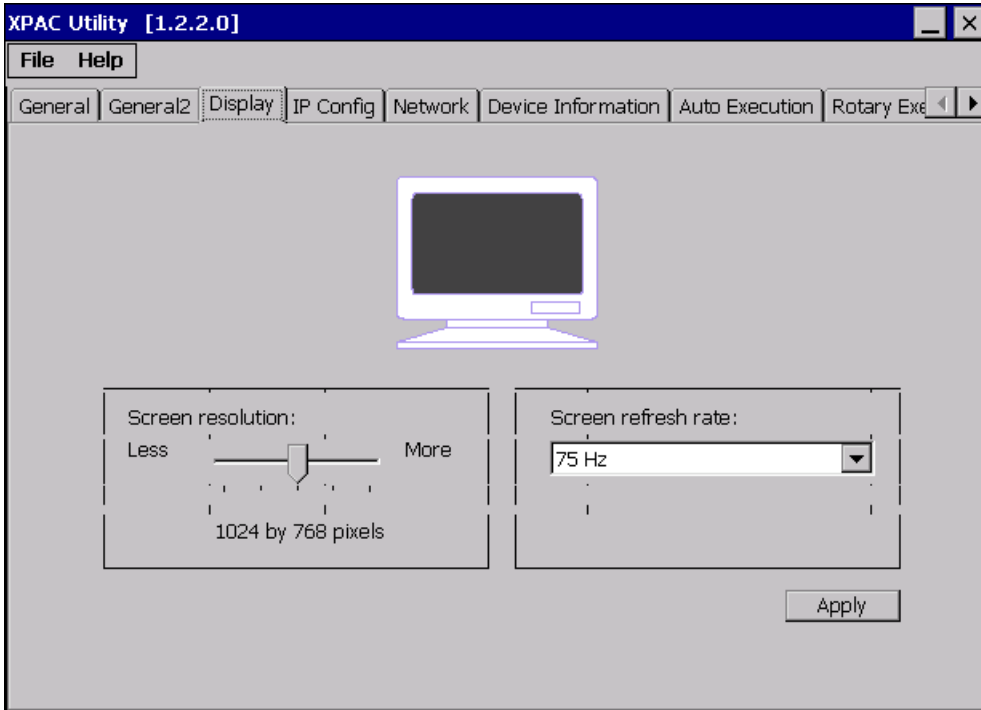

| The tab use to | How to use |
|--------------------------------|--|
| Adjust the screen resolution | Move the slider to the left to decrease the resolution or move the slider to the right to increase the resolution, and then click the Apply button. |
| Change the screen refresh rate | Select the desired refresh rate from the Screen refresh rate drop-down list, and then click the Apply button. |

3.1.6. Property Tab – IP Config

The **IP Config** tab provides functions to configure either DHCP (Roaming) or manually configured (Static) network settings and to monitor the MAC address. Generally, DHCP is the default settings, but if you don't have a DHCP server, you must configure the network settings by using manual configuration.

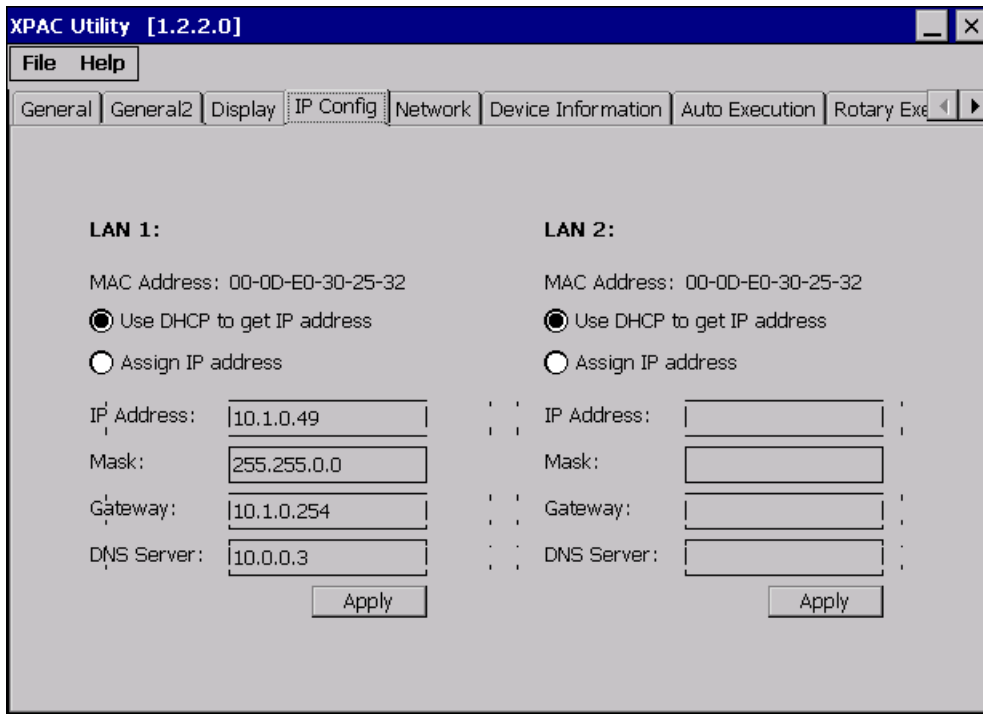


| The tab use to | How to use |
|--------------------------|--|
| Set the network settings | <p>Use DHCP to get IP address: Select the Use DHCP to get IP address option, and then click the Apply button.</p> <p>Assign an IP address: Select the Assign IP address option, and then click the Apply button.</p> |

3.1.7. Property Tab – Network

The **Network** tab comprises three tabs – Access, Login and File Server Settings.

Access

The **Access** tab provides functions to enable/disable the FTP access, enable/disable anonymous FTP access, and configure the FTP and HTTP directory path.

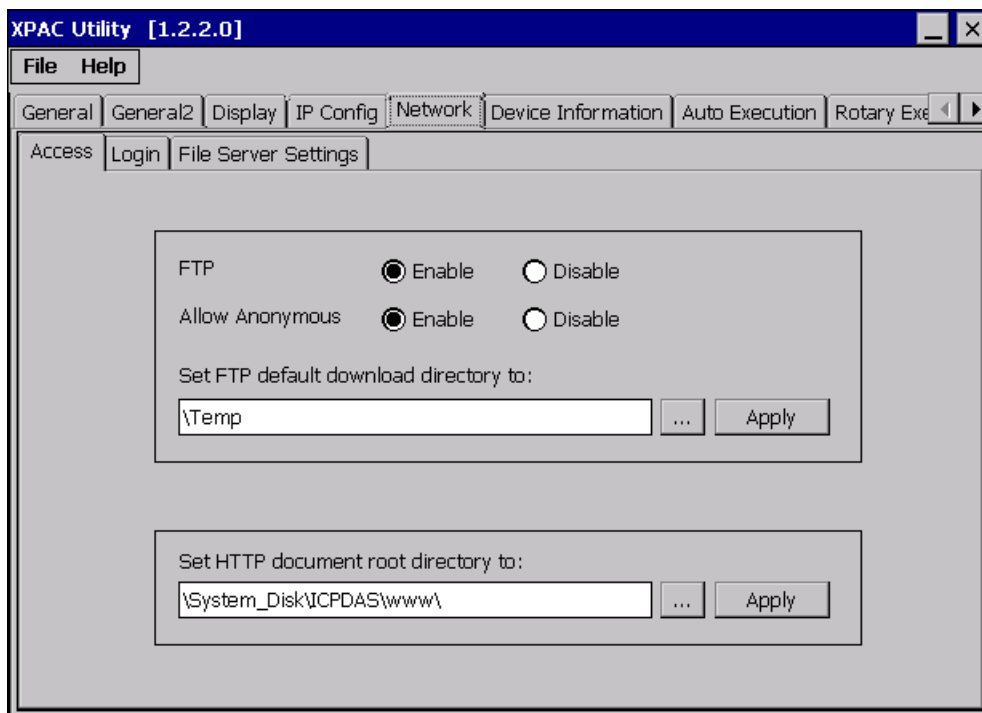


| The tab use to | How to use |
|----------------------------------|---|
| Enable or disable the FTP access | <p>Enable the FTP access: Select the Enable check box in the FTP field, and then click the Apply button.</p> <p>Disable the FTP access: Select the Disable check box in the FTP field, and then click the Apply button.</p> |

| The tab use to | How to use |
|--|---|
| Enable or disable anonymous FTP access | <p>Enable anonymous FTP access: Select the Enable check box in the Allow Anonymous field, and then click the Apply button.</p> <p>Disable anonymous FTP access: Select the Disable check box in the Allow Anonymous field, and then click the Apply button.</p> |
| Set the FTP directory path | Enter a new path in the Set FTP default download directory to: field, and then click the Apply button. |
| Set the HTTP directory path | Enter a new path in the Set HTTP document root directory to: field, and then click the Apply button. |

Login


The **Login** tab provides functions to maintain the FTP accounts.

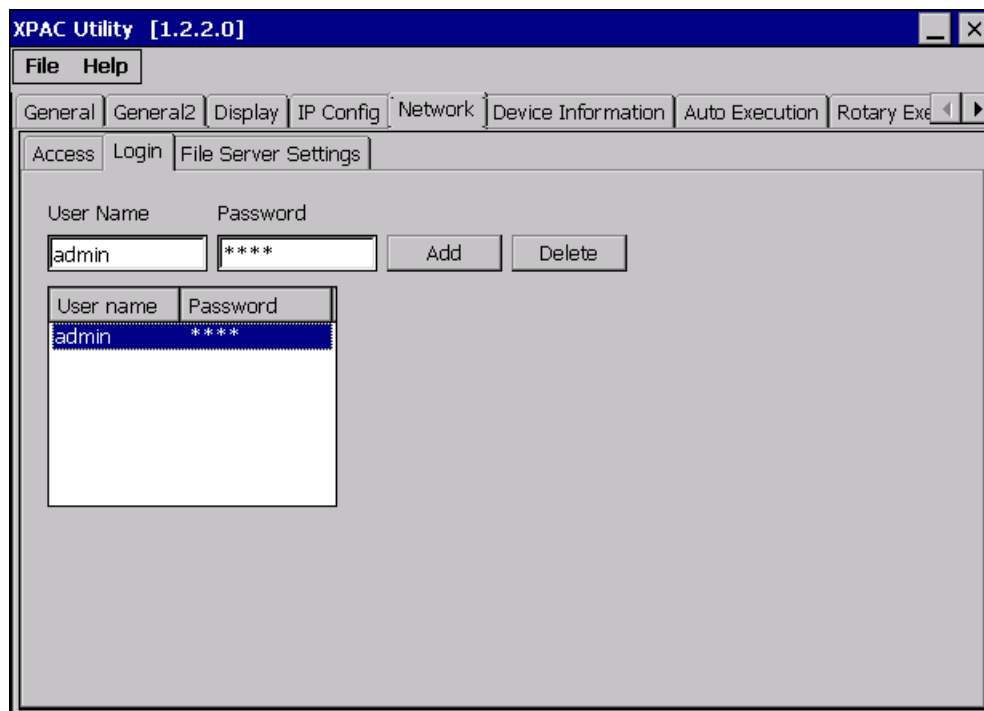

| The tab use to | How to use |
|---------------------------|--|
| Maintain the FTP accounts | Refer to the Appendix C.1 How to add a user account to remote login the XP-8000-CE6 from PC. |

File Server Settings

The **File Server Settings** tab provides functions to set the SMB server.

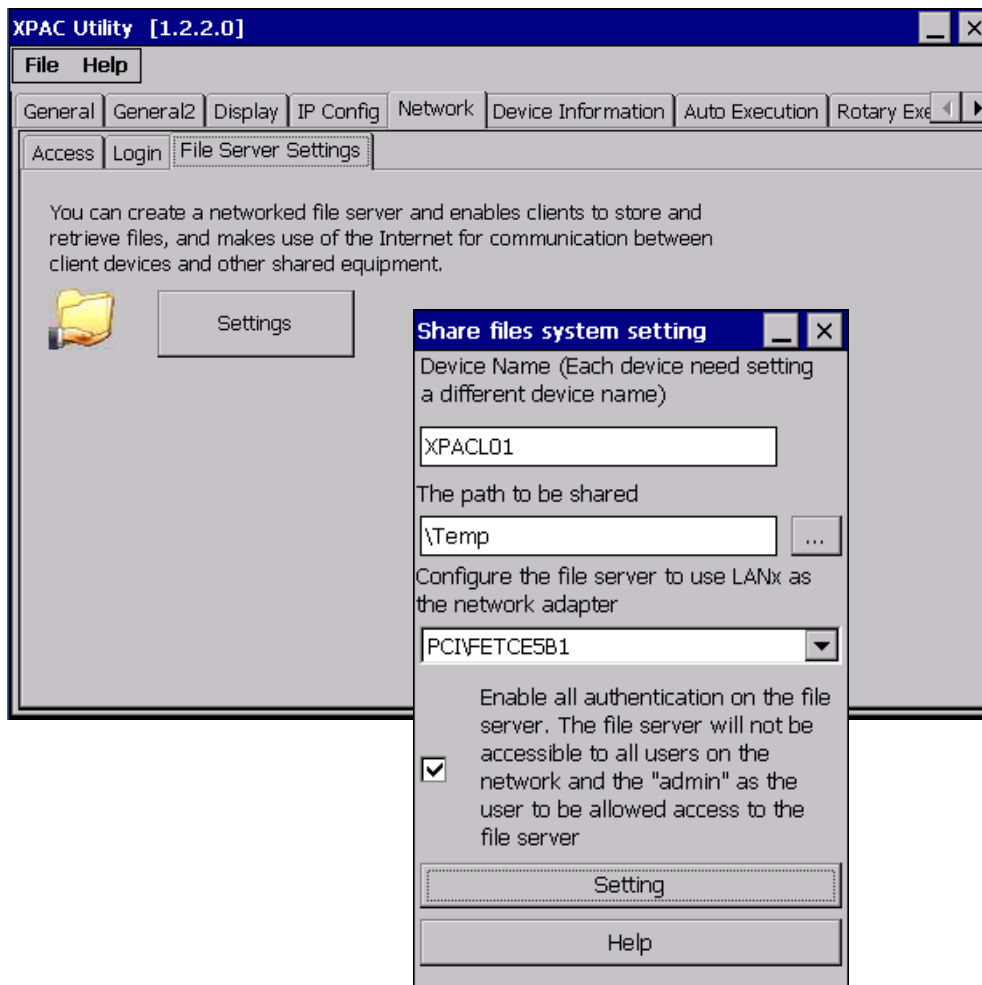

The tab use to

How to use

Set the SMB server

Click the Settings button to set the SMB server path.

3.1.8. Property Tab – Device Information

The **Device Information** tab provides functions to monitor necessary system information of the XP-8000. The information is the most important note of version control for upgrading system.

| Slot | Slot ID | Parameter | Value |
|---------|---------|--------------------|-------------------------|
| Slot 1: | | CPU Type: | LX800 |
| Slot 2: | 87026P | Serial Number: | 01-33-7E-FD-15-00-00-D5 |
| Slot 3: | 87028U | Backplane Version: | 1.0.15.0 |
| Slot 4: | | CPU Version: | 1.0.1.0 |
| Slot 5: | 8064 | OS Version: | 1.3.8.1 |
| Slot 6: | | .NET CF Version: | 3.5.7338.00 |
| Slot 7: | 8064 | SQL CE Version: | 3.5.8080.0 |
| | | XPacSDK Version: | 4.3.3.7 |


3.1.9. Property Tab – Auto Execution

The **Auto Execution** tab provides functions to configure programs running at XP-8000-CE6 startup, it allows users to configure ten execute files at most.

Tips & Warnings



The specific extensions are .exe and .bat, and they are executed in order of program 1, program 2, etc.

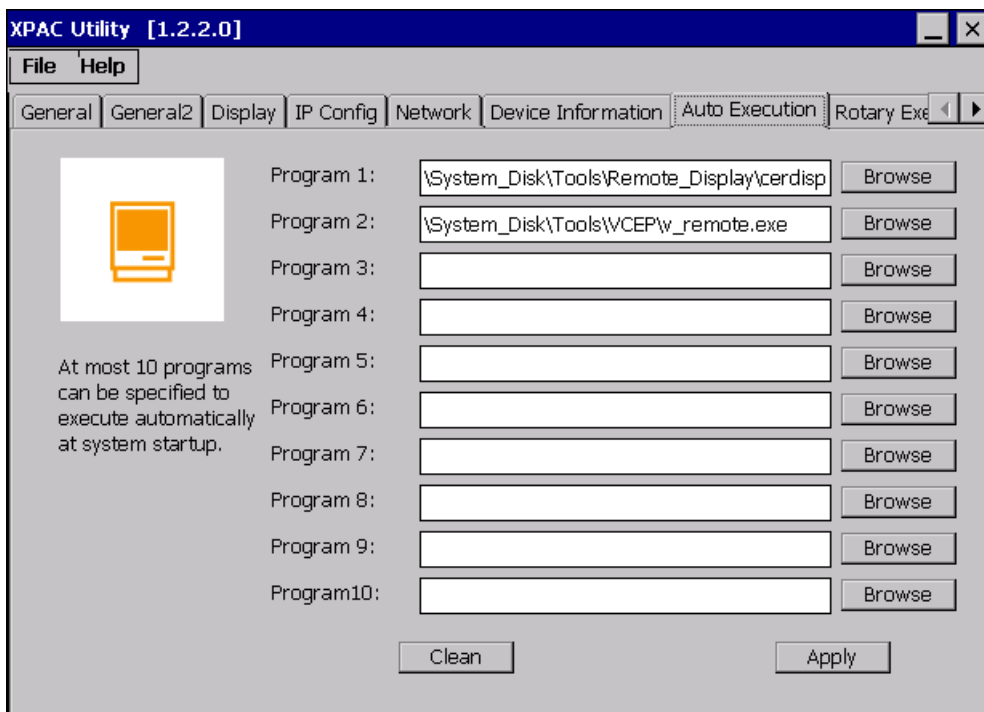

The tab use to


Configure programs running at startup

How to use

Click the **Browse** button to select the execute file which you want, and then click the **Apply** button.

3.1.10. Property Tab – Rotary Execution

The Rotary Execution tab provides function to decide which mode XP-8000-CE6 executes at startup.

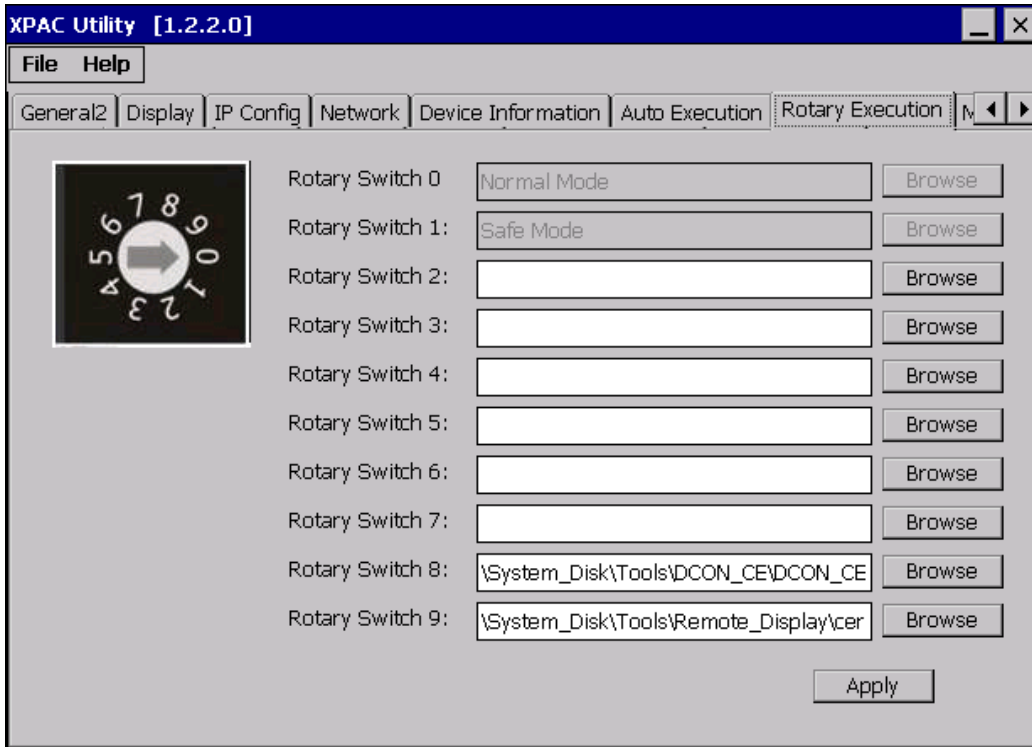


| The tab use to | How to use |
|--|--|
| Start XP-8000-CE6 in normal mode | Turn the rotary switch in position 0 and reboot the XP-8000-CE6. By default, this item is disabled. |
| Start XP-8000-CE6 in safe mode | Turn the rotary switch in position 1 and reboot the XP-8000-CE6. By default, this item is disabled. |
| Start XP-8000-CE6 in normal mode and auto execute the user-specified program | Click the Browse button to select the execute file which you want, click the Apply button, and then turn the rotary switch in position 2/3/4/5/6/7 and reboot the XP-8000-CE6. |
| Start XP-8000-CE6 in normal mode and auto execute the DCON CE utility | Turn the rotary switch in position 8 and reboot the XP-8000-CE6. By default, this item is disabled. |
| Start XP-8000-CE6 in normal mode and auto execute the Remote Display server | Turn the rotary switch in position 9 and reboot the XP-8000-CE6. By default, this item is disabled. |

3.1.11. Property Tab – Multi-IO Modules

The Multi-serial port provides functions for installation of the RS-232/RS-422/RS-485 communication module driver.

The table below shows the expansion RS-232/RS-422/RS-485 communication modules that are compatible with the XP-8000-CE6.

| Item | RS-232 | RS-422/RS-485 | Isolation | Connector |
|----------|--------|---------------|-----------|----------------------|
| I-8112iW | 2 | - | 2500 Vrms | DB-9 x 2 |
| I-8114W | 4 | - | - | DB-37 x 1 |
| I-8114iW | 4 | - | 2500 Vrms | DB-37 x 1 |
| I-8142iW | - | 2 | 2500 Vrms | Terminator block x 1 |
| I-8144iW | - | 4 | 2500 Vrms | Terminator block x 1 |

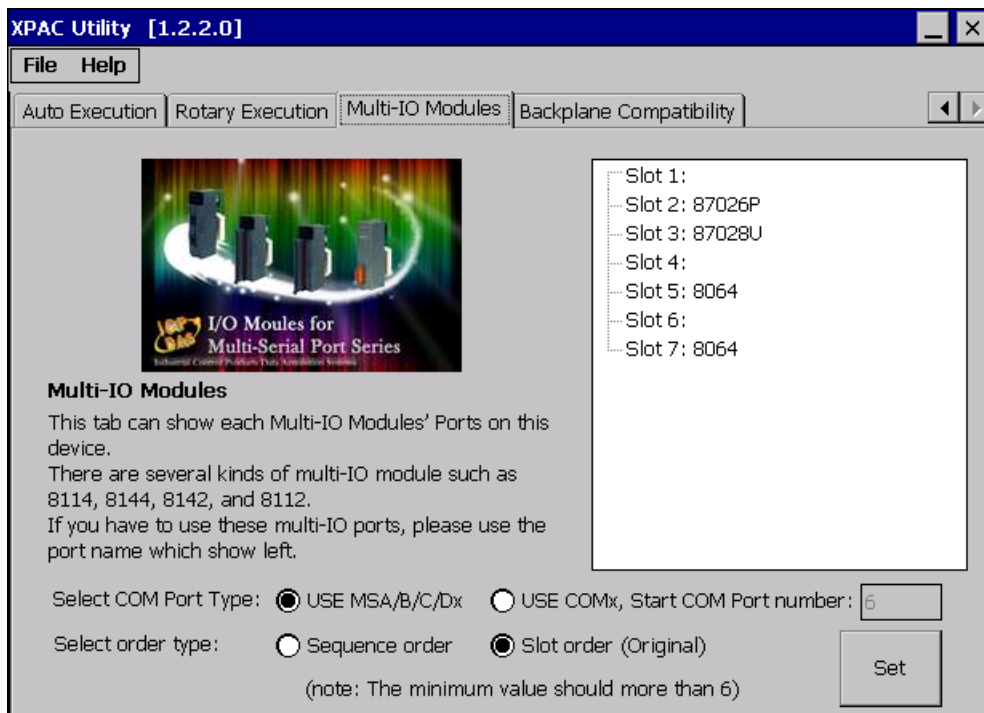

| The tab use to | How to use |
|-------------------|---|
| Set the port name | Select the name type and order type from the Selection COM Port Type and Select order type options, and then click the Set button. |


3.2. DCON Utility Pro

DCON Utility Pro enables users easily to configure and manage the I/O modules via Ethernet or serial ports (RS-232/RS-485).

For more information on how to use DCON Utility Pro to configure I/O modules, please refer to 2.7. Using DCON Utility Pro to Configure I/O Modules


For more detailed information on DCON Utility application, please refer to:

http://www.icpdas.com/root/product/solutions/software/utilities/dcon_utility_pro.html

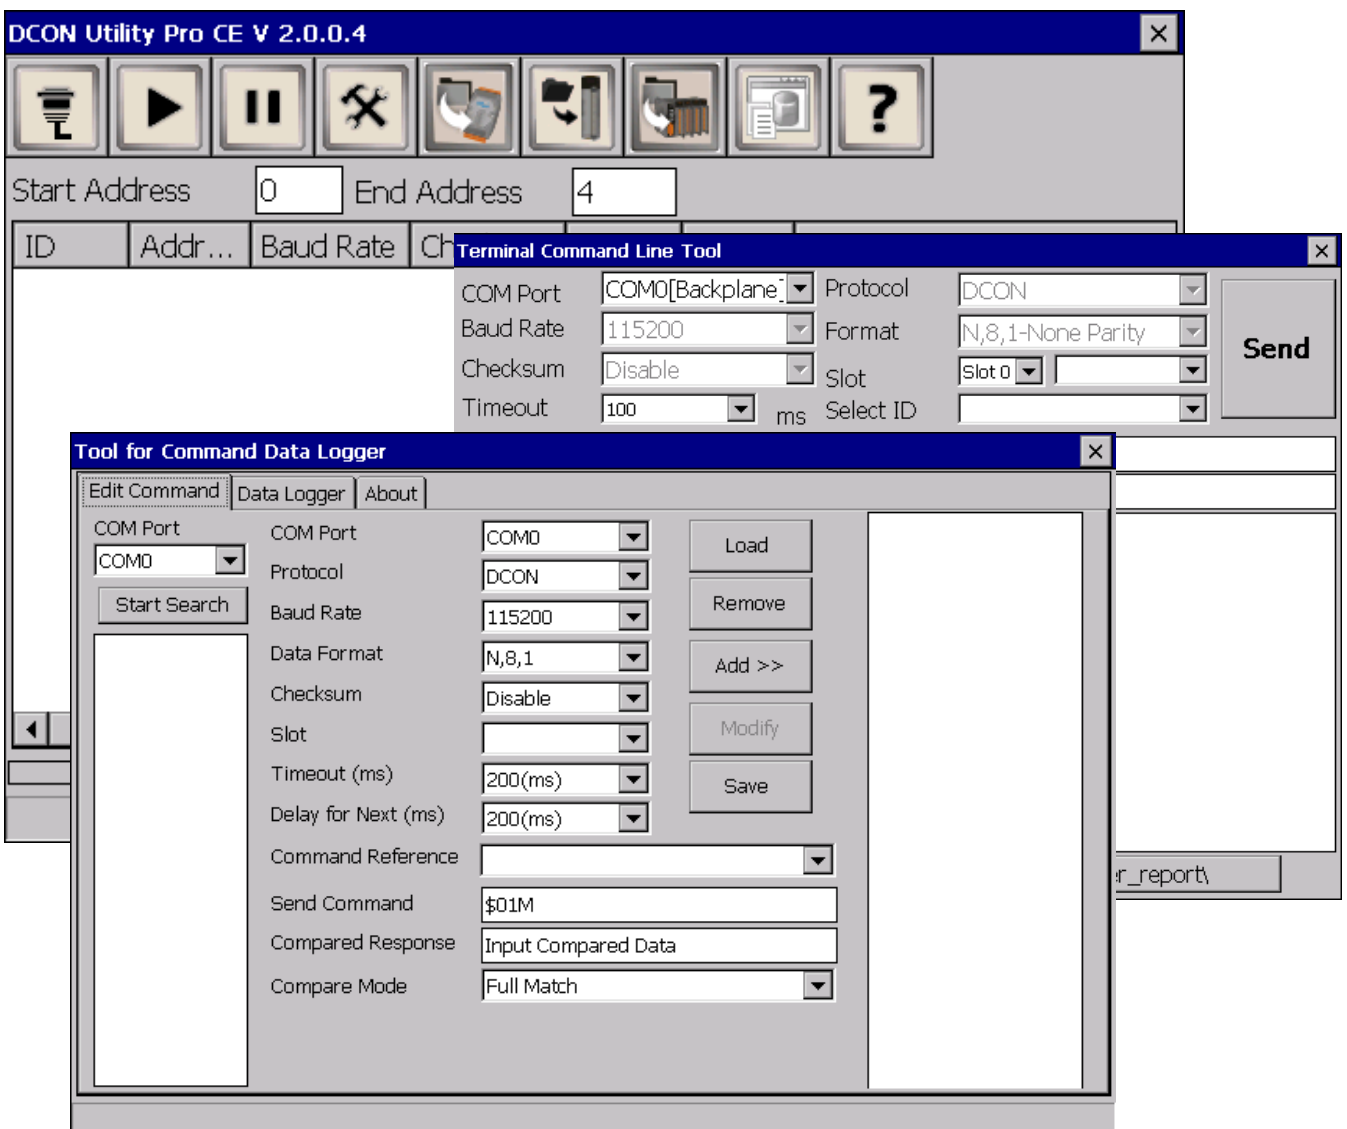


3.3. TaskMgr

The TaskMgr is a Windows CE application, which provides real time info on all processes and threads including System threads, similar in appearance to the Windows Task Manager.

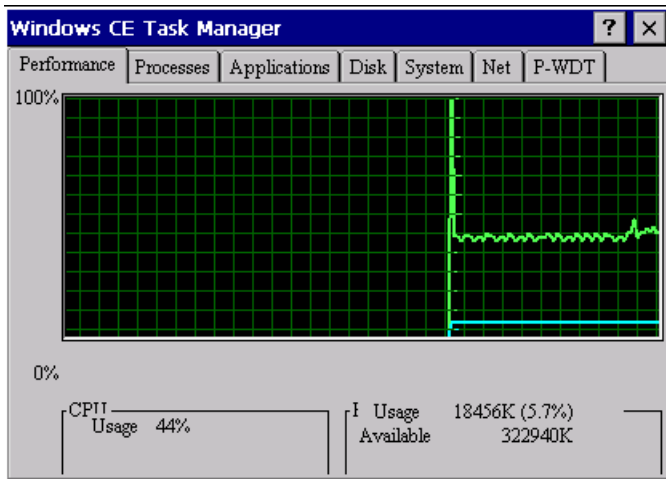

3.4. VCEP

ICP DAS VCEP is designed for managing your XP-8000-CE6 anywhere. No matter where you are, ICP DAS VCEP provides a convenient environment on the Desktop PC and lets you control your XP-8000-CE6 remotely.

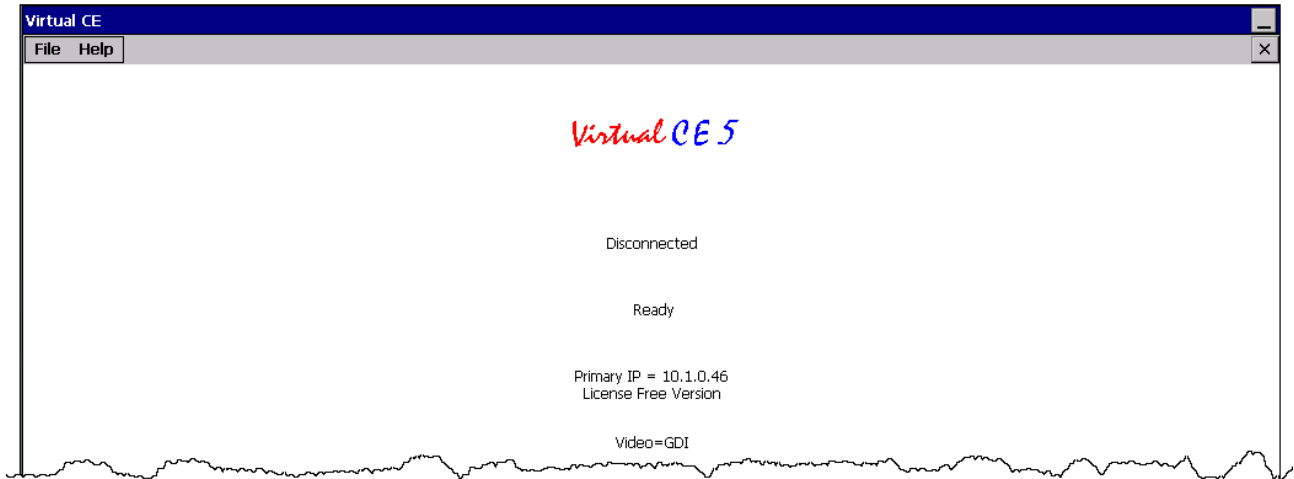

ICP DAS VCEP is composed of two main components: The **Server** which runs on XP-8000-CE6 and the **Client** which runs on a Desktop PC.

Once a connection is established between the client and server (initiated by the client), the client will periodically send requests for screen updates and send mouse/key click information to the server to simulate.

Each video frame is inter-compressed against the previous frame and then intra-compressed with a modified LZW scheme to minimize the amount of data transmitted from server to client.

For more detailed information on VCEP application, please refer to <http://www.icpdas.com/root/product/solutions/software/utilities/vecp/vecp.html>

3.5. Remote_Display

The **Remote Display** allows XP-8000-CE6 to be controlled and monitored from a remote location.

This tool is composed of two parts, a client and a server. The server is a program named `cerdisp.exe` running on XP-8000-CE6. The client is a PC-based program named `cerhost.exe` running on the PC.


Once a connection is established between the client and server (initiated by the client), the client will periodically send requests for screen updates and send mouse/key click information to the server to simulate.

3.6. SendToCOM

The **SendToCOM** uses the serial port to communicate with expansion module. To use the SendToCOM, you can send data to expansion module through the serial port, and receive data from other device through the serial port.


For more information about these commands for communicating with expansion module, please refer to:

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/i-8k_i-87k/i-8k_i-87k_selection.html#b

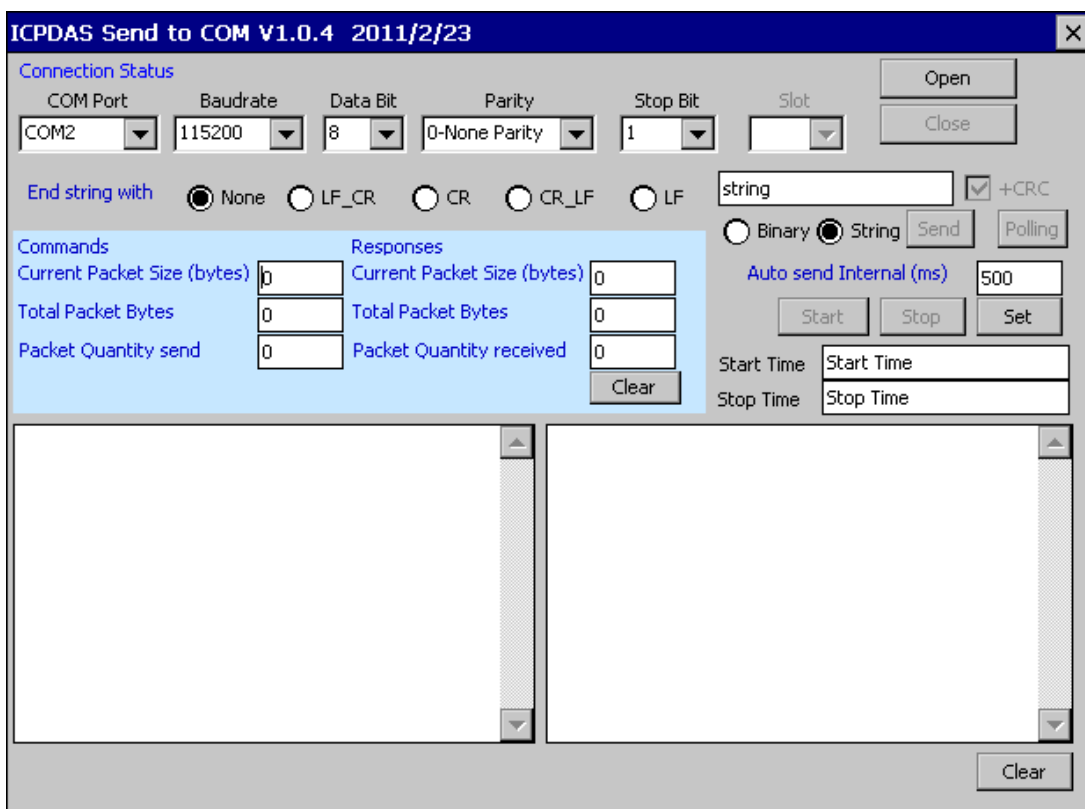


3.7. RegEdit

The **RegEdit** provides a hierarchical representation of the registry on a target computer, similar in appearance to the Windows Registry Editor. The standard registry roots are represented; you can add keys beneath a root to point to existing registry keys, or you can add your own keys. Values can be changed for existing keys, or added for new keys, and default keys can be specified.

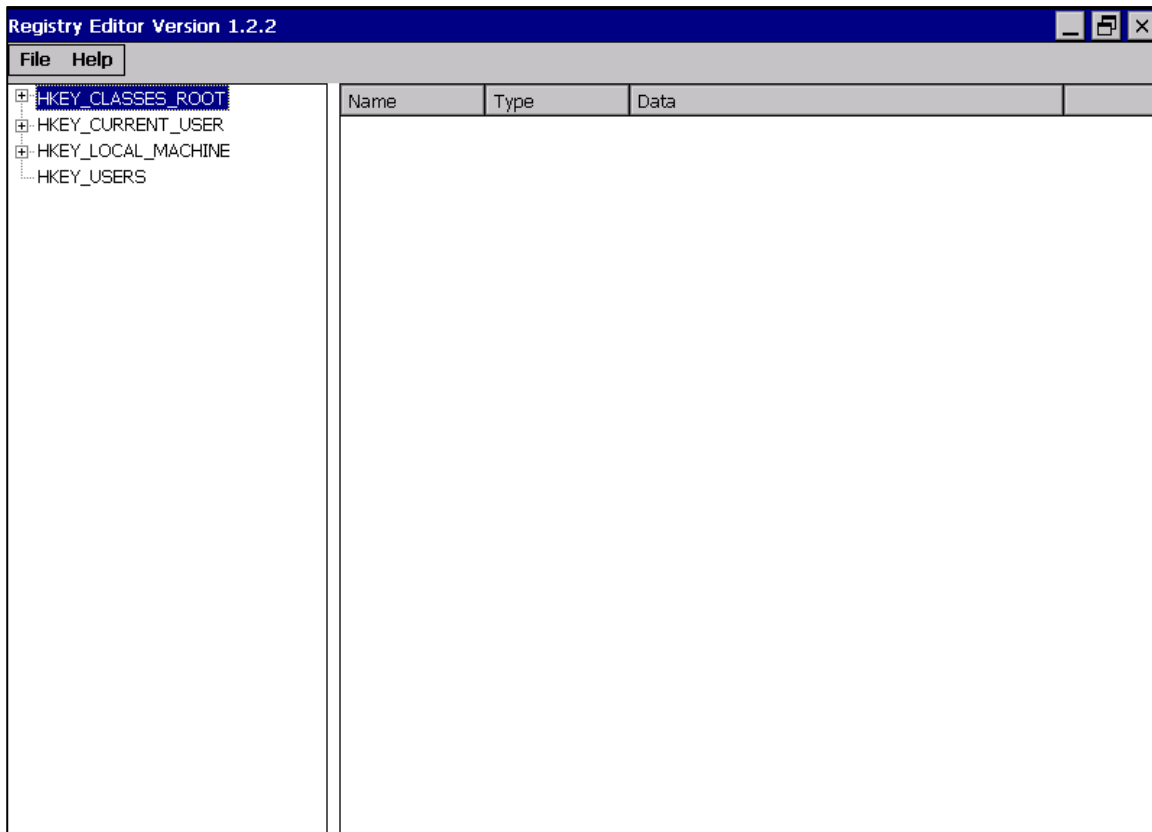


3.8. ISQLW35

The **ISQLW35** is a Windows Embedded Compact 6 functionality that implements SQL Server Compact 3.5 Query.

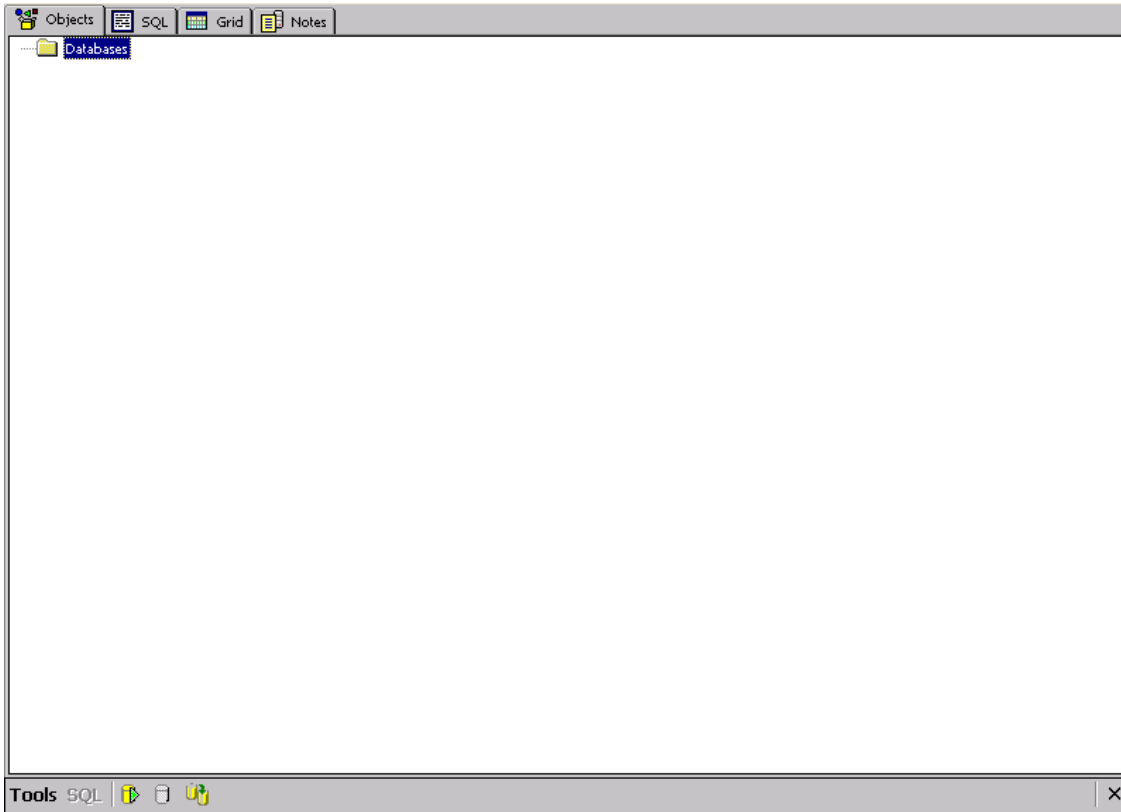

3.9. INotepad

The **INotepad** is a common text-only editor. The resulting files have no format tags or styles.

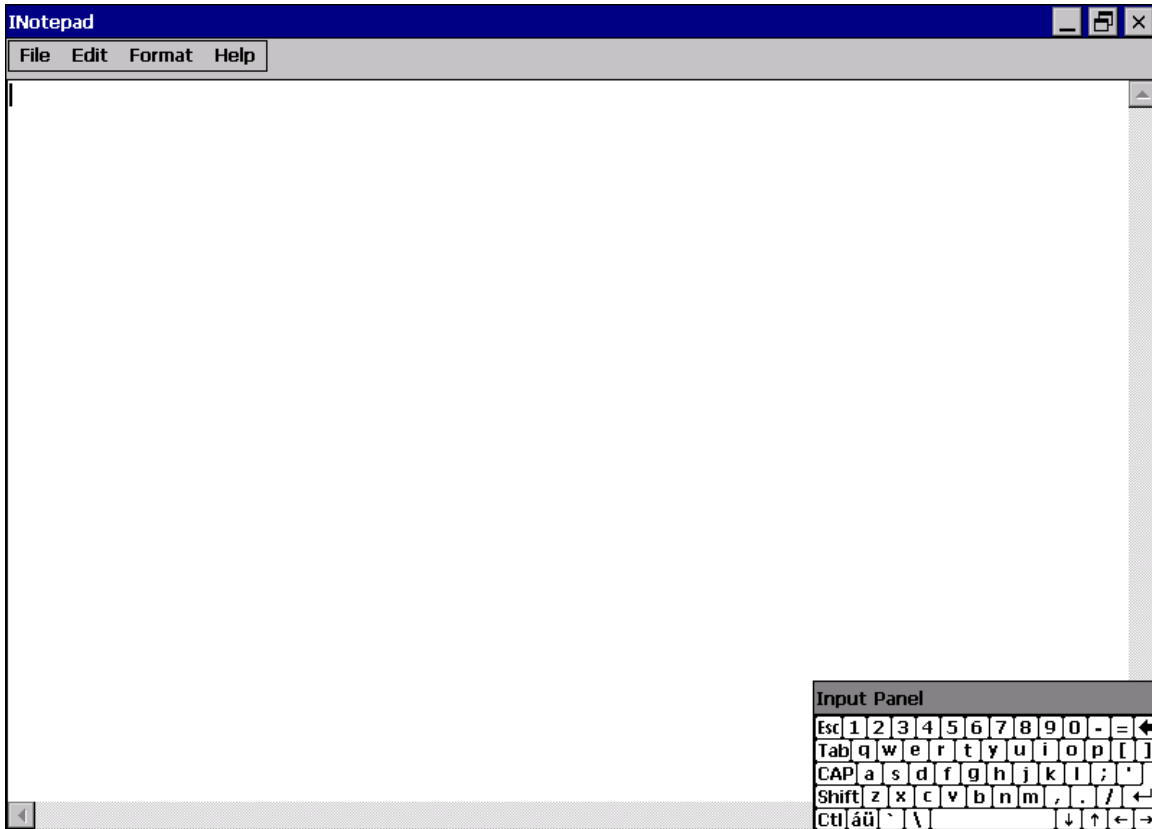

4. Your First XP-8000-CE6 Program

This chapter provides a guided tour that describes the steps needed to set-up a development environment, download, install, configure for user programming with XP-8000-CE6.

4.1. Setting up the Development Environment

Before writing your first program, ensure that you have the necessary development tool and the corresponding SDKs are installed on your system.

4.1.1. Preparing the Development Tools

XP-8000-CE6 has .NET Compact Framework 3.5 installed. Visual Studio takes full advantage of the .NET Compact Framework, which uses public Internet standards to enable integration with new and existing applications running on any platform.

Supported languages include

- Visual Basic.NET
- Visual C#
- Visual C++

Tips & Warnings



1. There is no support for development of both managed and unmanaged code on XP-8000-CE6 platform in VS2010/VS2012.
 2. WinCE-based platform development is only supported in Visual studio Professional edition or better, no Express or Standard edition.
-

The table below provides a summary of the supported development tools and languages required for developing XP-8000-CE6 applications.

| Development Tool | | Language | Visual Basic .Net | Visual C# | Visual C++ |
|-------------------------------|---------------------------------|----------|-------------------|-----------|------------|
| Visual Studio 2005 or earlier | Any version except Professional | | -- | -- | -- |
| | Professional | | ✓ | ✓ | ✓ |
| Visual Studio 2008 | Any version except Professional | | -- | -- | -- |
| | Professional | | ✓ | ✓ | ✓ |
| Visual Studio 2010 or later | Any version except Professional | | -- | -- | -- |
| | Professional | | -- | -- | -- |

✓: Supported, --: Unsupported

4.1.2. Installing the XP-8000-CE6 SDK

The XP-8000-CE6 SDK offers several APIs for customizing the standard features and integrating with other applications, devices and services.

Step 1: Get the latest version of the XP-8000-CE6 SDK

The XP-8000-CE6 SDK can be found from the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\SDK\PlatformSDK\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/sdk/platformsdk/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\SDK\PlatformSDK\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/sdk/platformsdk/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\SDK\PlatformSDK\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/sdk/platformsdk/>

File name: PACSDK_CE_n.n.n_Vxxxx.msi

- n.n.n : platform sdk version number
- xxxx: 2005 indicates VS2005, 2008 indicates VS2008

Step 2: Execute the PACSDK_CE_n.n.n_Vxxxx.msi

Follow the prompts until the installation process is complete.

4.2. First XP-8000-CE6 Program in VB.NET

The best way to learn programming with XP-8000-CE6 is to actually create a XP-8000-CE6 program.

The example below demonstrates how to create a demo program running on XP-8000-CE6 with VB.NET.

To create a demo program with VB.NET that includes the following main steps:

1. Create a new project
2. Specify the path of the PAC reference
3. Add the control to the form
4. Add the event handling for the control
5. Upload the application to XP-8000-CE6
6. Execute the application on XP-8000-CE6

All main steps will be described in the following subsection.

In this tutorial, we will assume that you have installed XP-8000-CE6 SDK on PC and used the Visual Studio 2008 for application development.


4.2.1. Create a new project

The Visual VB.net project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Start Visual Studio 2008




Step 2: On the File menu, point to New, and then click Project

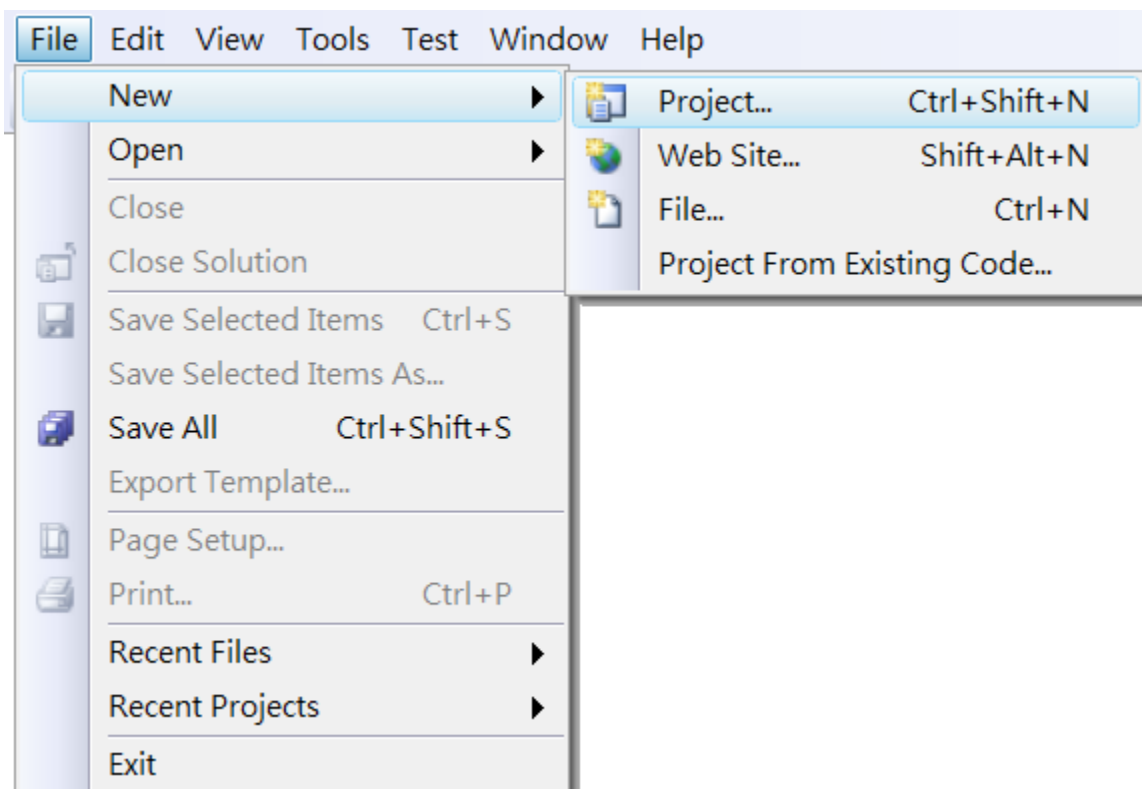

Step 3: In the Project types pane, expand Visual Basic node and select Smart Device

Step 4: In the list of Templates, select Smart Device Project

Step 5: Specify a name and a location for the application and then click OK

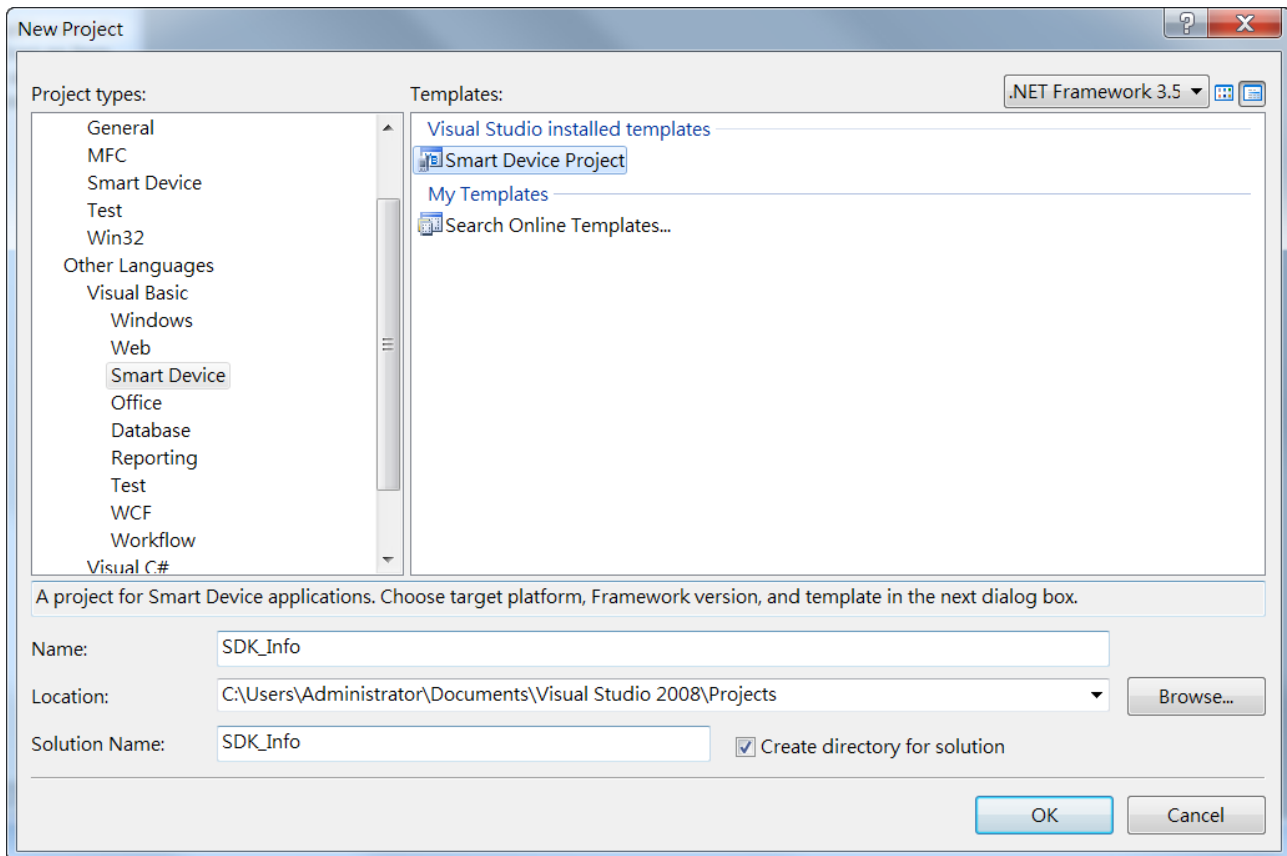

Step 6: In the Target platform, select Windows CE


Step 7: In the .NET Compact Framework version, select .NET Compact Framework Version 3.5.

Tips & Warnings



XP-8000-CE6 only supports .NET Compact Framework Version 3.5, if your application uses .NET Compact Framework Version 2.0 there is no guarantee that the program will function correctly.

Step 8: In the list of templates, select Device Application. Click OK

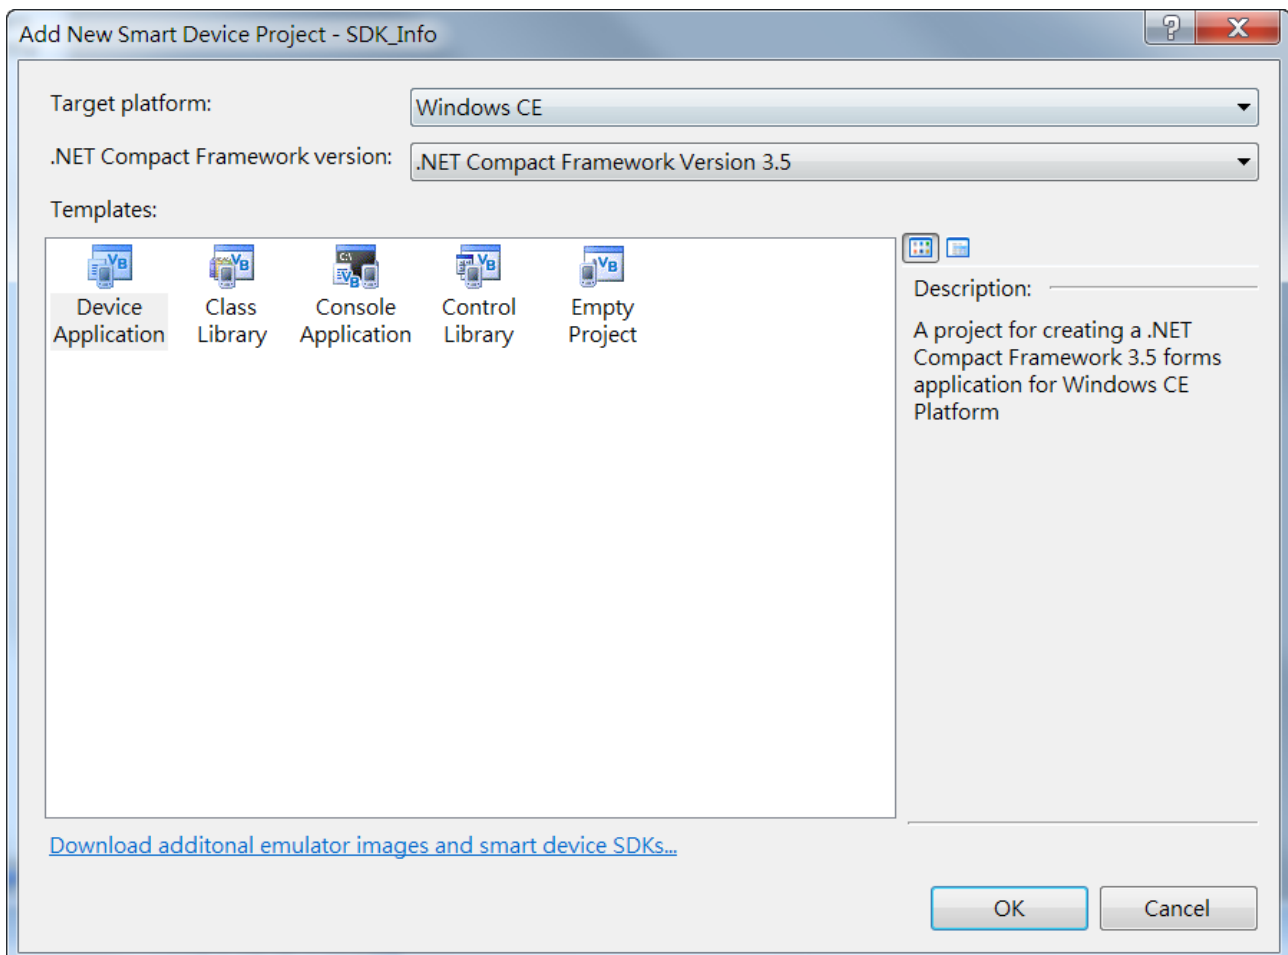

4.2.2. Specify the path of the PAC reference

The PAC SDK provides a complete solution to integrate with XP-8000-CE6 and it's compatible with Visual C#, Visual Basic.NET and C++. In order to use a component in your application, you must first add a reference to it.

Step1: Get the PACNET.dll



The PACNET.dll can be found from the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\SDK\XPacNET\PACNET\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/sdk/xpacnet/pacnet/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\SDK\XPacNET\PACNET\


<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/sdk/xpacnet/pacnet/>

- **For XP-8x41-Atom-CE6:**


CD:\XPAC-ATOM-CE6\SDK\XPacNET\PACNET\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/sdk/xpacnet/pacnet/>

Step 2: On the Project menu, and then click Add Reference...

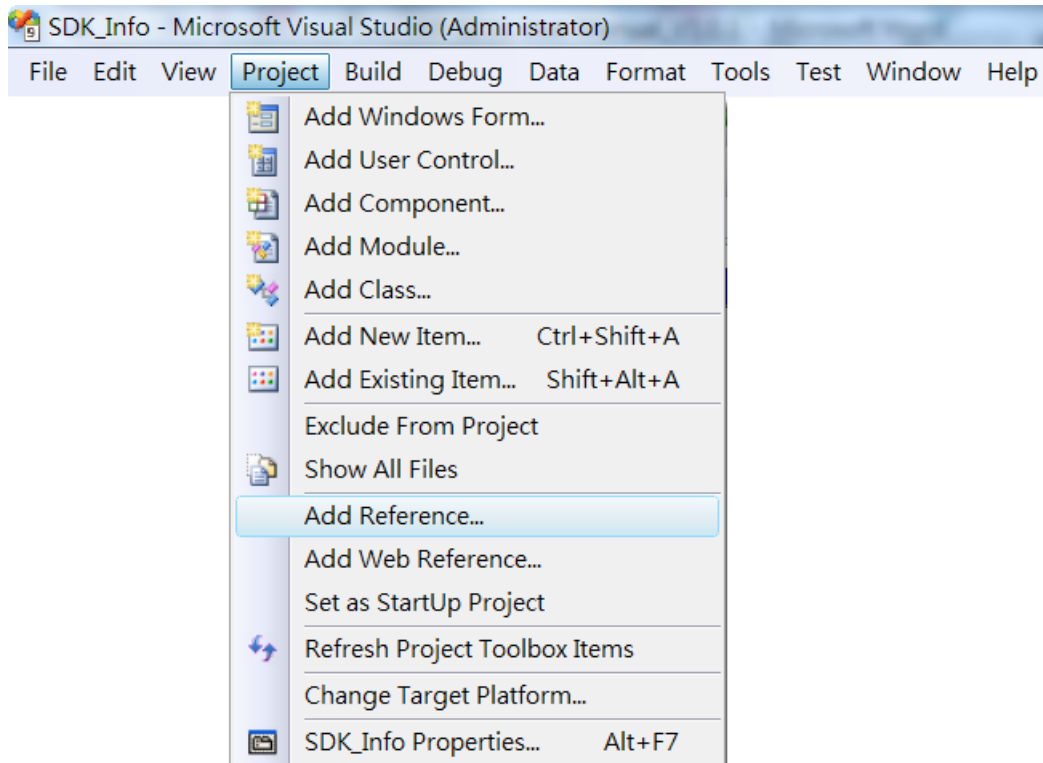

Step 3: On the Browse tab and browse to where the PACNET.dll are installed, and then click OK

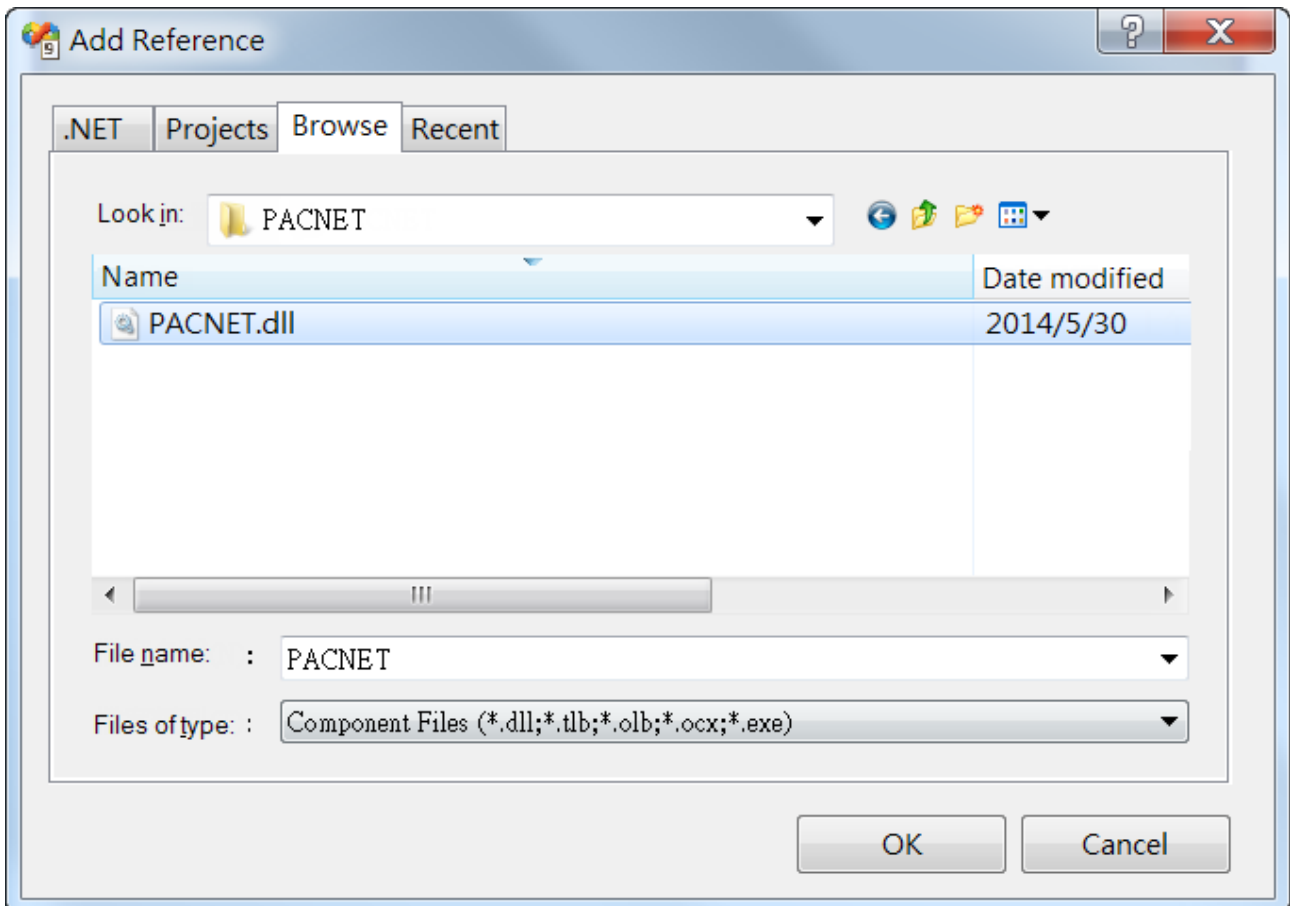


4.2.3. Add the control to the form


You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.

Step 1: On the Toolbox panel, drag a Button control onto the form

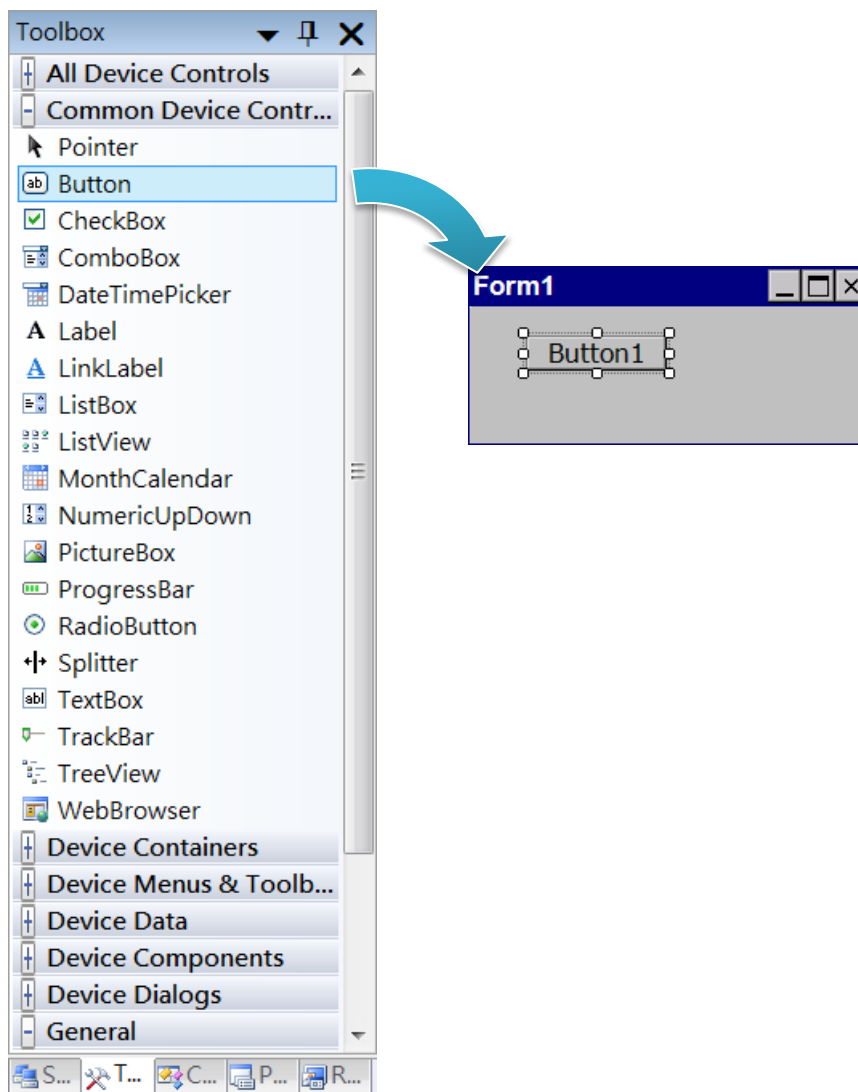


Step 2: On the Properties panel, type Check the SDK version in the Text field

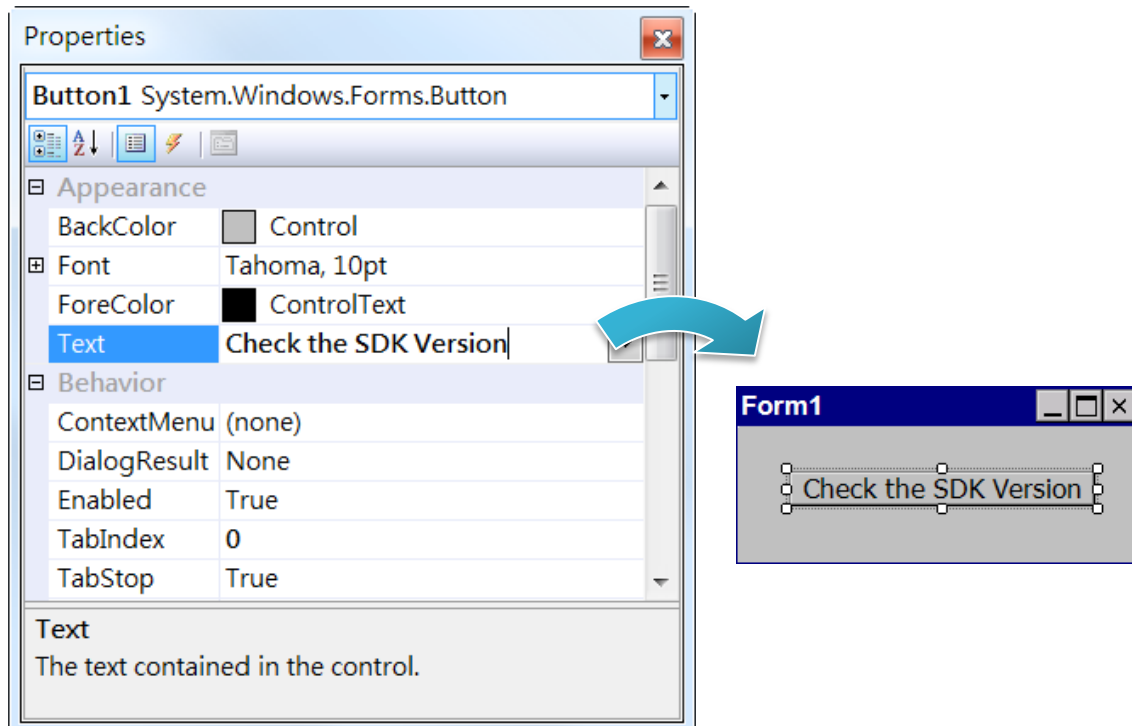

4.2.4. Add the event handling for the control

You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

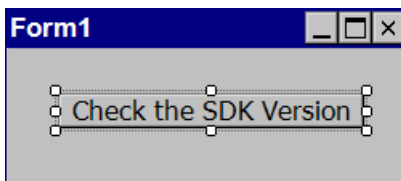

Step 2: Inserting the following code

```
Dim data(30) As Byte  
PACNET.Sys.GetSDKVersion(data)  
MessageBox.Show(PACNET.MISC.WideString(data))
```

```
Public Class Form1  
    Private Sub Button1_Click(ByVal sender As System.Object, ByVal e As  
        Dim data(30) As Byte  
        PACNET.Sys.GetSDKVersion(data)  
        MessageBox.Show(PACNET.MISC.WideString(data))  
    End Sub  
End Class
```


Tips & Warnings




The "PACNET" of "using PACNET" is case- sensitive.

4.2.5. Upload the application to XP-8000-CE6

XP-8000-CE6 supports FTP server service. You can upload files to XP-8000-CE6 or download files from a public FTP server.

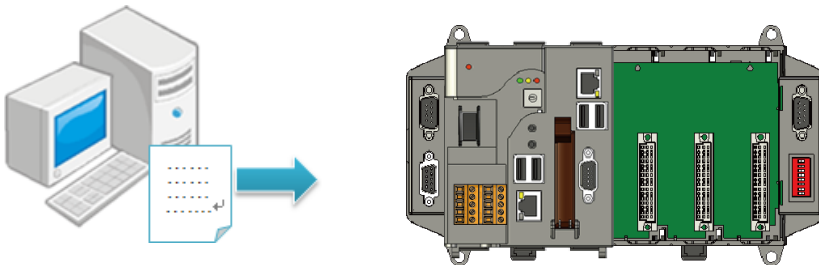

Step 1: On the Build menu, and then click Build [Project Name]

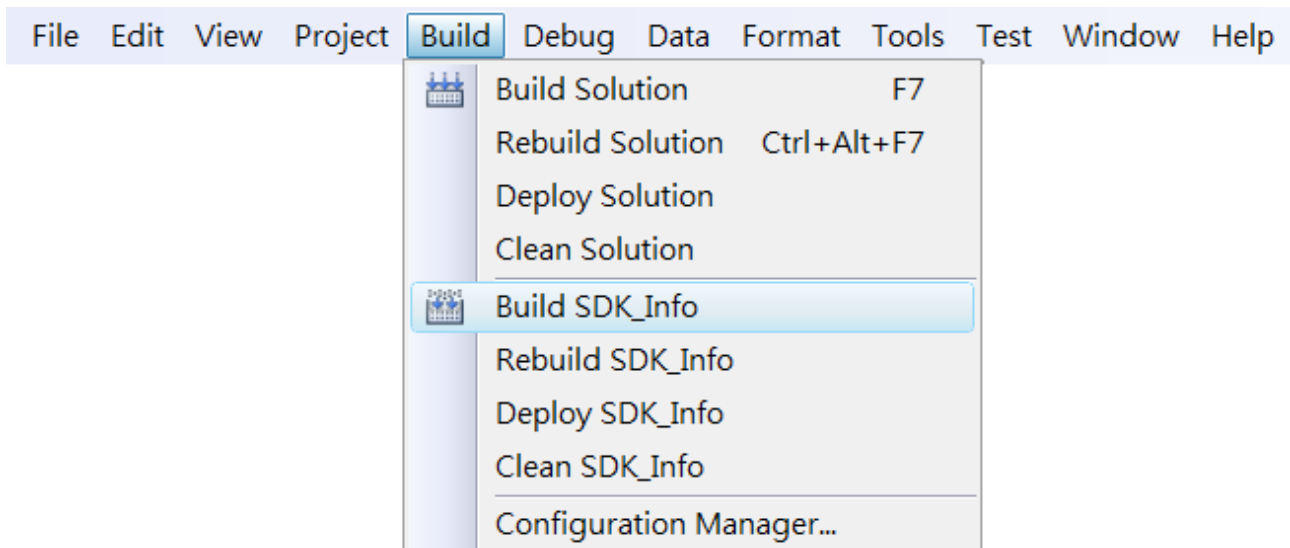


Step 2: Open the browser and type the IP address of XP-8000-CE6

Step 3: Upload the application and the corresponding PACNET.dll files to XP-8000-CE6

Tips & Warnings




For applications programming in C# and VB.net with .net compact framework, when executing these application on XP-8000-CE6, the corresponding PACNET.dll must be in the same directory as the .exe file.

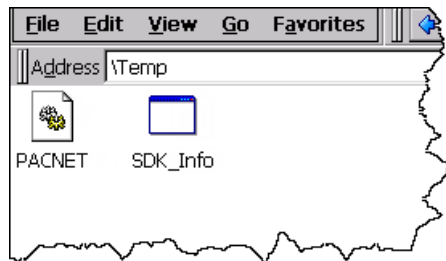

4.2.6. Execute the application on XP-8000-CE6

After uploading the application to XP-8000-CE6, you can just double-click it on XP-8000-CE6 to execute it.

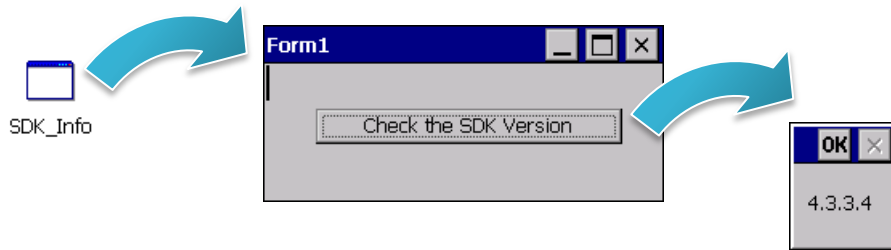

4.3. First XP-8000-CE6 Program in Visual C#

The best way to learn programming with XP-8000-CE6 is to actually create a XP-8000-CE6 program.

The example below demonstrates how to create a demo program running on XP-8000-CE6 with Visual C#.

To create a demo program with Visual C# that includes the following main steps:

1. Create a new project
2. Specify the path of the PAC reference
3. Add the control to the form
4. Add the event handling for the control
5. Upload the application to XP-8000-CE6
6. Execute the application on XP-8000-CE6

All main steps will be described in the following subsection.

In this tutorial, we will assume that you have installed XP-8000-CE6 SDK on PC and used the Visual Studio 2008 for application development.


4.3.1. Create a new project

The Visual C# project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Start Visual Studio 2008




Step 2: On the File menu, point to New, and then click Project

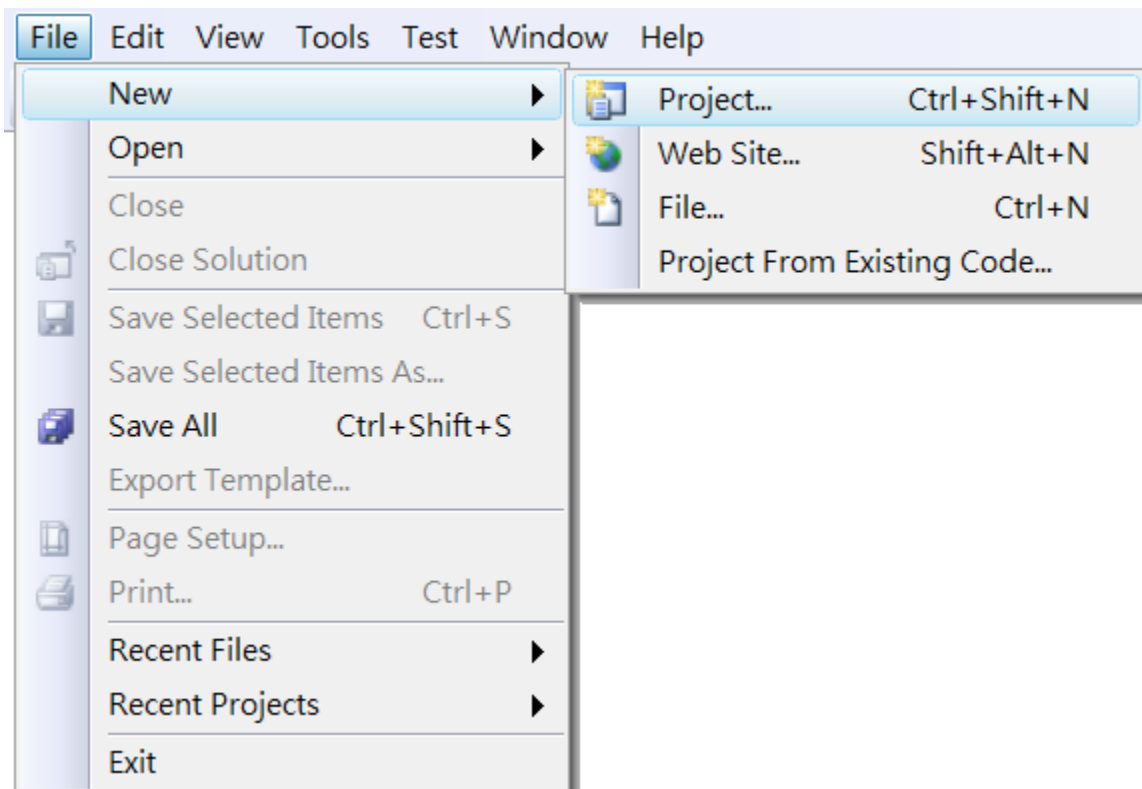

Step 3: In the Project types pane, expand Visual C# node and select Smart Device

Step 4: In the list of Templates, select Smart Device Project

Step 5: Specify a name and a location for the application and then click OK

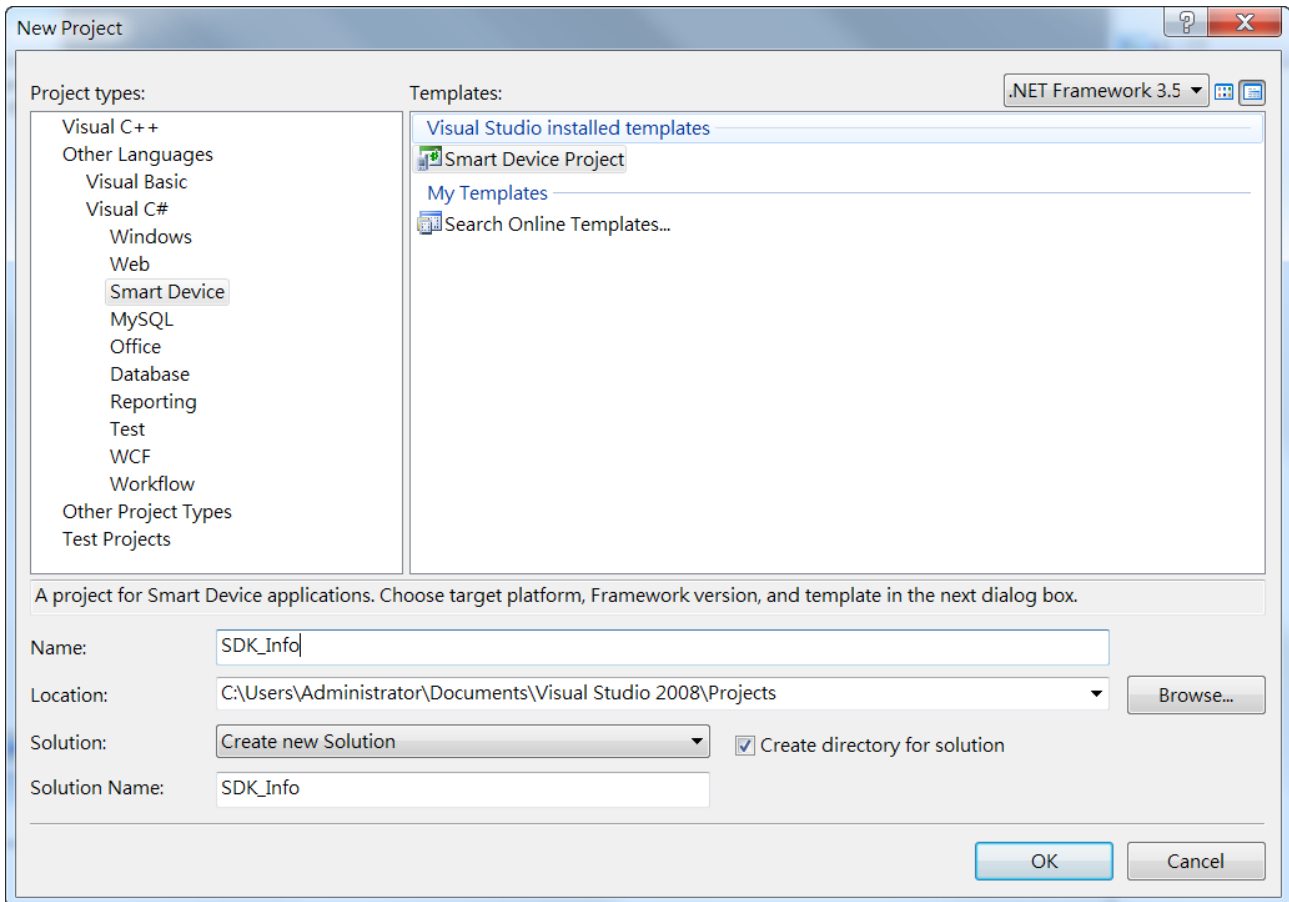

Step 6: In the Target platform, select Windows CE


Step 7: In the .NET Compact Framework version, select .NET Compact Framework Version 3.5.

Tips & Warnings



Windows CE7 only supports .NET Compact Framework Version 3.5, if your application uses .NET Compact Framework Version 2.0 there is no guarantee that the program will function correctly.

Step 8: In the list of templates, select Device Application. Click OK

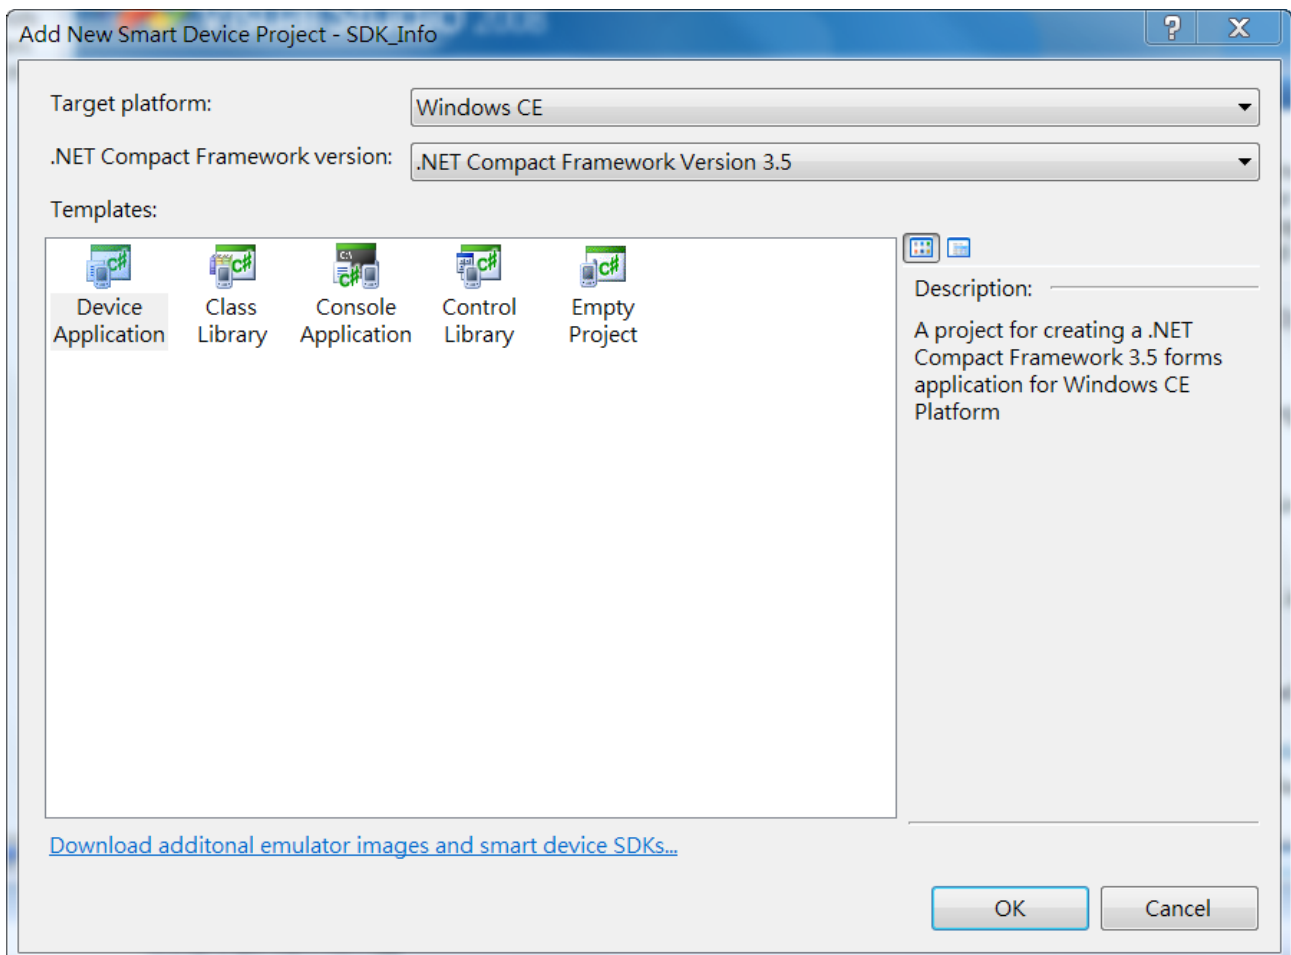

4.3.2. Specify the path of the PAC reference

The PAC SDK provides a complete solution to integrate with XP-8000-CE6 and it's compatible with Visual C#, Visual Basic.NET and C++. In order to use a component in your application, you must first add a reference to it.

Step1: Get the PACNET.dll



The PACNET.dll can be found from the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\SDK\XPacNET\PACNET\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/sdk/xpacnet/pacnet/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\SDK\XPacNET\PACNET\


<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/sdk/xpacnet/pacnet/>

- **For XP-8x41-Atom-CE6:**


CD:\XPAC-ATOM-CE6\SDK\XPacNET\PACNET\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/sdk/xpacnet/pacnet/>

Step 2: On the Project menu, and then click Add Reference...

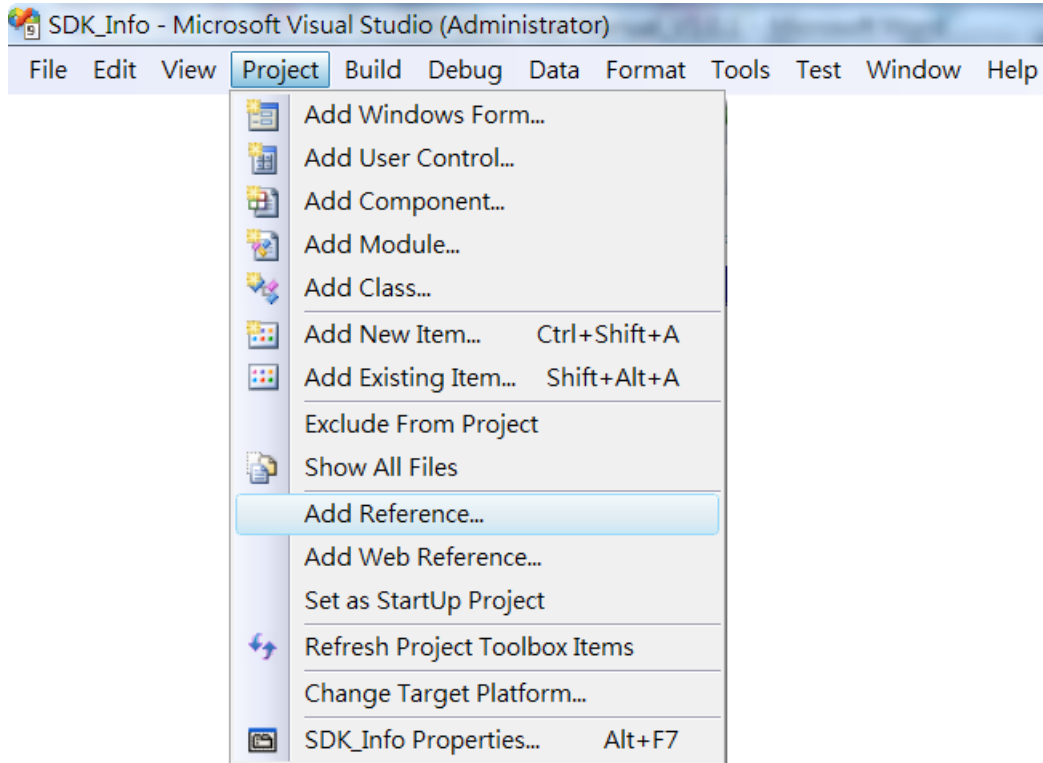

Step 3: On the Browse tab and browse to where the PACNET.dll are installed, and then click OK

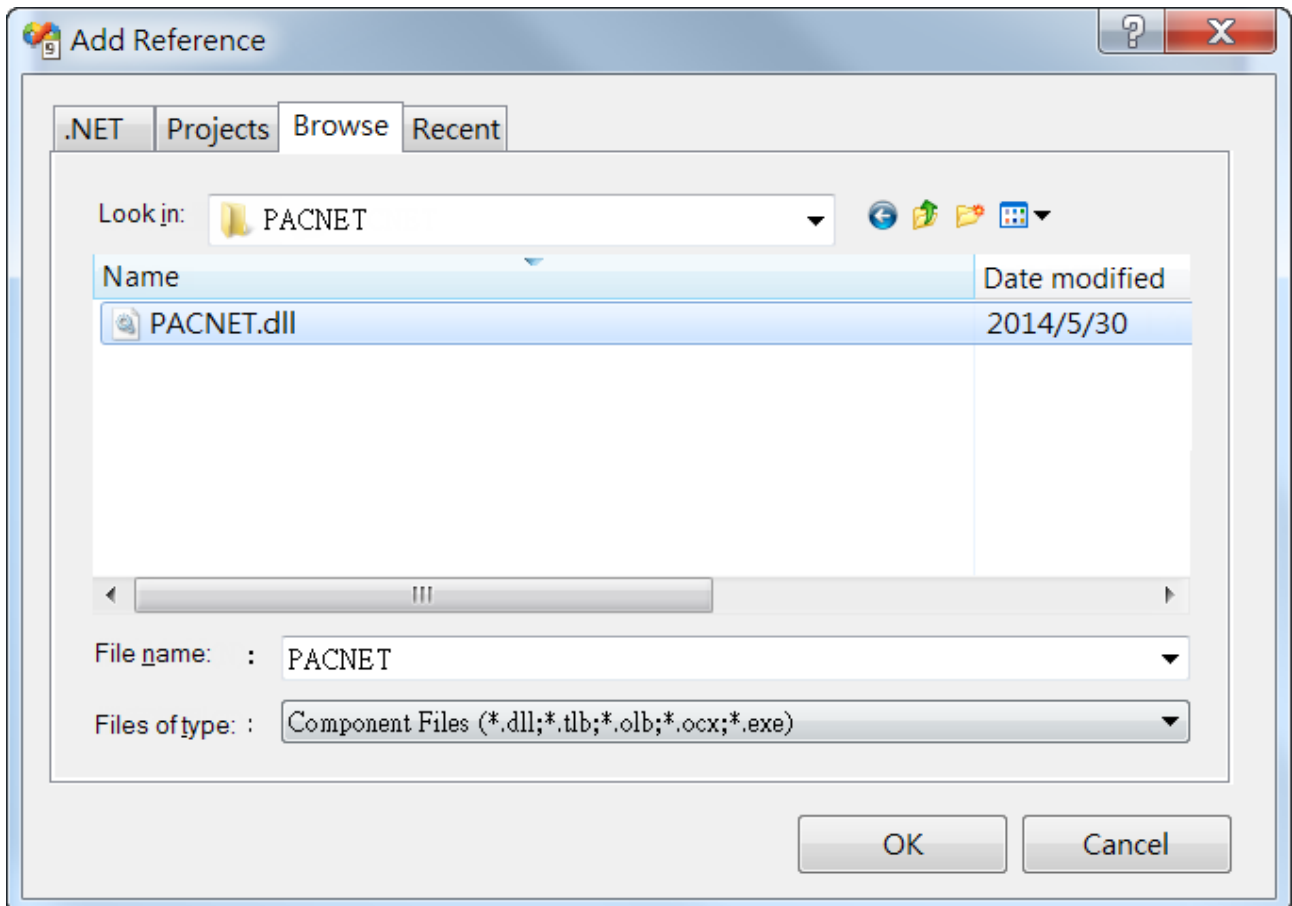


4.3.3. Add the control to the form


You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.

Step 1: On the Toolbox panel, drag a Button control onto the form

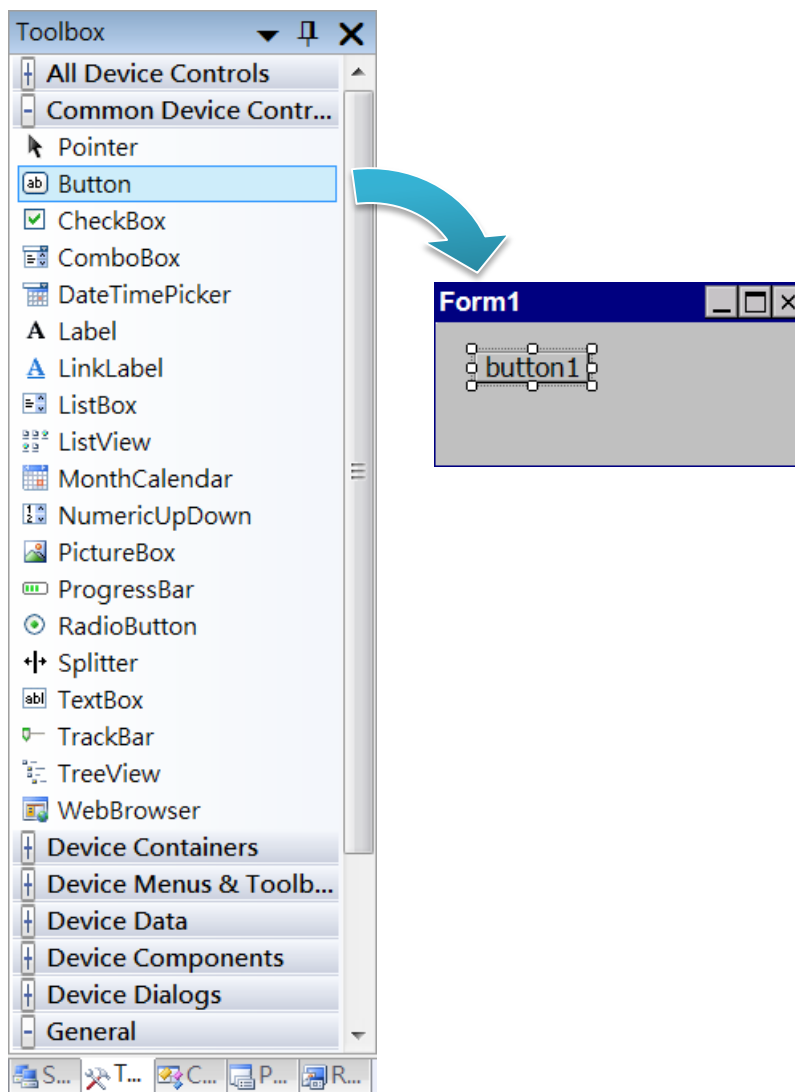


Step 2: On the Properties panel, type Check the SDK version in the Text field

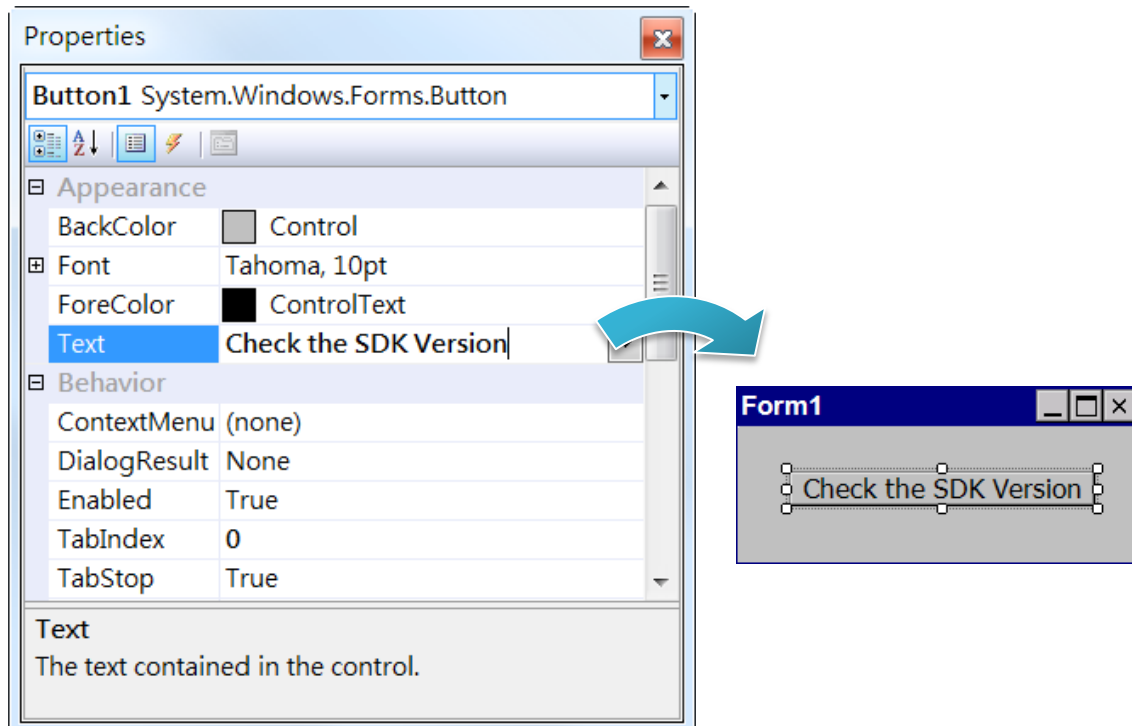

4.3.4. Add the event handling for the control


You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

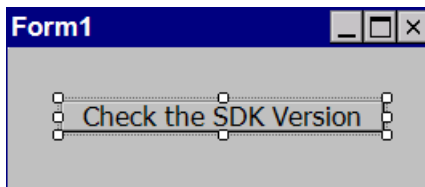

Step 2: Inserting the following code

```
byte[] data = new byte[30];  
PACNET.Sys.GetSDKVersion(data);  
MessageBox.Show(PACNET.MISC.WideString(data));
```

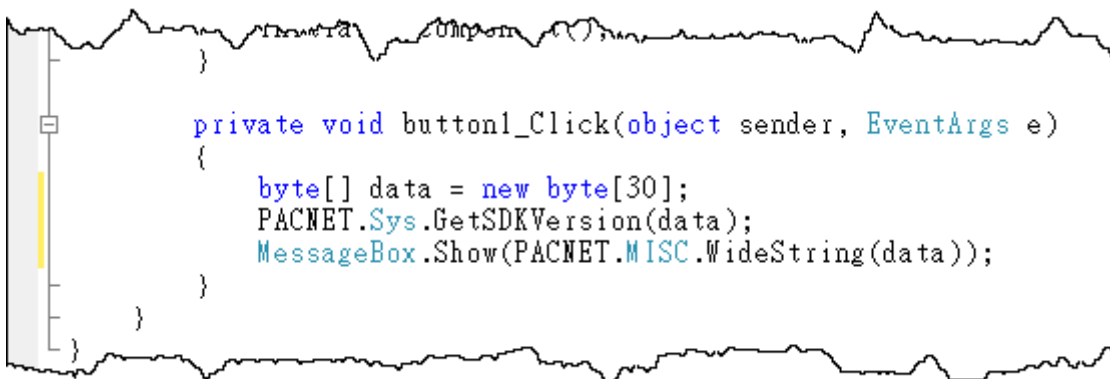


Tips & Warnings




The "PACNET" of "using PACNET" is case- sensitive.

4.3.5. Upload the application to XP-8000-CE6

XP-8000-CE6 supports FTP server service. You can upload files to XP-8000-CE6 or download files from a public FTP server.

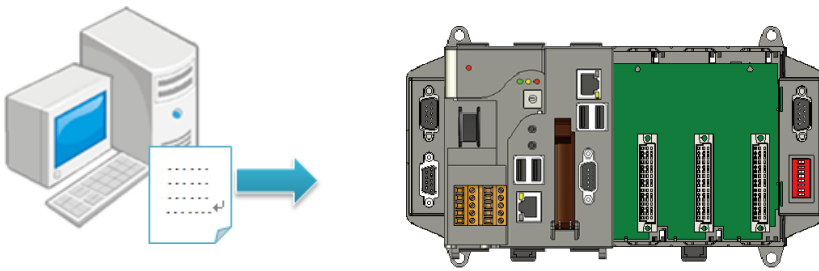

Step 1: On the Build menu, and then click Build [Project Name]

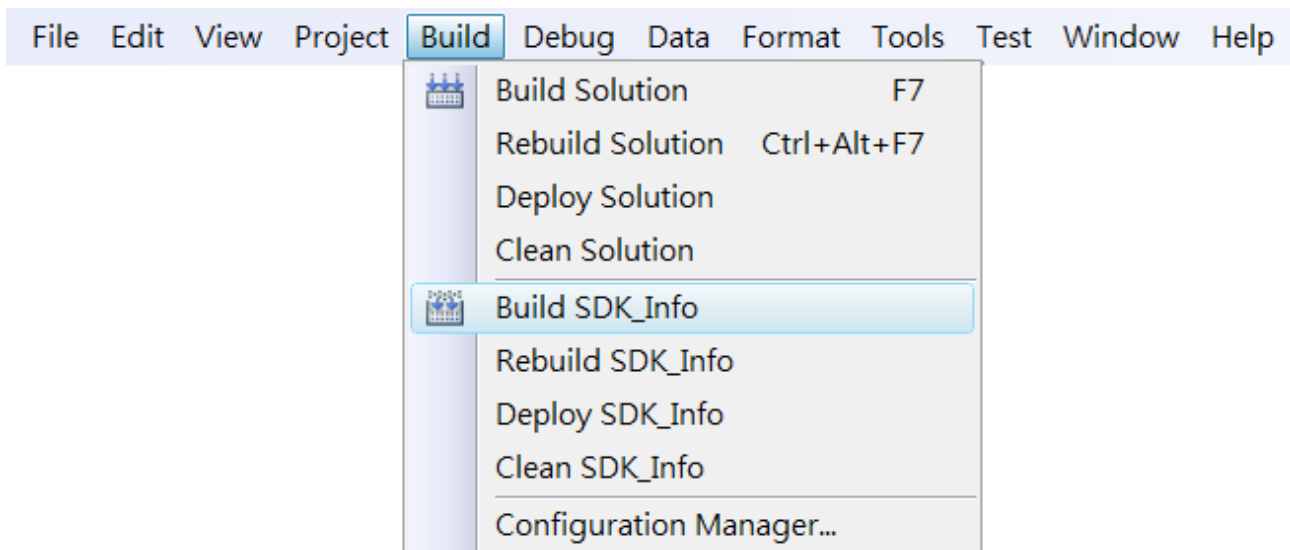


Step 2: Open the browser and type the IP address of XP-8000-CE6

Step 3: Upload the application and the corresponding PACNET.dll files to XP-8000-CE6

Tips & Warnings




For applications programming in C# and VB.net with .net compact framework, when executing these application on XP-8000-CE6, the corresponding PACNET.dll must be in the same directory as the .exe file.

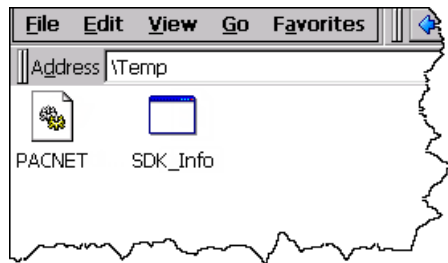

4.3.6. Execute the application on XP-8000-CE6

After uploading the application to XP-8000-CE6, you can just double-click it on XP-8000-CE6 to execute it.

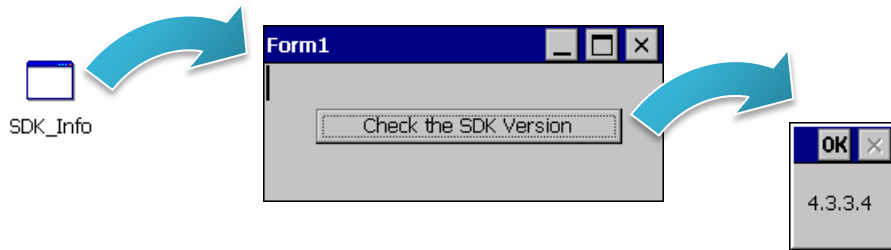

4.4. First XP-8000-CE6 Program in Visual C++

The best way to learn programming with XP-8000-CE6 is to actually create a XP-8000-CE6 program.

The example below demonstrates how to create a demo program running on XP-8000-CE6 with Visual C++.

To create a demo program with Visual C# that includes the following main steps:

1. Create a new project
2. Configure the Platform
3. Include the Header files and Libraries of the PAC SDK
4. Add the control to the form
5. Add the event handling for the control
6. Upload the application to XP-8000-CE6
7. Execute the application on XP-8000-CE6

All main steps will be described in the following subsection.

In this tutorial, we will assume that you have installed XP-8000-CE6 SDK on PC and used the Visual Studio 2008 for application development.


4.4.1. Create a new project

The Visual C# project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Start Visual Studio 2008




Step 2: On the File menu, point to New, and then click Project

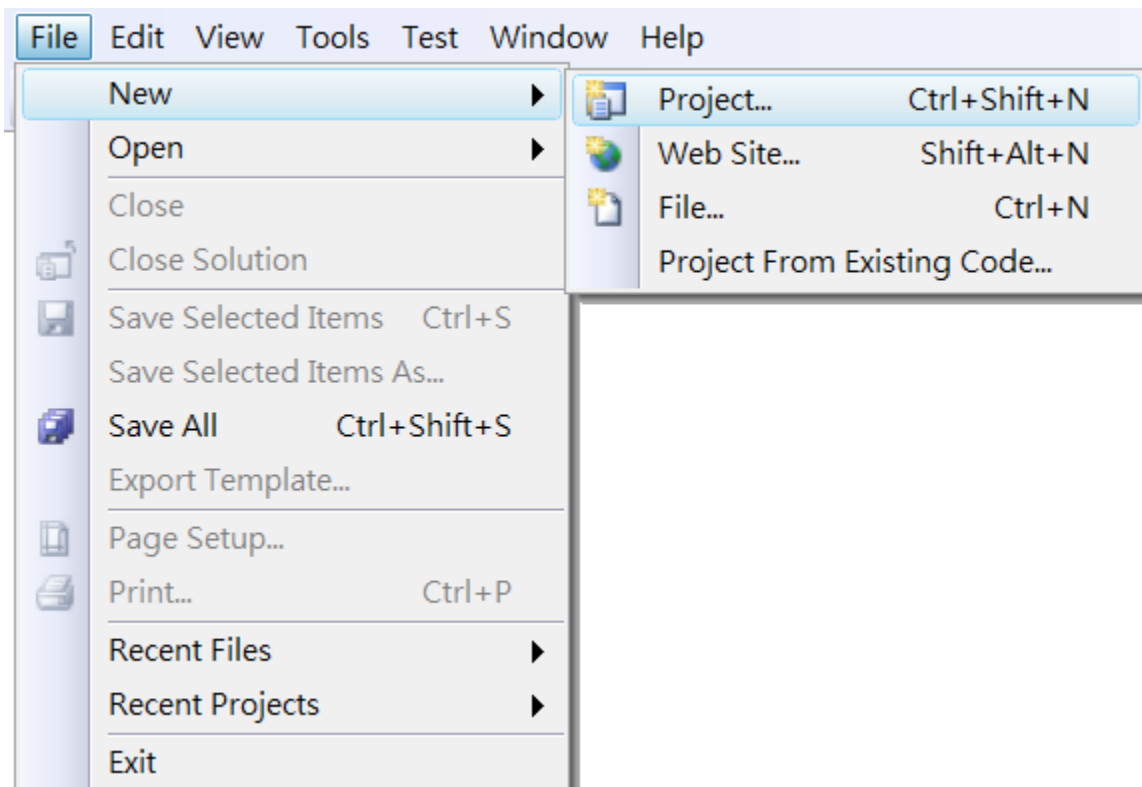


Step 3: In the Project types pane, expand Visual C++ node and select Smart Device

Step 4: In the list of Templates, select MFC Smart Device Application


Step 5: Specify a name and a location for the application and then click OK

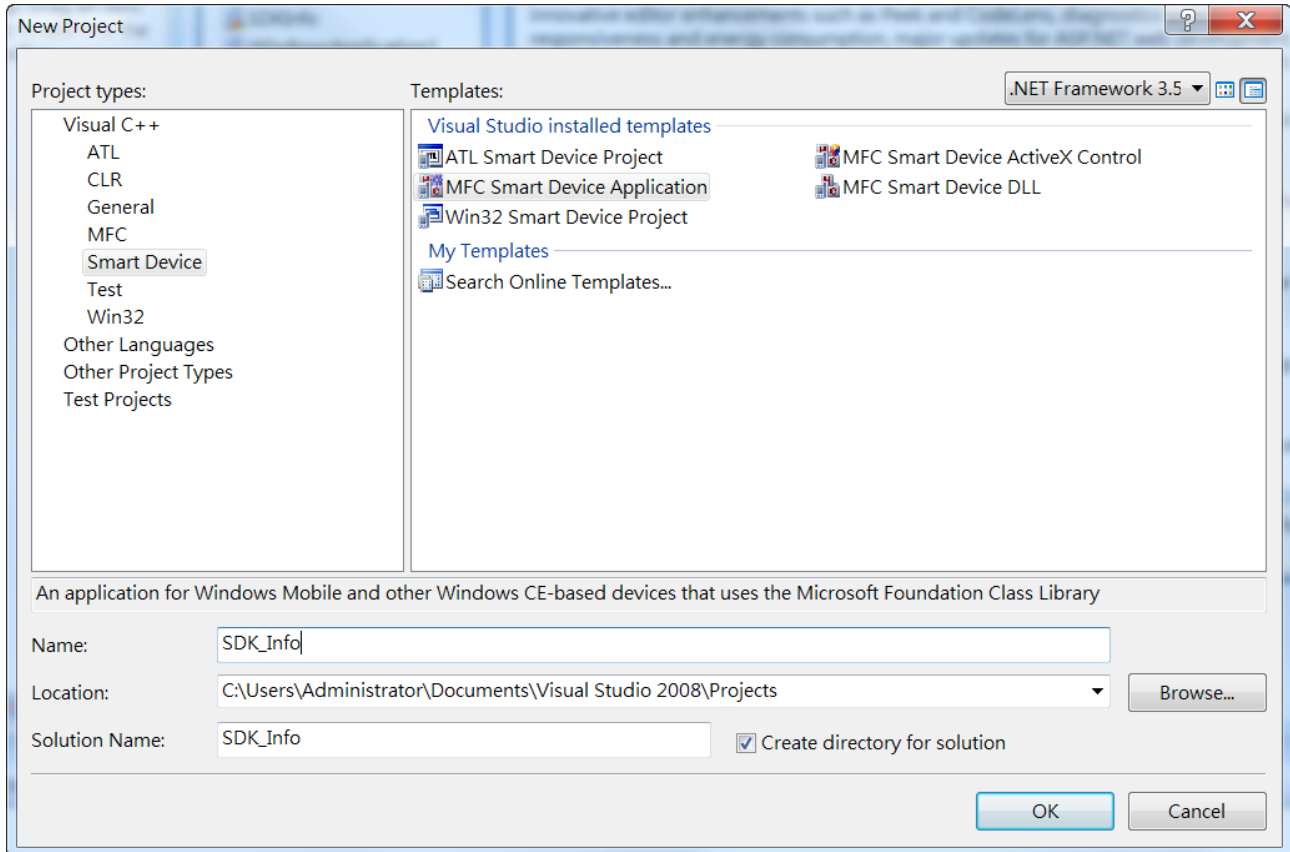


Step 6: On the first page of the wizard, click Next

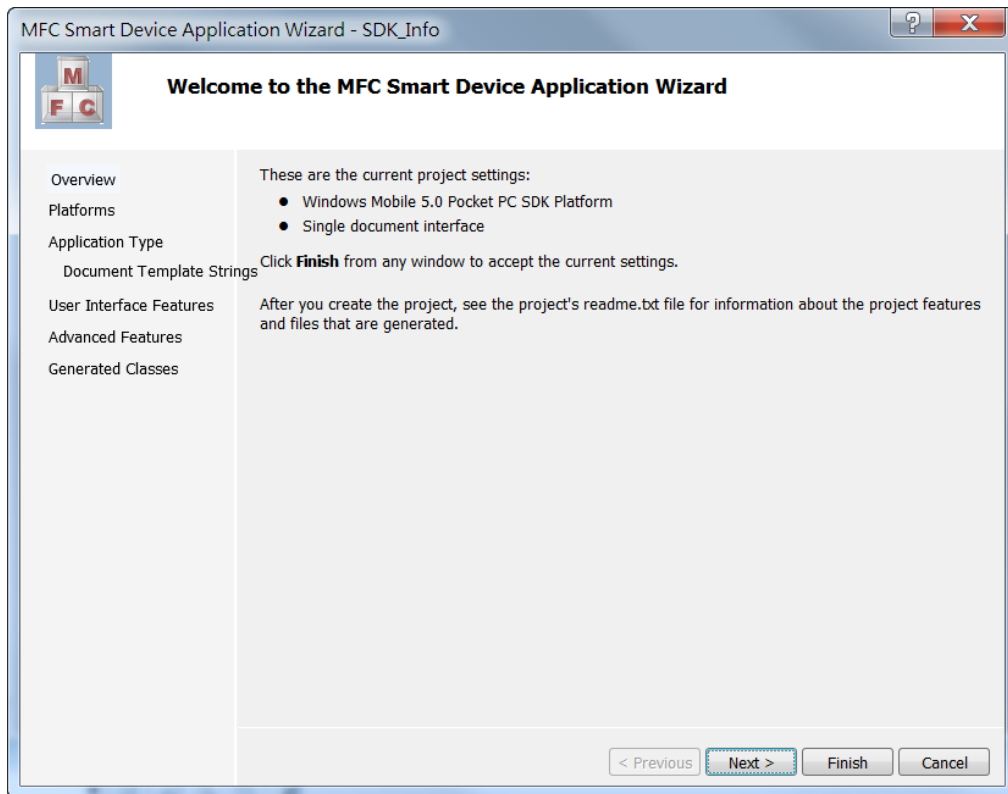


Step 7: On the next page of the wizard, select AM335x_WINCE7_SDK to be added to the project, and then click Next

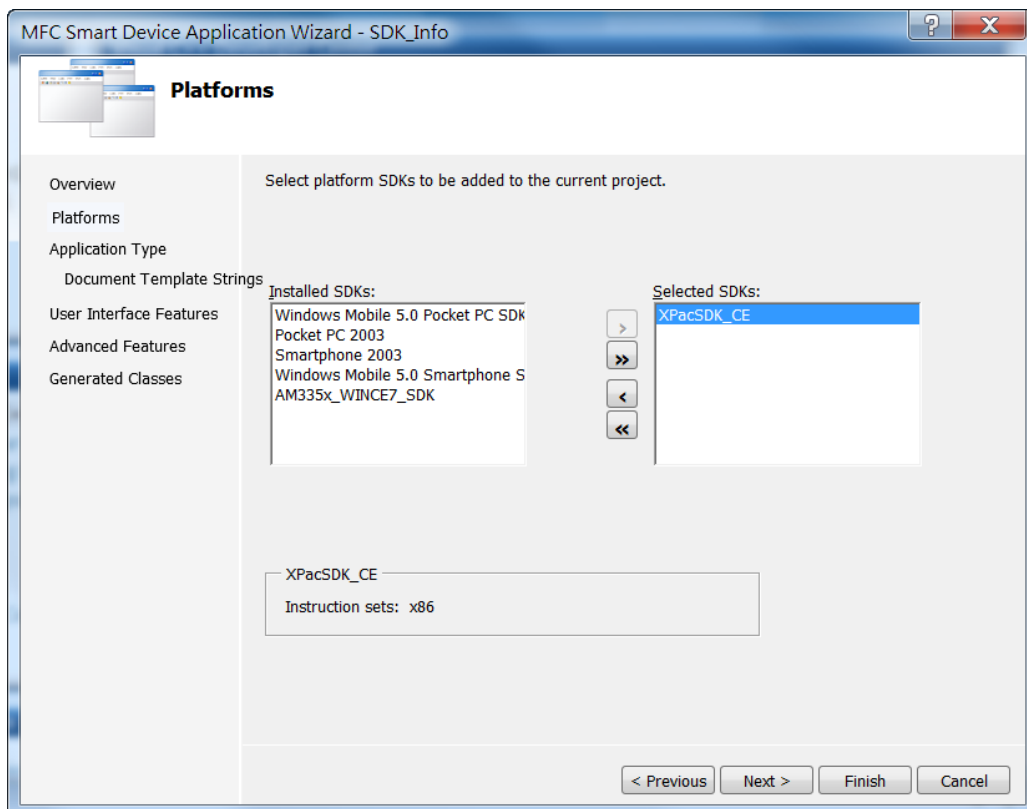


Step 8: On the next page of the wizard, select Dialog based, and then click next

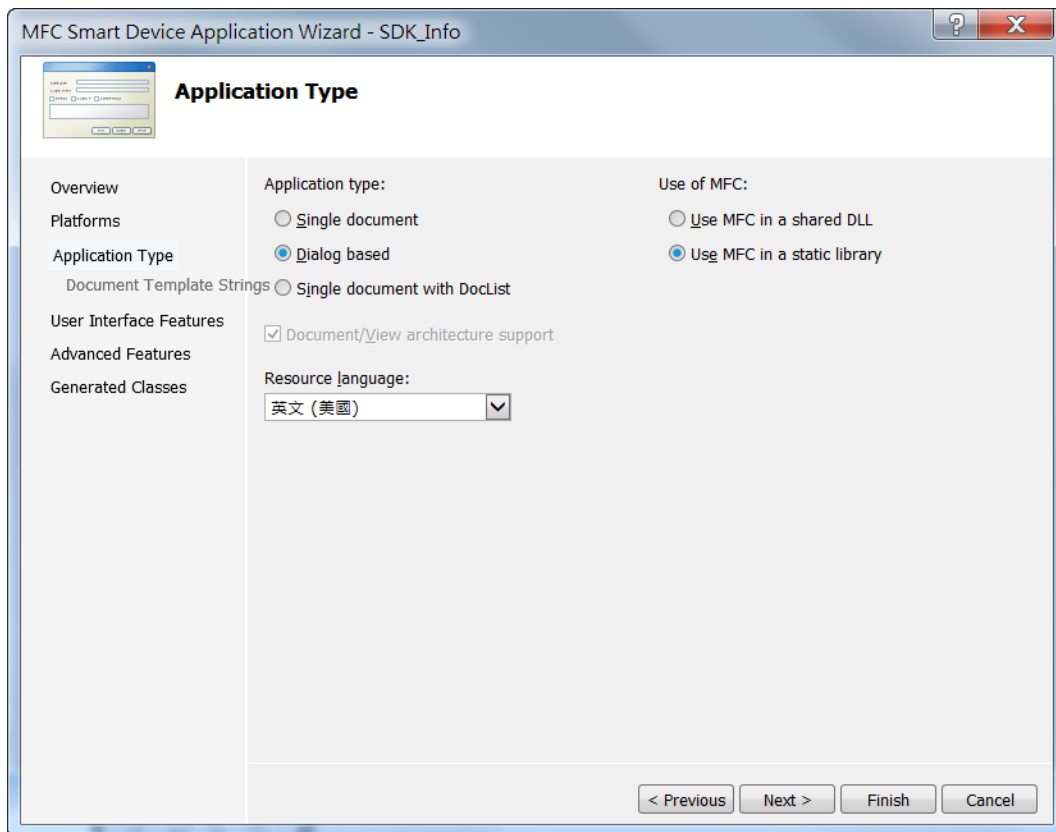


Step 9: On the next page of the wizard, click next

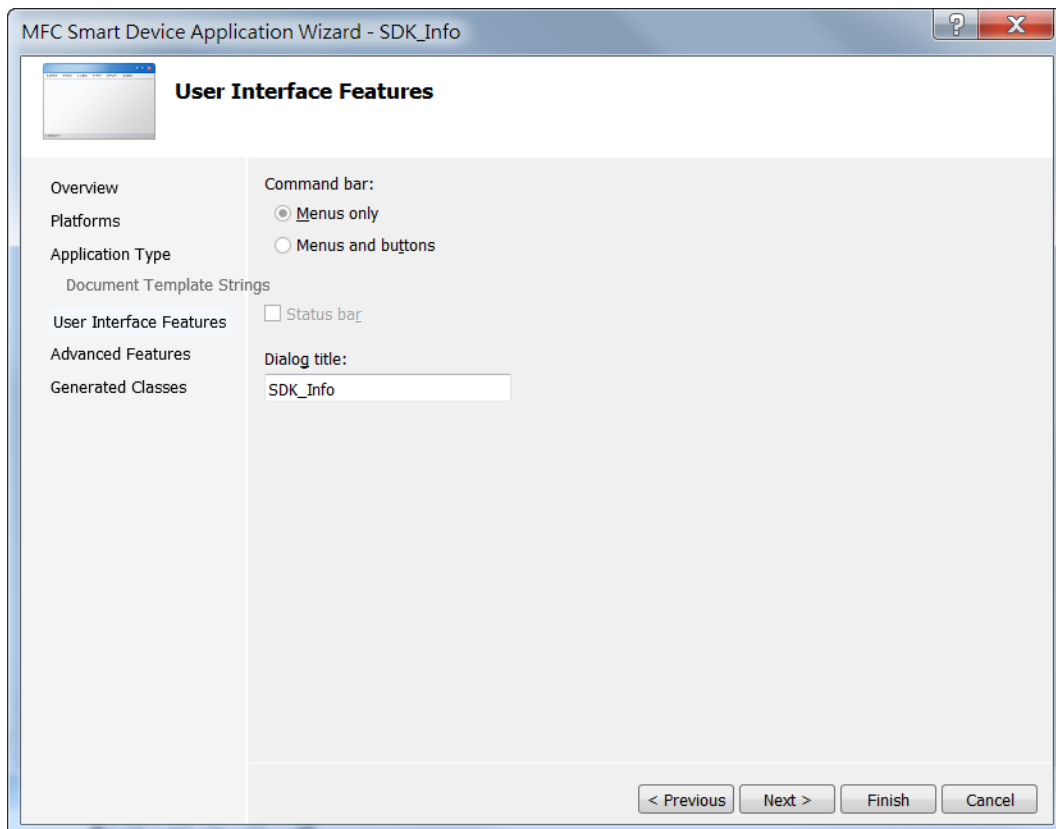

Step 10: On the next page of the wizard, click next

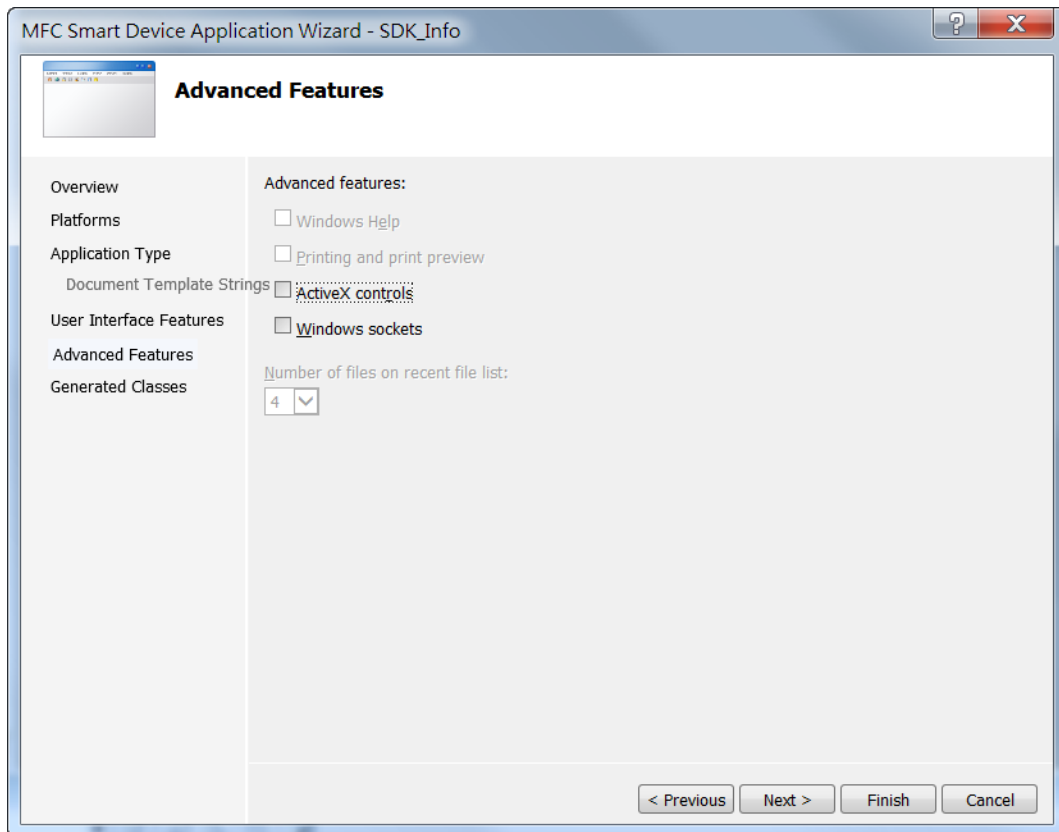


Step 11: On the next page of the wizard, click Finish

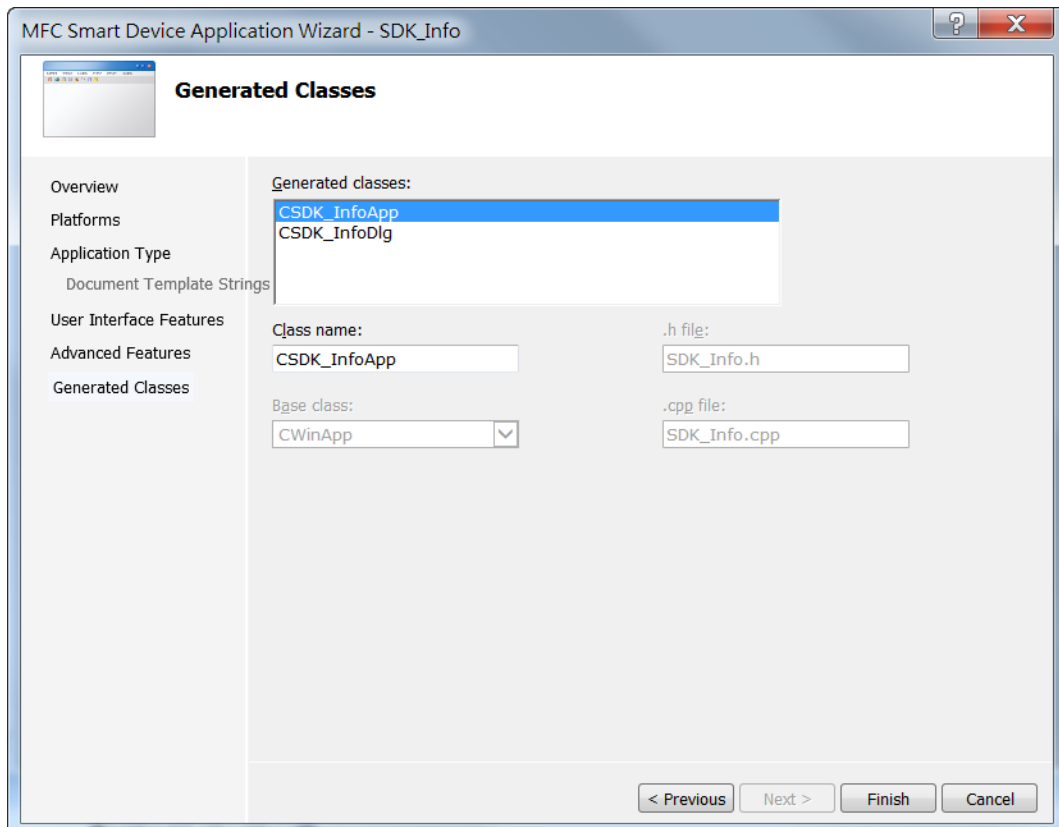

4.4.2. Configure the Platform

When developing applications by using Visual C++, you must configure the Platform to indicate what platform and device you intend to download the application to. Before you deploy your project, check the platform.

On the Debug configuration toolbar, select Release and select XPacSDK_CE(x86) as shown in the following illustration.

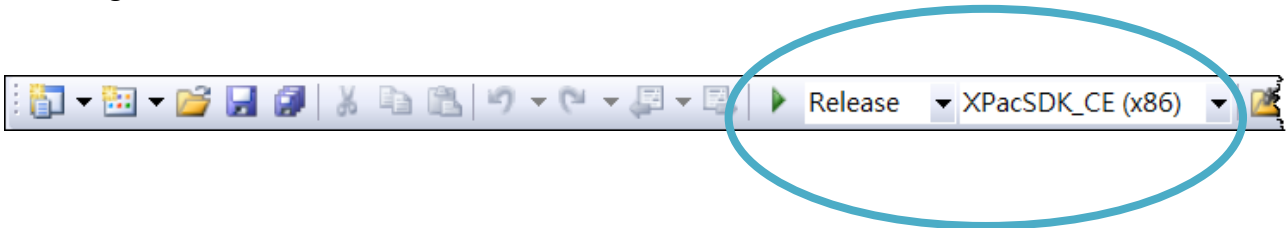


4.4.3. Specify the Libraries of the PAC SDK

The PAC SDK provides the PACSDK libraries with XP-8000-CE6.


It's compatible with C++. In order to use a component in your application, you must first add a reference to it.

Step 1: On the View menu, and then click Property Pages

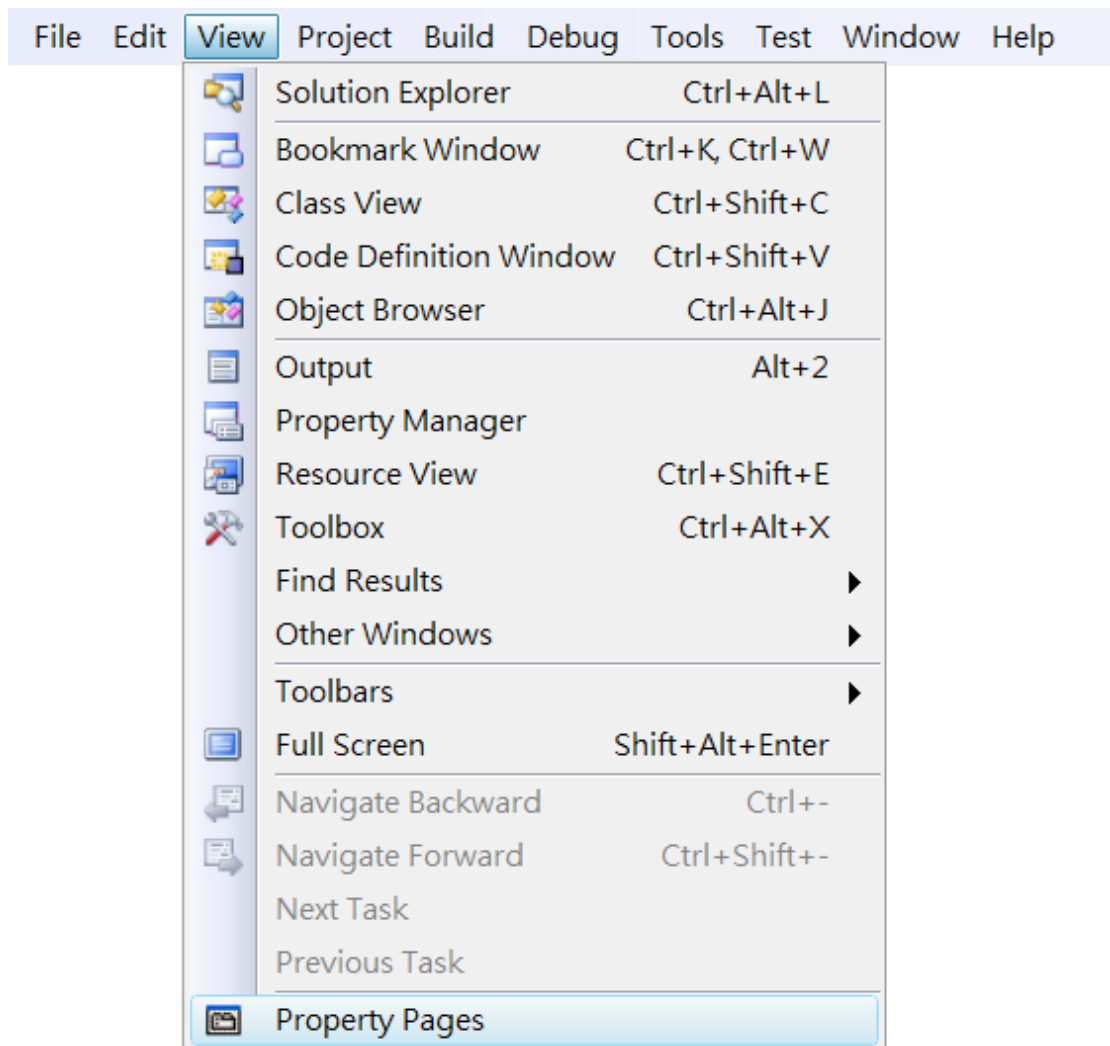

Step 2: In left pane, click Linker, and then click Input

Step 3: In the right pane, Type PACSDK.lib in the Additional Dependencies item

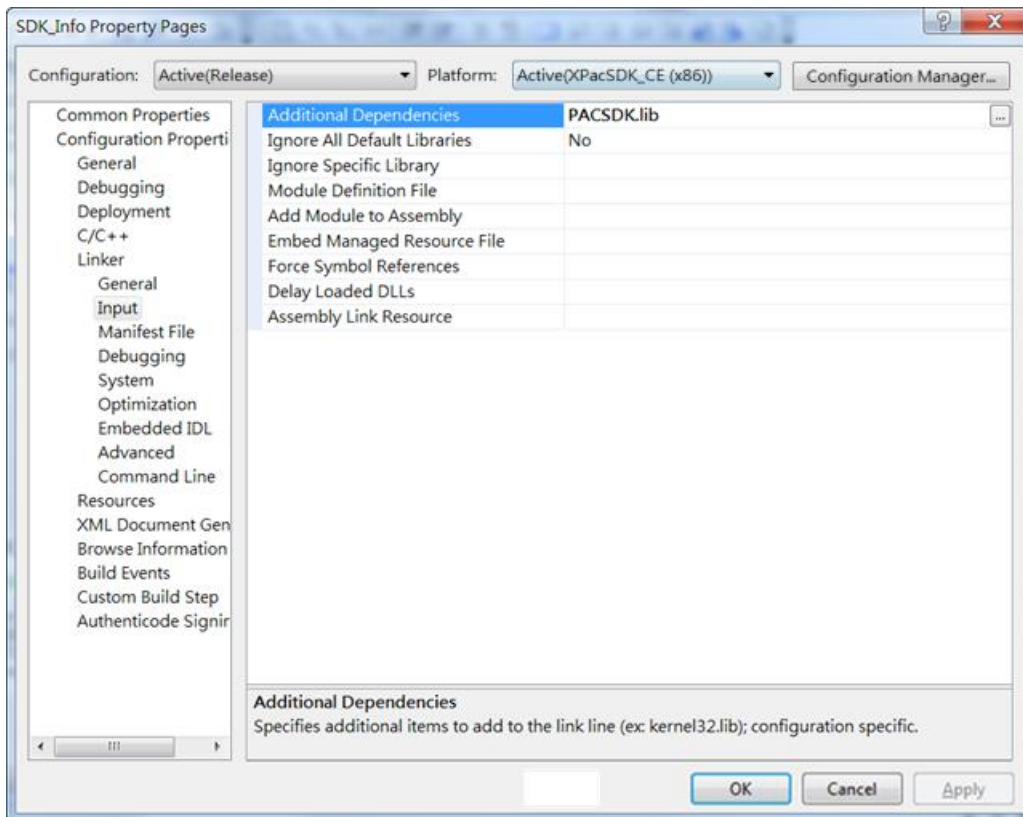


4.4.4. Add the control to the form


You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.


Step 1: On the View menu, and then click Resource View

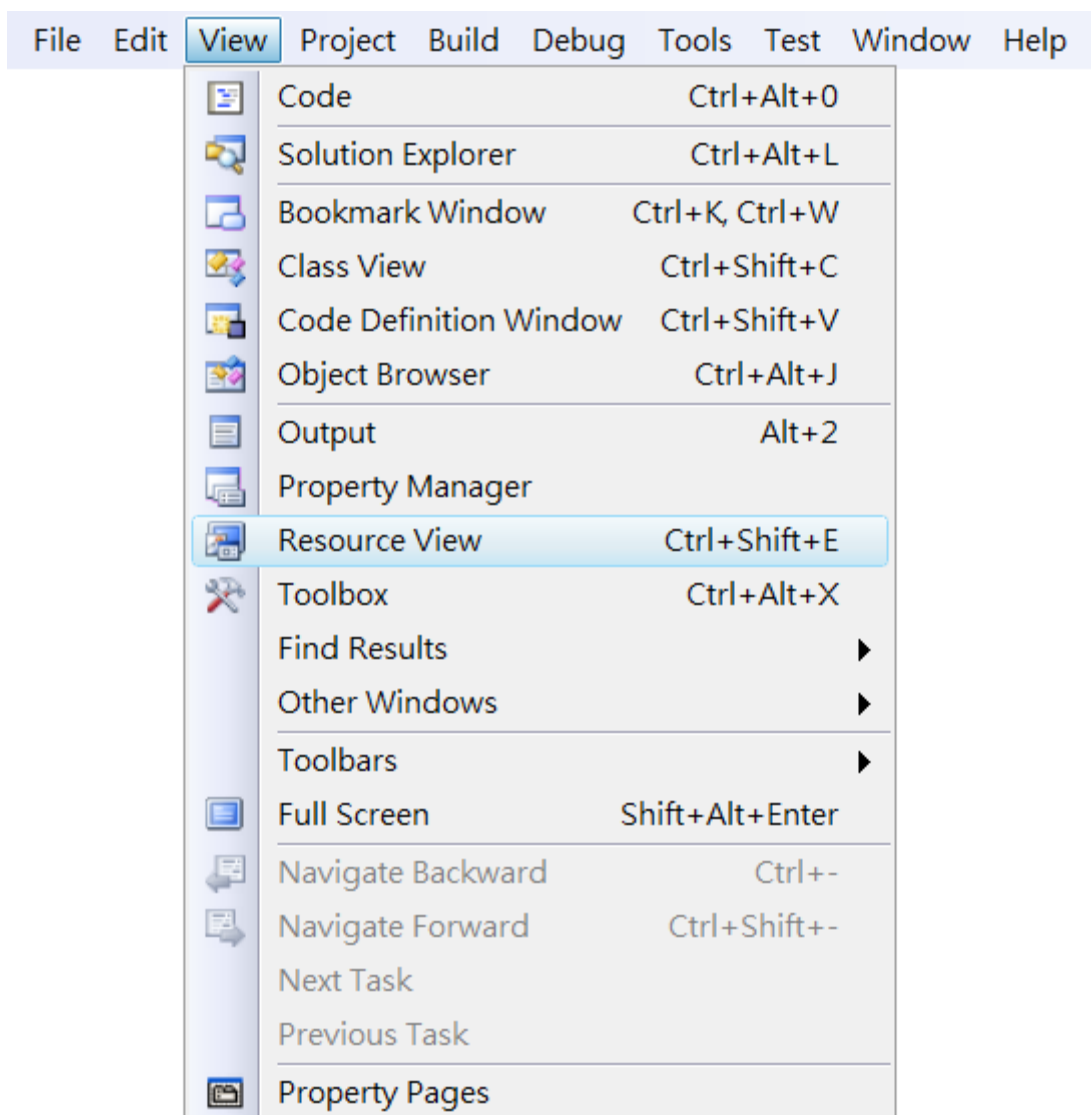


Step 2: In the Resource View Panel, Expand the [Project name].rc file and then expand the Dialog item to click the plug-in dialog

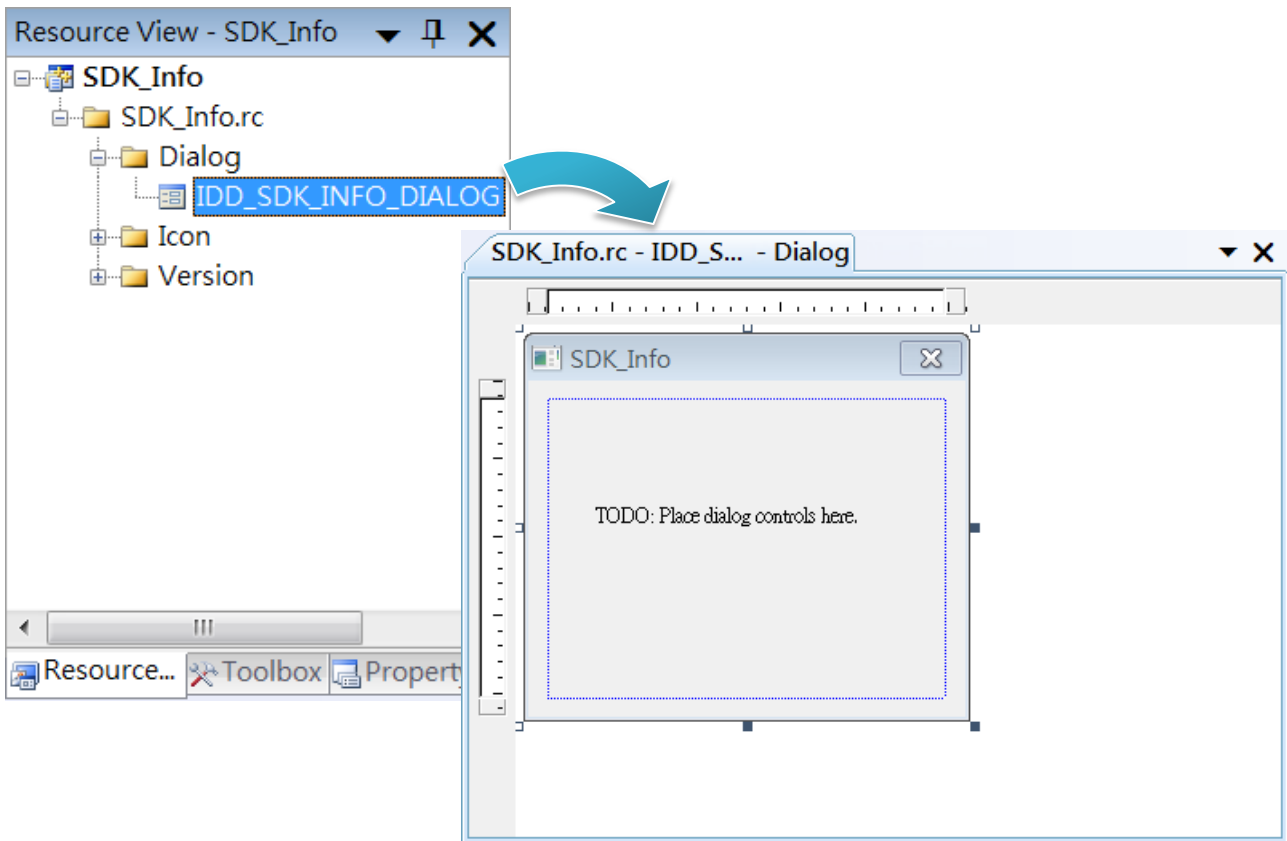

Step 3: On the Toolbox panel, drag a Button control onto the form

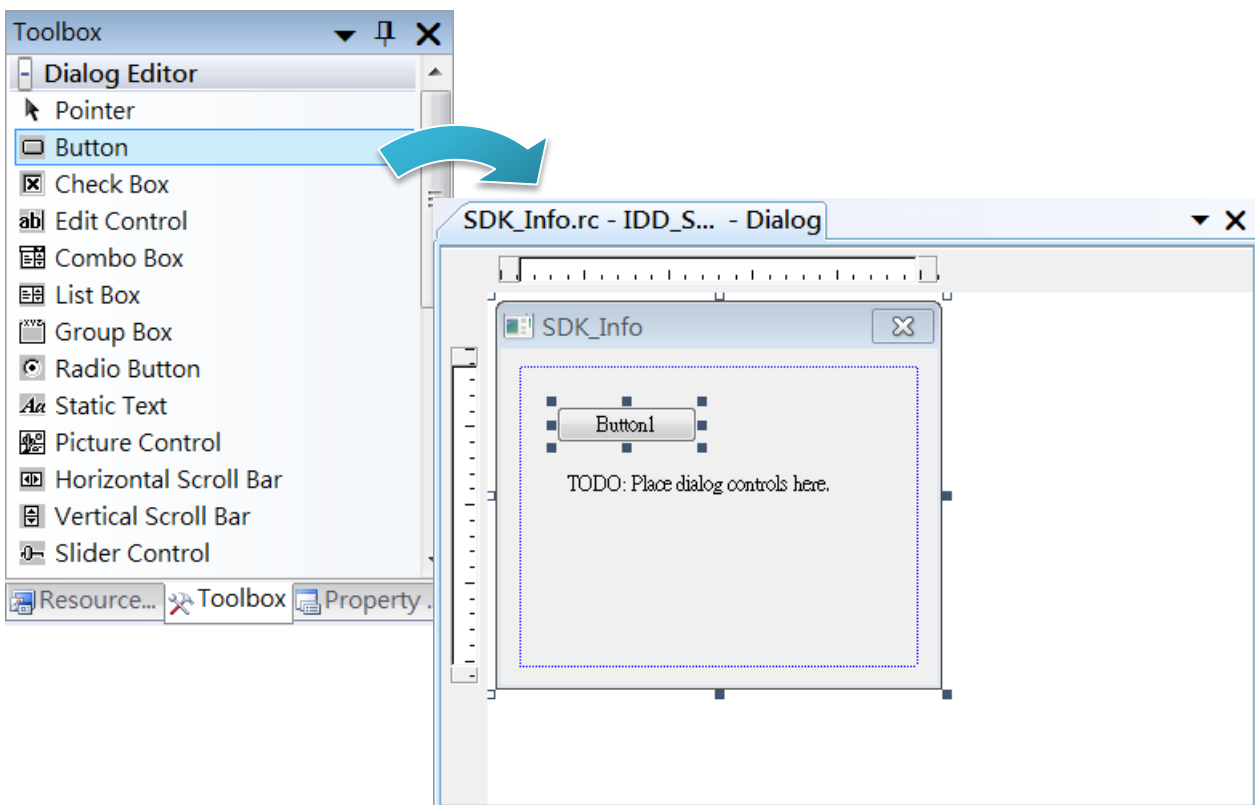


Step 4: On the Properties panel, type Check the SDK version in the Caption field

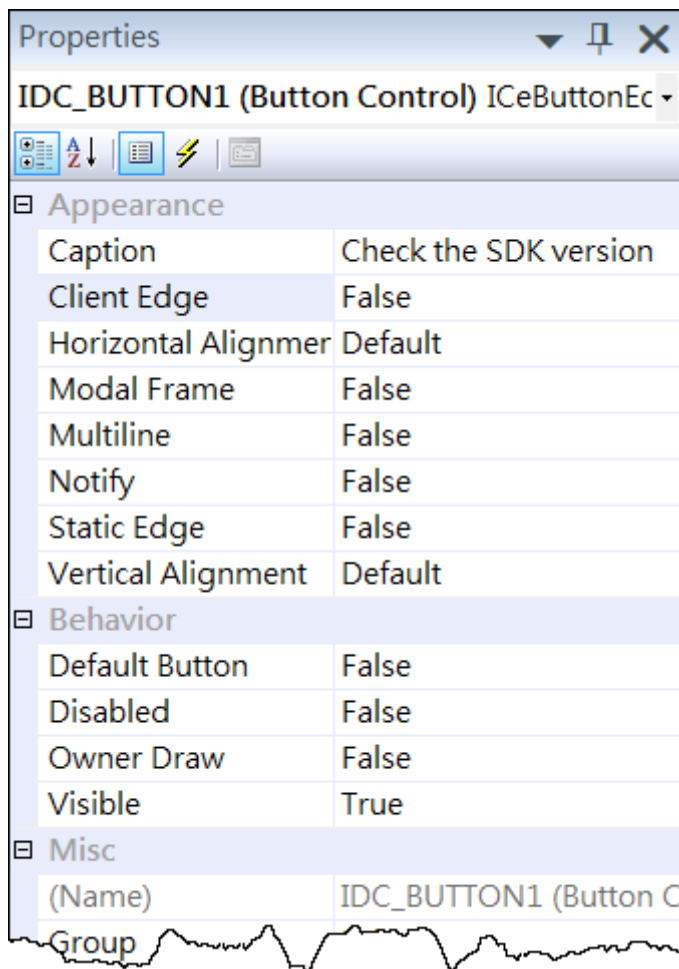

4.4.5. Add the event handling for the control

You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

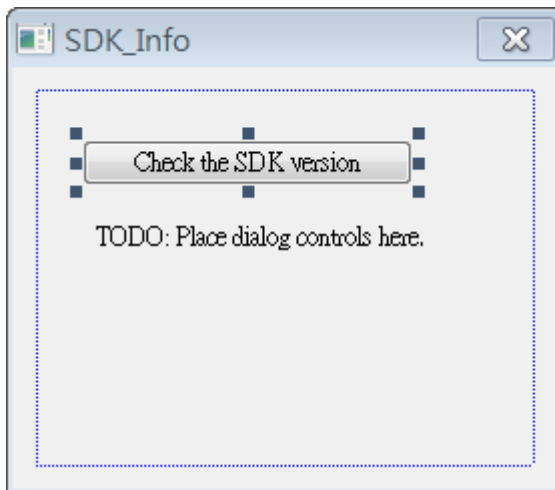


Step 2: Inserting the following code

```
char sdk_version[32];  
TCHAR buf[32];  
pac_GetSDKVersion(sdk_version);  
pac_AnsiToWideString(sdk_version, buf);  
MessageBox(buf,0,MB_OK);
```

```
void CSDK_InfoDlg::OnBnClickedButton1()  
{  
    // TODO: Add your control notification handler code here  
    char sdk_version[32];  
    TCHAR buf[32];  
    pac_GetSDKVersion(sdk_version);  
    pac_AnsiToWideString(sdk_version, buf);  
    MessageBox(buf,0,MB_OK);  
}
```

Step 2: Inserting the following code into the header area

```
#include "PACSDK.h"
```

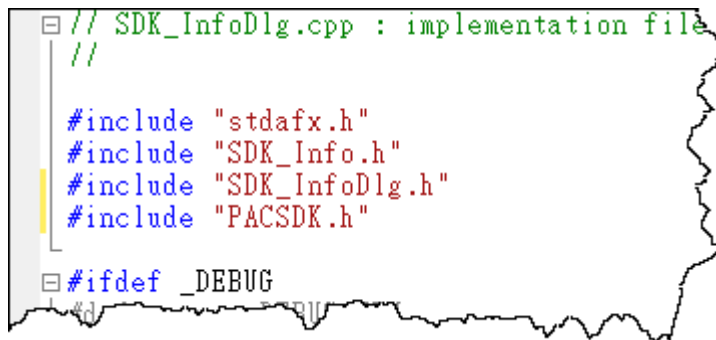


```
// SDK_InfoDlg.cpp : implementation file
//

#include "stdafx.h"
#include "SDK_Info.h"
#include "SDK_InfoDlg.h"
#include "PACSDK.h"


#ifdef _DEBUG
```

4.4.6. Upload the application to XP-8000-CE6

XP-8000-CE6 supports FTP server service. You can upload files to XP-8000-CE6 or download files from a public FTP server.

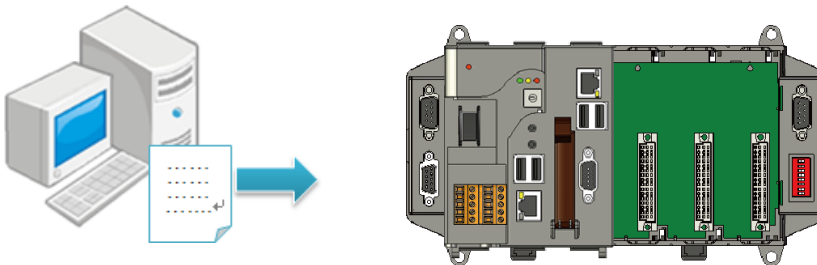


Step 1: On the Build menu, and then click Build [Project Name]

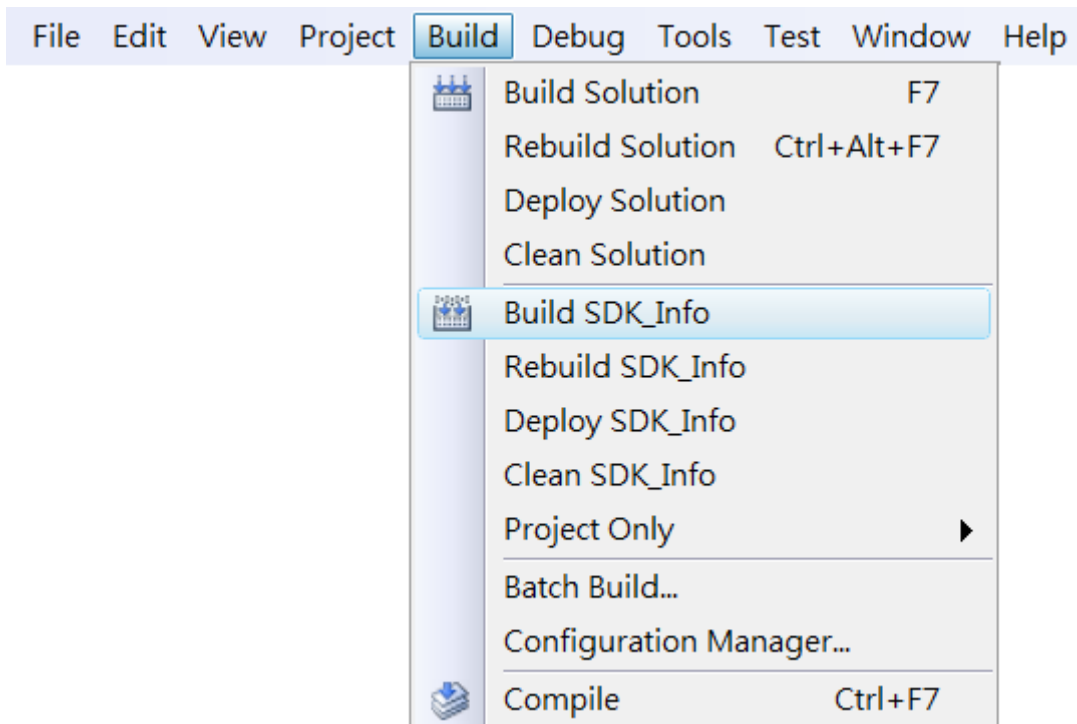


Step 2: Open the browser and type the IP address of XP-8000-CE6

Step 3: Upload the application to XP-8000-CE6

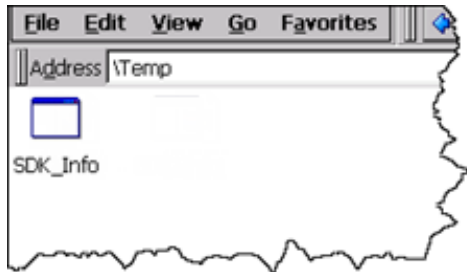

4.4.7. Execute the application on XP-8000-CE6


After uploading the application to XP-8000-CE6, you can just double-click it on XP-8000-CE6 to execute it.

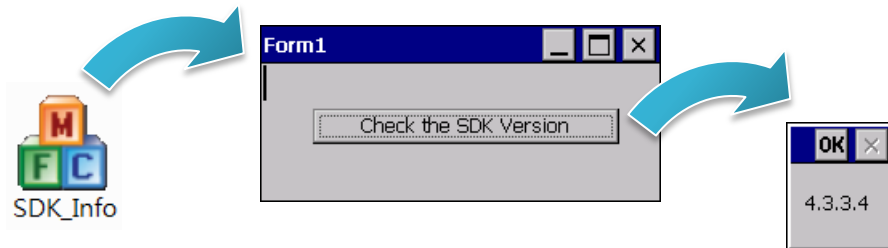

5. I/O Expansion Modules and SDKs Selection

This chapter describes how to select a suitable expansion I/O module and the corresponding SDK library to be used for developing programs on XP-8000-CE6.

XP-8000-CE6 provides the following I/O expansion buses:

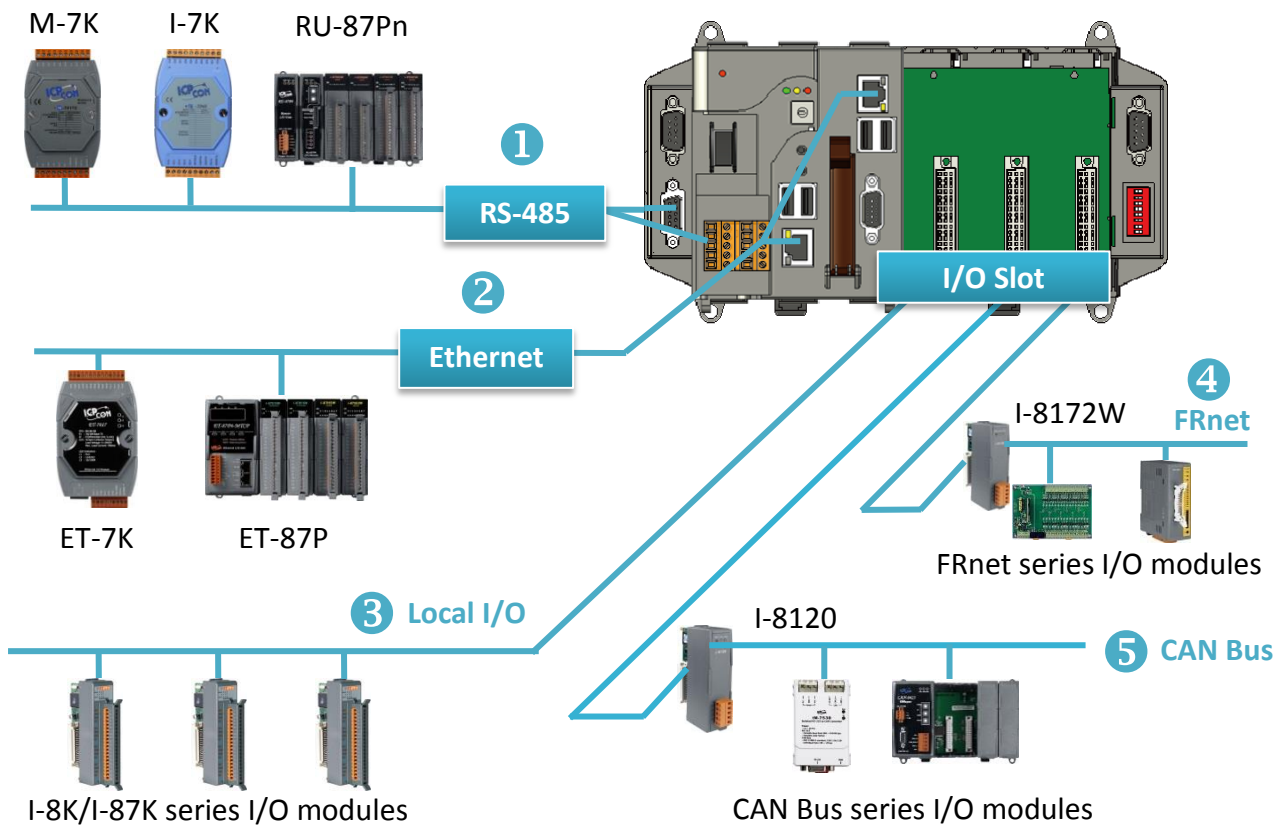

1. RS-485

I-7000, M-7000, RU-87Pn and high profile I-87K series modules connect to XP-8000-CE6 via a twisted-pair, multi-drop, 2-wire RS-485 network.

➤ I-7000 series I/O module

| Module | Native SDK | .NET CF SDK |
|-------------------------------|----------------|-------------|
| I-7000 series | PACSDK.dll | PACNET.dll |
| I-7000 series with I-7088 (D) | PACSDK_PWM.dll | PACNET.dll |

For full details regarding I-7000 series I/O modules and its demos, please refer to:

- **For XP-8x31-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/applicable_demo_for_7k_module.pdf

- **For XP-8x41-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/applicable_demo_for_7k_module.pdf

- **For XP-8x41-Atom-CE6:**

http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/applicable_demo_for_7k_module.pdf

➤ M-7000 series I/O module

| Module | Native SDK | .NET CF SDK |
|---------------|-------------|-------------|
| M-7000 series | Modbus Demo | Modbus Demo |

For more detailed information about M-7000 series modules using Modbus protocol and its demos, please refer to:

- **For XP-8x31-CE6:**

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/nmodbus/>

- **For XP-8x41-CE6:**

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/nmodbus/>

- **For XP-8x41-Atom-CE6:**

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/nmodbus/>

➤ **RU-87Pn + I-87K series I/O module**

| Module | Native SDK | .NET CF SDK |
|----------------------|------------|-------------|
| RU-87Pn+I-87K series | PACSDK.dll | PACNET.dll |

➤ **Other Specified I/O**

| Module | Native SDK | .NET CF SDK |
|--------|------------|-------------|
| Others | PACSDK.dll | PACNET.dll |

2. Ethernet

The Ethernet I/O devices available include ET-7000 and I-8KE4/8-MTCP, and support either the DCON or the Modbus/TCP communication protocol.

| Module | Native SDK | .NET CF SDK |
|---------------|-------------|-------------|
| M-7000 series | Modbus Demo | Modbus Demo |
| I-8KE4/8-MTCP | Modbus Demo | Modbus Demo |

For more detailed information about ET-7000 and I-8KE4/8-MTCP series modules using Modbus protocol and its demos, please refer to:

- **For XP-8x31-CE6:**

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/nmodbus/>

- **For XP-8x41-CE6:**

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/nmodbus/>

- **For XP-8x41-Atom-CE6:**

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/nmodbus/>

3. Local I/O

XP-8000-CE6 has 0/1/3/7 expansion slot(s) that can be used to add expansion I/O modules. The expansion I/O modules can be divided into two categories: High Profile I-8K series I/O modules and High profile I-87K series I/O modules. The following indicates the appropriate SDK library to be used for I/O modules.

➤ **General I-8K/I-87K series I/O module**

| Module | Native SDK | .NET CF SDK |
|-----------------------|----------------|-------------|
| I-8K series | PACSDK.dll | PACNET.dll |
| I-87K series | PACSDK.dll | PACNET.dll |
| I-8K series with PWM | PACSDK_PWM.dll | PACNET.dll |
| I-87K series with PWM | PACSDK_PWM.dll | PACNET.dll |

For full details regarding I-87K series I/O modules and its demos, please refer to:

▪ **For XP-8x31-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/applicable_demo_for_87k_module.pdf

▪ **For XP-8x41-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/applicable_demo_for_87k_module.pdf

▪ **For XP-8x41-Atom-CE6:**

http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/applicable_demo_for_87k_module.pdf

➤ **Other Specified I/O**

| Module | Native SDK | .NET CF SDK |
|----------|-----------------|--------------------|
| I-8014W | pac_i8014W.dll | pac_i8014WNET.dll |
| I-8017HW | pac_i8017HW.dll | pac_i8017HWNET.dll |
| I-8024W | pac_i8024W.dll | pac_i8024WNET.dll |
| I-8026W | pac_i8026W.dll | pac_i8026WNET.dll |
| I-8048W | pac_i8048W.dll | pac_i8048WNET.dll |
| I-8050W | pac_i8050W.dll | pac_i8050WNET.dll |
| I-8084W | pac_i8084W.dll | pac_i8084WNET.dll |
| I-8088W | pac_i8088W.dll | pac_i8088WNET.dll |
| I-8093W | pac_i8093W.dll | pac_i8093WNET.dll |
| I-87088W | PACSDK_PWM.dll | PACNET.dll |

4. FRnet

FRnet is an innovative industrial field bus technology that uses twisted pair cable as the transmission medium. The status of all I/O devices is updated on a fixed cycle, no matter how many FRnet I/O modules are connected to the FRnet network.

| Module | Native SDK | .NET CF SDK |
|---------|----------------|-----------------|
| I-8172W | pac_i8172W.lib | pac8172WNet.dll |

5. CAN Bus

The Controller Area Network (CAN) is a serial communication way, which efficiently supports distributed real-time control with a very high level of security. It provides the error-processing mechanisms and concepts of message priority. These features can improve the network reliability and transmission efficiency.


| Module | Native SDK | .NET CF SDK |
|---------|------------|------------------|
| I-8120W | i8120.lib | i8120net_pac.dll |

6. APIs and Demo References

This chapter provides a brief overview of PAC standard APIs and demos that have been designed for XP-8000-CE6 from the PAC SDK package.


ICP DAS provides a set of demos in different programming languages. You can examine the demo codes, which includes numerous comments, to familiarize yourself with the PAC APIs. This will allow developing your own applications quickly by modifying these demo programs.

For full usage information regarding the description, prototype and the arguments of the functions, please refer to the “PAC Standard API Manual”

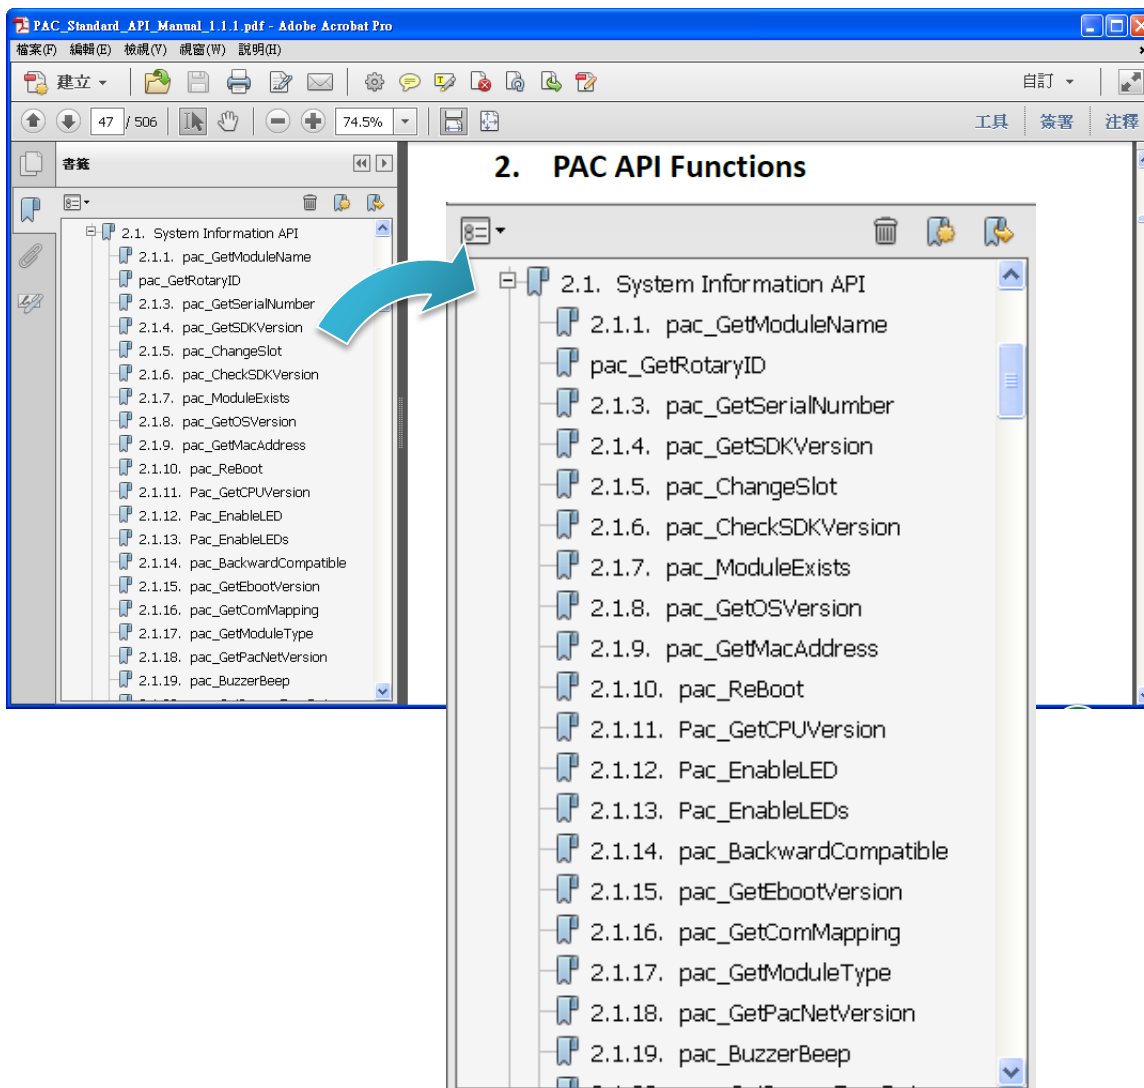

6.1. PAC Standard APIs for System Operation

The diagram below shows the set of each system operation API provided in the PACSDK.

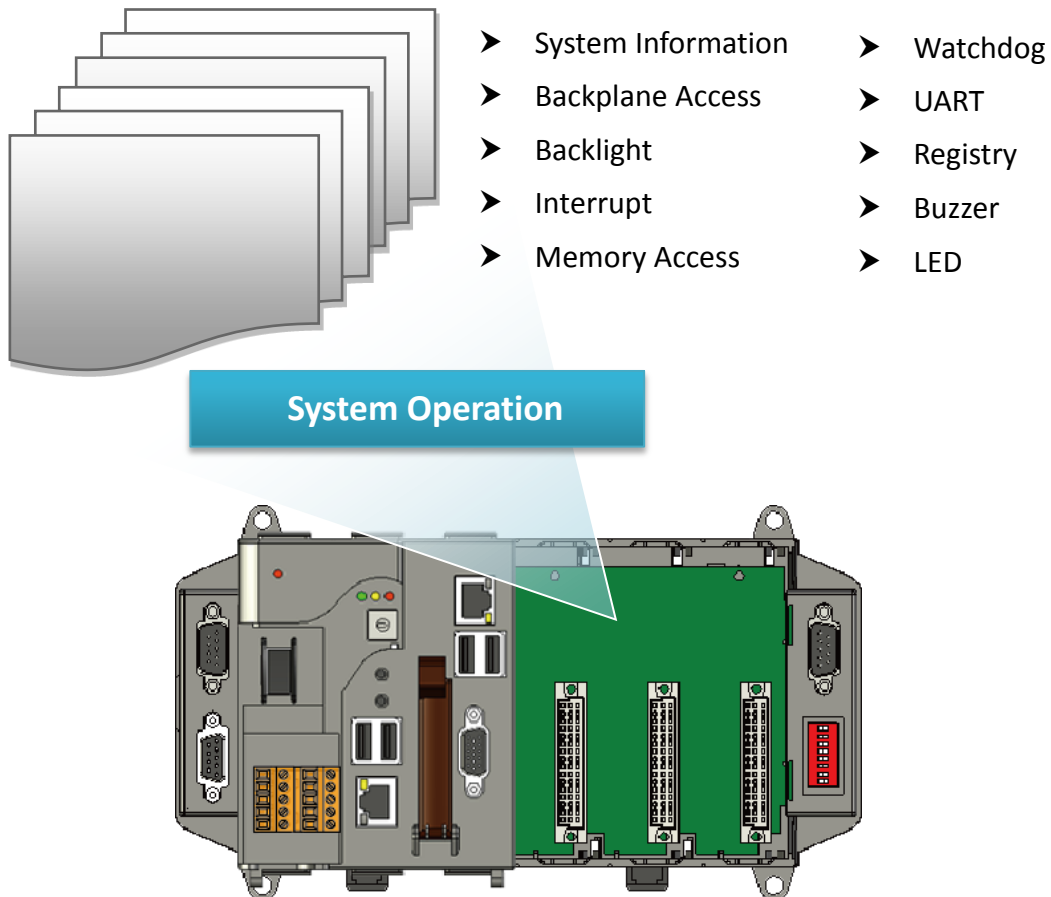

6.1.1. VB.NET Demos for PAC Standard APIs

The PAC SDK includes the following demos that demonstrate the use of the PAC Standard APIs in a VB.NET language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\VB.NET\Standard\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/vb.net/standard/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\VB.NET\Standard\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/vb.net/standard/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\VB.NET\Standard\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/vb.net/standard/>

| Folder | Demo | Explanation |
|-------------------|-------------------|---|
| BPtimer | BPtimer | Retrieves information about the hardware timer. |
| DeviceInformation | DeviceInformation | Retrieves information about the OS version, CPU version, SDK version, etc. |
| Diagnostic | Diagnostic | Retrieves information about the slot count and the module inserted in the backplane. |
| DIP | DIP | Retrieves information about the status of the DIP switch. |
| GetRotaryID | GetRotaryID | Retrieves information about the status of the rotary switch. |
| Memory | Memory | Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM |
| RealTimeTest | RealTimeTest | Writes the managed cod for the rich graphical user interface that does not require true real-time performance |
| Registry | Registry | Shows how to read/write data values from/to the registry. |
| UART | UART | Shows how to read the name of the local I/O module via a UART. |
| WatchDog | WatchDog | Displays information about how to operate the watchdog. |

6.1.2. C# Demos for PAC Standard APIs

The PAC SDK includes the following demos that demonstrate the use of the PAC Standard APIs in a C# language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\C#\Standard\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/c%23/standard/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\C#\Standard\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/c%23/standard/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\C#\Standard\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/c%23/standard/>

| Folder | Demo | Explanation |
|-------------------|-------------------|---|
| BPtimer | BPtimer | Retrieves information about the hardware timer. |
| DeviceInformation | DeviceInformation | Retrieves information about the OS version, CPU version, SDK version, etc. |
| Diagnostic | Diagnostic | Retrieves information about the slot count and the module inserted in the backplane. |
| DIP | DIP | Retrieves information about the status of the DIP switch. |
| GetRotaryID | GetRotaryID | Retrieves information about the status of the rotary switch. |
| Memory | Memory | Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM |
| RealTimeTest | RealTimeTest | Writes the managed cod for the rich graphical user interface that does not require true real-time performance |
| Registry | Registry | Shows how to read/write data values from/to the registry. |
| UART | UART | Shows how to read the name of the local I/O module via a UART. |
| WatchDog | WatchDog | Displays information about how to operate the watchdog. |

6.1.3. Visual C++ Demos for PAC Standard APIs

The PAC SDK includes the following demos that demonstrate the use of the PAC Standard APIs in a Visual C++ language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\VC2005\Standard\
<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/vc2005/standard/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\VC2005\Standard\
<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/vc2005/standard/>


- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\VC2005\Standard\
<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/vc2005/standard/>

| Folder | Demo | Explanation |
|-------------------|-------------------|---|
| BPtimer | BPtimer | Retrieves information about the hardware timer. |
| DeviceInformation | DeviceInformation | Retrieves information about the OS version, CPU version, SDK version, etc. |
| Diagnostic | Diagnostic | Retrieves information about the slot count and the module inserted in the backplane. |
| DIP | DIP | Retrieves information about the status of the DIP switch. |
| GetRotaryID | GetRotaryID | Retrieves information about the status of the rotary switch. |
| Memory | Memory | Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM |
| RealTimeTest | RealTimeTest | Writes the managed cod for the rich graphical user interface that does not require true real-time performance |
| Registry | Registry | Shows how to read/write data values from/to the registry. |
| UART | UART | Shows how to read the name of the local I/O module via a UART. |
| WatchDog | WatchDog | Displays information about how to operate the watchdog. |

6.2. PAC Standard APIs for PAC Expansion I/O

The diagram below shows the types of the PAC IO APIs provided in the PACSDK.

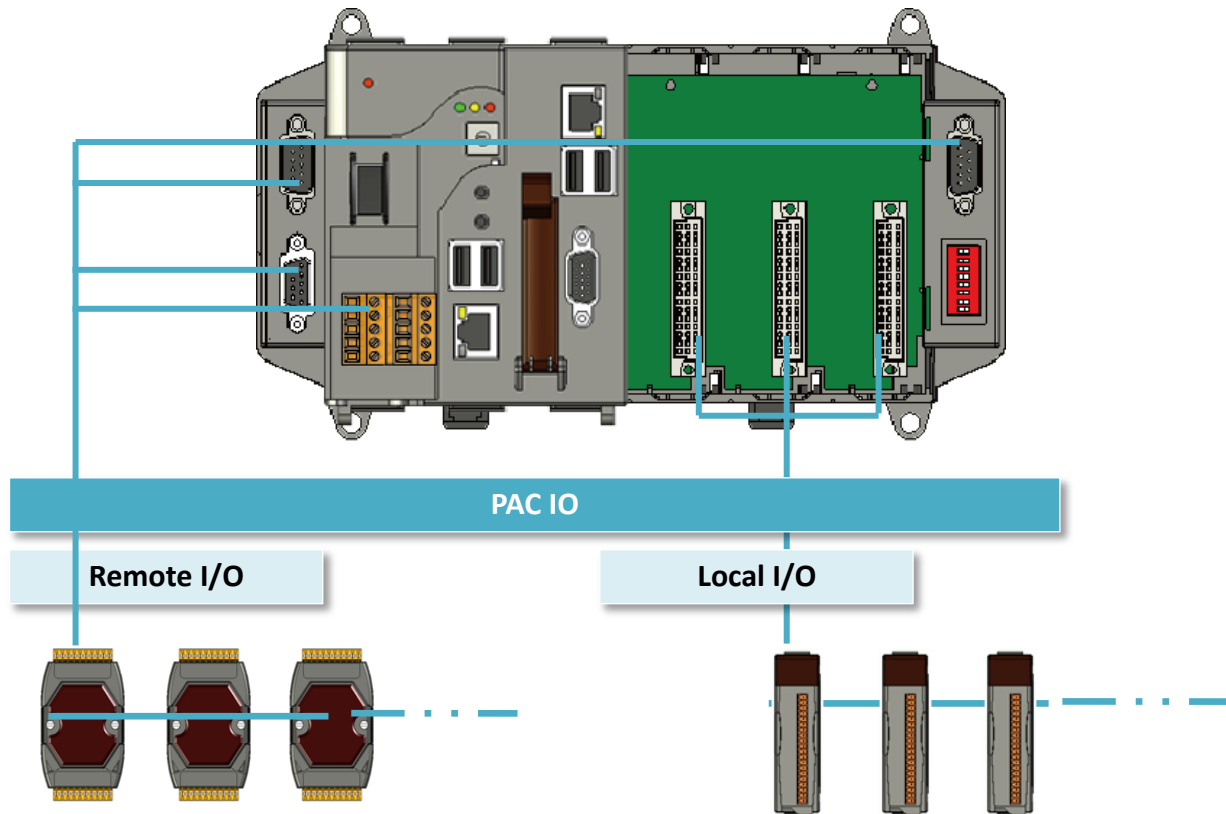

6.2.1. VB.NET Demos for PAC Expansion I/O

The PAC SDK includes the following demos that demonstrate the use of the PAC expansion I/O in a VB.NET language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\VB.NET\IO\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/vb.net/io/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\VB.NET\IO\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/vb.net/io/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\VB.NET\IO\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/vb.net/io/>

| Folder | Demo | Explanation |
|--------|-----------|--|
| Local | find_io | Shows how to retrieve the module name and type which plugged in the XP-8000-CE6. |
| | 8k_di | Shows how to read the DI values of DI module. This demo program is used by 8K series DI modules. |
| | 8k_do | Shows how to write the DO values to DO module. This demo program is used by 8K series DO modules. |
| | 8k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 8K series DIO modules. |
| | 87k_basic | Shows how to send/receive a command/response application. This demo program is used by 87K series modules. |
| | 87K_demo | Shows how use uart API and the IO modules located as slots. This demo program is used by 87K series modules. |
| | 87k_ai | Shows how to read the AI values of AI module. This demo program is used by 87K series AI modules. |
| | 87k_ao | Shows how to write the AO values to AO module. This demo program is used by 87K series AO modules. |
| | 87k_di | Shows how to read the DI values of DI module. This demo program is used by 87K series DI modules. |

| Folder | Demo | Explanation |
|--------|-------------|---|
| Local | 87k_do | Shows how to write the DO values to DO module. This demo program is used by 87K series DO modules. |
| | 87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 87K series DIO modules. |
| Remote | 7k87k_basic | Shows how to send/receive a command/response application. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ai | Shows how to read the AI values of AI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ao | Shows how to write the AO values to AO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_di | Shows how to read the DI values of DI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_do | Shows how to write the DO values to DO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |

6.2.2. C# Demos for PAC Expansion I/O

The PAC SDK includes the following demos that demonstrate the use of the PAC expansion I/O in a C# language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\C#\IO\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/c%23/io/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\C#\IO\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/c%23/io/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\C#\IO\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/c%23/io/>

| Folder | Demo | Explanation |
|--------|-----------|--|
| Local | find_io | Shows how to retrieve the module name and type which plugged in the XP-8000-CE6. |
| | 8k_di | Shows how to read the DI values of DI module. This demo program is used by 8K series DI modules. |
| | 8k_do | Shows how to write the DO values to DO module. This demo program is used by 8K series DO modules. |
| | 8k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 8K series DIO modules. |
| | 87k_basic | Shows how to send/receive a command/response application. This demo program is used by 87K series modules. |
| | 87K_demo | Shows how use uart API and the IO modules located as slots. This demo program is used by 87K series modules. |
| | 87k_ai | Shows how to read the AI values of AI module. This demo program is used by 87K series AI modules. |
| | 87k_ao | Shows how to write the AO values to AO module. This demo program is used by 87K series AO modules. |
| | 87k_di | Shows how to read the DI values of DI module. This demo program is used by 87K series DI modules. |

| Folder | Demo | Explanation |
|--------|-------------|---|
| Local | 87k_do | Shows how to write the DO values to DO module. This demo program is used by 87K series DO modules. |
| | 87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 87K series DIO modules. |
| Remote | 7k87k_basic | Shows how to send/receive a command/response application. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ai | Shows how to read the AI values of AI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ao | Shows how to write the AO values to AO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_di | Shows how to read the DI values of DI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_do | Shows how to write the DO values to DO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |

6.2.3. Visual C++ Demos for PAC Expansion I/O

The PAC SDK includes the following demos that demonstrate the use of the PAC expansion I/O in a C# language environment.

The following demos can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\demo\XPAC\VC2005\IO\

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/demo/xpac/vc2005/io/>

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\demo\XPAC\VC2005\IO\

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/demo/xpac/vc2005/io/>

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\demo\XPAC\VC2005\IO\

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/demo/xpac/vc2005/io/>

| Folder | Demo | Explanation |
|--------|-----------|--|
| Local | find_io | Shows how to retrieve the module name and type which plugged in the XP-8000-CE6. |
| | 8k_di | Shows how to read the DI values of DI module. This demo program is used by 8K series DI modules. |
| | 8k_do | Shows how to write the DO values to DO module. This demo program is used by 8K series DO modules. |
| | 8k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 8K series DIO modules. |
| | 87k_basic | Shows how to send/receive a command/response application. This demo program is used by 87K series modules. |
| | 87K_demo | Shows how use uart API and the IO modules located as slots. This demo program is used by 87K series modules. |
| | 87k_ai | Shows how to read the AI values of AI module. This demo program is used by 87K series AI modules. |
| | 87k_ao | Shows how to write the AO values to AO module. This demo program is used by 87K series AO modules. |
| | 87k_di | Shows how to read the DI values of DI module. This demo program is used by 87K series DI modules. |

| Folder | Demo | Explanation |
|--------|-------------|---|
| Local | 87k_do | Shows how to write the DO values to DO module. This demo program is used by 87K series DO modules. |
| | 87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 87K series DIO modules. |
| Remote | 7k87k_basic | Shows how to send/receive a command/response application. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ai | Shows how to read the AI values of AI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_ao | Shows how to write the AO values to AO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_di | Shows how to read the DI values of DI module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_do | Shows how to write the DO values to DO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |
| | 7k87k_dio | Shows how to read the DI and the DO values of the DIO module. This demo program is used by 7K or 87K series AI modules which connected through a COM port. |

7. Recovery and Restore

This chapter provides information of the XP-8000-CE6 restore and recovery, and a guided tour that describes the steps needed to restore and recovery the XP-8000-CE6.

The XP-8000-CE6 comes with a rescue CF card that can be used to not only boot the XP-8000-CE6 when the OS fails to load, but also recover files.

The recovery file of the rescue CF card can be found separately on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

CD:\XP-8X3X-CE6\Rescue_Disk\

http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/rescue_disk/

- **For XP-8x41-CE6:**

CD:\XP-8000-CE6\Rescue_Disk\

http://ftp.icpdas.com/pub/cd/xp-8000-ce6/rescue_disk/

- **For XP-8x41-Atom-CE6:**

CD:\XPAC-ATOM-CE6\Rescue_Disk\

http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/rescue_disk/


7.1. XP-8000-CE6 Recovery

If the XP-8000-CE6 crashes and won't start up, you can use the rescue CF card to start up the XP-8000-CE6 and then fix the problem that caused the crash.

7.1.1. Recovering the XP-8x31-CE6

Here are step by step instructions on how to recovering the XP-8x31-CE6.

Step 1: Plug the CF card in CF slot and turn the rotary switch in position 0

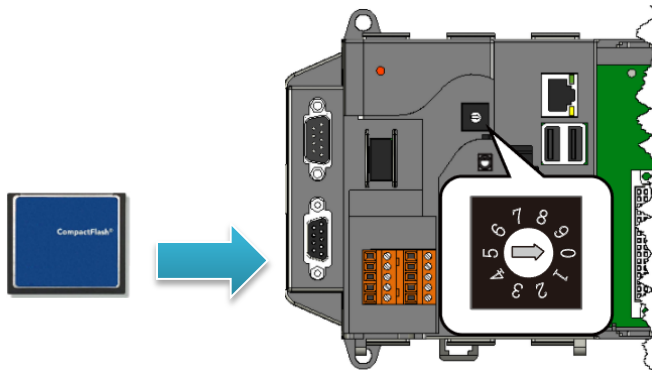

Step 2: Reboot the XP-8x31-CE6, press Delete key to enter the BIOS setup utility

Step 3: On the Boot menu, select Hard Disk Drives and then press Enter key

| BIOS SETUP UTILITY | | | | | | |
|-----------------------------|----------|--------|------|----------|--|------|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Boot Settings | | | | | Specifies the Boot Device Priority sequence from available Hard drives | |
| Boot Settings Configuration | | | | | | |
| Hard Disk Drives | | | | | | |
| | | | | | | |

Step 4: Select 1st Drive and then press Enter key

Step 5: Set 1st Drive as HDD: PM-CF Card, it means the XP-8x31-CE6 booting from the CF card

| BIOS SETUP UTILITY | | | | | | |
|--------------------|----------|--------|-----------------------|----------|---------|---|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Hard Disk Drivers | | | | | | Specifies the Boot sequence from available drives |
| 1st Drive | | | [HDD: PM-CF Card] | | | |
| 2nd Drive | | | [SATA: SM-8GB SATA F] | | | |

Step 6: Press F10 key and select OK to exit the setup utility and reboot the XP-8x31-CE6

After rebooting the XP-8x31-CE6, the system will enter the XP-8x31-CE6 Rescue Utility.

Step 7: Enter 1, (1) create XPAC_CE default partition

Wait a while until we enter the XP-8x31-CE6 Rescue Utility again.

```
=====
==                               ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 1
```

Step 8: Enter 2, (2) format and restore XPAC_CE to factory default OS.

Wait a while until we enter the XP-8x31-CE6 Rescue Utility again.

```
=====
==                               ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 2
```

Step 9: Enter 3, (3) reboot

```
=====
==                               ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 3
```

Step 10: Repeat step 2 to step 6 to set 1st Drive as SATA: SM-8GB SATA F

SATA: SM-8GB SATA F1 means Built-in flash.


| BIOS SETUP UTILITY | | | | | | |
|--------------------|----------|--------|-----------------------|----------|---|------|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Hard Disk Drivers | | | | | Specifies the Boot sequence from available drives | |
| 1st Drive | | | [SATA: SM-8GB SATA F] | | | |
| 2nd Drive | | | [HDD: PM-CF Card] | | | |

Step 11: The XP-8x31-CE6 has been recovered

7.1.2. Recovering the XP-8x41-CE6


Here are step by step instructions on how to recovering the XP-8x41-CE6.

Step 1: Plug the CF card in CF slot and turn the rotary switch in position 0

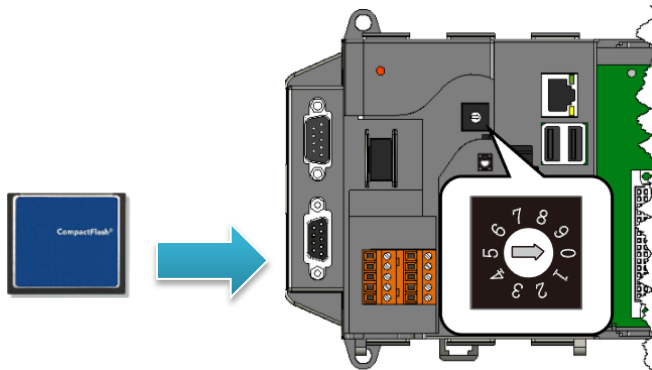


Step 2: Reboot the XP-8x41-CE6, press Delete key to enter the BIOS setup utility

Step 3: Select Advanced BIOS Features and then press Enter key

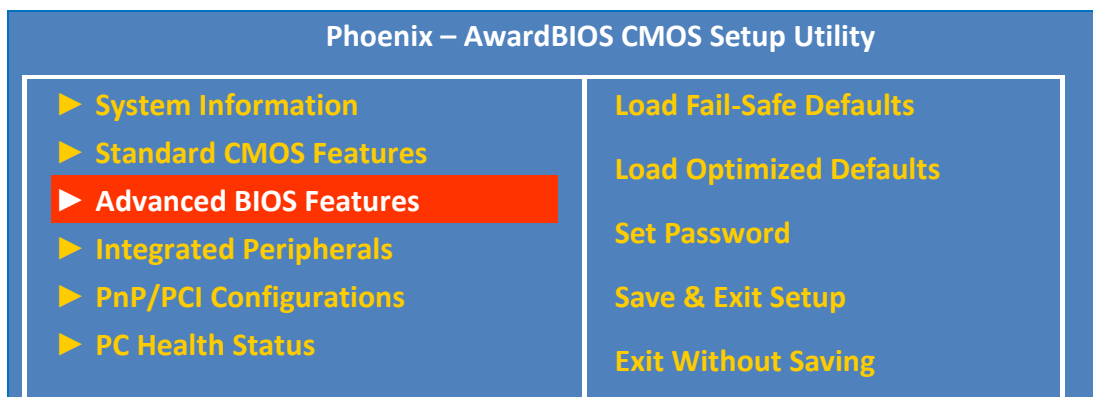

Step 4: Select First Boot Device and then press Enter key

Step 5: Set First Boot Device as HDD-1, it means the XP-8x41-CE6 booting from the CF card

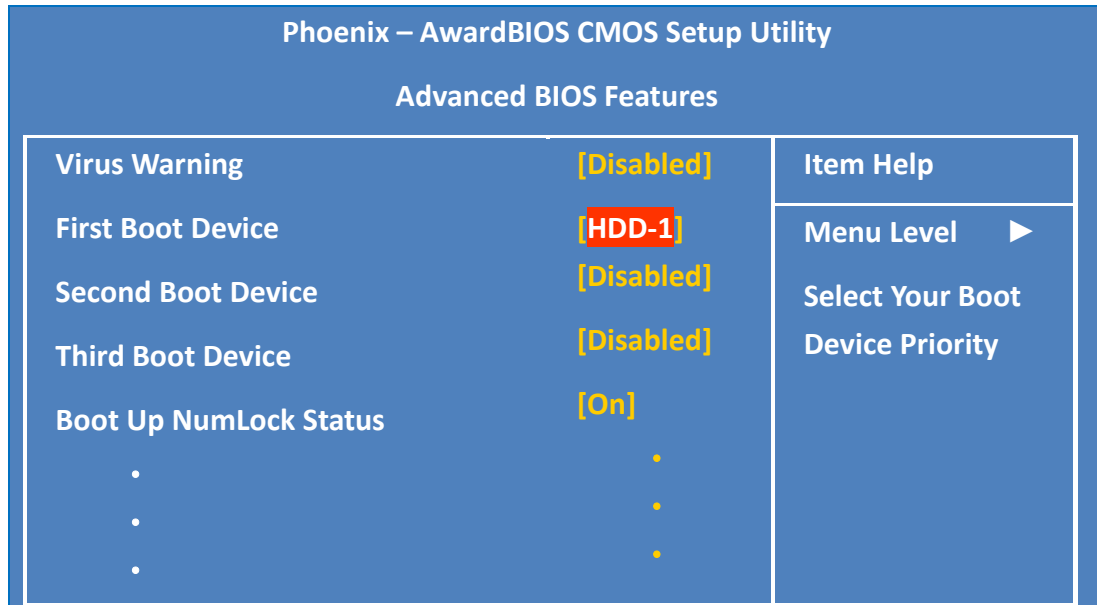

Step 6: Press F10 key and select OK to exit the setup utility and reboot the XP-8x41-CE6

After rebooting the XP-8x41-CE6, the system will enter the XP-8x41-CE6 Rescue Utility.

Step 7: Enter 1, (1) create XPAC_CE default partition

Wait a while until we enter the XP-8x41-CE6 Rescue Utility again.

```
=====
==          XP-8000-CE6 Main Menu          ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 1
```

Step 8: Enter 2, (2) format and restore XPAC_CE to factory default OS.

Wait a while until we enter the XP-8x41-CE6 Rescue Utility again.

```
=====
==          XP-8000-CE6 Main Menu          ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 2
```


Step 9: Enter 3, (3) reboot

```
=====
==          XP-8000-CE6 Main Menu          ==
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **


(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 3
```

Step 10: Repeat step 2 to step 6 to set First Boot Device as HDD-0

HDD-0 means Built-in flash.

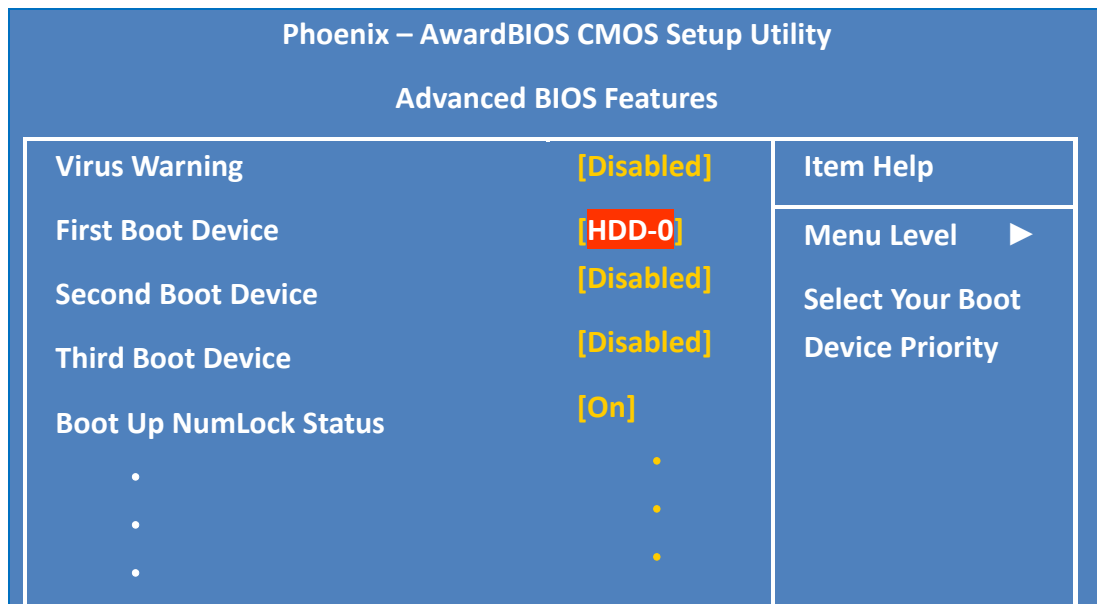


Step 11: The XP-8x41-CE6 has been recovered

7.1.3. Recovering the XP-8x41-Atom-CE6

Here are step by step instructions on how to recovering the XP-8x41-Atom-CE6.

Step 1: Plug the CF card in CF slot and turn the rotary switch in position 0

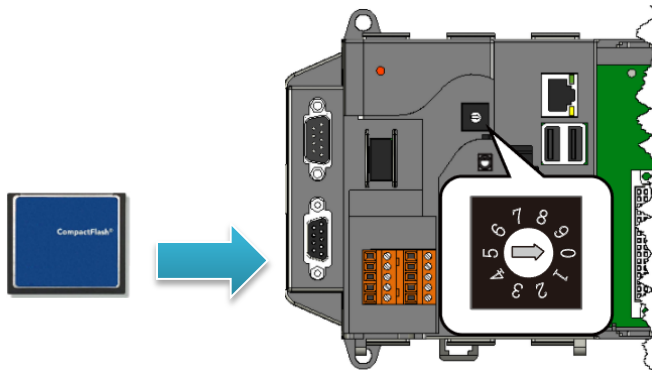

Step 2: Reboot the XP-8x41-Atom-CE6, press Delete key to enter the BIOS setup utility

Step 3: On the Boot menu, select Hard Disk Drives and then press Enter key

| BIOS SETUP UTILITY | | | | | | |
|-----------------------------|----------|--------|------|----------|-------------------------------------|------|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Boot Settings | | | | | Specifies the Boot Device Priority | |
| Boot Settings Configuration | | | | | sequence from available Hard drives | |
| Hard Disk Drives | | | | | | |

Step 4: Select 1st Drive and then press Enter key

Step 5: Set 1st Drive as PS-XXX, it means the XP-8x41-Atom-CE6 booting from the CF card

| BIOS SETUP UTILITY | | | | | | |
|--------------------|----------|--------|----------------|----------|---------|---|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Hard Disk Drivers | | | | | | Specifies the Boot sequence from available drives |
| 1st Drive | | | [SATA: PS-XXX] | | | |
| 2nd Drive | | | [SATA: PM-XXX] | | | |

Step 6: Press F10 key and select OK to exit the setup utility and reboot the XP-8x41-Atom-CE6

After rebooting the XP-8x41-Atom-CE6, the system will enter the XP-8x41-Atom-CE6 Rescue Utility.

Step 7: Enter 1, (1) create XPAC_CE default partition

Wait a while until we enter the XP-8x41-Atom-CE6 Rescue Utility again.

```
=====
==                               ==
Main Menu
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 1
```

Step 8: Enter 2, (2) format and restore XPAC_CE to factory default OS.

Wait a while until we enter the XP-8x41-Atom-CE6 Rescue Utility again.

```
=====
==                               ==
Main Menu
=====

**   the following 3 steps help you   **
**   restore default XPAC_CE OS.     **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 2
```

Step 9: Enter 3, (3) reboot

```
=====
==                               ==
=====

**  the following 3 steps help you  **
**  restore default XPAC_CE OS.    **

(1) Step 1: create XPAC_CE default partition.
(2) Step 2: format and restore XPAC_CE to factory default OS.
(3) Step 3: reboot

(6) Display directory information on built-in flash

Please enter your choice: 3
```

Step 10: Repeat step 2 to step 6 to set 1st Drive as PM-XXX

PM-XXX means Built-in flash.

| BIOS SETUP UTILITY | | | | | | |
|--------------------|----------|--------|----------------|----------|---|------|
| Main | Advanced | PCIPnP | Boot | Security | Chipset | Exit |
| Hard Disk Drivers | | | | | Specifies the Boot sequence from available drives | |
| 1st Drive | | | [SATA: PM-XXX] | | | |
| 2nd Drive | | | [SATA: PS-XXX] | | | |

Step 11: The XP-8x41-Atom-CE6 has been recovered

7.2. Restore the Rescue CF Card

The rescue CF card is rescue equipment that allows you to perform some maintenance tasks on your system in case of failure.

Once the rescue CF card are partitioned or formatted, you must restore the rescue CF card.

Requirements

For restoring the Rescue CF card, you should prepare Ghost 11 or later, which you could obtain by contacting Symantec (<http://www.symantec.com>)

Here are step by step instructions on how to restore the rescue CF card. In this demonstration, we will use Symantec Norton Ghost32 V.11.0 (The Symantec Norton Ghost V.11 or above version are recommend).

Step 1: Get the latest version of rescue ghost file, rescue.gho

The latest version of rescue.gho file can be found by downloading the latest version from ICP DAS web site.

- **For XP-8x31-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/rescue_disk/

- **For XP-8x41-CE6:**

http://ftp.icpdas.com/pub/cd/xp-8000-ce6/rescue_disk/


- **For XP-8x41-Atom-CE6:**

http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/rescue_disk/


Step 2: Start the Symantec Norton Ghost32 V.11, and then click OK




Step 3: Click Function Menu, point to Local, point to Disk, and then click From Image

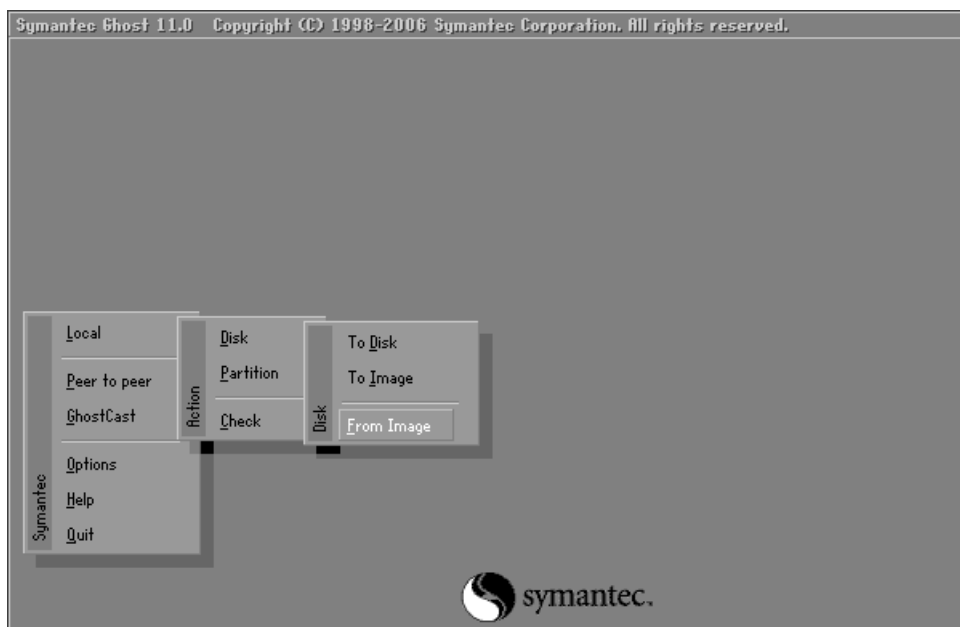


Step 4: Select the rescue ghost file that you saved, and then click Open

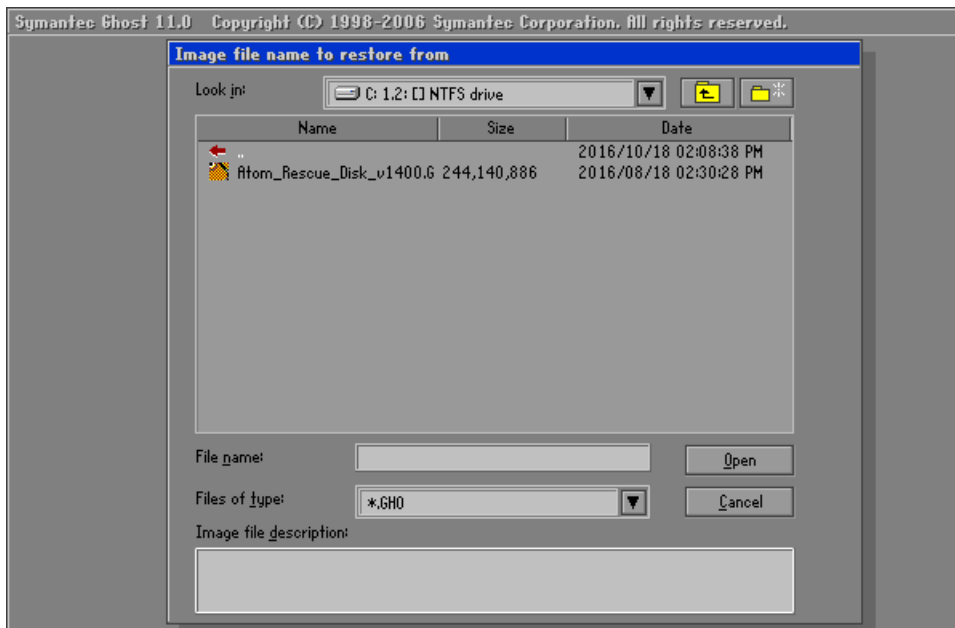


Step 5: Select the destination to CF card and click then OK

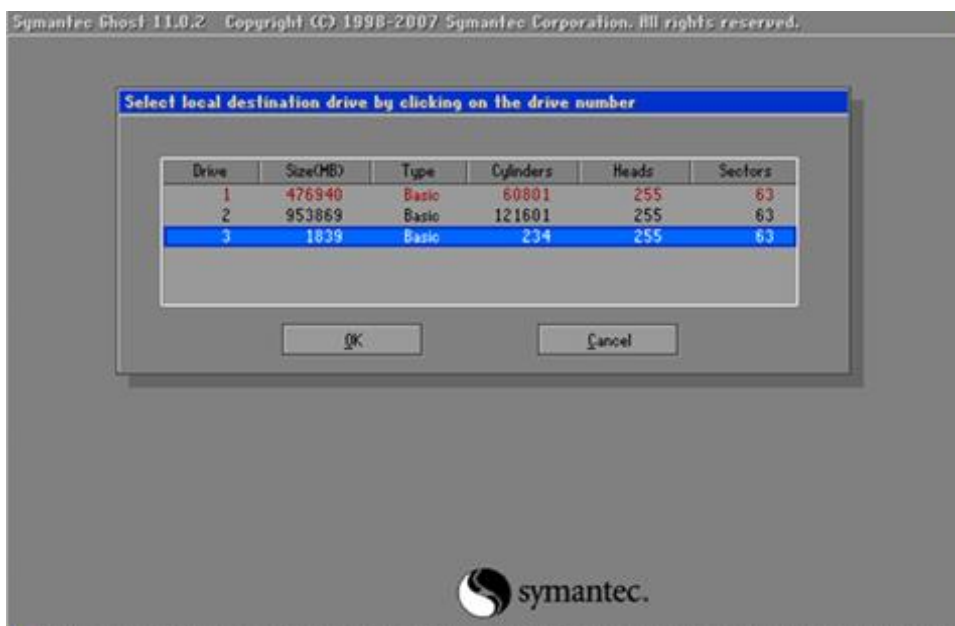

Step 6: Recover the rescue ghost file into CF card and then click OK

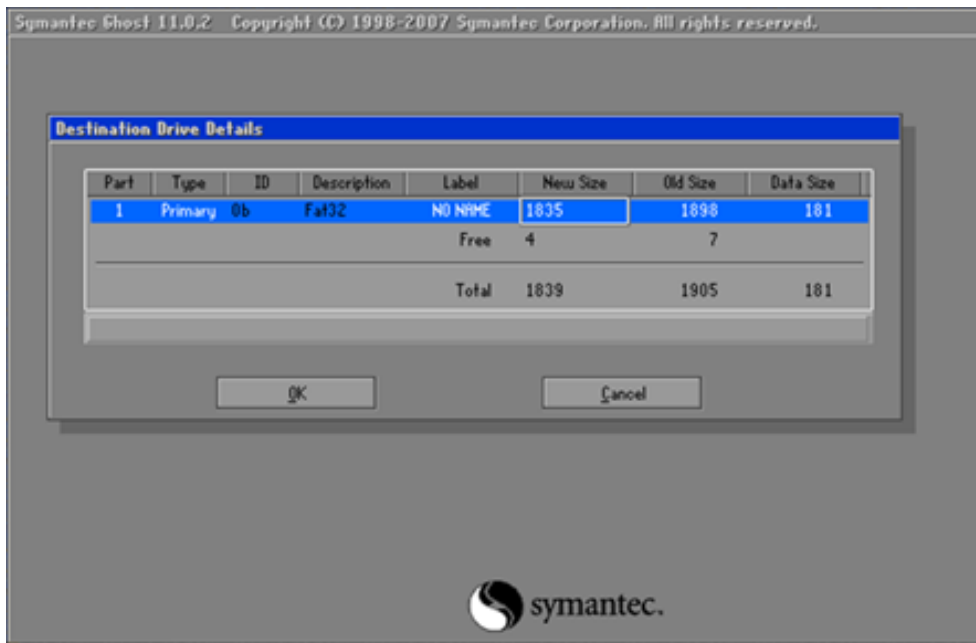

Step 7: The rescue CF card has been done

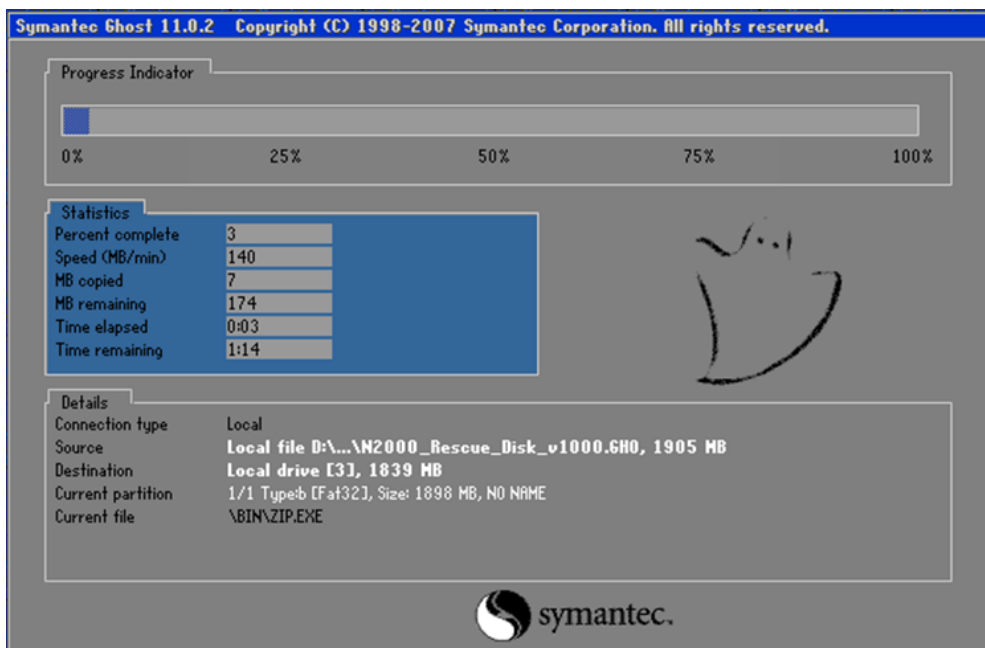

8. XP-8000-CE6 Updates


This chapter provides a guided tour that demonstrates the steps needed to update the XP-8000-CE6 OS and SDKs.

ICP DAS will continue to add additional features to XP-8000-CE6 SDK and OS in the future, so we advise you to periodically check the ICP DAS web site for the latest updates.

The file location of the OS and SDK


Both the files of OS updates and SDK updates can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

- For XP-8x31-CE6:
CD:\XP-8X3X-CE6\
<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/>
- For XP-8x41-CE6:
CD:\XP-8000-CE6\
<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/>
- For XP-8x41-Atom-CE6:
CD:\XPAC-ATOM-CE6\
<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/>

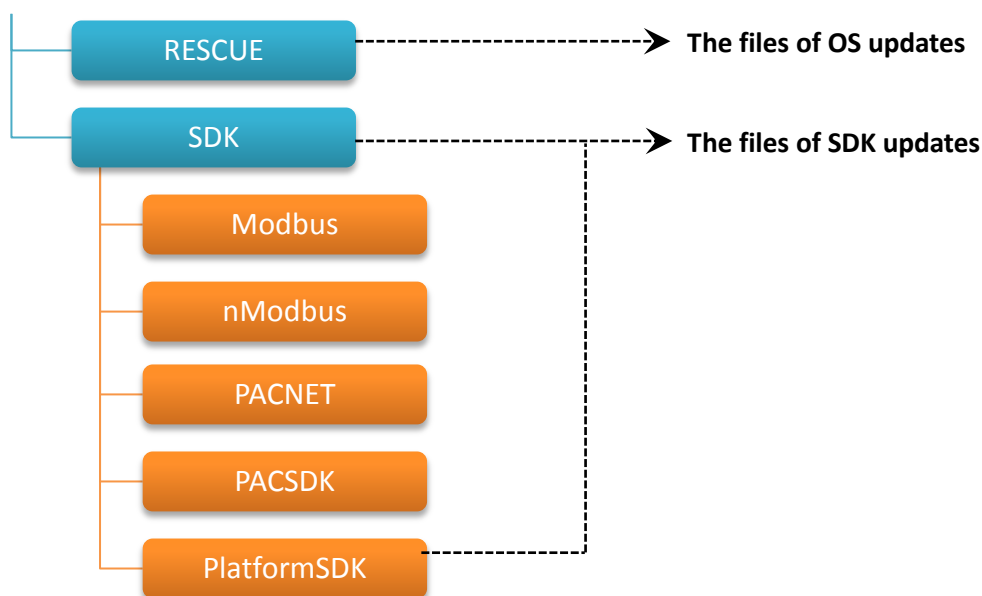

8.1. OS Updates

The OS update file can be obtained via the network. Before updating the OS, make sure the XP-8000-CE6 is connected to the network.

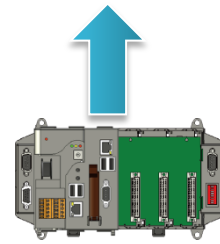

Step 1: Get the latest version of the OS image file, NK.bin

The latest version of the OS image file, NK.bin, can be found from ICP DAS web site.

- For XP-8x31-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/rescue/ce6/>

- For XP-8x41-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/>

- For XP-8x41-Atom-CE6:


<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/rescue/ce6/>

Step 2: Replace an old one OS with a new one

The OS image, NB.bin are pre-installed on the \System_Disk


Step 3: Reboot the XP-8000-CE6, the OS image has been updated completely

Run the XPAC Utility, click Reboot from the File menu for changes to take effect.

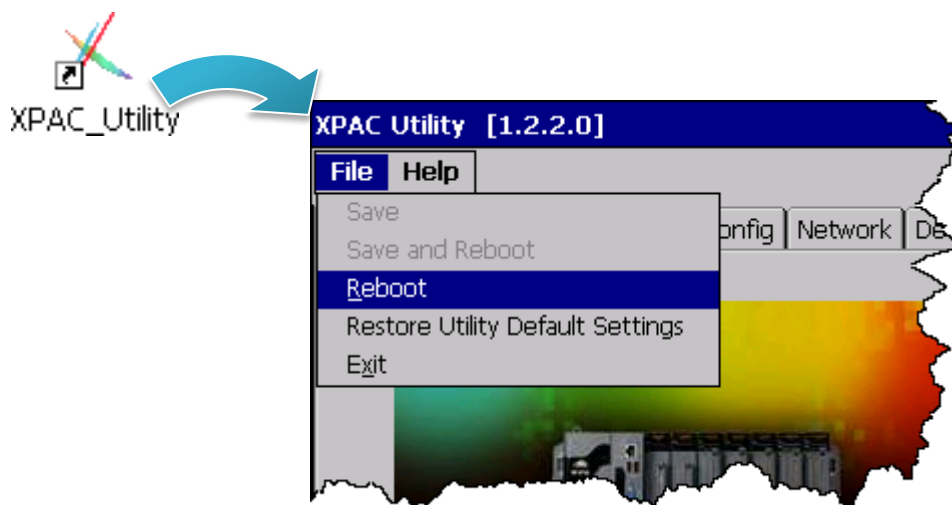

Step 4: Check the OS version

Run the XPAC Utility, and then select the Device Information tab to check the current OS version.

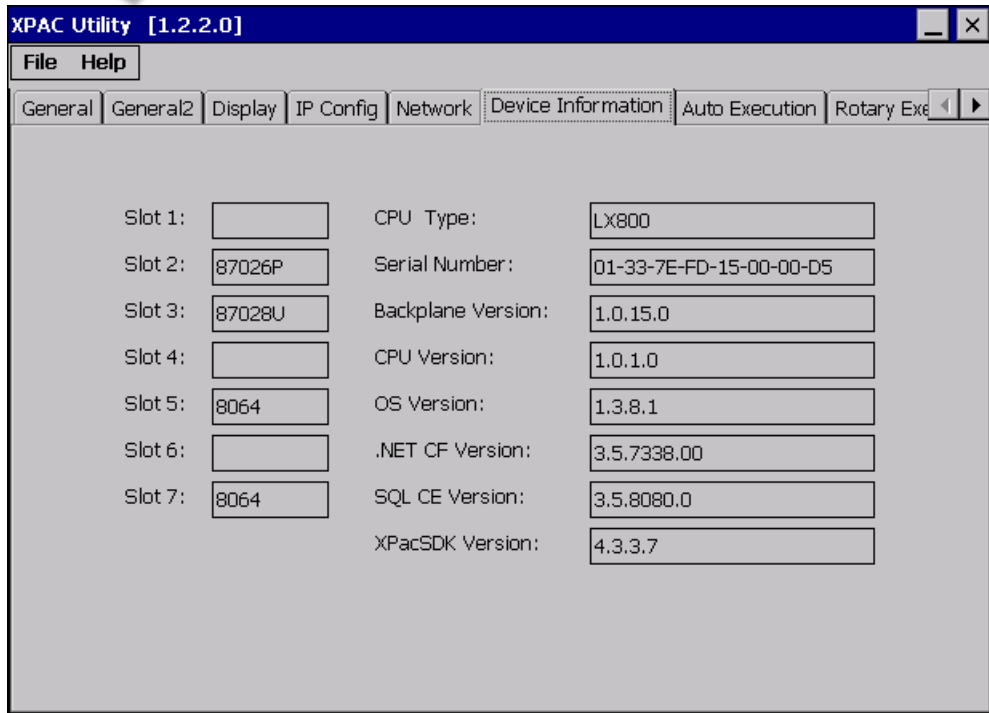

8.2. SDK Updates

SDK update is a part of the XP-8000-CE6 update services to provide additional and more efficient features and functionality for XP-8000-CE6 operating system.

8.2.1. SDK Updates for VB.NET or C#

The SDK can be updated by replacing the PACNET.dll file.

Step 1: Get the latest version of the PACNET.dll file

The latest version of the PACNET.dll file can be obtained from ICP DAS web site.

- For XP-8x31-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/sdk/xpacnet/pacnet/>

- For XP-8x41-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/sdk/xpacnet/pacnet/>

- For XP-8x41-Atom-CE6:

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/sdk/xpacnet/pacnet/>


Step 2: Copy the latest version of PACNet.dll file to PC and XP-8000-CE6

The PACNET.dll file on PC can be placed anywhere only the solution can reference it.

The PACNET.dll file on XP-8000-CE6 is located at the same directory as the .exe file.


Step 3: Reboot the XP-8000-CE6, the SDK has been updated completely

Run the XPAC Utility, click Reboot from the File menu for changes to take effect.

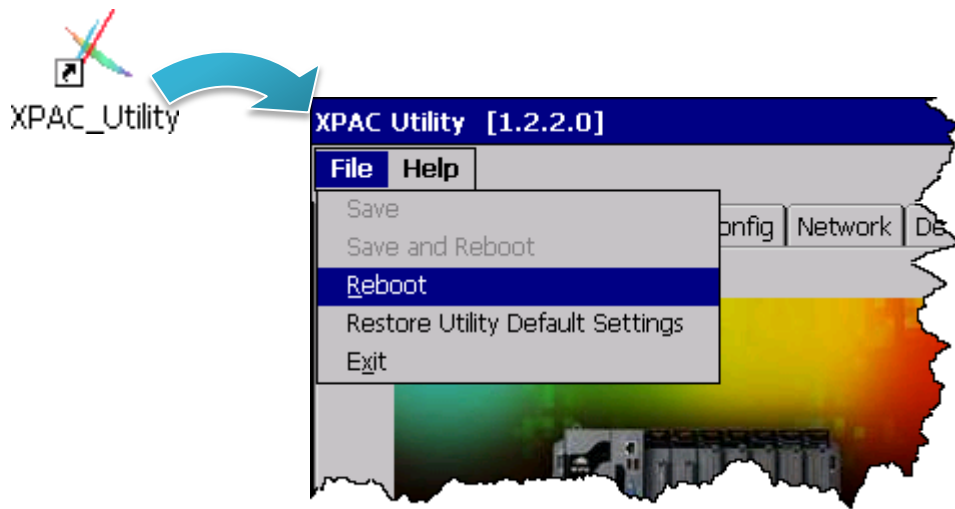

Step 4: Check the SDK version

Run the XPAC Utility, and then select the Device Information tab to check the current SDK version.

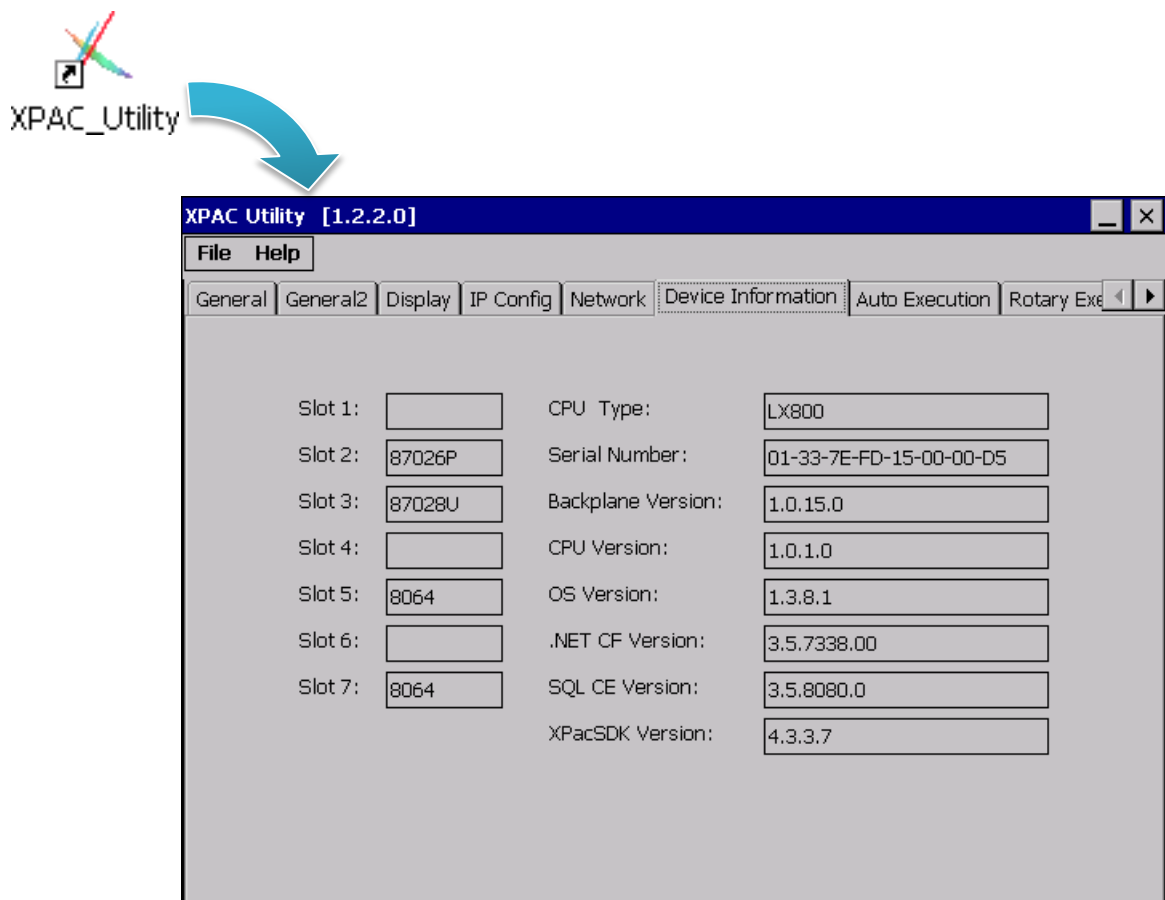

8.2.2. SDK Updates for VB.NET or Visual C++

The SDK can be updated by replacing the PAC SDK files.

Step 1: Get the latest version of the VC++ components

The latest version of the VC++ components can be obtained from:

- For XP-8x31-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8x3x-ce6/sdk/xpacsdk/pacsdk/>

- For XP-8x41-CE6:

<http://ftp.icpdas.com/pub/cd/xp-8000-ce6/sdk/xpacsdk/pacsdk/>

- For XP-8x41-Atom-CE6:

<http://ftp.icpdas.com/pub/cd/xpac-atom-ce6/sdk/xpacsdk/pacsdk/>

Step 2: Copy the latest version of header files and libraries to PC

The header files are located at:

C:\Program Files\Windows CE Tools\wce600\XPacSDK_CE\Include\X86\

The libraries are located at:

C:\Program Files\Windows CE Tools\wce600\XPacSDK_CE\Lib\X86\


Step 3: Copy the latest version of DLL files to XP-8000-CE6

The DLL files are located at:

\System_Disk\ICPDAS\System


Step 4: Reboot the XP-8000-CE6, the SDK has been updated completely

Run the XPAC Utility, click Reboot from the File menu for changes to take effect.

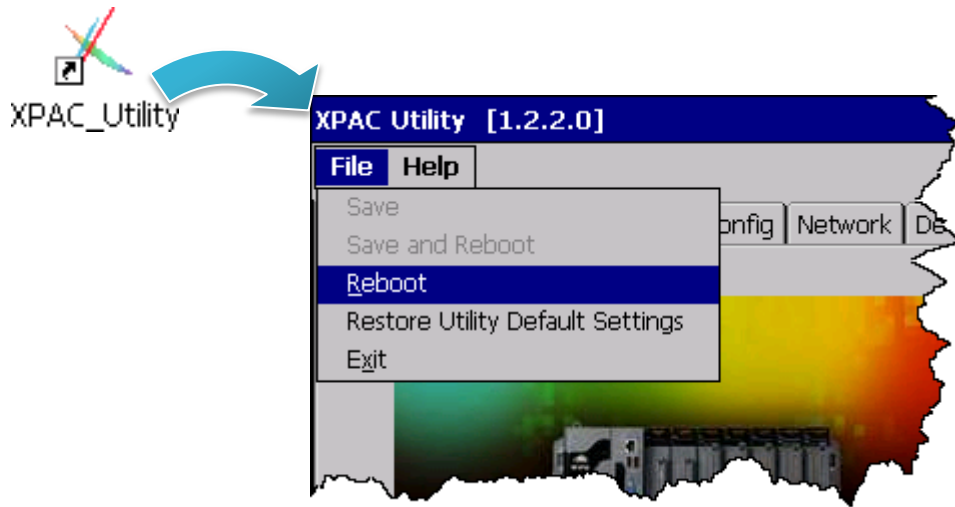

Step 5: Check the SDK version

Run the XPAC Utility, and then select the Device Information tab to check the current SDK version.

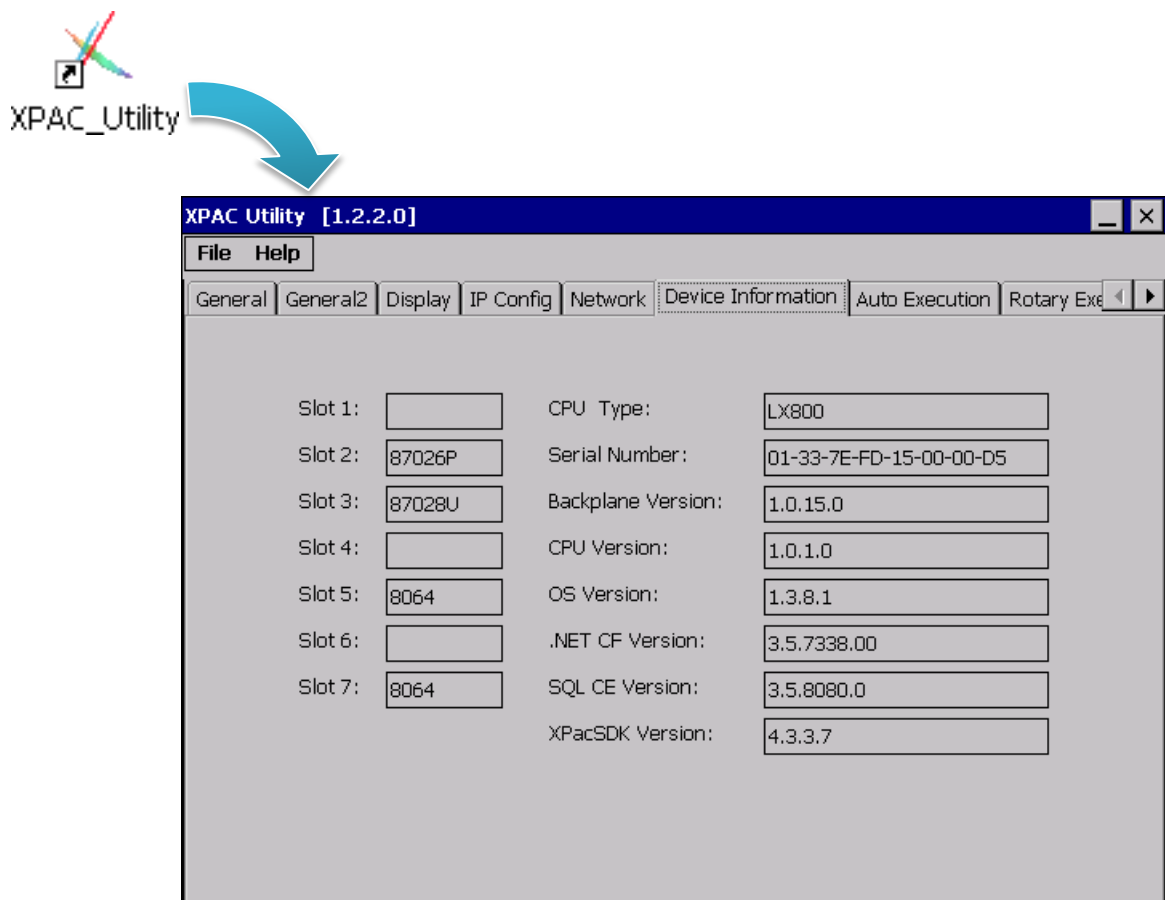

9. XP-8000-CE6 Download Center

This chapter provides a brief introduction of the XP-8000-CE6 download center.

XP-8000-CE6 has a download center where you can access the latest version of the software, tools, demo programs, and related information.

The XP-8000-CE6 Download Center can be found separately at:

<http://www.icpdas.com/root/support/download/download.php>

XP-8000-CE6 Download Center

Note:
When you download the software programs, you should notice if the programs conform to your machine. The published date and indicated requirement of a program can help user to determine the compatibility for your XP-8000-CE6. Before you download any program, please read the notes of each online program first to avoid the confused situation.

OS imagesSDKUtility & ToolsDemoDocumentsSystem DiskFAQ

OS images download

Note:
Before you download the software programs, you should notice if the programs are compatible to your machine. **Please read the notes first in each chapter you want before download programs.**

How to upgrade OS image of XPAC-8000-CE6
There are two methods to upgrade the XP-8000-CE6:

Only update OS image
Copy a new OS image, NK.bin to replace the old one.

Reinstall XP-8000-CE6
The XP-8000-CE6 can be reinstalled with the XP-8000-CE6 Rescue Utility installed on CF card. Before reinstalling the XP-8000-CE6, make sure the necessary updating files have been are available on your CF card.

For detail information, please refer to the document as follows:


Update OS manual

Tips – How to

This chapter provides tips and a guided tour on using and maintaining the XP-8000.

A. How to Use the Printer

XP-8000-CE6 have ability to access the printer, the printer can be connected via an Ethernet or a USB.

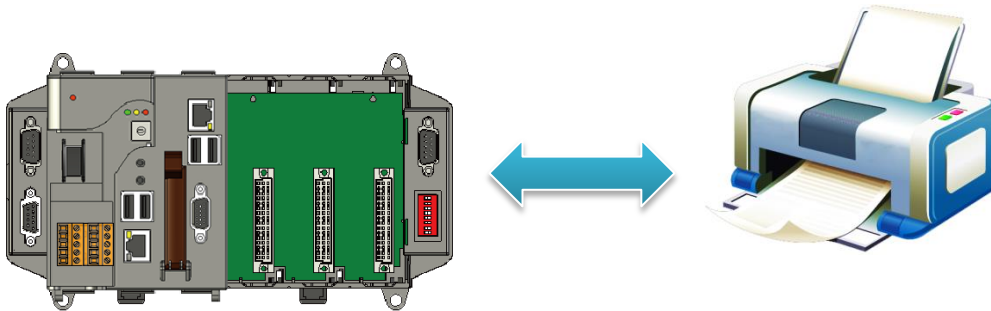

Tips & Warnings



XP-8000-CE6 only supports HP Laser Jet Printers with PCL6 driver. The following printer support is released by HP:

- HP LaserJet 4000 series/HP LaserJet 4100 series
- HP LaserJet 2100 series/HP LaserJet 2200 series
- HP LaserJet 1200
- HP LaserJet 3200/HP LaserJet 3300
- HP LaserJet 4200 series/HP LaserJet 4300 series
- HP LaserJet 5000 series/HP LaserJet 5100 series
- HP LaserJet 8000 series
- HP LaserJet 9000 series printers


If you need the latest support of HP PCL6 printer, you can refer to following link

<http://h20000.www2.hp.com/bizsupport/TechSupport/Document.jsp?objectID=bpl04568>


A.1. How to Use a Network Printer

Here are step by step instructions on how to use a shared printer.

Step 1: On PC side, check the name of the PC and the shared printer

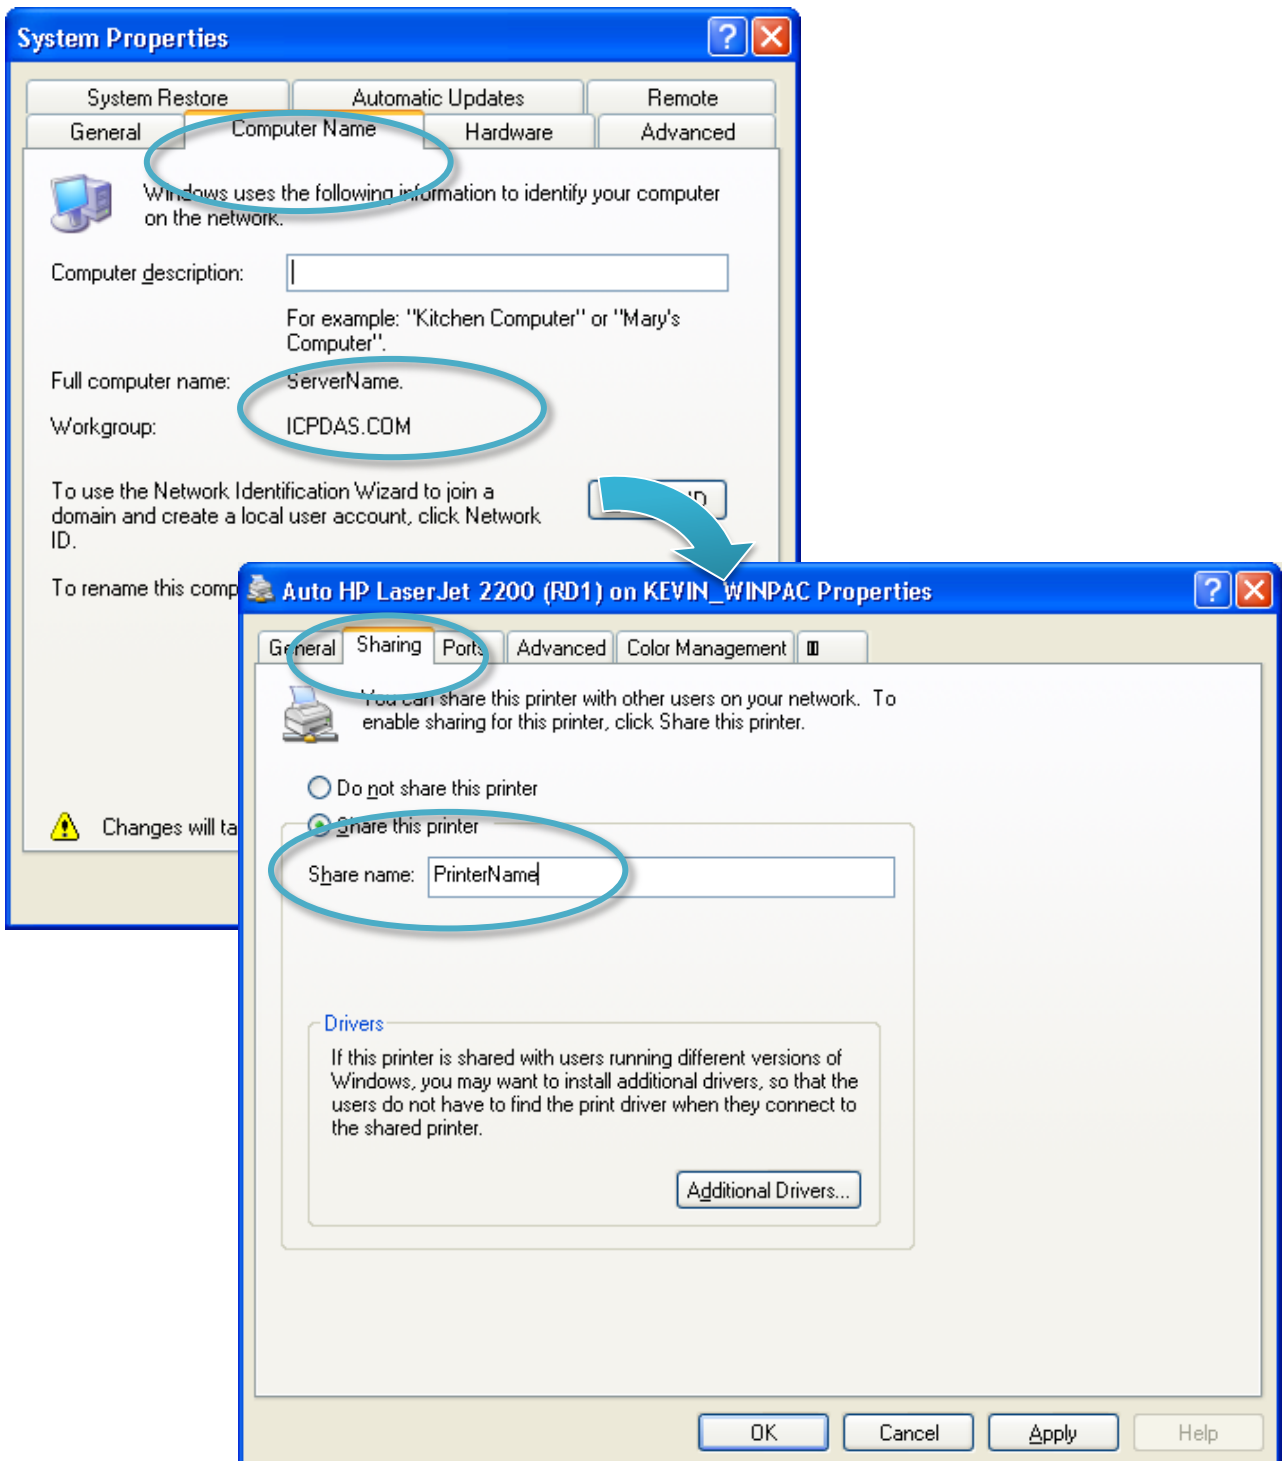

Step 2: On XP-8000-CE6 side, run the Notepad, and then open a WordPad format file

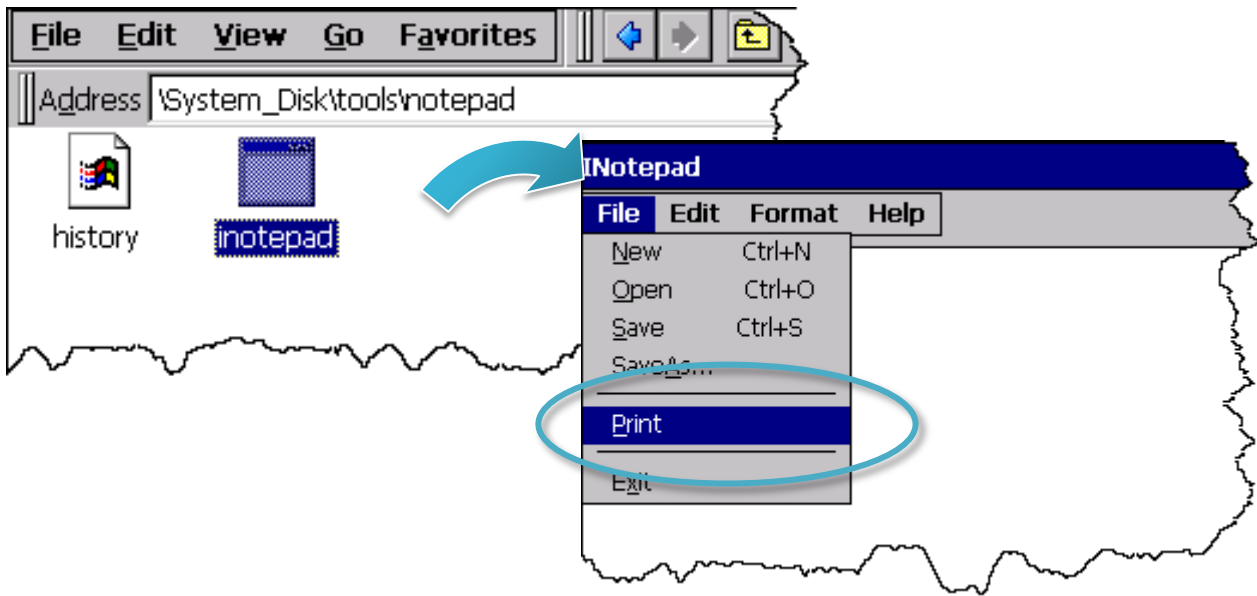

Step 3: Set up the printer

1. Printer: PCL Laser
2. Port: Network
3. Net Path: \\ServerName\PrinterName


The "ServerName" is the name or IP of the PC.

The "PrinterName" is the name of share printer of the PC.

4. Paper Size: Select the paper size




Test !!!

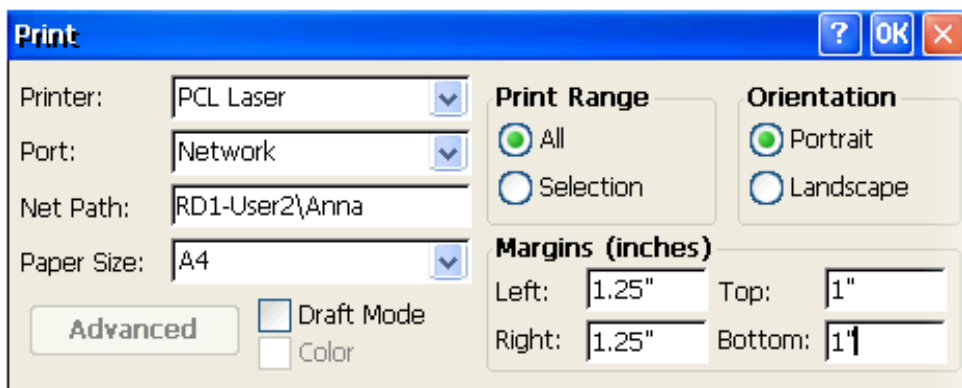

A.2. How to Use a USB printer

Here are step by step instructions on how to use a USB printer via a USB port.

Step 1: Run the Notepad, and then open a WordPad format file

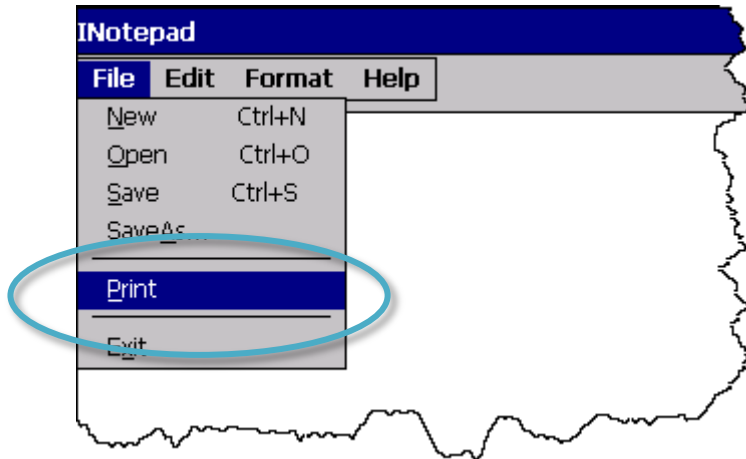


Step 2: Set up the printer

1. Printer: Hewlett-Packard LaserJet
2. Port: LPT1
3. Paper Size: Select the paper size



Test !!!

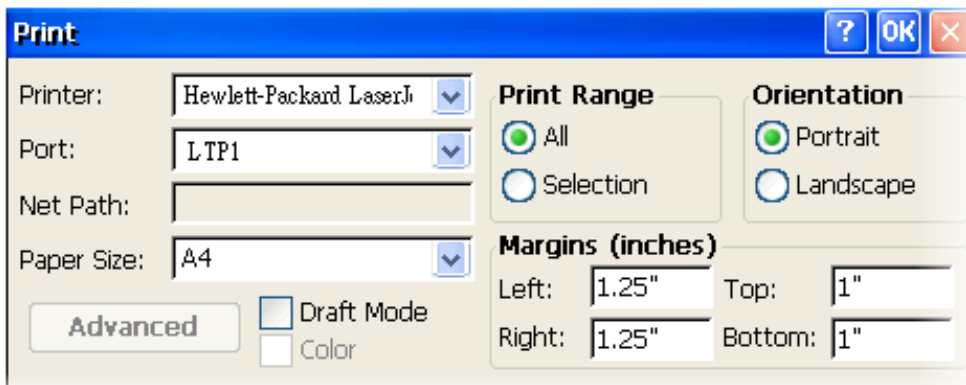

B. How to Online Debug the XP-8000-CE6 Program

Here are step by step instructions on how to online debug the XP-8000-CE6 program.

Tips & Warnings



Before starting online debug the XP-8000-CE6 program, make sure that the XP-8000-CE6 SDK has been installed correctly.


For more information on how to install the XP-8000-CE6 SDK, please refer to 4.1.2. Installing the XP-8000-CE6 SDK.

Step 1: Copy the following files to the \System_Disk\icpdas\system on the XP-8000


By default, these files are located on the development computer at C:\Program Files\Common Files\Microsoft Shared\CoreCon\1.0\Target\wce400\<CPU>.

- clientshutdown.exe
- CMAccept.exe
- ConmanClient2.exe
- eDbgTL.dll
- TcpConnectionA.dll

Step 2: Run the ConmanClient2.exe and then CMAccept.exe on the XP-8000-CE6

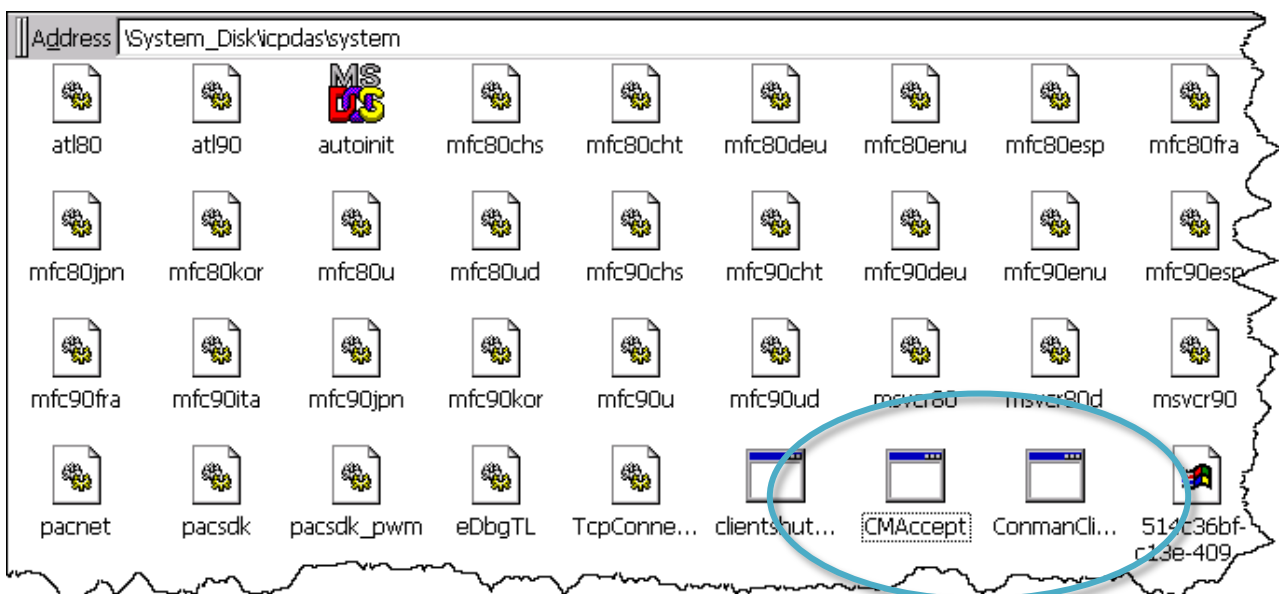


Step 3: On the Tools menu, click the Options

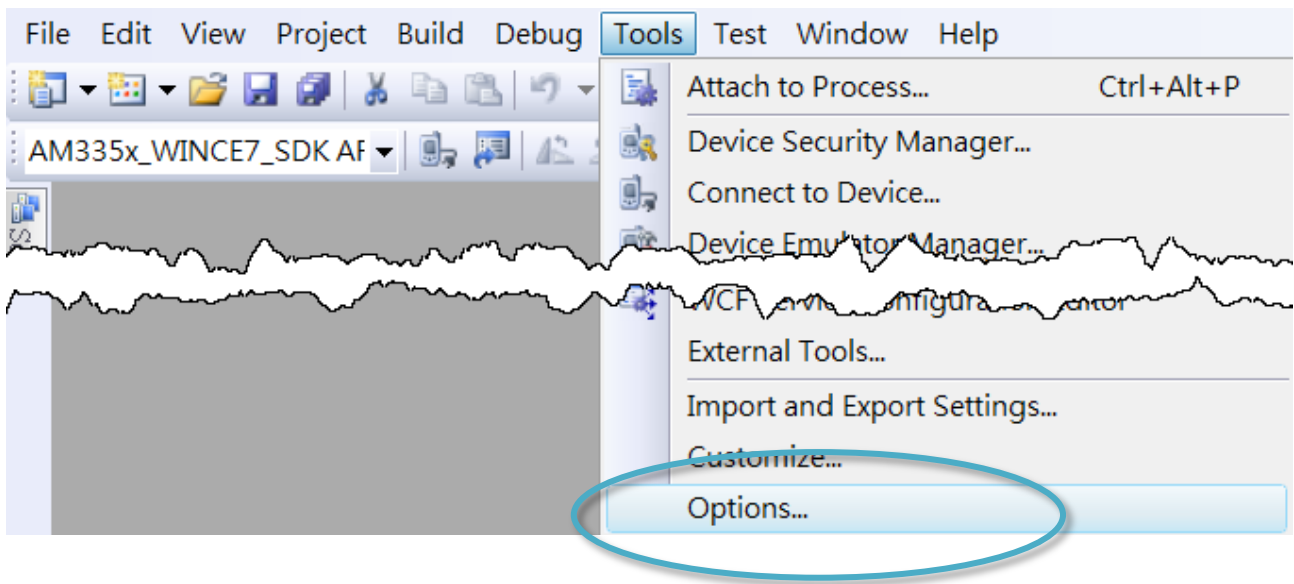


Step 4: In the left pane, expand Device Tools node and select Devices


Step 5: In the Show devices for platform:, select XPacSDK_CE and then click Properties

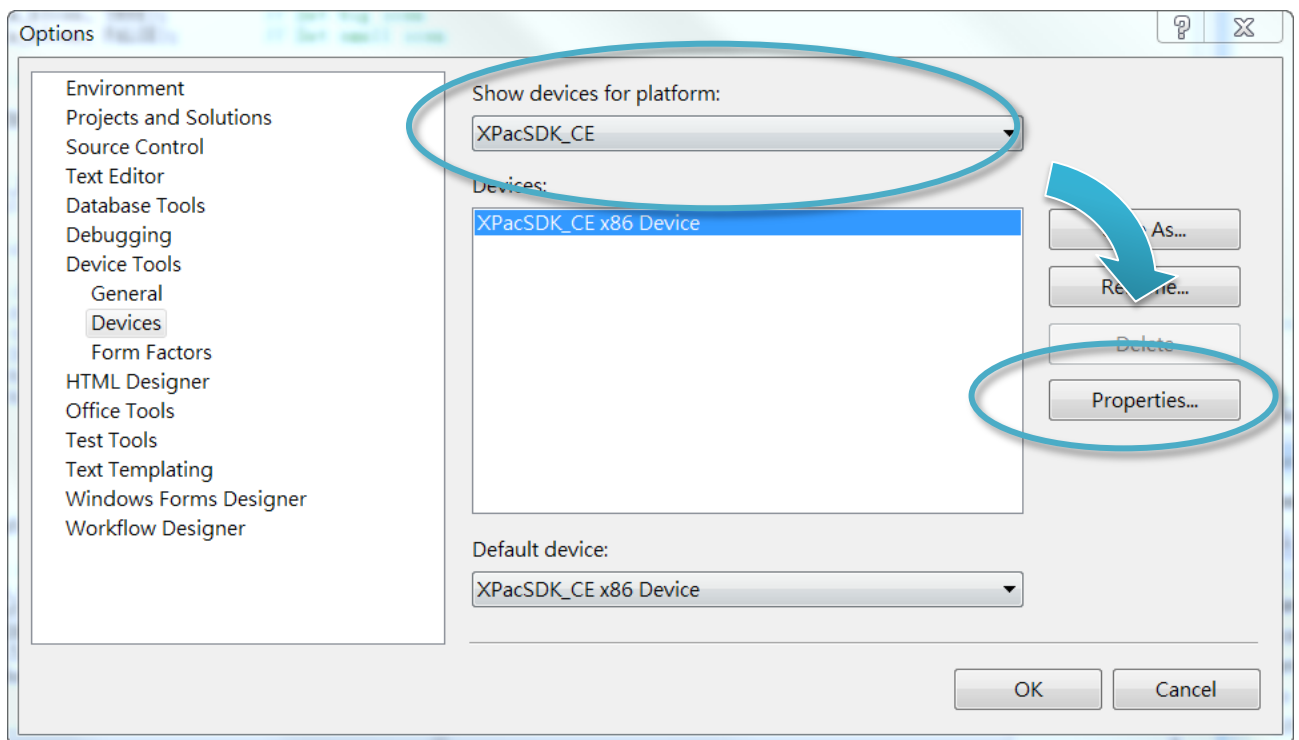



Step 6: Click the Configure...

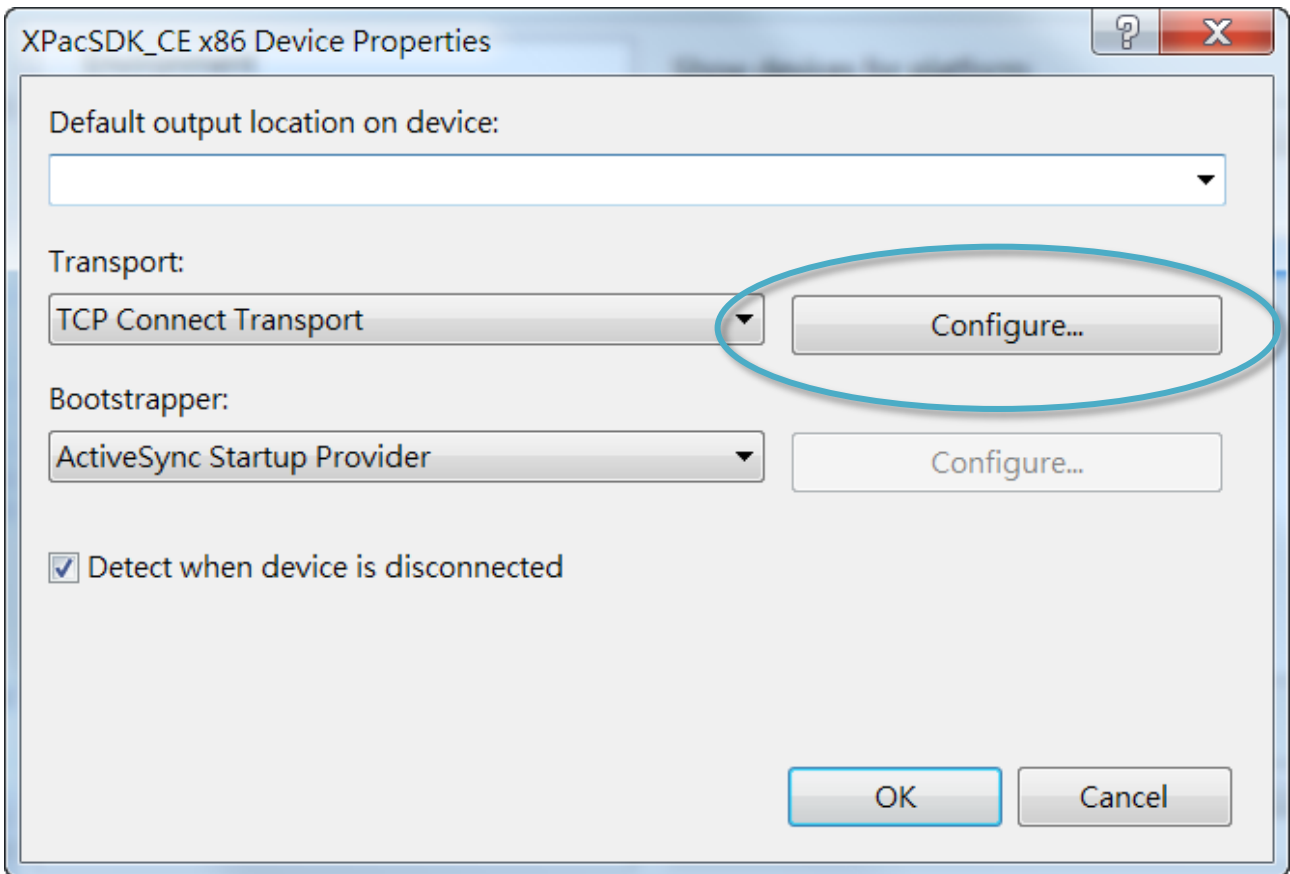


Step 7: Select the Use specific IP address:, and then type the IP address of XP-8000-CE6

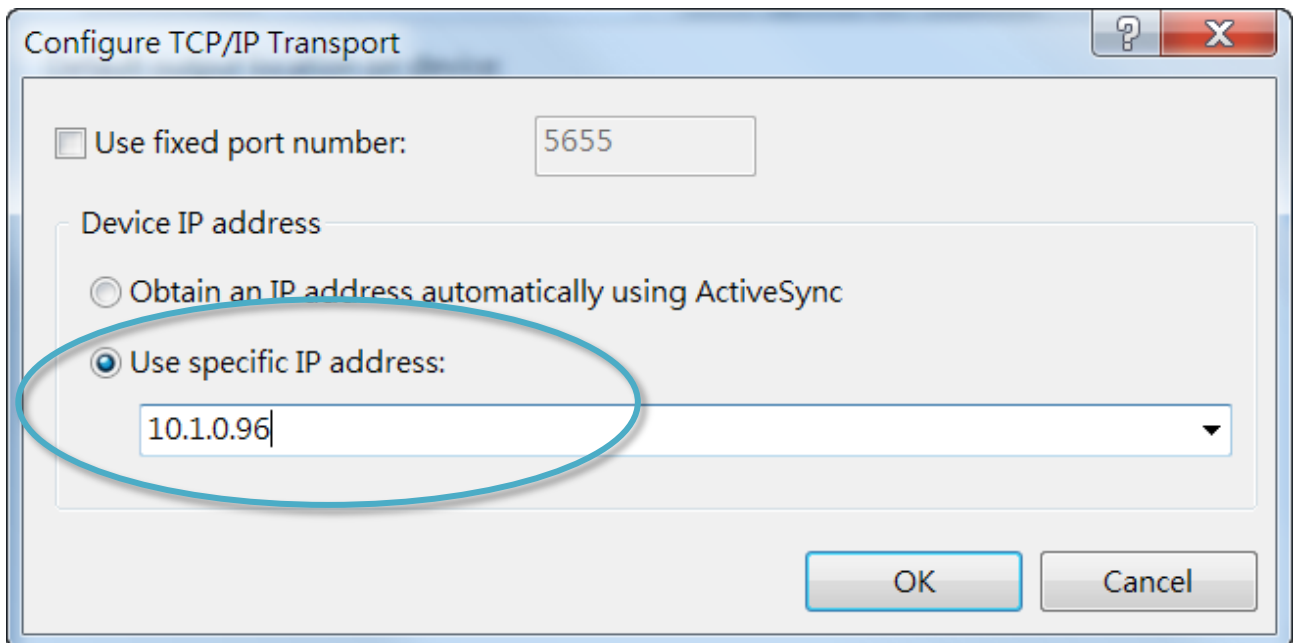


Step 8: Click the OK, and then click OK to end the dialog

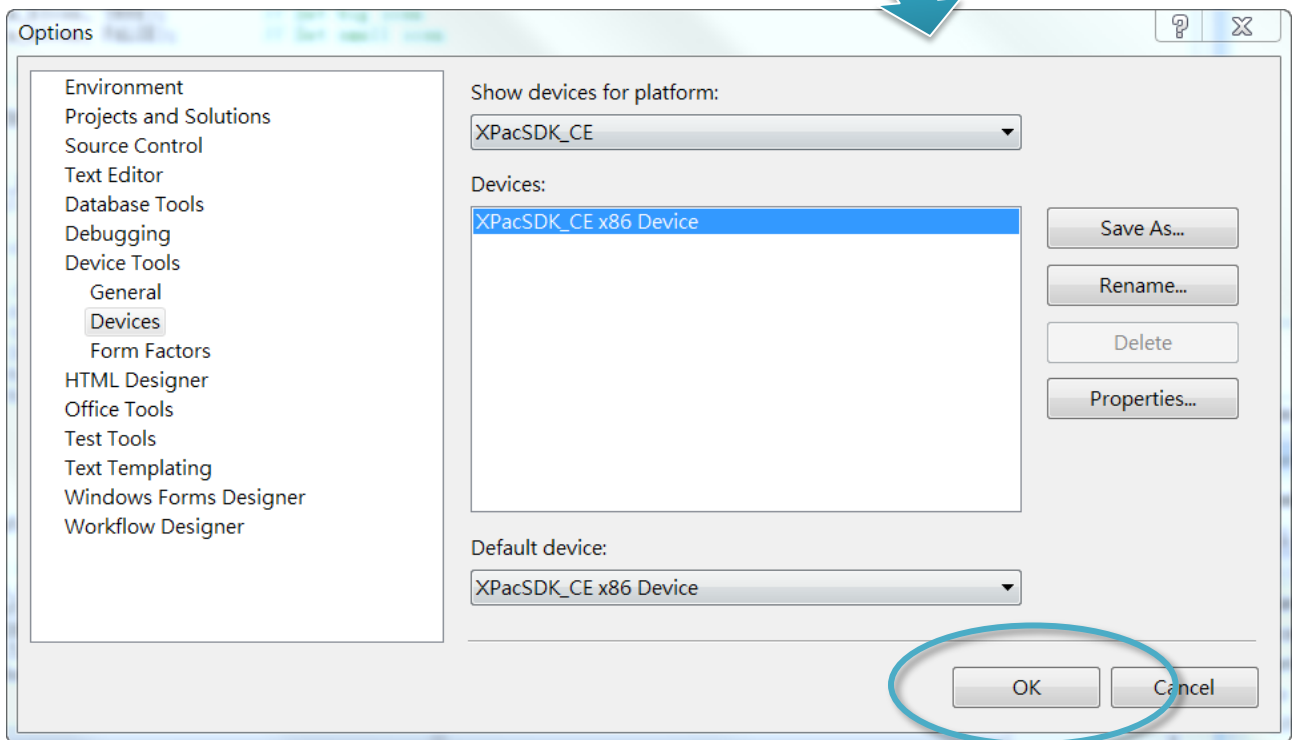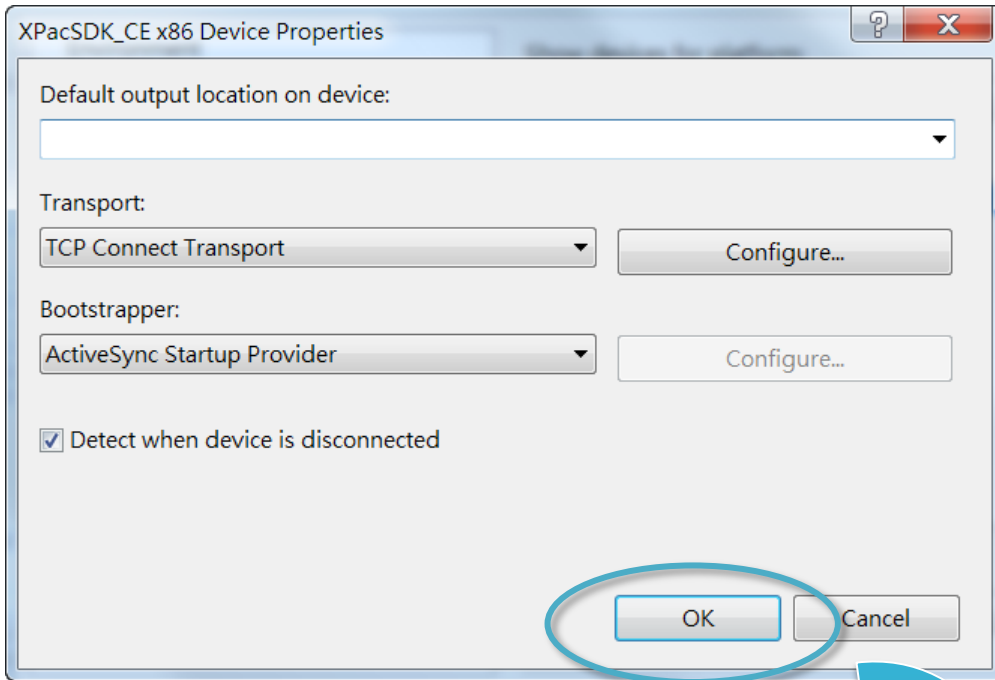


Step 9: On the Tools menu, click the Connect to Device...

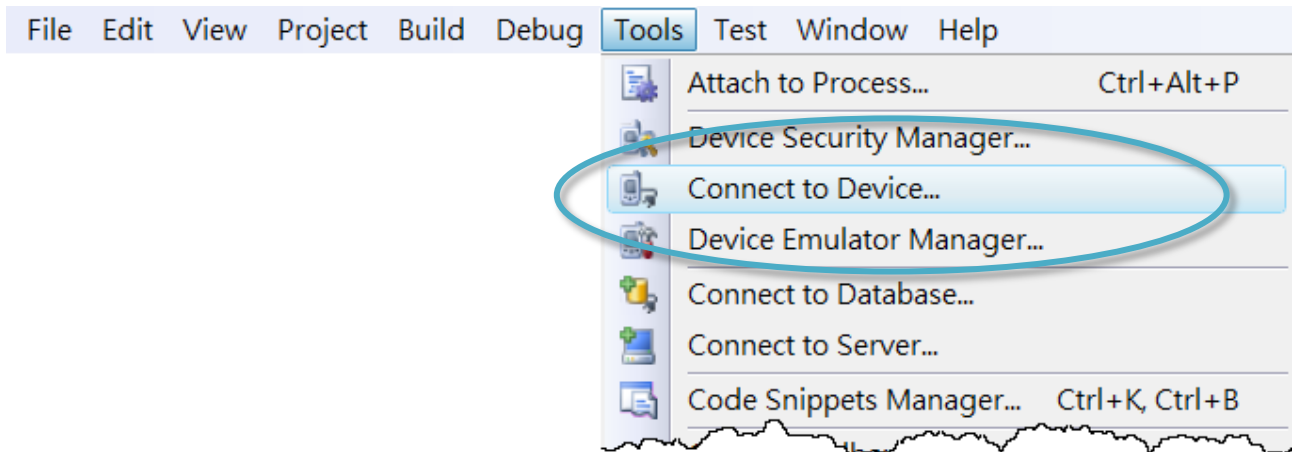

Step 10: Click the Connect

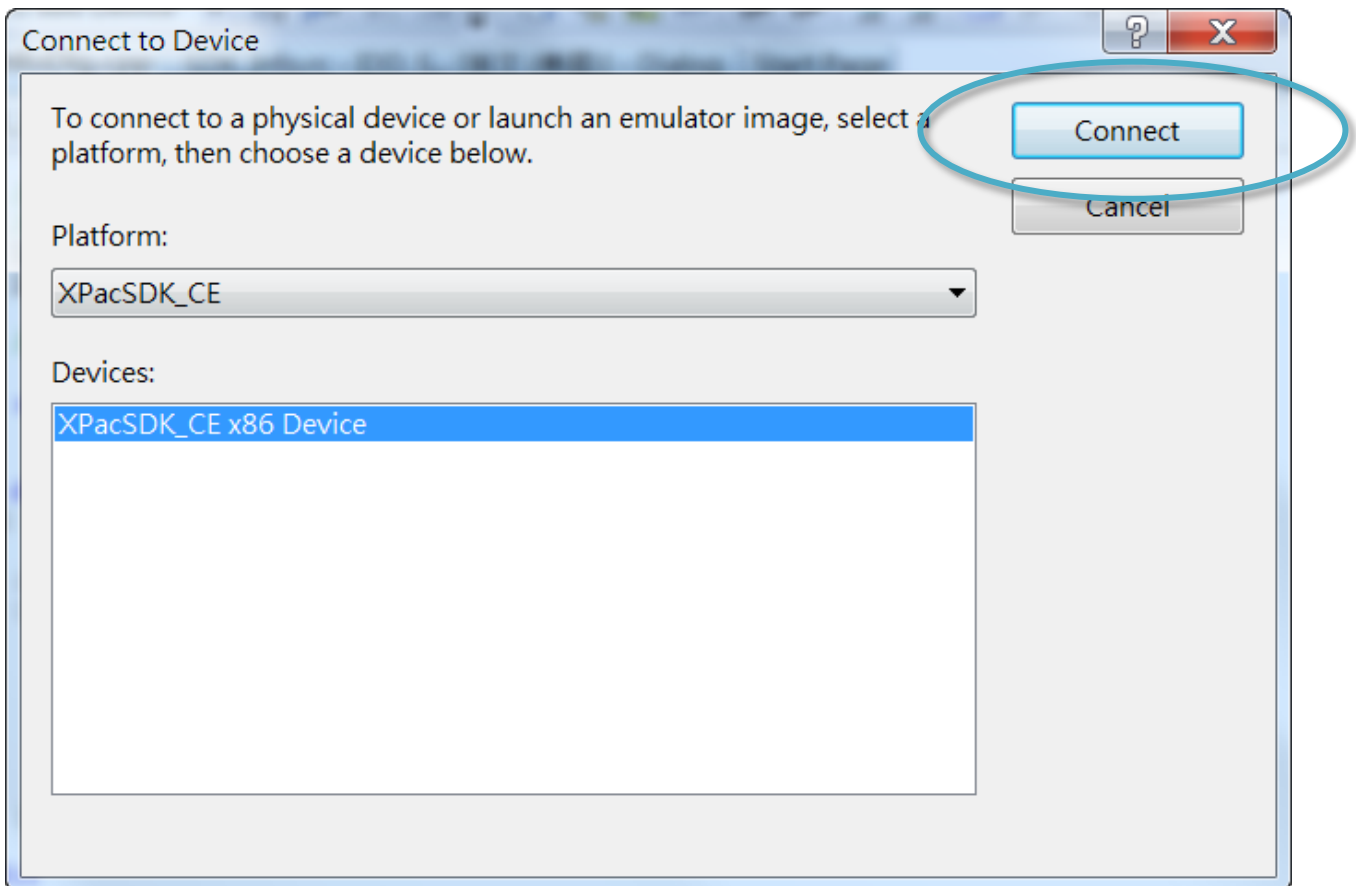

Step 11: Wait for the connection to be established

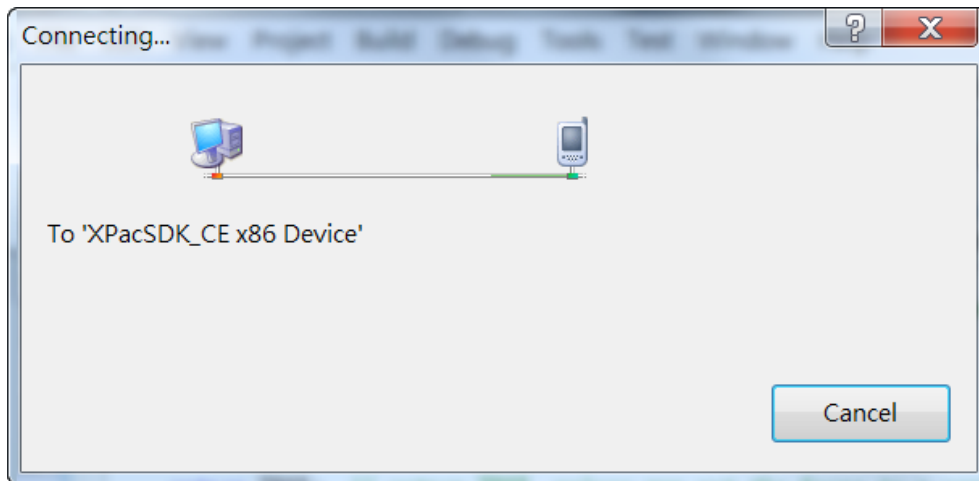

Tips & Warnings



If the connection fails, as shown below, please repeat the step 2 to step 9 to try it again.




C. How to Automatically Synchronize XP-8000-CE6 Clock with an Internet Time Server

The clock on the XP-8000-CE6 can be synchronized with an internet time server. This means that the clock is updated to match the clock on the time server, which can help ensure that the time on the XP-8000-CE6 is accurate. Here are step by step instructions on how to synchronize the clock on the XP-8000-CE6 with an Internet time server.

Step 1: Run the XPAC Utility




Step 2: On the General tab, press Configure button

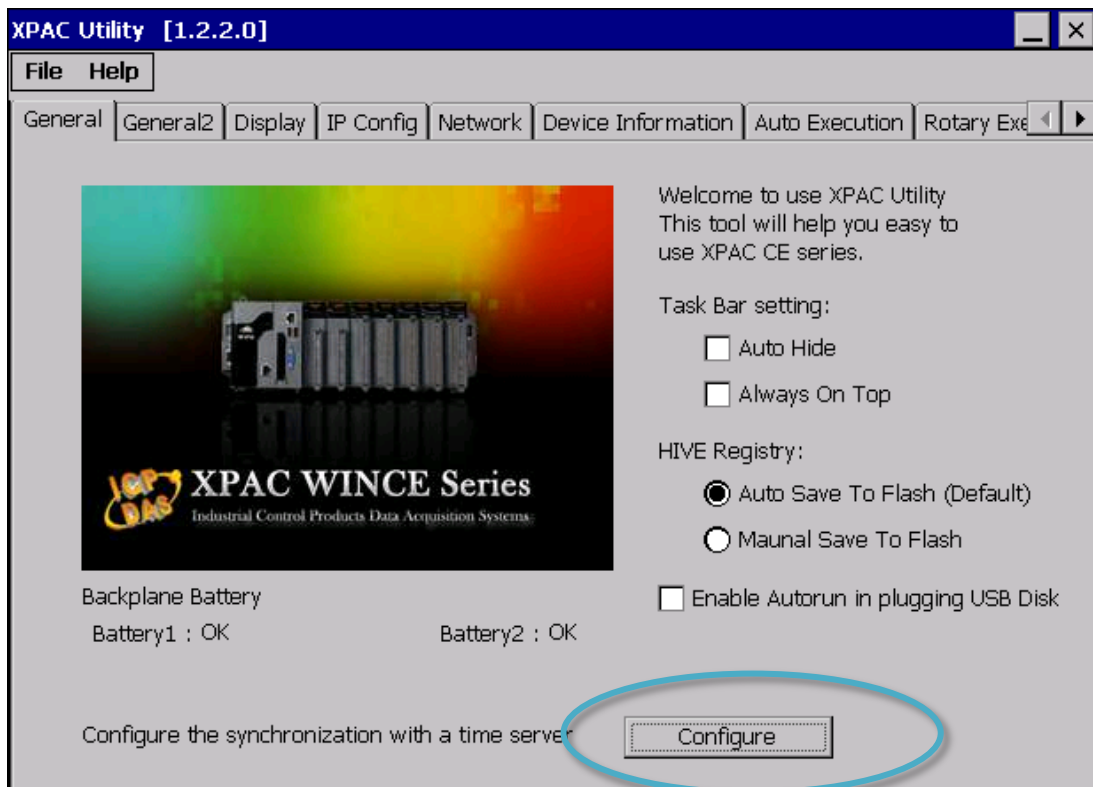


Step 3: Select the domain name from the Server drop-down list, and then enter a value in the Autoupdate Frequency field

Step 4: Check the Automatically synchronize with an internet time server check box

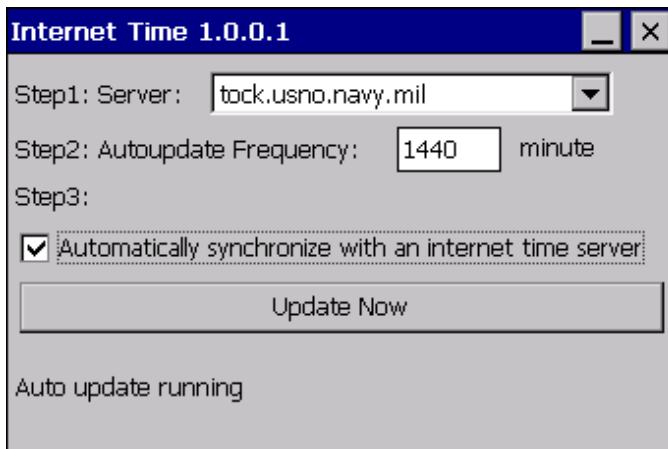


Step 5: On the File menu, click Reboot

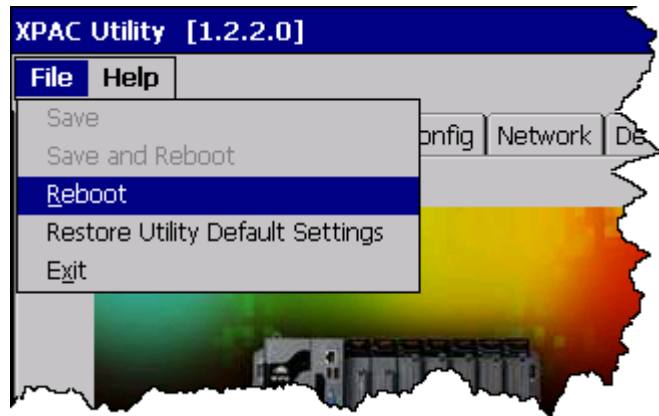

Step 6: The XP-8000-CE6 will automatically synchronize with an internet time server regularly

Step 7: Click the Update Now button to synchronize XP-8000-CE6 clock immediately

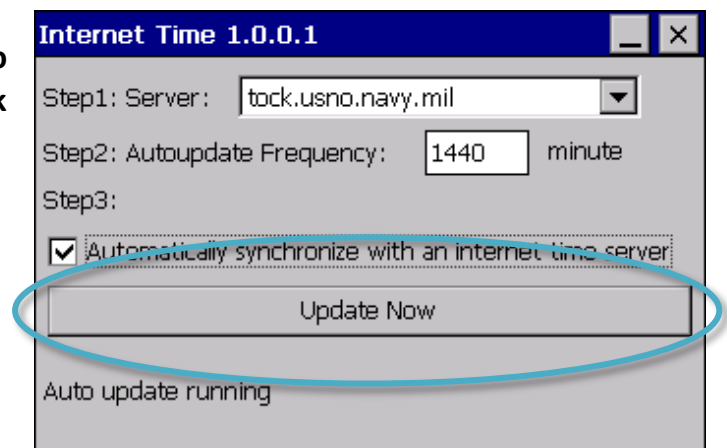

D. How to Control the User Account Control in XP-8000-CE6

User Account Control is a security feature that helps prevent unauthorized system changes to the XP-8000-CE6.


D.1. How to Create a User Account

Here are step by step instructions on how to add a user account.


Step 1: Run the XPAC Utility




Step 2: On the Login tab of the Network tab, click Login tab, type the User Name and Password, and then click Add button

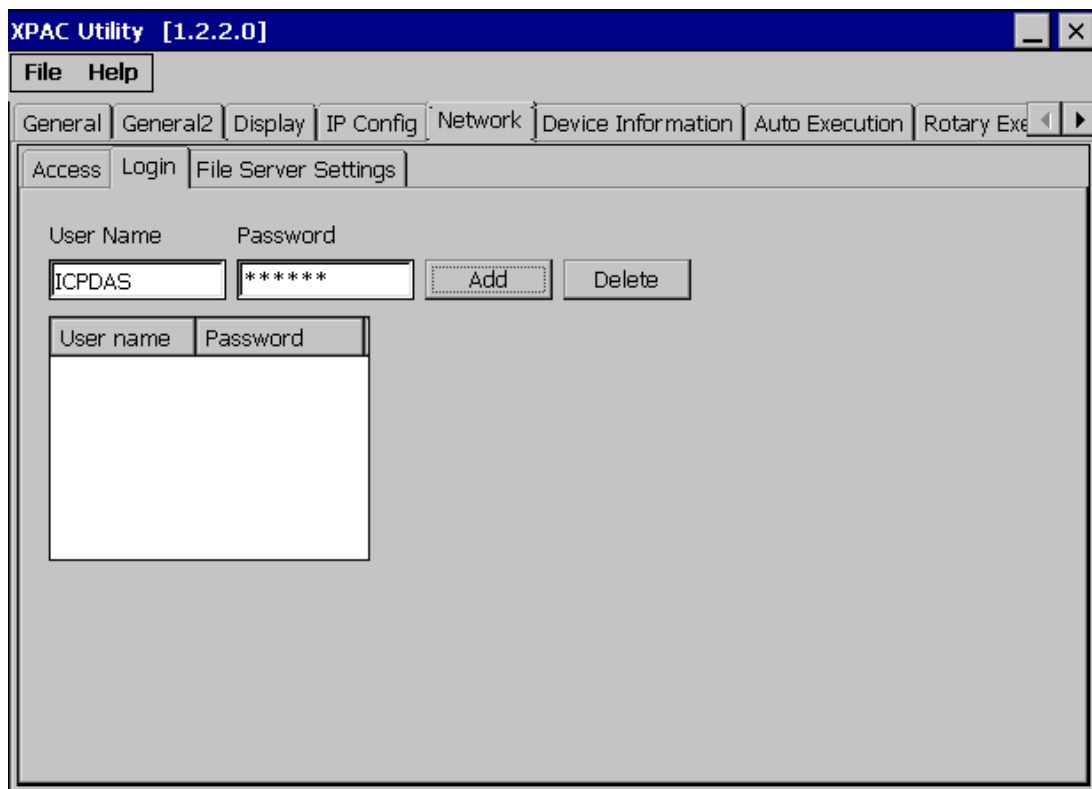

Step 3: The user has been added to the allowed under the remote login and included in the following list

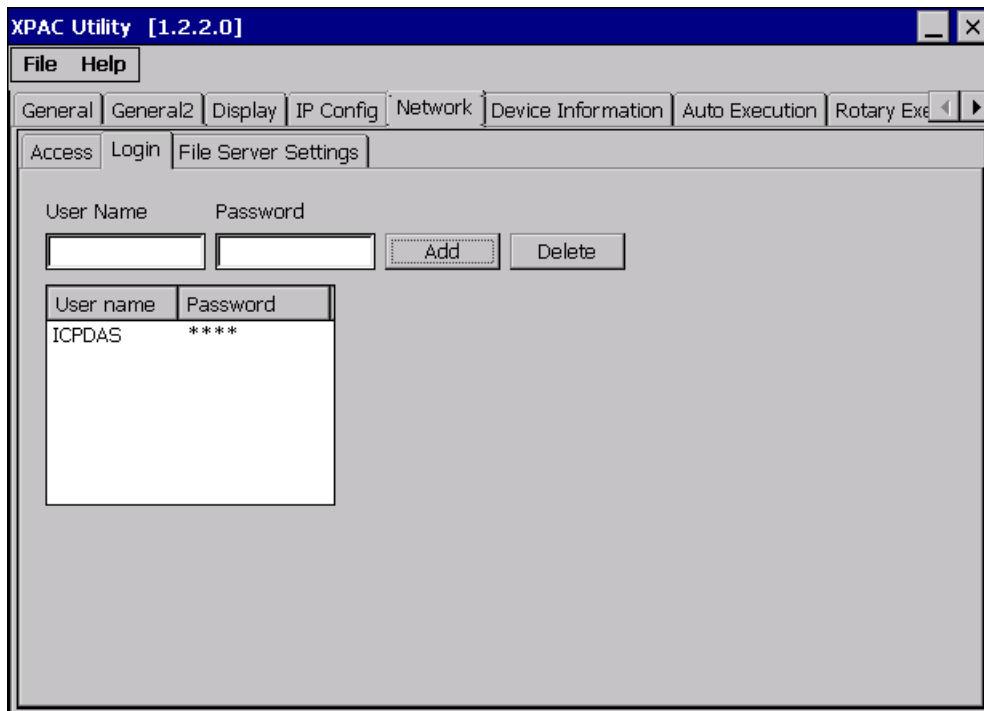


Step 4: On the File menu, click Reboot for changes to take effect

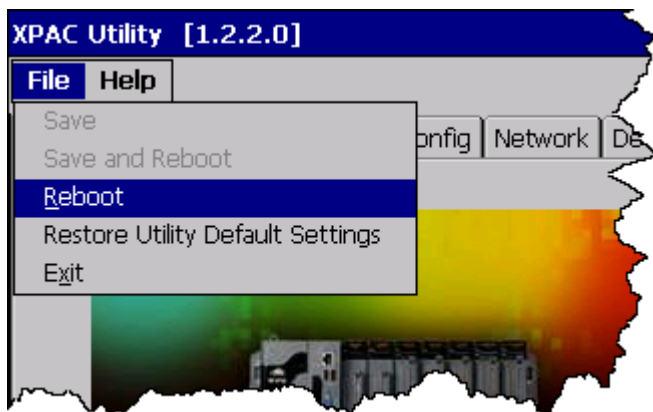


D.2. How to Telnet to Remote Login the XP-8000-CE6 from PC

Here are step by step instructions on how to use telnet to remote login the XP-8000-CE6 from PC.


Step 1: On the PC, open a MS-DOS command prompt

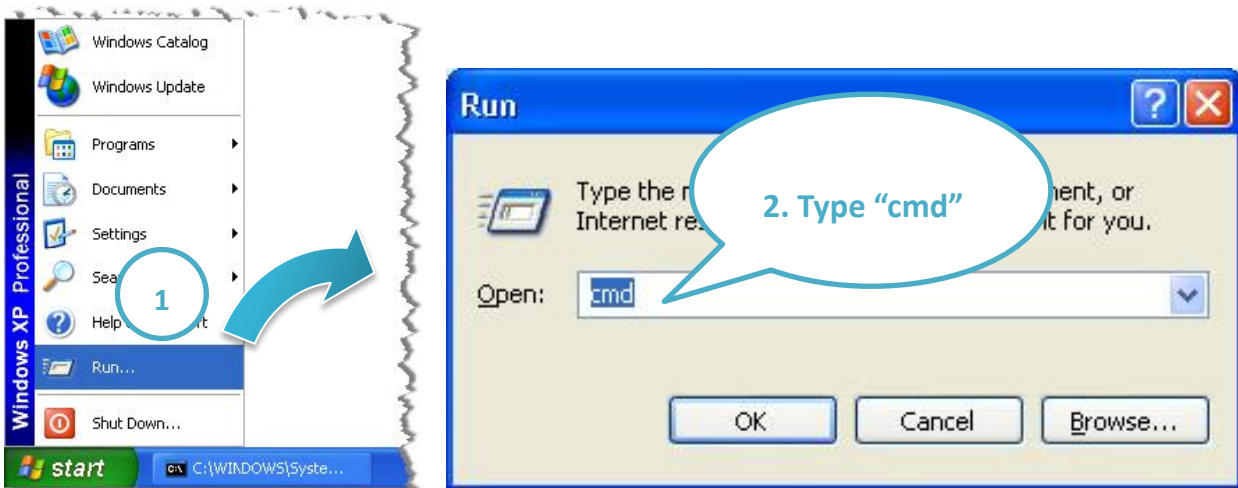


Step 2: At the command prompt, type "telnet (IP address)"

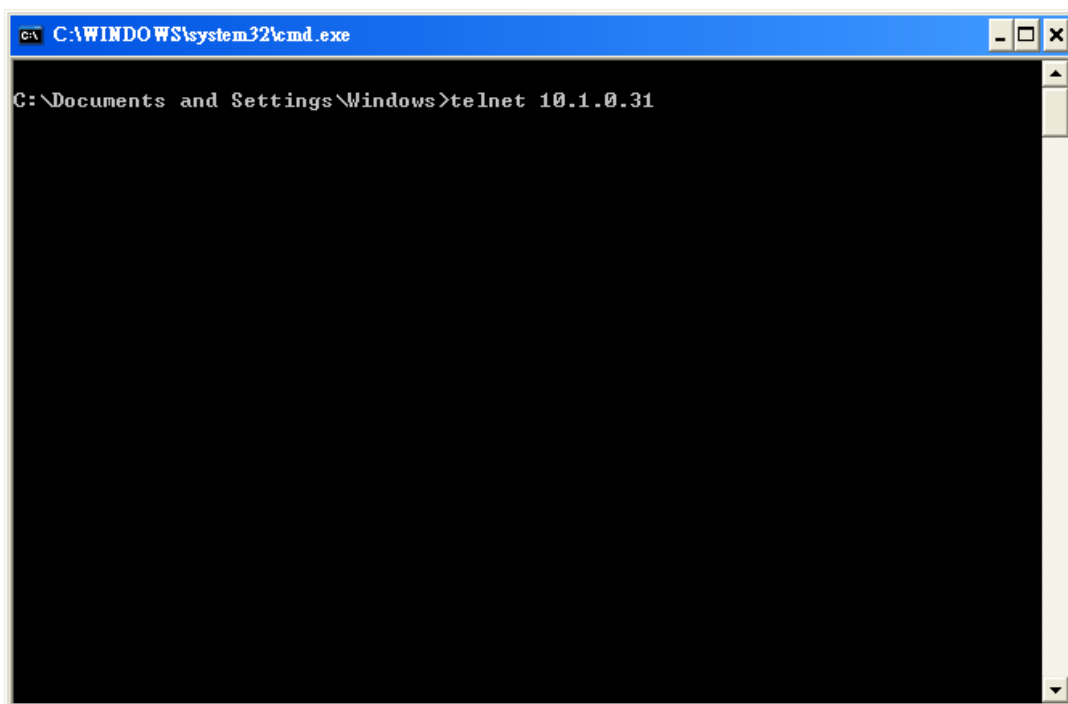

Step 3: The connection has been set up, and then type the name and password

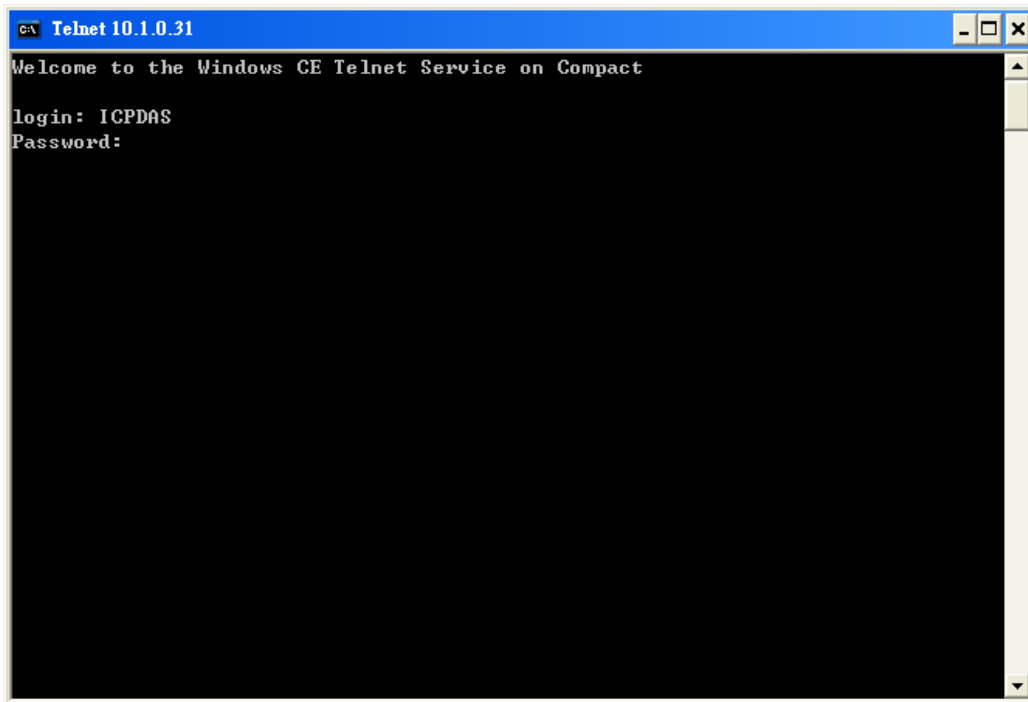

Step 4: The remote login has been completed

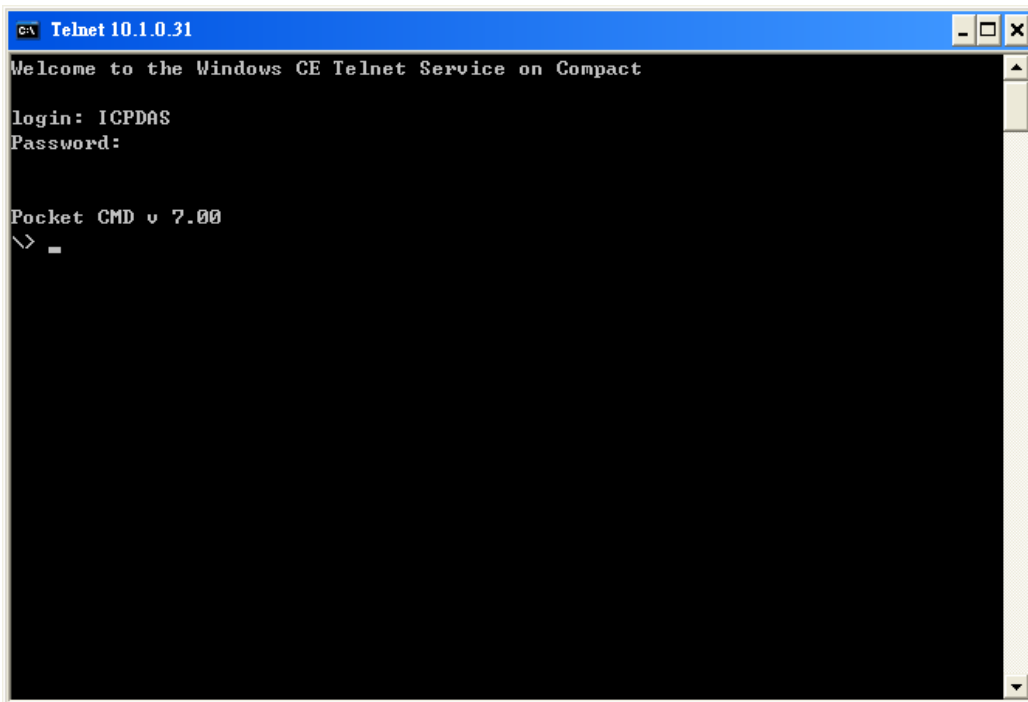


D.3. How to Remove a User Account from the Login List

Here are step by step instructions on how to remote the user from the login list.


Step 1: Run the XPAC Utility



Step 2: On the Login tab of the Network tab, click Login tab, click a user from the list which you want to remove, and the user will display in the field, and then press Delete to delete the user from the login list

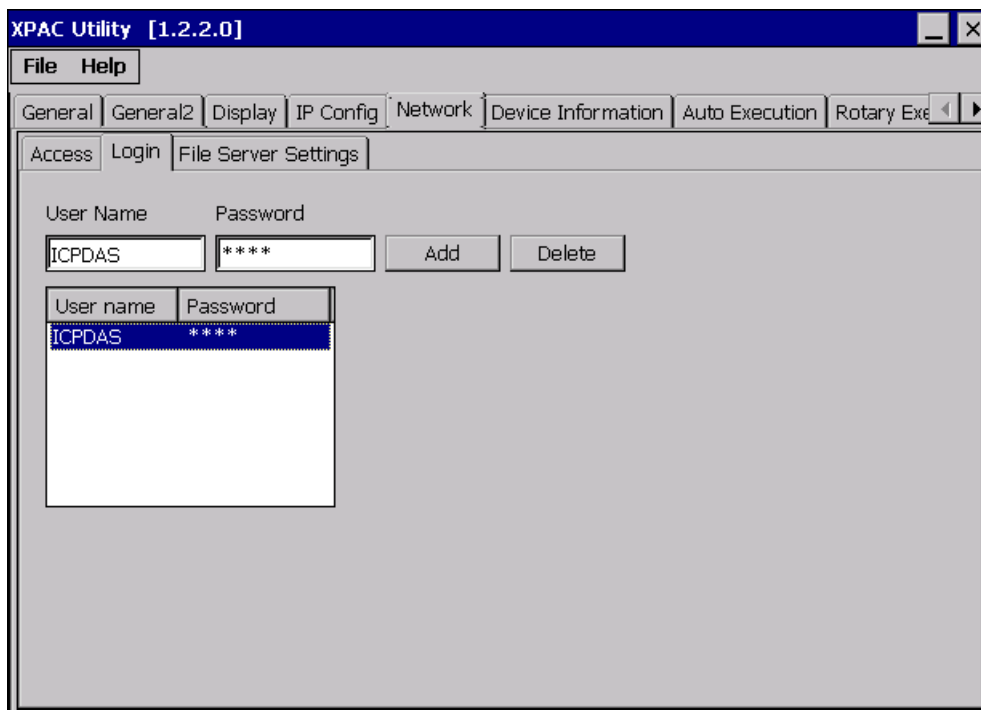

Step 3: On the File menu, click Reboot for changes to take effect

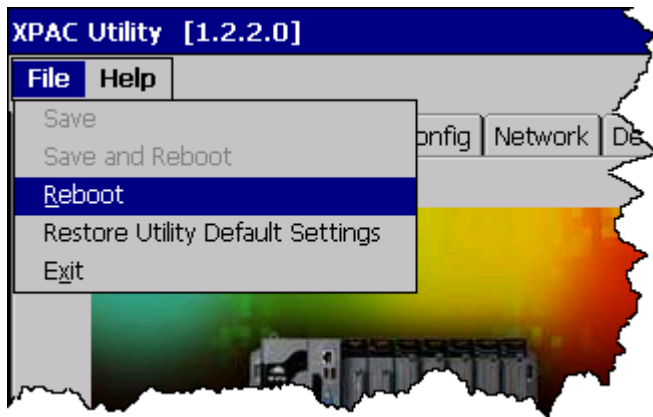


E. How to change COM4 as RS-232/RS-485

COM4 can be configured as either RS-232 or RS-485. Here are step by step instructions on how to set the COM4 mode.

Step 1: Run the XPAC Utility



Step 2: On the General2 tab, select the port mode that you want, and then click the Set button

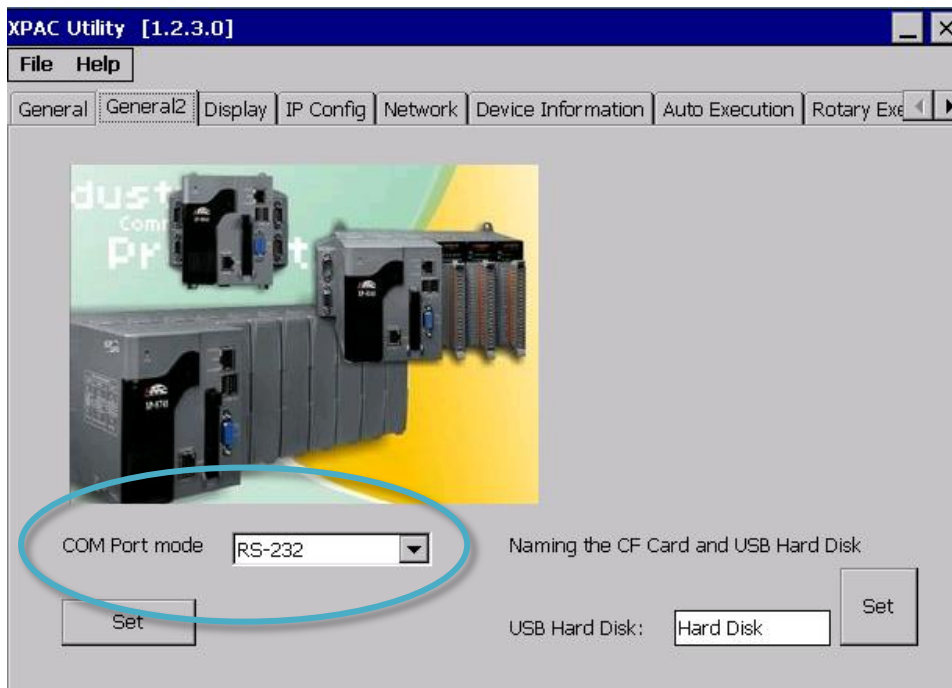

F. Revision History

This chapter provides revision history information to this document.

The table below shows the revision history.

| Revision | Date | Description |
|----------|--------------|---------------|
| 1.0.0 | October 2016 | Initial issue |