

Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	1/6

How to set up the FTP server

Applies to:


Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

The FTP sever is always active on the XPAC, so you can download or upload file from/to PC from XPAC.

To configure enable or disable FTP service 、download directory and user login id, perform the following steps:


Enable or Disable FTP service

Step 1: Execute the XPAC Utility, and then select "Network" Page.

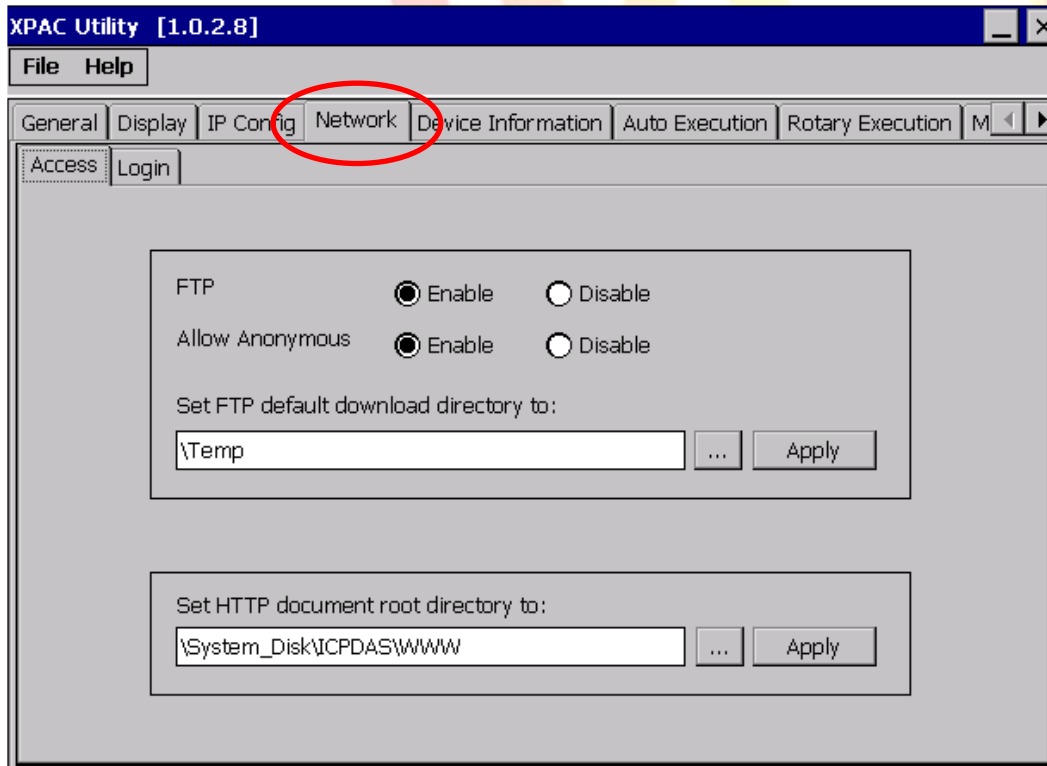

Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	2/6


Step 2: Click the FTP item “Enable” is Opening FTP service or click “Disable” is closing FTP service.

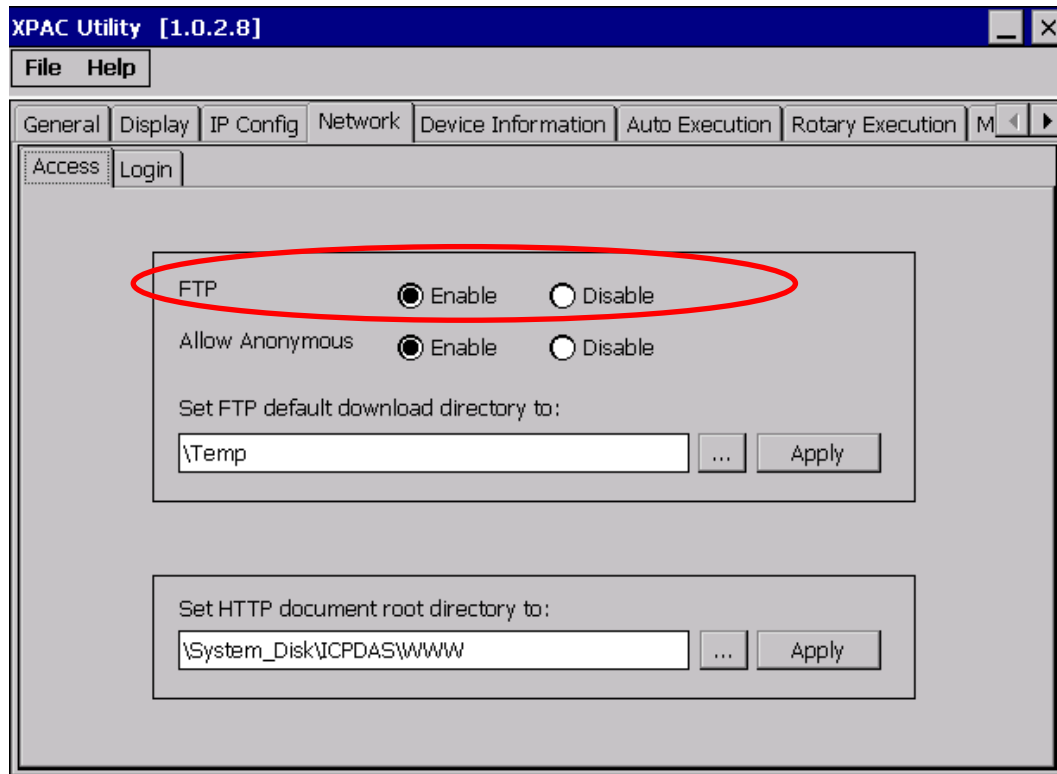


Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	3/6

Change FTP download directory

Step 1: Execute the XPAC Utility and select “Network” Page, and then Click “...” button.

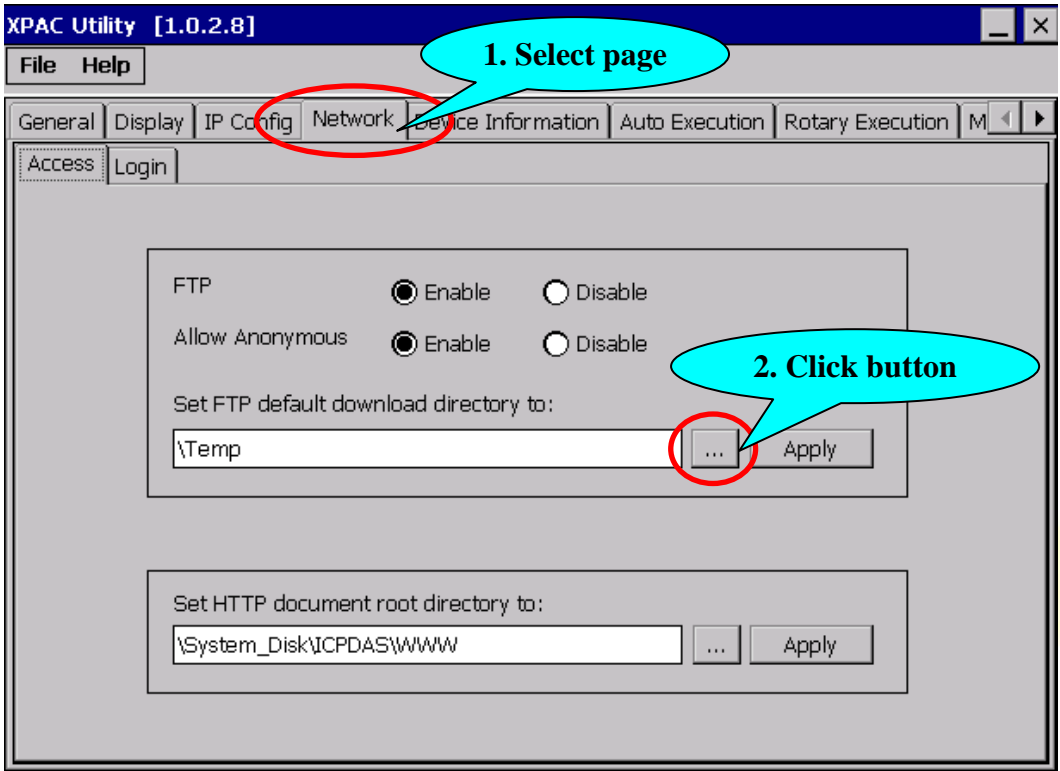


Step 2: Click “...” button will show following dialog, and you can select other directory for FTP download directory.

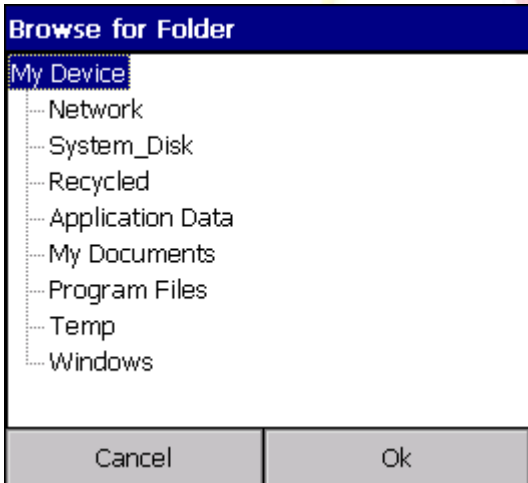

Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	4/6


Step 3: If you change FTP download directory, Click “Apply” button and reboot your XPAC for take effect.

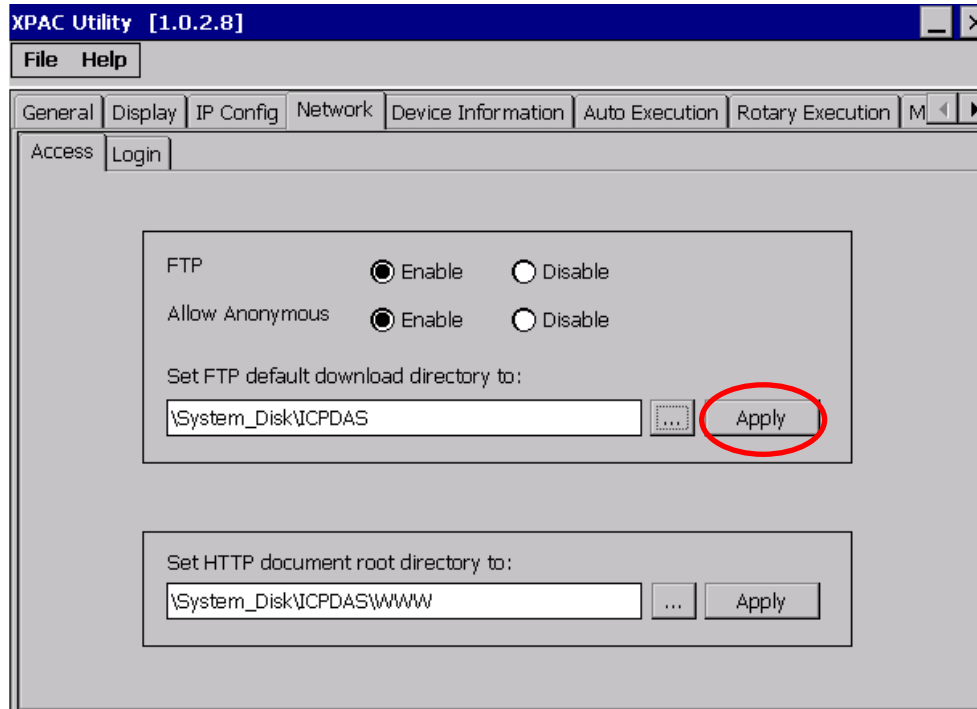

Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	5/6

Set Login ID

Step 1: Execute the XPAC Utility, and then select “Network” Page. Click the “Allow anonymous” item “Enable” is anyone access FTP ,click “Disable” is only setting ID can access FTP.

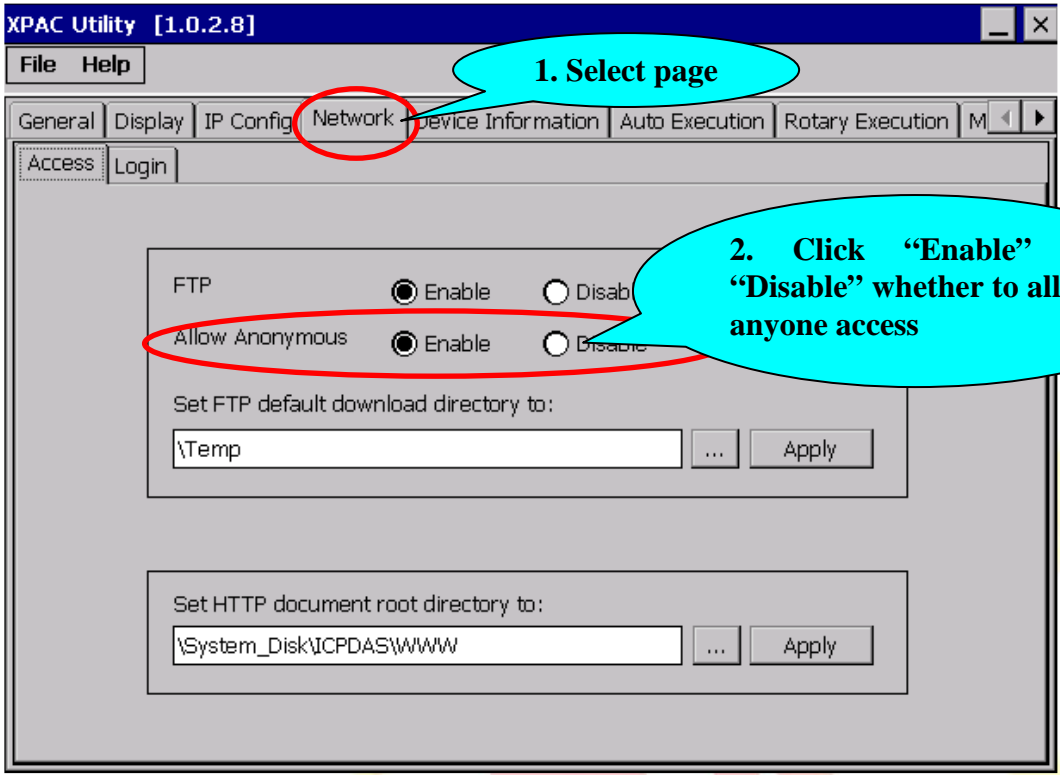

Classification	Ethernet Application FAQ on XPAC				No.	3-002-00	
Author	WeiKai	Version	1.0.0	Date	2011/04/07	Page	6/6

Step 2: Select “Login” page, and then input user name and password. Finally click “Add” button, you will add a new user id. If the “Allow anonymous” item is setting “Disable”, anyone must using setting user id login before download or upload.

