Classification	System and Ap	No.	1-005-06				
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	1/4

How to calibrate a Penmount serial touch panel

Applies to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions


N/A: Not applicable to this platform and OS.

Tips & Warnings




Serial COM Ports 2 and 5 on XP-8000 are standard female/male RS-232 COM Ports. If COM4 is used to connect to the touch panel, you will need a "NULL MODEM".

Standard Wiring

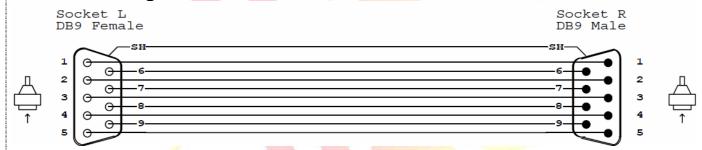

NULL MODEM

Null Modem DB9 cable: Dreambox Serial cable

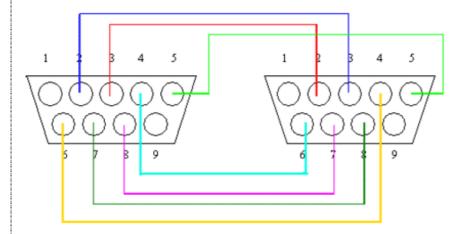


The DB9 side showed here is the one you solder the wires

ICP DAS Co., Ltd. Technical document

Classification	System and Ap	No.	1-005-06				
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	2/4

Connecting to COM2

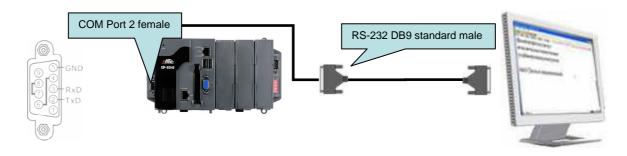

Connecting to COM5



Connecting to COM4



Cla	assification	System and Ap	No.	1-005-06				
Αι	uthor	WeiKai	Version	1.0.1	Date	2011/6/29	Page	3/4


To Set your COM port and calibrate a Penmount serial touch panel, perform the following steps:

Step 1: Set your COM port.

1.1 Click My Device->System_Disk->Drivers->Serial_TOUCH->PenMount->BIN->SetCom.



1.2 Perform the SetCOM process to select a COM port (Default COM port is 5).

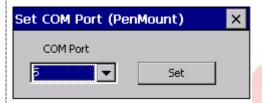


Step 2: Reboot your XPAC.

2.1. Start the XPAC utility on the desktop. Click the "File->Reboot" menu option.



2.2. Click the "Yes" button and wait for the device to reboot.

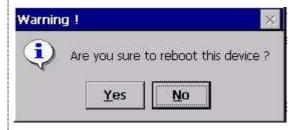

Classification	System and Ap	No.	1-005-06				
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	4/4

Step 3: Execute the calibration program.

31.1. Click My Device->System_Disk->Drivers->Serial_TOUCH->PenMount->BIN->Calibration.



- 3.2. Perform the calibration process.
- 3.2.1. Touch the end point and draw a line in the direction of the arrow.
- 3.2.2. Touch the "+" icon on the monitor, to perform the calibration process.

