

Classification	System and Application FAQ on XPAC				No.	2-006-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/23	Page	1/2

## How to recover the default factory settings

### Applied to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

## Tips & Warnings



**Remember your settings before recover the default factory settings.**

 
### Default factory settings:

System Settings->Display resolution: 1024\*768(XP-8x4x)  
 Ethernet Settings->LAN1 and LAN2: DHCP enabled  
 FTP Settings->Access->Allow Anonymous: Enabled  
 FTP Settings->Access->Allow Anonymous Upload: Enabled  
 Auto Execution: empty  
 Touch Panel Drivers: uninstalled  
 Control Panel->Power->Schemes->Switch state to User Idle: Never  
 Control Panel->Power->Schemes->Switch state to System Idle: Never

If an unexpected problem occurs, you can recover the default factory settings by performing the following steps:


**Step 1: Reboot** in Safe mode.

Turn the rotary switch on the device to “1”, and then restart the XPAC

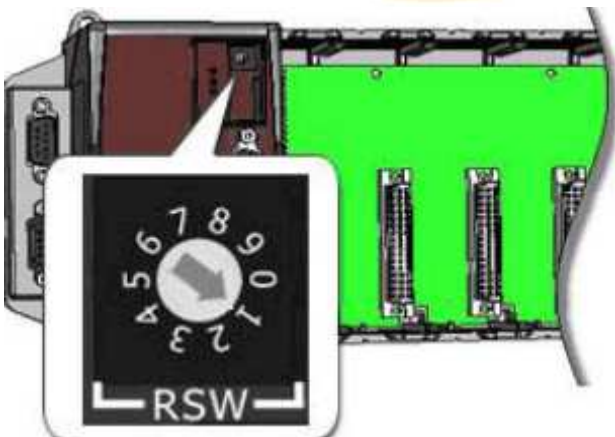


Classification	System and Application FAQ on XPAC				No.	2-006-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/23	Page	2/2

 **Step 2:** After rebooting, Show the message and do following step.

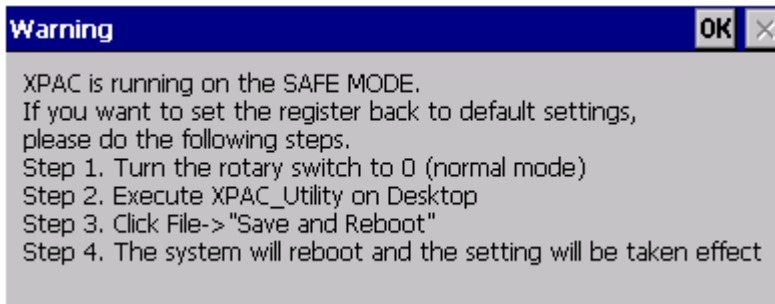

 **Step 3:** Turn the rotary switch on the device to “0” and reboot.

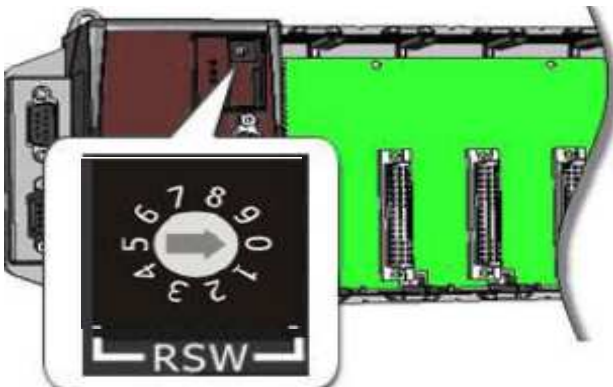

**Step 4:** Execute XPAC\_Utility on Desktop.



**Step 5:** Click File→Save and Reboot on XPAC\_Utility.

