Table of Contents

1. Un-install DAQCard for Win2000 2

1.1 Remove hardware 2
1.2 Remove software 6
1.3 Delete oem?.inf & oem?.pnp 9

2. Un-install DAQCard for Win95 13

2.1 Remove Hardware 13
2.2 Remove software 15
2.3 Delete ICPDAS CO.LTD?.INF 18

1. Un-install DAQCard for Win2000

1.1 Remove hardware

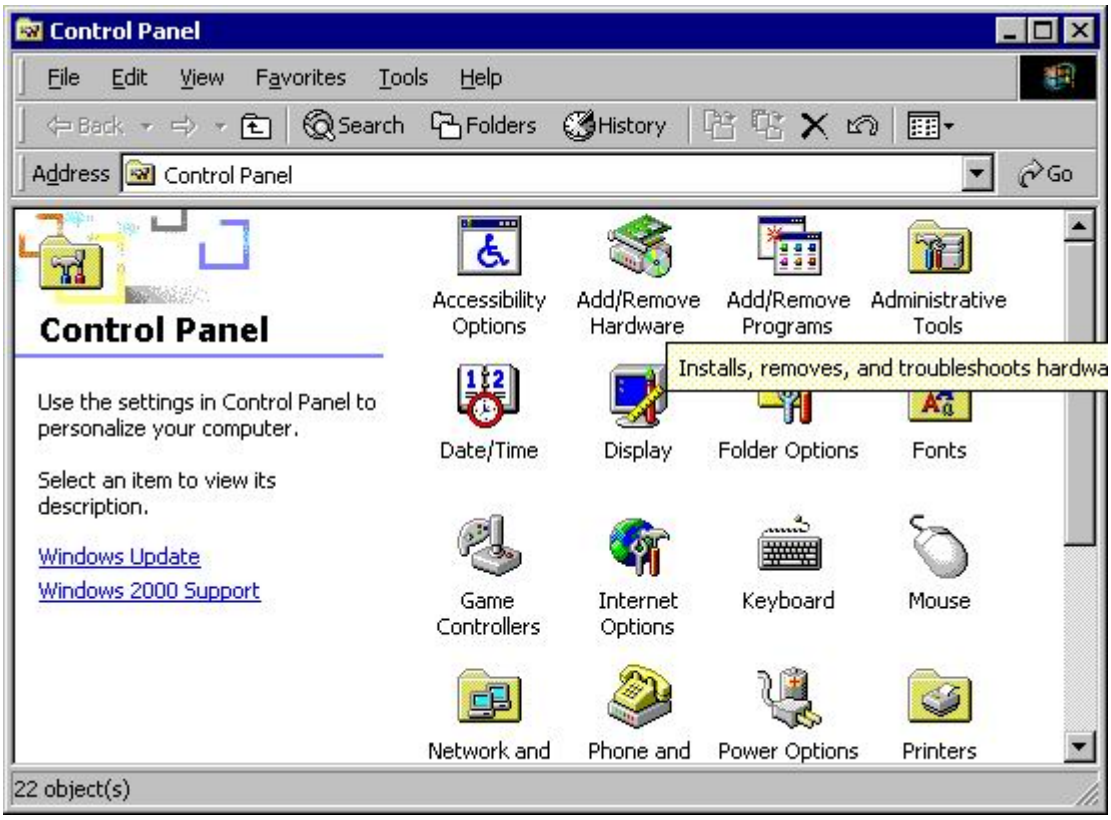

1.**Open control panel, select Add/Remove Hardware**

2.click “Next”

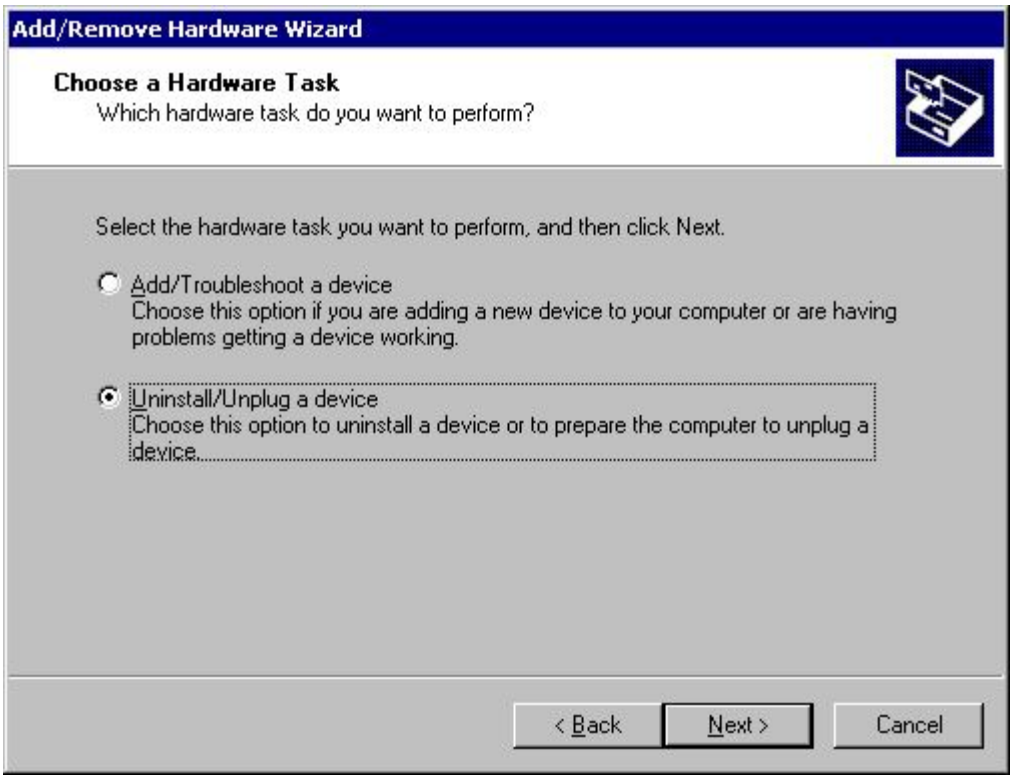

3.select uninstall/unplug a device, then click “Next”

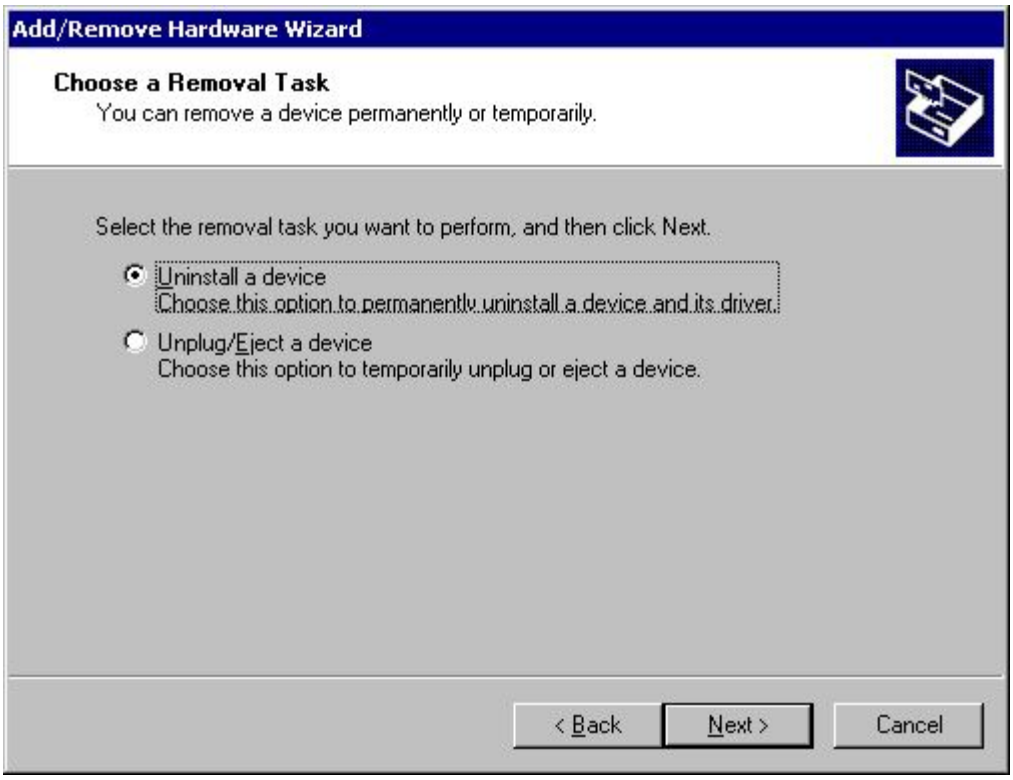

4.select uninstall a device, click “Next”

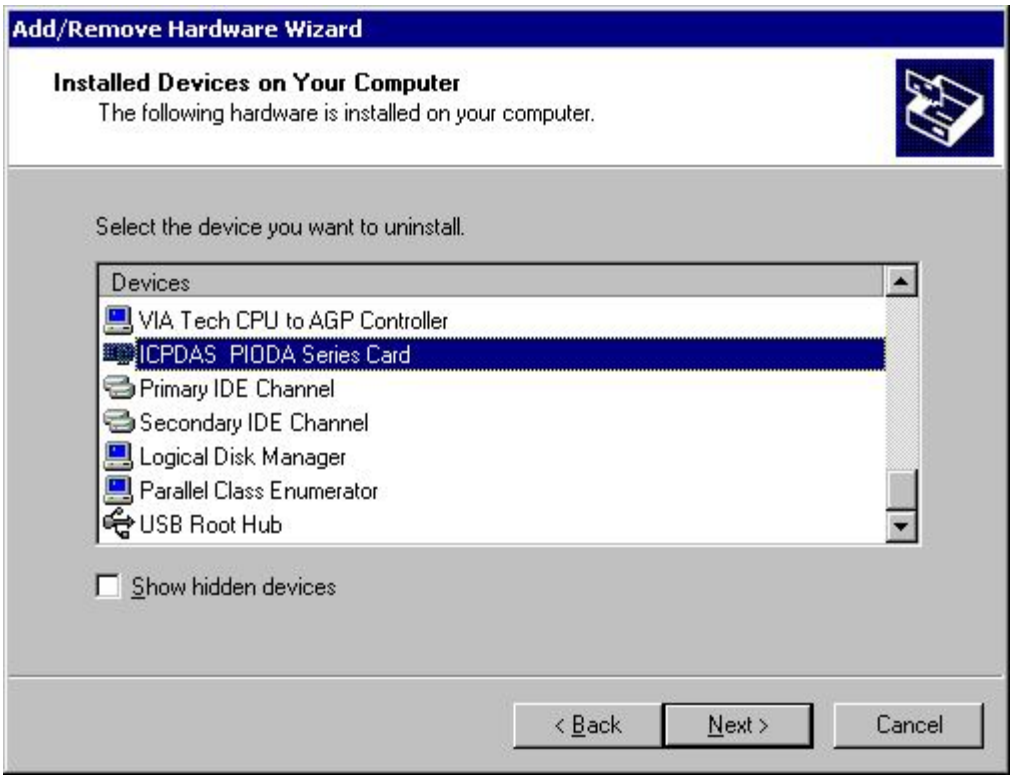

5.Select ICPDAS DAQCard,then click” Next”

6.Setect “Yes”, then click” Next”

7.Click “Finish”.

1.2 Remove software

1. open control panel, then select Add/Remove program

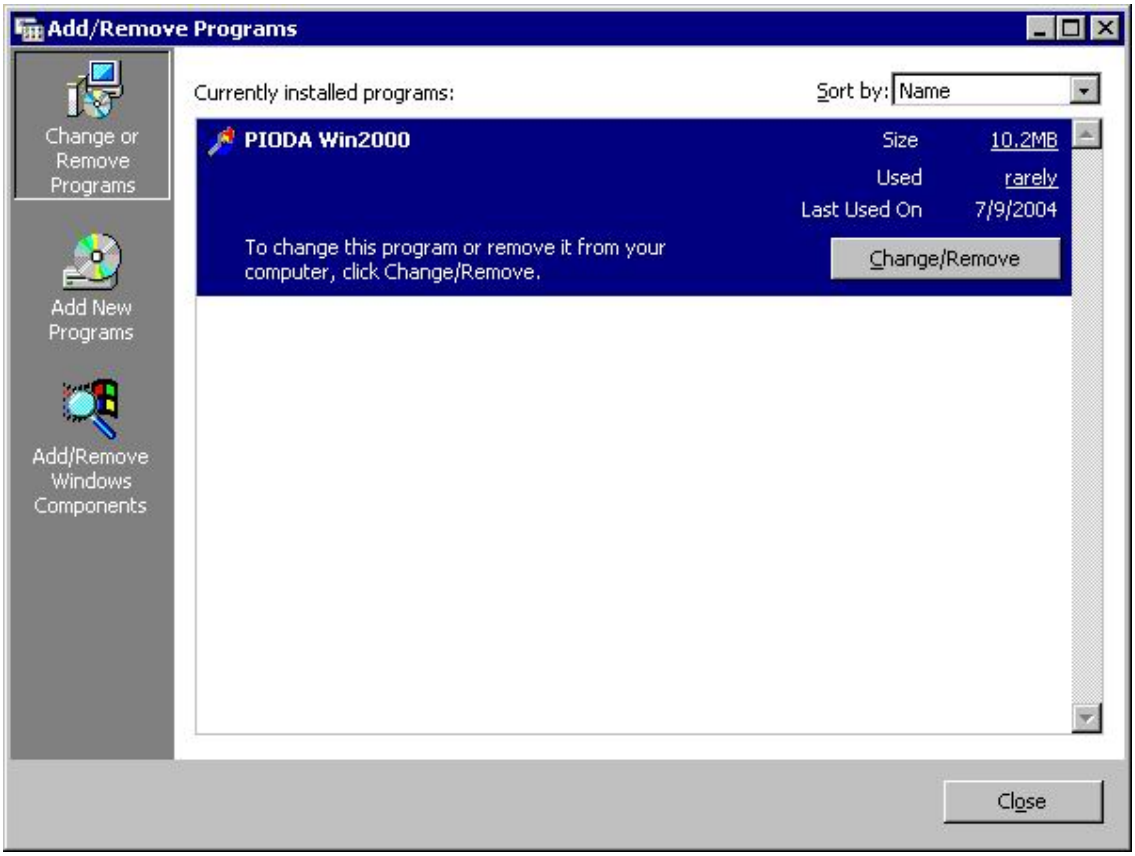

2.select DAQCard, then click" Change/Remove"

3. Click "Yes"

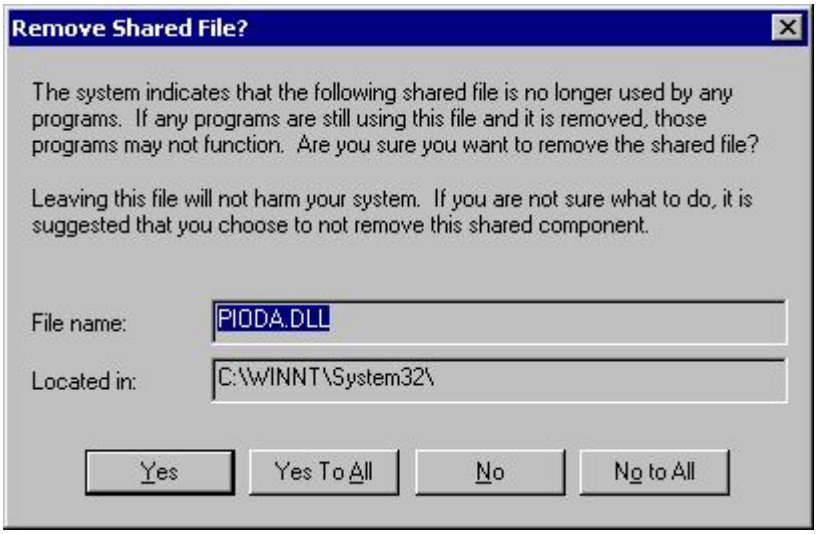

4.Click"Yes to All"

5.Click"Yes"

6.Click "OK",then click"Close"

1.3 Delete oem?.inf & oem?.pnp

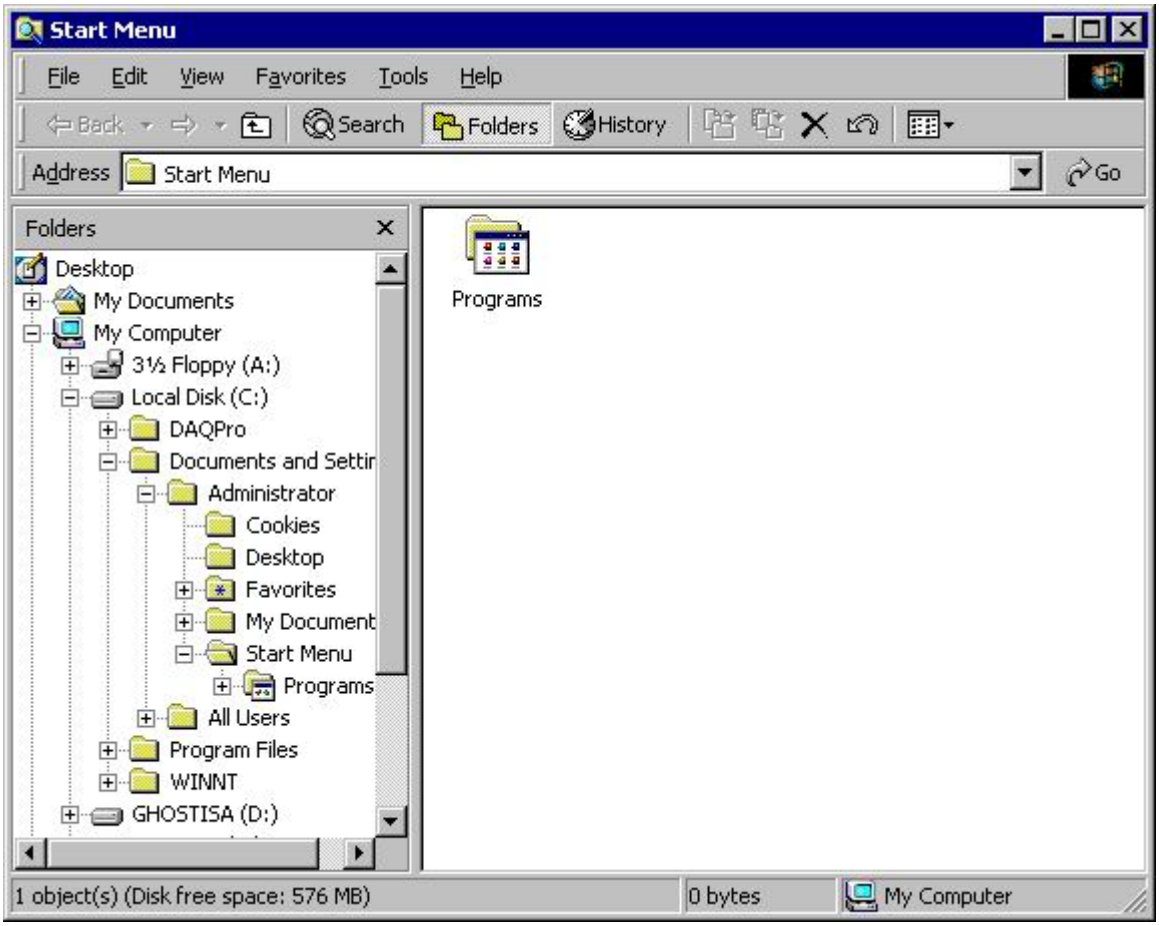

1. **Open explore, select Tools->Folder Options..**

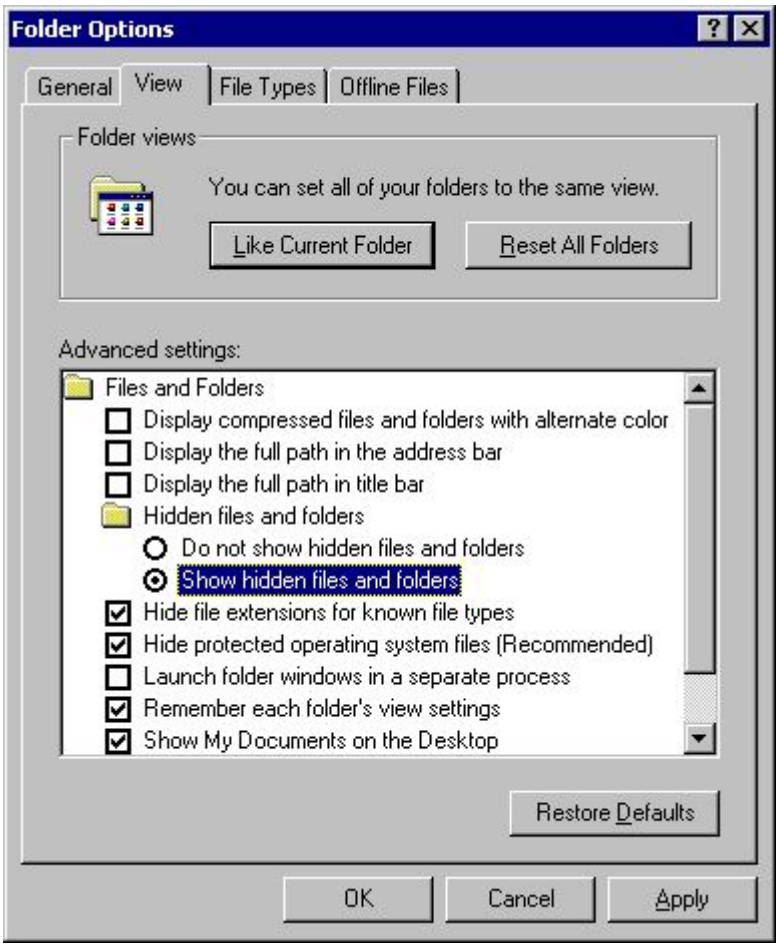

2.Select Show hidden files and folder, then click “OK”

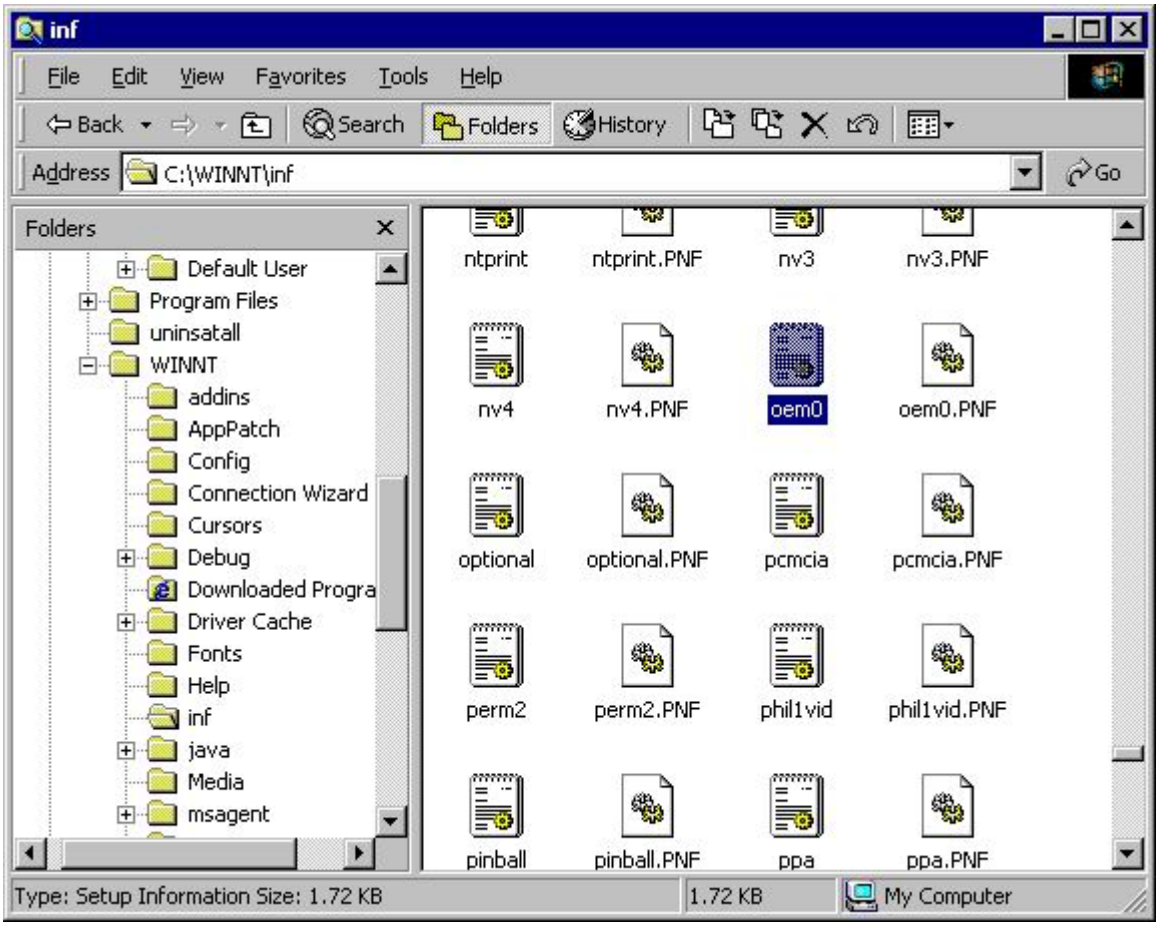

3.find oem?.inf which contains the DAQCard install information.

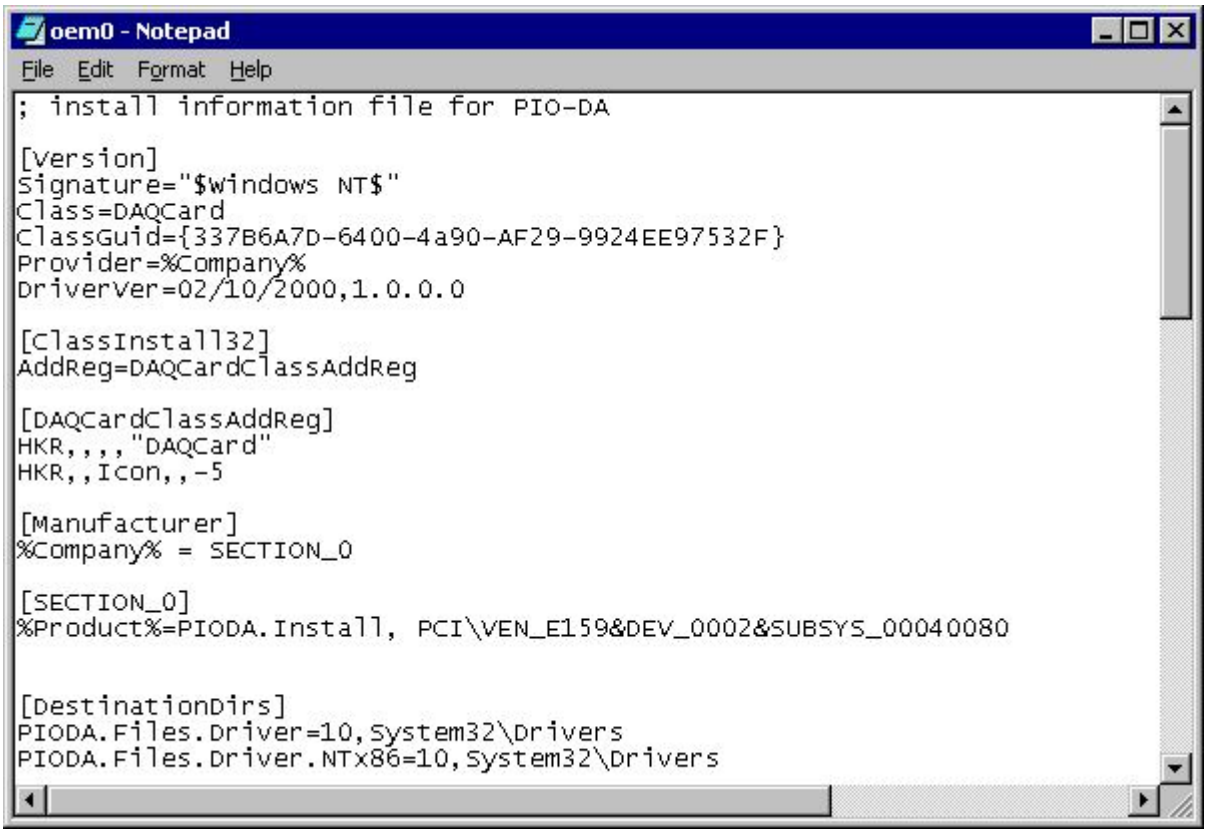

4.Select oem?.inf & oem?.PNF then delete them.

2. Un-install DAQCard for Win95

2.1 Remove Hardware

1.Open control panel->select system

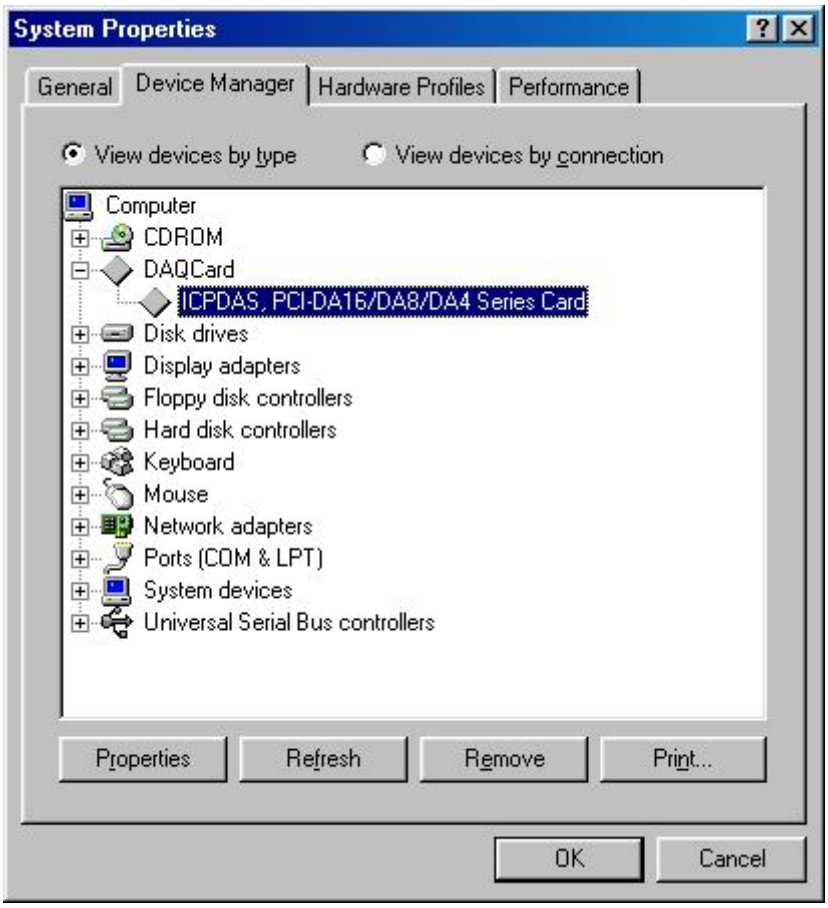

2.Select DAQCard, then Remove

3.click “OK”,then click “OK” and finish.

2.2 Remove software

1. **Open control panel->select Add/Remove Program**

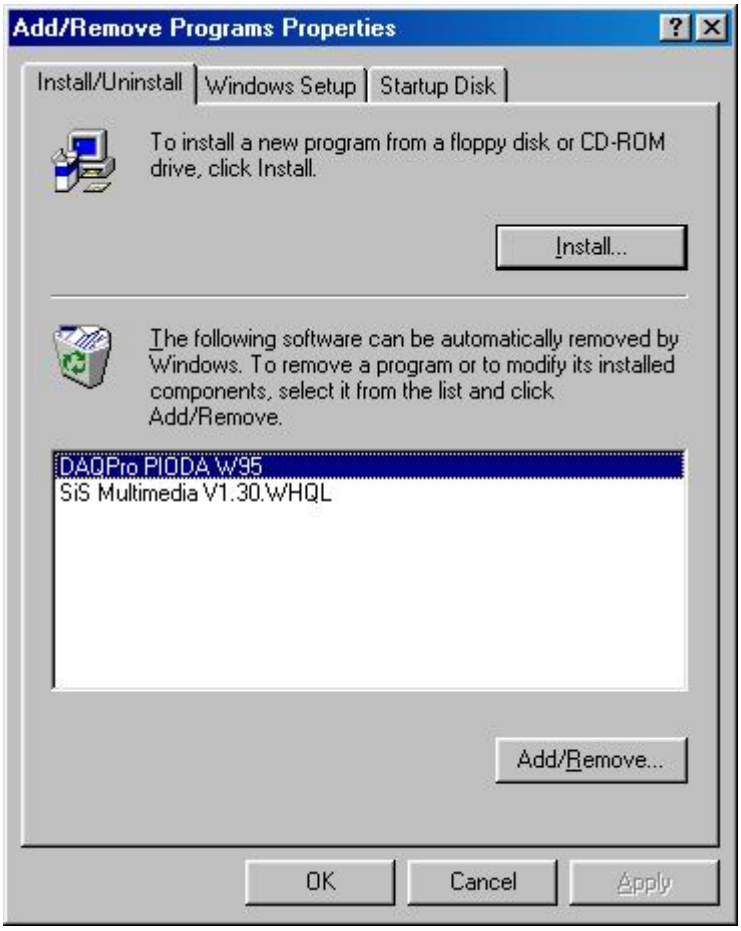

2.Select DAQCard ,then click" Add/Remove"

3.Click "Yes"

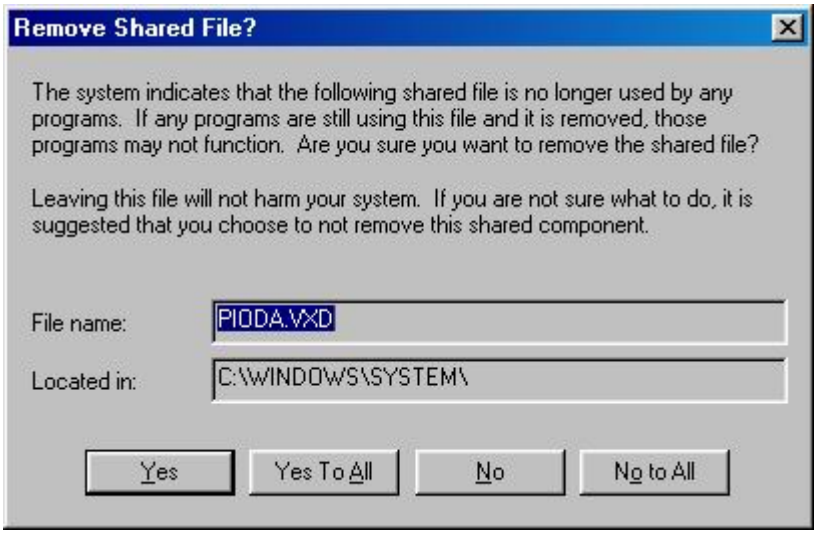

4.Click”Yes To All”

5.Click”OK”,then click”OK” and finish

2.3 Delete ICPDAS CO.LTD?.INF

1.Open explore->view->Folder Options..

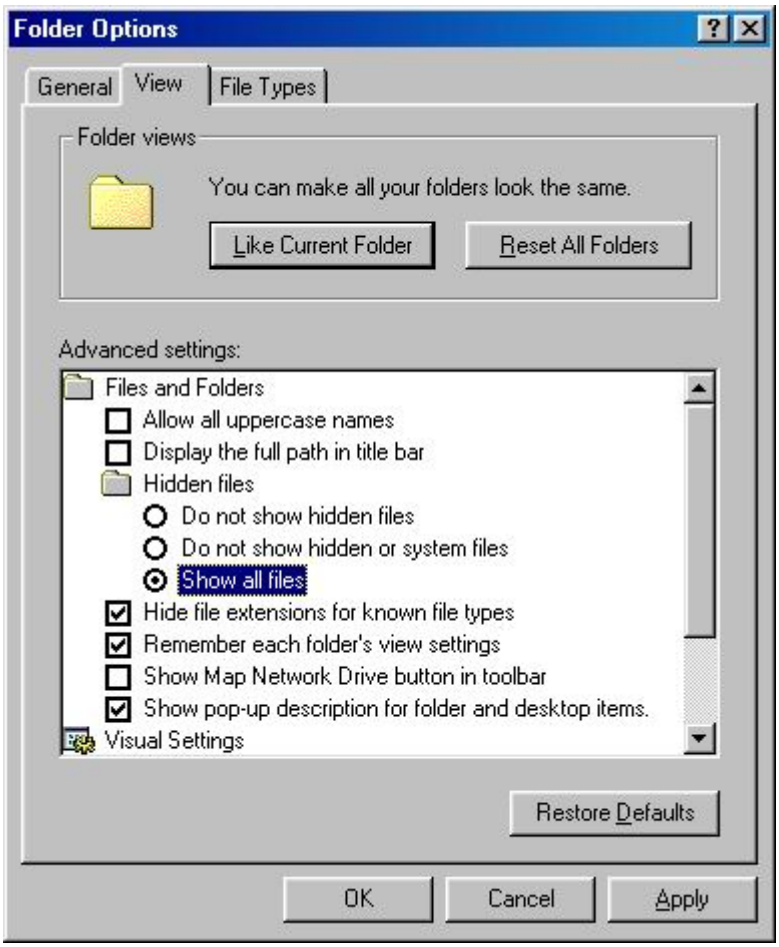

2.Select “Show all files”

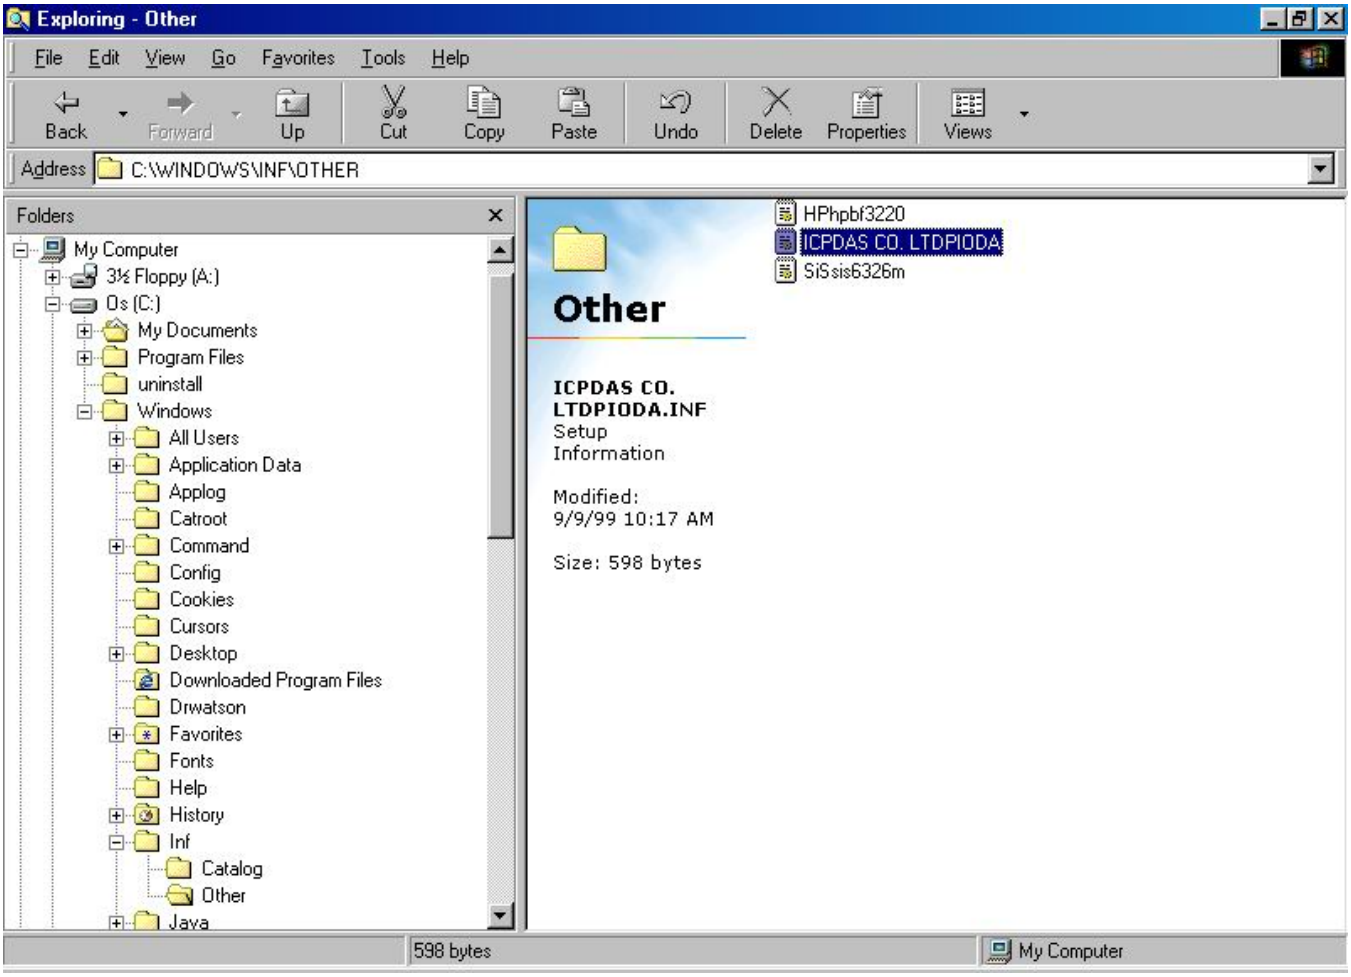

3.Delete “ICPDAS CO.LTD?.INF” which you want to uninstall DAQCard.