How to change the input Panel size

Applies to:		
Platform	**OS version**	**XPAC utility version**
XPAC series	All versions (WinCE6)	All versions

To change the Input Panel size, perform the following steps:

Step 1: Choose the Control Panel. Now the Panel size is large.

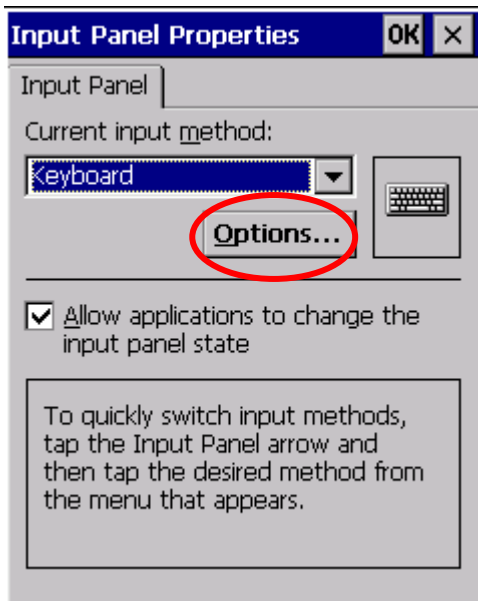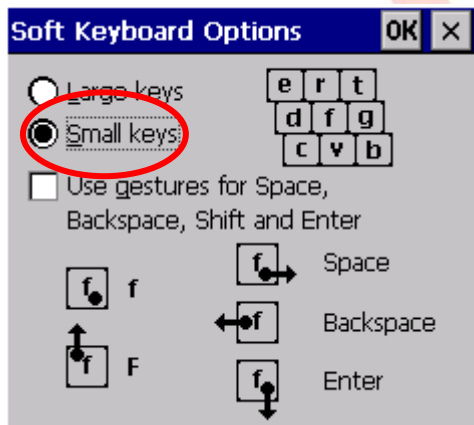**Step 2: Choose** the Input Panel.

Step 3: Click the "Options" button.

Step 4: Select Small keys and then click the "OK" button.

Step 5: After performing steps 1 to 4, you will see the size of the input panel will become small.