

Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/17	Page	1/7

How to add a shortcut to the desktop and programs

Applies to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions


To add a shortcut to the desktop that will not disappear after a reboot, perform the following steps:

Step 1: Create a shortcut.

1.1. Select the file for which you want create a shortcut.




1.2. Right click the file name and then click "Copy".


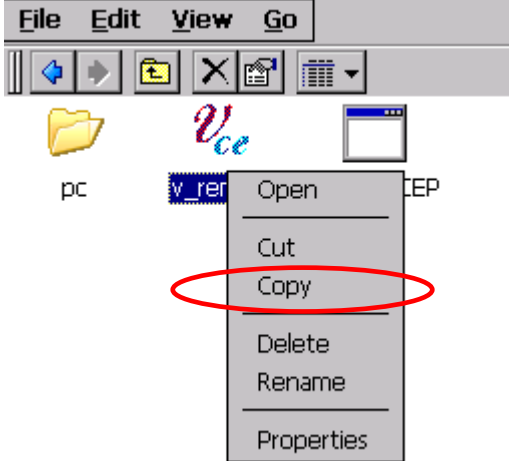


Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/17	Page	2/7

1.3. Click the “Edit” menu option and then click “Paste Shortcut”.

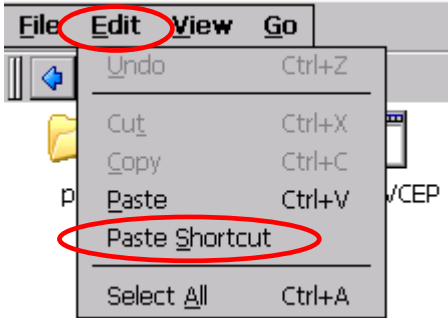


1.4. Rename the shortcut change “shortcut to xx.ink” into “xx.ink”

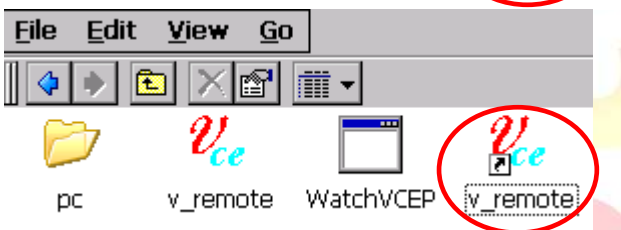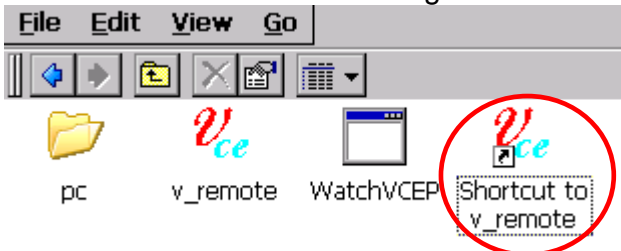

Step 2: Add the shortcut to the desktop and programs menu.

2.1. Remember the path for the shortcut.

2.1.1. Click the “View” menu option, and then click “Address Bar”.

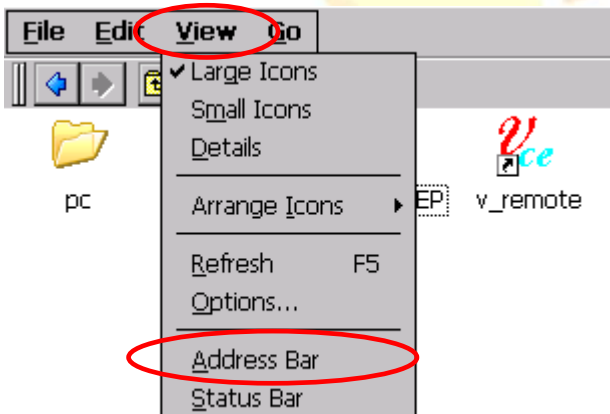

Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/17	Page	3/7


2.1.2. Remember the path for the file.




2.2. **Add** the shortcut information to the “Autolnit.bat” file.

2.2.1. Edit “Autolnit.bat” using INotePad.exe.

2.2.1.1. Double Click the INotePad on the \System_Disk\Tools\notepad\.

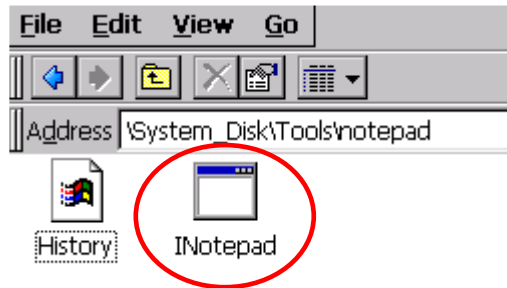


2.2.1.2. Click the “File” menu option, and then click the “Open” item.

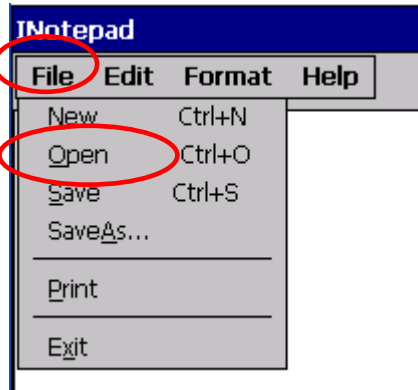


Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	Weikai	Version	1.0.0	Date	2011/3/17	Page	4/7

2.2.1.3. Open the “Autolnit.bat” file from the ”\System_Disk\ICPDAS\System” folder.

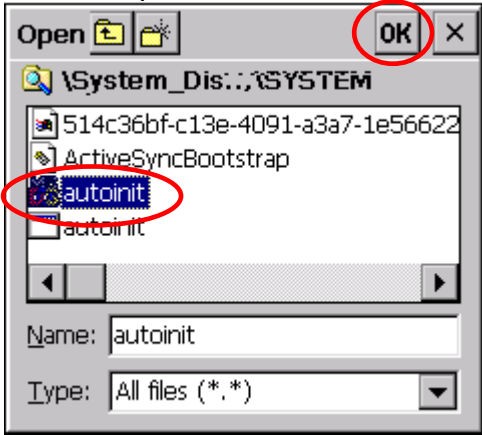

2.2.2 Add the shortcut information to “Autolnit.bat”.

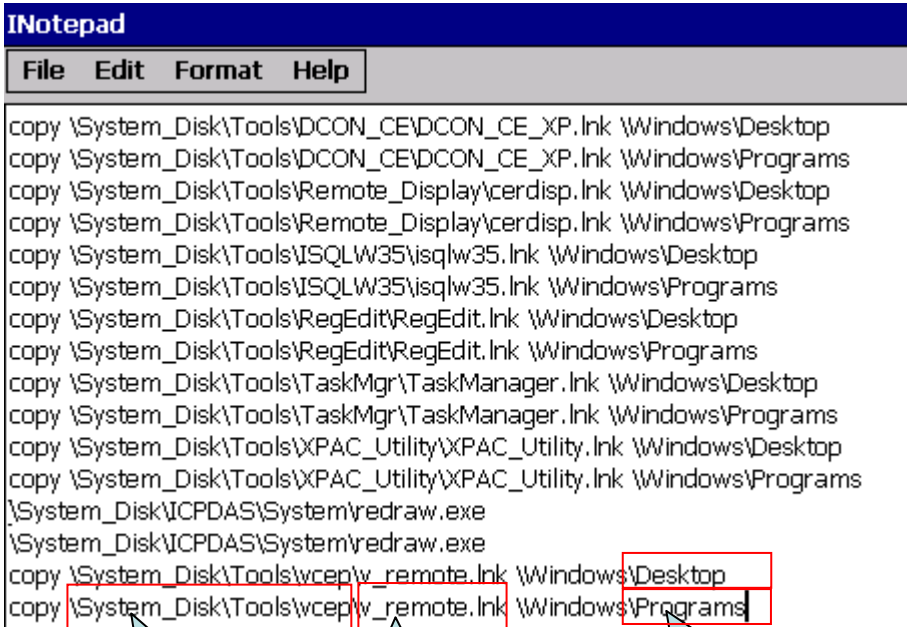


Path for the shortcut file.

Name of the shortcut file.


Copy the shortcut file to the Desktop folder and the Programs menu.

Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/17	Page	5/7

2.2.3 Click “File”, and then click “Save”.

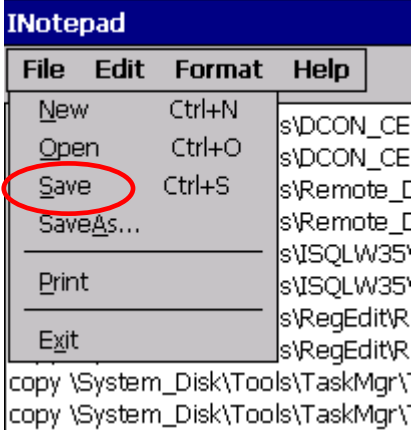


2.3. Double click the “Autolnit.bat” file icon in the “\System_Disk\ICPDAS\System” folder.

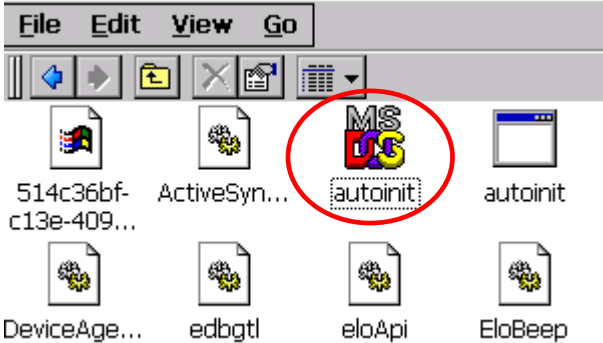


Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	WeiKai	Version	1.0.0	Date	2011/3/17	Page	6/7

2.4. The shortcut files will appear on the “Desktop” and in the “Programs” menu.

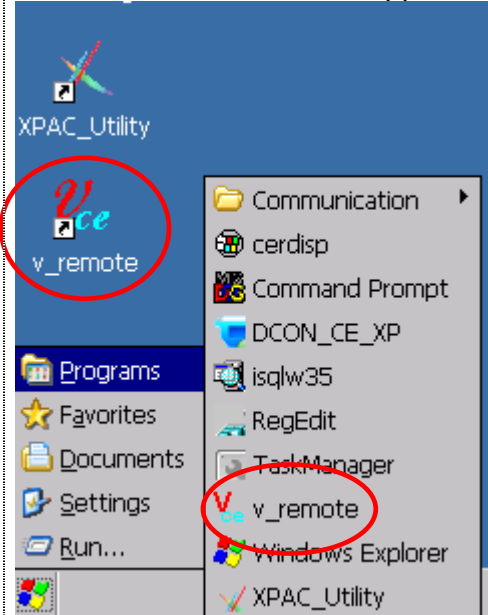

Step 3: Remove the shortcut from the desktop and the programs menu (Make the shortcut disappear after a reboot.)

3.1. Go to the location of the Shortcut file and delete it.

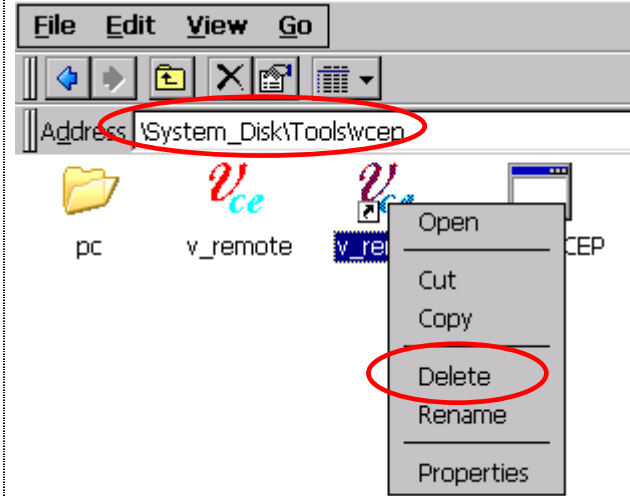

Classification	System and Application FAQ on XPAC				No.	2-007-00	
Author	Weikai	Version	1.0.0	Date	2011/3/17	Page	7/7

3.2. Remove the item from the Autolnit.bat file.

```



INotepad
File Edit Format Help
copy \System_Disk\Tools\DCON_CE\DCON_CE_XP.Ink \Windows\Desktop
copy \System_Disk\Tools\DCON_CE\DCON_CE_XP.Ink \Windows\Programs
copy \System_Disk\Tools\Remote_Display\cerdisp.Ink \Windows\Desktop
copy \System_Disk\Tools\Remote_Display\cerdisp.Ink \Windows\Programs
copy \System_Disk\Tools\ISQLW35\isqlw35.Ink \Windows\Desktop
copy \System_Disk\Tools\ISQLW35\isqlw35.Ink \Windows\Programs
copy \System_Disk\Tools\RegEdit\RegEdit.Ink \Windows\Desktop
copy \System_Disk\Tools\RegEdit\RegEdit.Ink \Windows\Programs
copy \System_Disk\Tools\TaskMgr\TaskManager.Ink \Windows\Desktop
copy \System_Disk\Tools\TaskMgr\TaskManager.Ink \Windows\Programs
copy \System_Disk\Tools\XPAC_Utility\XPAC_Utility.Ink \Windows\Desktop
copy \System_Disk\Tools\XPAC_Utility\XPAC_Utility.Ink \Windows\Programs
\System_Disk\ICPDAS\System\redraw.exe
\System_Disk\ICPDAS\System\redraw.exe
copy \System_Disk\Tools\wcep\w_remote.Ink \Windows\Desktop
copy \System_Disk\Tools\wcep\w_remote.Ink \Windows\Programs

```

```

INotepad
File Edit Format Help
copy \System_Disk\Tools\DCON_CE\DCON_CE_XP.Ink \Windows\Desktop
copy \System_Disk\Tools\DCON_CE\DCON_CE_XP.Ink \Windows\Programs
copy \System_Disk\Tools\Remote_Display\cerdisp.Ink \Windows\Desktop
copy \System_Disk\Tools\Remote_Display\cerdisp.Ink \Windows\Programs
copy \System_Disk\Tools\ISQLW35\isqlw35.Ink \Windows\Desktop
copy \System_Disk\Tools\ISQLW35\isqlw35.Ink \Windows\Programs
copy \System_Disk\Tools\RegEdit\RegEdit.Ink \Windows\Desktop
copy \System_Disk\Tools\RegEdit\RegEdit.Ink \Windows\Programs
copy \System_Disk\Tools\TaskMgr\TaskManager.Ink \Windows\Desktop
copy \System_Disk\Tools\TaskMgr\TaskManager.Ink \Windows\Programs
copy \System_Disk\Tools\XPAC_Utility\XPAC_Utility.Ink \Windows\Desktop
copy \System_Disk\Tools\XPAC_Utility\XPAC_Utility.Ink \Windows\Programs
\System_Disk\ICPDAS\System\redraw.exe
\System_Disk\ICPDAS\System\redraw.exe

```

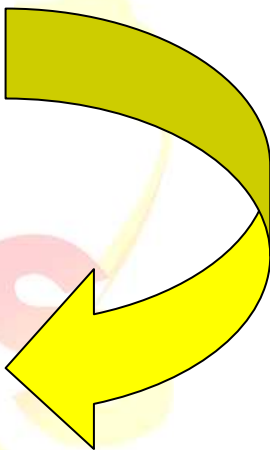

3.3. Then the shortcut will be removed after a reboot.