

# Chapter 3 Hardware System & Setting

## 3.1 Setting the NET-ID for the VP-2117

For the normal operation, the VP-2117 must have a unique NET-ID.




Default setting → NET-ID=01

★ For ISaGRAF workbench , it can only recognize NET-ID from 01 to FF (1~255).


★ The NET-ID of every Main Control Unit in the same network must be unique (different from each other).

◀ ▶ : Change the selection    ↵ : Confirm    ← : Cancel

- ① First, power off the VP-2117 PAC, then press and hold on the F1 and F6 button, and then power it up. In the setup mode, you will see “◀,▶: Change the Selection” and “Enter Key is OK”.

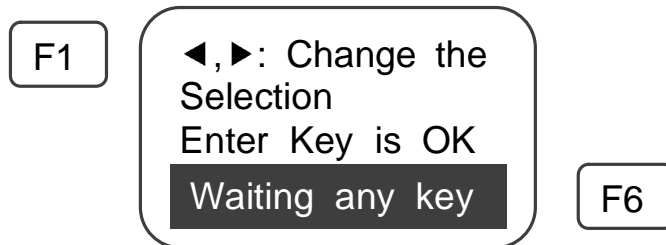

- ② Press the ◀ or ▶ button to switch to the “Setting NET-ID” screen and then press ↵ to enter the setup screen.

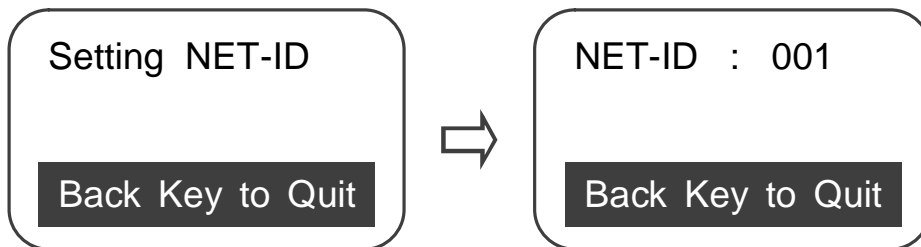

- ③ At first, the screen shows NET-ID = 001, you can press ◀ to change to the maximum 255. In general, you can press ▶ to increase or press ◀ to decrease the ID number then press ↵ to save the setting.
- ④ After complete the setting, please press ← to quit the setup mode.