

Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	1/6

How to set up an ELO USB touch panel


Applied to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

N/A: Not applicable to this platform and OS.

Use a touch panel and a keyboard at the same time on XP-8x4x.

The XP-8x4x series only has two USB ports, so if you want use a touch panel and keyboard/mouse at the same time. You will need a USB hub.

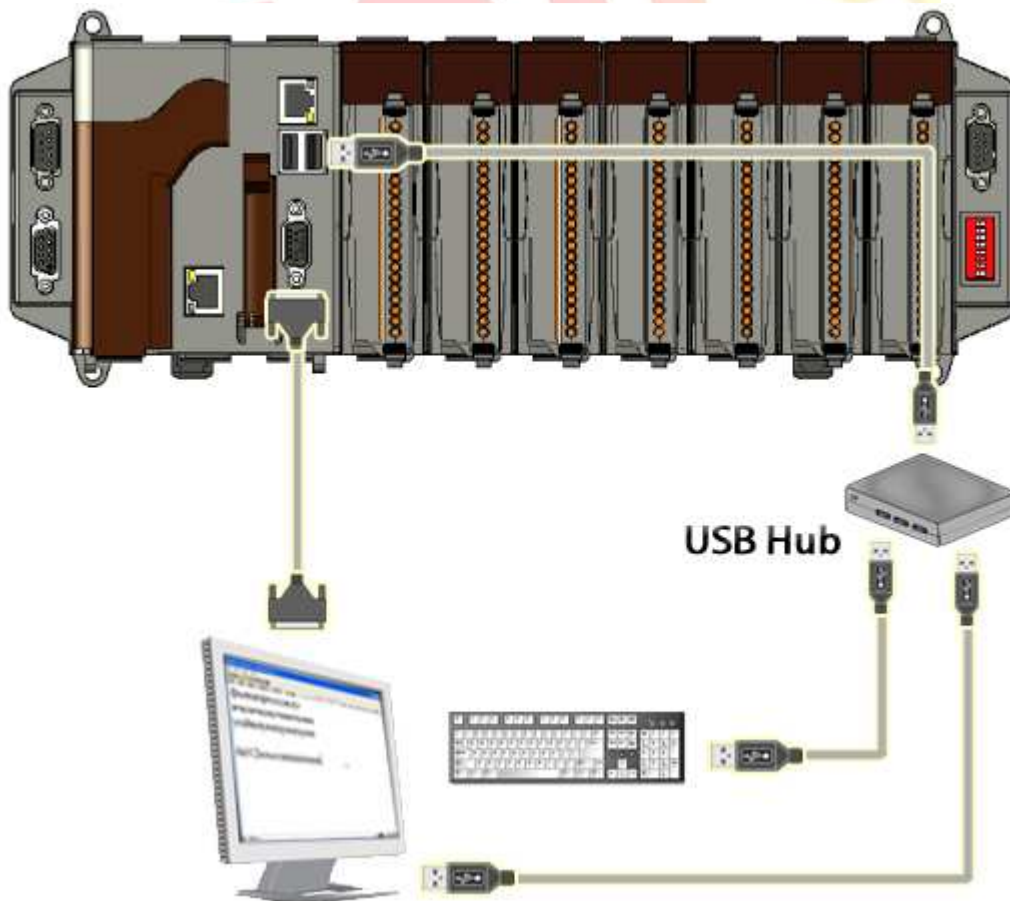

Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	2/6

To use an ELO USB touch panel, perform the following steps:

Step 1: Location of the devices for the touch panel

The ELO_USB_TOUCH_V1.14_20101101_XPAC_CE6.CAB and ELO_USB_TOUCH_V2.2_20101101_XPAC_CE6.CAB file is located at (yyyymmdd means Year /Month/Day)


1. CD: \System_Disk\External_device_driver\ELO_USB_TOUCH_V1.14_20101101_XPAC_CE6.CAB or \System_Disk\External_device_driver\ELO_USB_TOUCH_V2.2_20101101_XPAC_CE6.CAB
2. ftp://ftp.icpdas.com/pub/cd/xp-8000-ce6/napdos/system_disk/external_device_driver/

Step 2: Install the ELO_USB_TOUCH_V1.14_20101101_XPAC_CE6.CAB or ELO_USB_TOUCH_V2.2_20101101_XPAC_CE6.CAB file.

2.1. Double click the ELO_USB_TOUCH_V1.14_20101101_XPAC_CE6.CAB or ELO_USB_TOUCH_V2.2_20101101_XPAC_CE6.CAB file, and then click "OK".




2.2 Double click ok , and will reboot your XAC

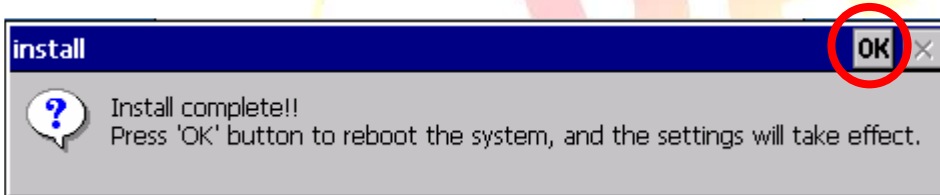

Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	3/6

Step 3: Execute the calibration program.




3.1. After rebooting, click Start->Programs->USB_TOUCH->ELO-> EloVa.

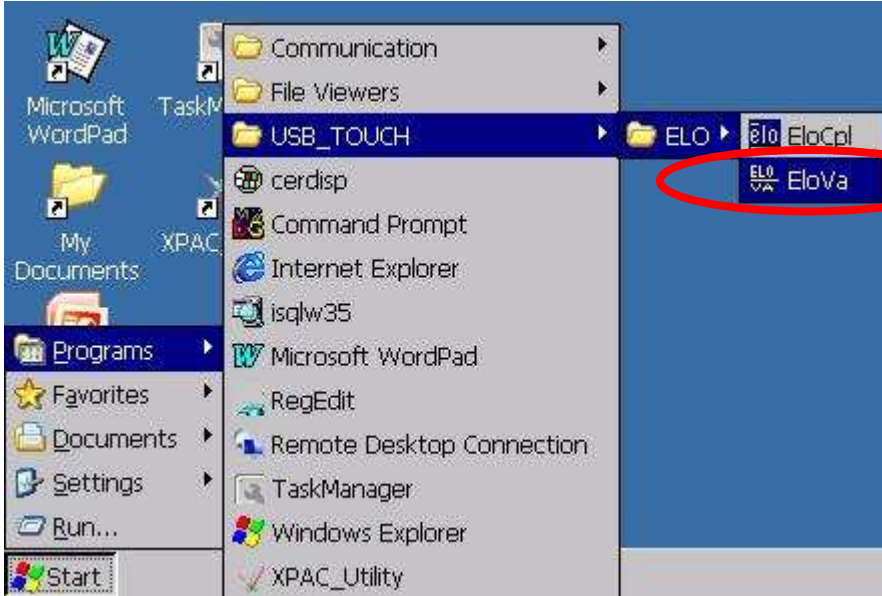



Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	4/6

3.2. Perform the calibration process.

3.2.1. Touch the “+” icons on the monitor to perform the calibration process.

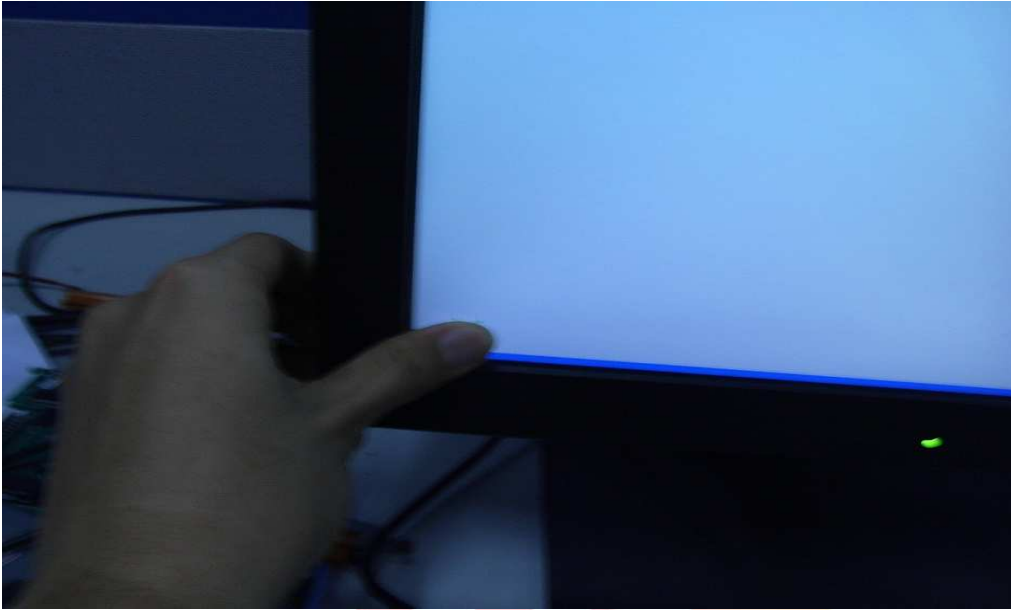

Touch targets from a position of normal use.



Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	5/6


Uninstall ELO USB touch driver, and perform the following steps:

Step 1: Execute the Remove Program.

1.1 click the Start->Settings ->Control Panel.




1.2 After Open “Control Panel”, double click “Remove Programs”.

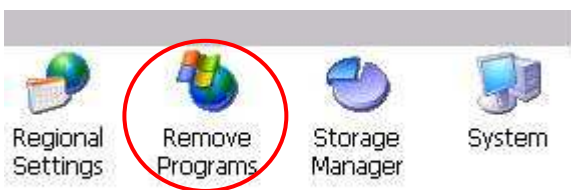


Step 2: Uninstall Penmount USB touch driver.

2.1 After execute “Remove Programs”, click “ICPDAS USB ELO” and then click “Remove” button

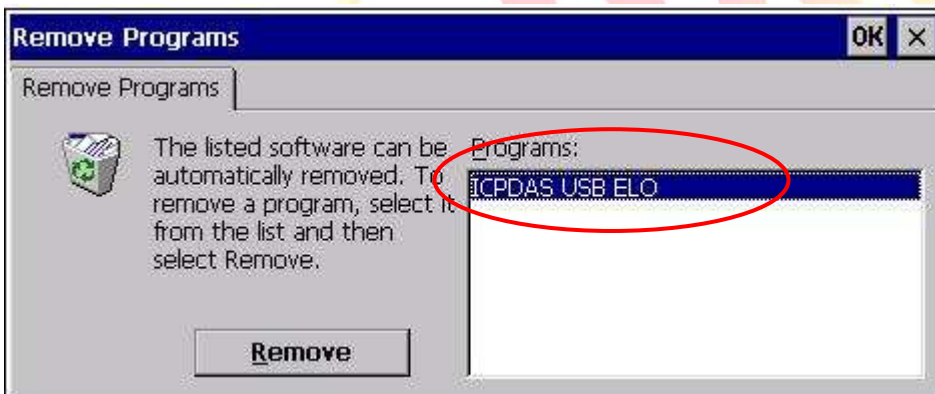

2.2 Click “Yes” button, and will uninstall ELO USB touch driver.

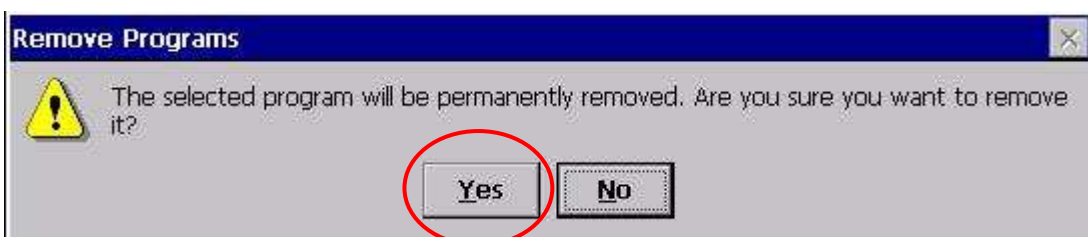

Classification	System and Application FAQ on XPAC				No.	1-004-02	
Author	WeiKai	Version	1.0.0	Date	2010/11/1	Page	6/6

2.3 Click “Yes”, and will reboot your XAC to take effect.

