

Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2010/6/29	Page	1/3

How to calibrate an ELO USB touch panel


Applied to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

N/A: Not applicable to this platform and OS.

Use a touch panel and a keyboard at the same time on XP-8x4x.

The XP-8x4x series only has two USB ports, so if you want use a touch panel and keyboard/mouse at the same time. You will need a USB hub.

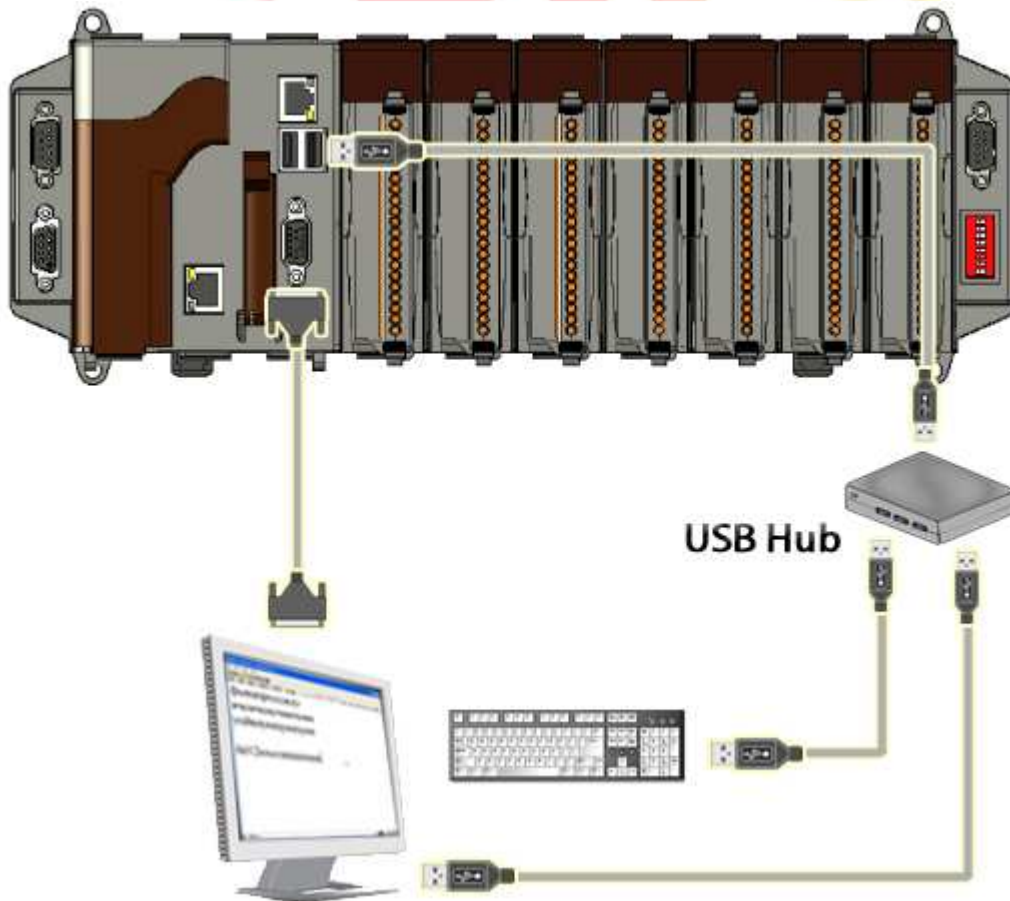

Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2010/6/29	Page	2/3

To calibrate an ELO USB touch panel, perform the following steps:

Step 1: Execute the calibration program.




1.1. After rebooting, click Start->Programs->USB_TOUCH->ELO-> EloVa.



Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2010/6/29	Page	3/3

1.2. Perform the calibration process.

1.2.1. Touch the “+” icons on the monitor to perform the calibration process.

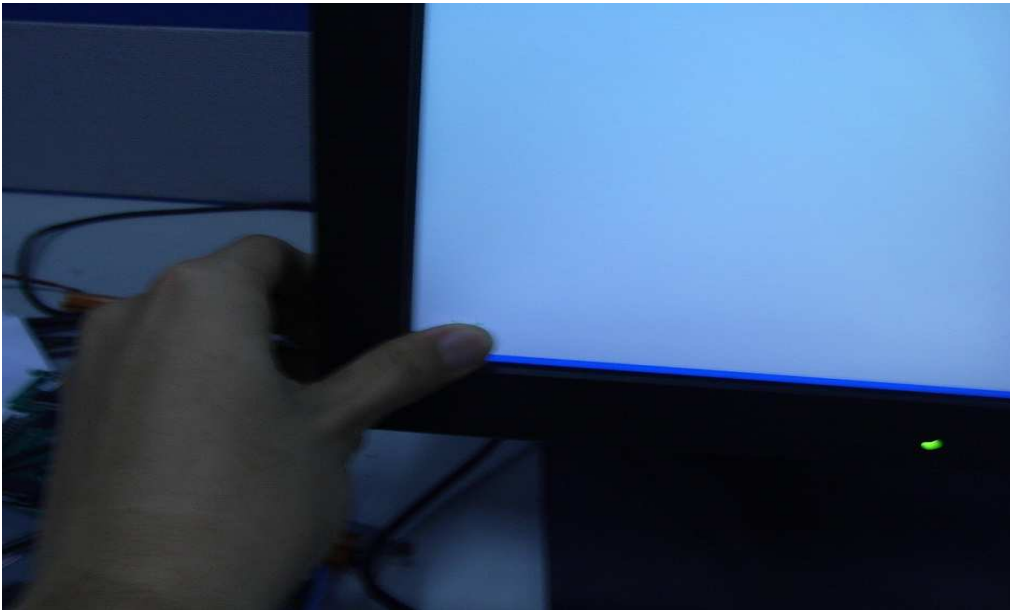

Touch targets from a position of normal use.

