

Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	1/3

## How to calibrate an ELO USB touch panel


Applied to:

Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

*N/A: Not applicable to this platform and OS.*

### Use a touch panel and a keyboard at the same time on XP-8x4x.

The XP-8x4x series only has two USB ports, so if you want use a touch panel and keyboard/mouse at the same time. You will need a USB hub.

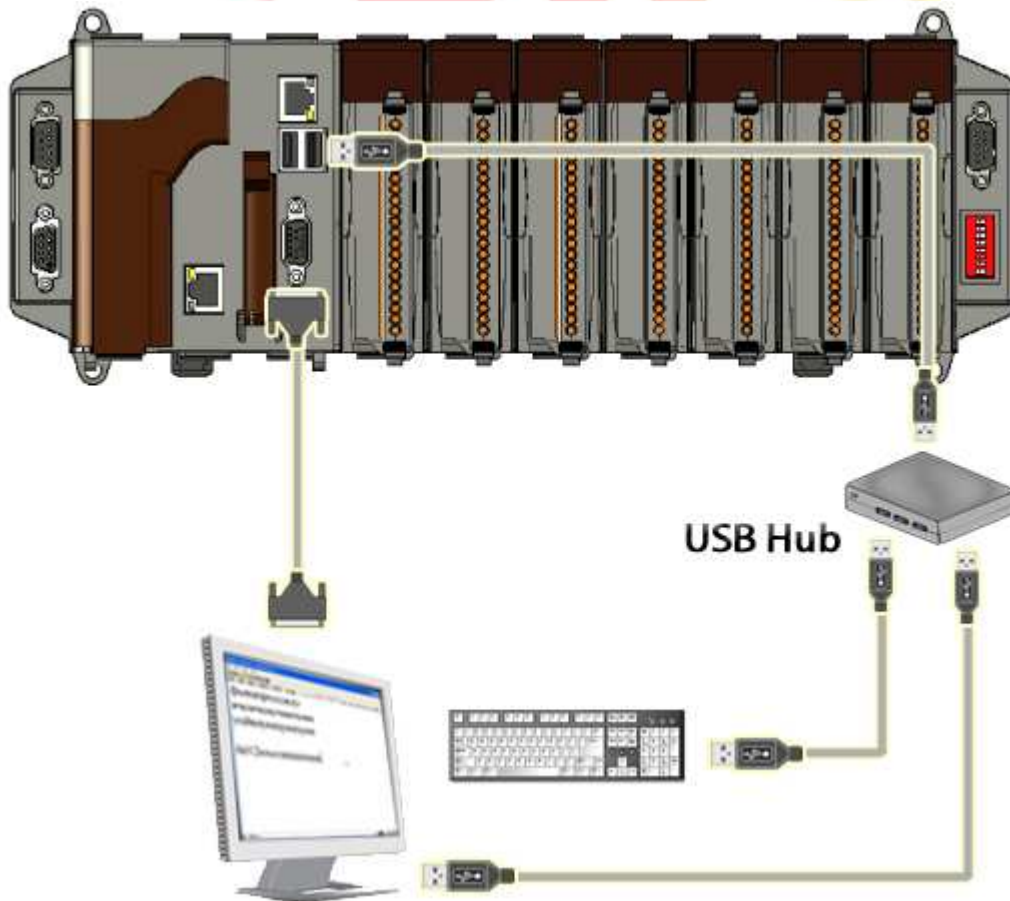

Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	2/3

To calibrate an ELO USB touch panel, perform the following steps:

**Step 1: Execute** the calibration program.




1.1. After rebooting, click Start->Programs->USB\_TOUCH->ELO-> EloVa.



Classification	System and Application FAQ on XPAC				No.	1-005-02	
Author	WeiKai	Version	1.0.1	Date	2011/6/29	Page	3/3

## 1.2. Perform the calibration process.

### 1.2.1. Touch the “+” icons on the monitor to perform the calibration process.

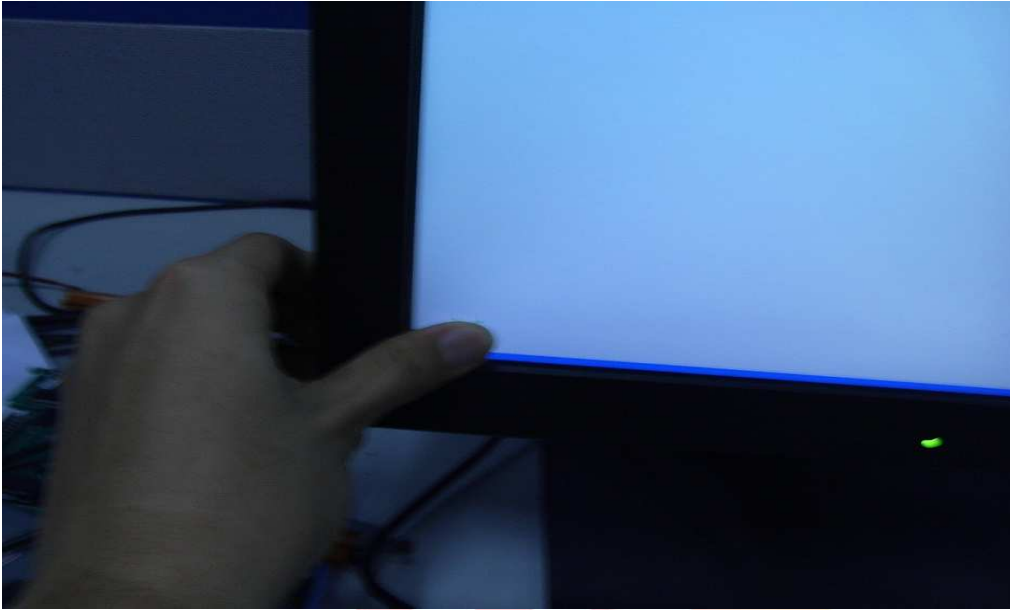

Touch targets from a position of normal use.

