

tDS-700 Series User Manual

Tiny Serial-to-Ethernet Device Server Aug. 2018, Ver. 2.2



WARRANTY

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

WARNING

ICP DAS assumes no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

COPYRIGHT

Copyright © 2018 by ICP DAS. All rights are reserved.

TRADEMARKS

Names are used for identification purposes only and may be registered trademarks of their respective companies.

CONTACT US

If you have any questions, please feel free to contact us via email at:

service@icpdas.com, service.icpdas@gmail.com

SUPPORT

This manual relates to the following modules:

tDS-712, tDS-722, tDS-732

tDS-715, tDS-725, tDS-735

tDS-718, tDS-724, tDS-734

tDS-712i, tDS-722i, tDS-732i

tDS-715i, tDS-725i, tDS-735i

tDS-718i, tDS-724i, tDS-734i

tDSM-712, tDS-718i-D



TABLE OF CONTENTS

PACKING LIST	5
MORE INFORMATION	5
1. INTRODUCTION	6
1.1 ETHERNET SOLUTIONS.....	8
1.2 VXCOMM TECHNOLOGY.....	9
1.3 WEB SERVER TECHNOLOGY.....	11
2. HARDWARE INFORMATION	12
2.1 SPECIFICATIONS	12
2.2 FEATURES.....	13
2.3 APPEARANCE	14
<i>PoE and Ethernet RJ-45 Jack</i>	14
<i>+12 to +48 VDC Jack</i>	14
<i>Operating Mode Switch</i>	15
<i>LED Indicator</i>	15
<i>Serial COM Ports</i>	16
<i>DIN-Rail Mounting</i>	16
2.4 DIMENSIONS	17
2.4.1 <i>tDS-700 Series Module</i>	17
2.4.2 <i>CA-002 Cable</i>	19
2.5 PIN ASSIGNMENTS.....	20
<i>tDS-712/tDS-712i/tDSM-712</i>	20
<i>tDS-722/tDS-722i</i>	20
<i>tDS-732/tDS-732i</i>	21
<i>tDS-715/tDS-715i</i>	21
<i>tDS-725/tDS-725i</i>	22
<i>tDS-735/tDS-735i</i>	22
<i>tDS-718/tDS-718i</i>	23
<i>tDS-718i-D</i>	23
<i>tDS-724/tDS-724i</i>	24
<i>tDS-734/tDS-734i</i>	24
2.6 WIRING NOTES FOR RS-232/485/422 INTERFACES	25
<i>RS-232 Wiring</i>	25
<i>RS-422 Wiring</i>	26

RS-485 Wiring	26
3. GETTING STARTED.....	27
3.1 CONNECTING THE POWER AND HOST PC	27
3.2 INSTALL THE VxCOMM UTILITY	30
3.3 CONFIGURING NETWORK SETTINGS.....	30
3.4 CONFIGURING THE VIRTUAL COM PORTS	31
3.5 CONFIGURING THE SERIAL PORT	33
3.6 TESTING YOUR TDS-700	35
4. WEB CONFIGURATION	37
4.1 LOGGING IN TO THE TDS-700 WEB SERVER	37
4.2 HOME PAGE	39
4.3 NETWORK SETTING	40
4.3.1 IP Address Settings.....	40
4.3.2 General Settings	43
4.3.3 Restore Factory Defaults.....	45
4.3.4 Remote Firmware Update.....	47
4.4 SERIAL PORT PAGE	48
4.4.1 Port1 Settings.....	48
4.5 FILTER PAGE.....	51
4.5.1 Accessible IP (filter is disabled when all zero)	51
4.6 MONITOR PAGE.....	52
4.7 CHANGE PASSWORD.....	53
4.8 LOGOUT PAGE	54
5. TYPICAL APPLICATIONS	55
5.1 VIRTUAL COM APPLICATION.....	56
5.2 DIRECT SOCKET CONNECTION APPLICATIONS.....	57
5.3 ETHERNET I/O APPLICATIONS	60
5.4 PAIR-CONNECTION APPLICATIONS.....	62
5.5 TCP CLIENT MODE APPLICATIONS.....	69
6. CGI CONFIGURATION.....	76
6.1 CGI URL SYNTAX.....	76
6.2 CGI COMMAND LIST	77
APPENDIX A: TROUBLESHOOTING	79
A1. HOW DO I RESTORE THE WEB PASSWORD FOR THE MODULE TO THE FACTORY DEFAULT PASSWORD?	79
APPENDIX B: GLOSSARY	81

1.	ARP (ADDRESS RESOLUTION PROTOCOL)	81
2.	CLIENTS AND SERVERS	81
3.	ETHERNET	82
4.	FIRMWARE	82
5.	GATEWAY	82
6.	ICMP (INTERNET CONTROL MESSAGE PROTOCOL)	82
7.	INTERNET	82
8.	IP (INTERNET PROTOCOL) ADDRESS	83
9.	MAC (MEDIA ACCESS CONTROL) ADDRESS	83
10.	PACKET	83
11.	PING	83
12.	RARP (REVERSE ADDRESS RESOLUTION PROTOCOL)	83
13.	SOCKET	84
14.	SUBNET MASK	84
15.	TCP (TRANSMISSION CONTROL PROTOCOL)	84
16.	TCP/IP	84
17.	UDP (USER DATAGRAM PROTOCOL)	84
APPENDIX C: ACTUAL BAUD RATE MEASUREMENT		85
APPENDIX D: REVISION HISTORY		86

Packing List

The shipping package includes the following items:



Or



tDS-700/tDSM-700 Series



Quick Start



CA-002 Cable

Note

If any of these items are missing or damaged, please contact the local distributor for more information. Save the shipping materials and cartons in case you need to ship the module in the future.

More Information

- **Documentation**

<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tds-700/document/>

- **Firmware**

<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tds-700/firmware/>

- **Software**


<http://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/>

1. Introduction

The tDS-700 is a series of Serial-to-Ethernet device servers that are designed to add Ethernet and Internet connectivity to any RS-232 and RS-422/485 device, and to eliminate the cable length limitation of legacy serial communications. By using the VxComm Driver/Utility, the built-in COM Port of the tDS-700 series can be virtualized to a standard PC COM Port in Windows. Therefore, users can transparently access or monitor serial devices over the Internet/Ethernet without the need for software modification.



tDS-700 device servers can be used to create a pair-connection application (as well as serial-bridge or serial-tunnel), and then route data between two serial devices via TCP/IP. This is useful when connecting mainframe computers, servers or other serial devices that do not themselves have Ethernet capability. By virtue of its protocol independence and flexibility, the tDS-700 meets the demands of virtually any network-enabled application.

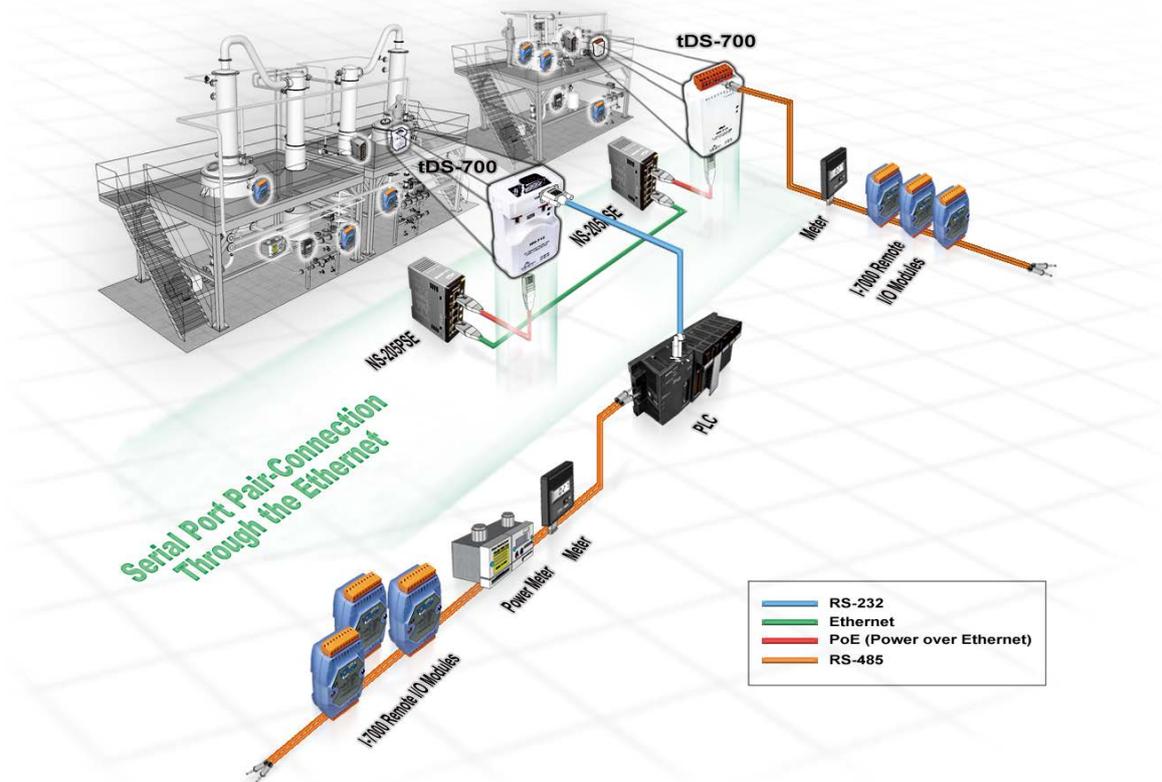

In harsh industrial environments, the tDS-700 series (for i version) also adds 3000 V_{DC} and +/- 4 kV ESD protection component that diverts the potentially damaging charge away from sensitive circuit to protect the module and equipment from the sudden and momentary electric current.

To achieve maximum space savings, the tDS-700 is offered in an amazingly small form-factor that enables it to be easily installed anywhere, even directly attached to a serial device or embedded into a machine. The tDS-700 features a powerful 32-bit MCU that allows it to efficiently handle network traffic. The tDS-700 offers true IEEE 802.3af-compliant (classification, Class 1) Power-over-Ethernet (PoE) functionality using a standard category 5 Ethernet cable that allows it to receive power from a PoE switch such as the NS-205PSE. If there is no PoE switch available on site, the tDS-700 can accept power input from a DC adapter.

Comparison of Device Servers:

Series Features	PPDS	PDS	DS	tDS	tGW
Virtual COM	✓	✓	✓	✓	-
Programmable	✓	✓	-	-	-
PoE	✓	-	-	✓	✓
Modbus Gateway	✓	-	-	-	✓
Multi-client	About 20 Sockets			1 Sockets/Port	10 Sockets/Port
Remarks	Professional	Powerful	Isolation for DS-715	Cost-effective, Entry-level	Cost-effective, Entry-level

1.1 Ethernet Solutions


Nowadays, the Ethernet protocol has become the foremost standard for local area networks. Connectivity via the Internet snow common in many of the latest applications from home appliances, to vending machines, to testing equipment, to UPS, etc. An Ethernet network can link office automation and industrial control networks, access remote systems and share data and information between machines from multiple vendors, and also provides a cost-effective solution for industrial control networks.




1.2 VxComm Technology

In general, writing a TCP/IP program is more difficult than writing a COM Port program. Another issue is that perhaps the existing the COM Port communication system was built many years ago and is now outdated.

As a result, a new technology, VxComm was developed to virtualize the COM Ports of the tDS-700 to allow up to 256 COM Ports to be used on a central computer. The VxComm driver saves time when accessing serial devices through the Ethernet without the need for reprogramming the COM Port software on the PC.

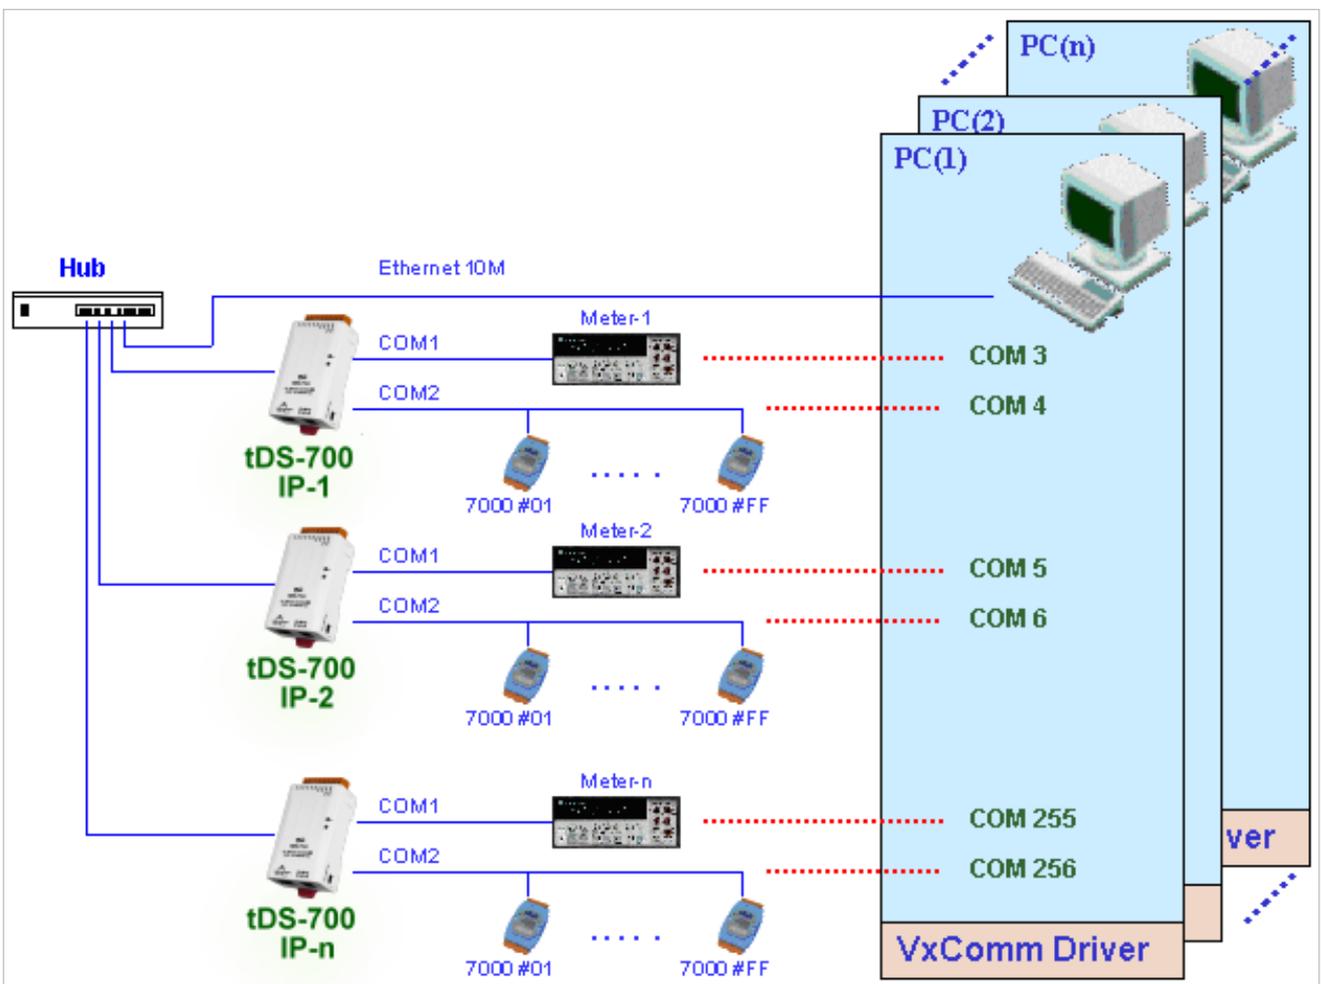


The VxComm driver controls all the details of the Ethernet TCP/IP programming technique, meaning that, with the assistance of tDS-700 and VxComm technology, your COM Port program will be able to access your serial devices through the Ethernet in the same way as through a COM Port.

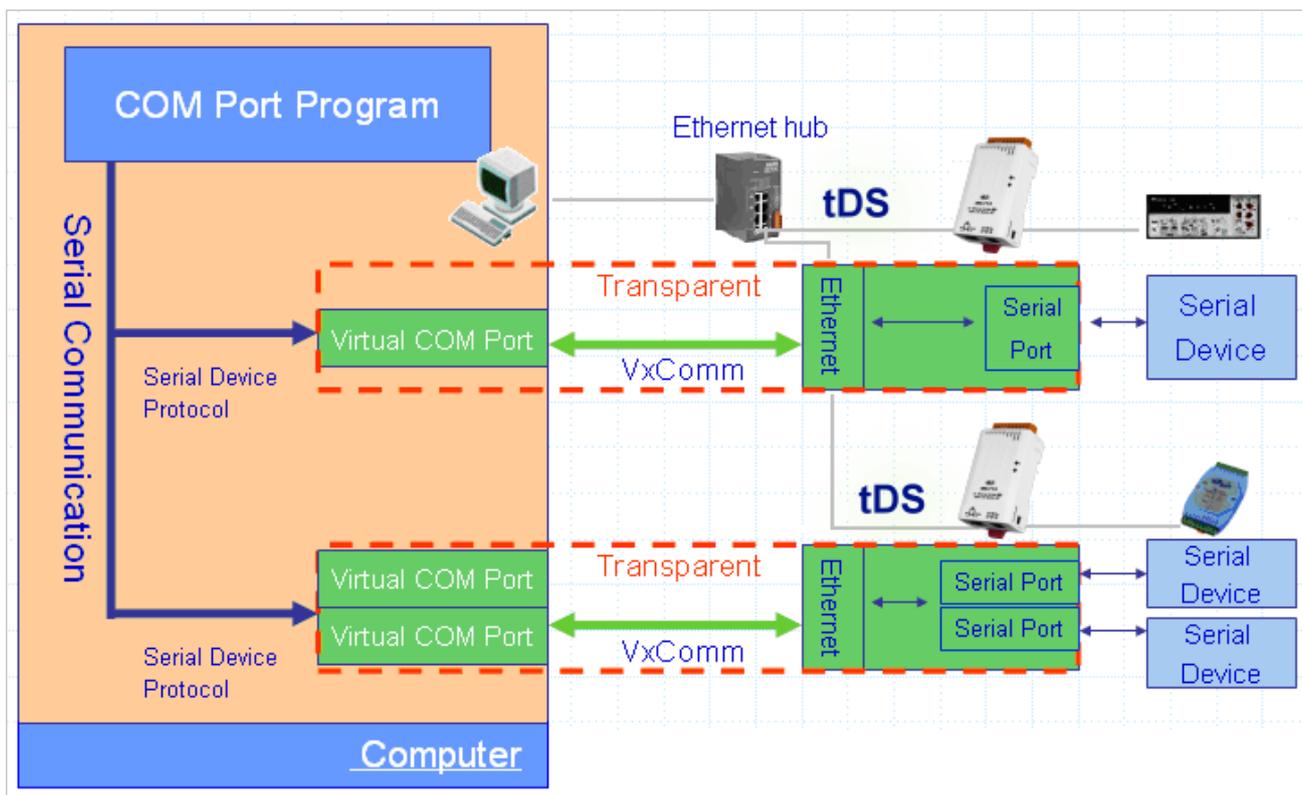

1.3 Web Server Technology

Web server technology enables the tDS-700 to be configured via a standard web browser interface, e.g. Google Chrome, Internet Explorer, or Firefox, etc. This means that it is easy to check the configuration of the tDS-700 via an Ethernet network without needing to install any other software tools, thereby reducing the learning curve required for maintaining the device.

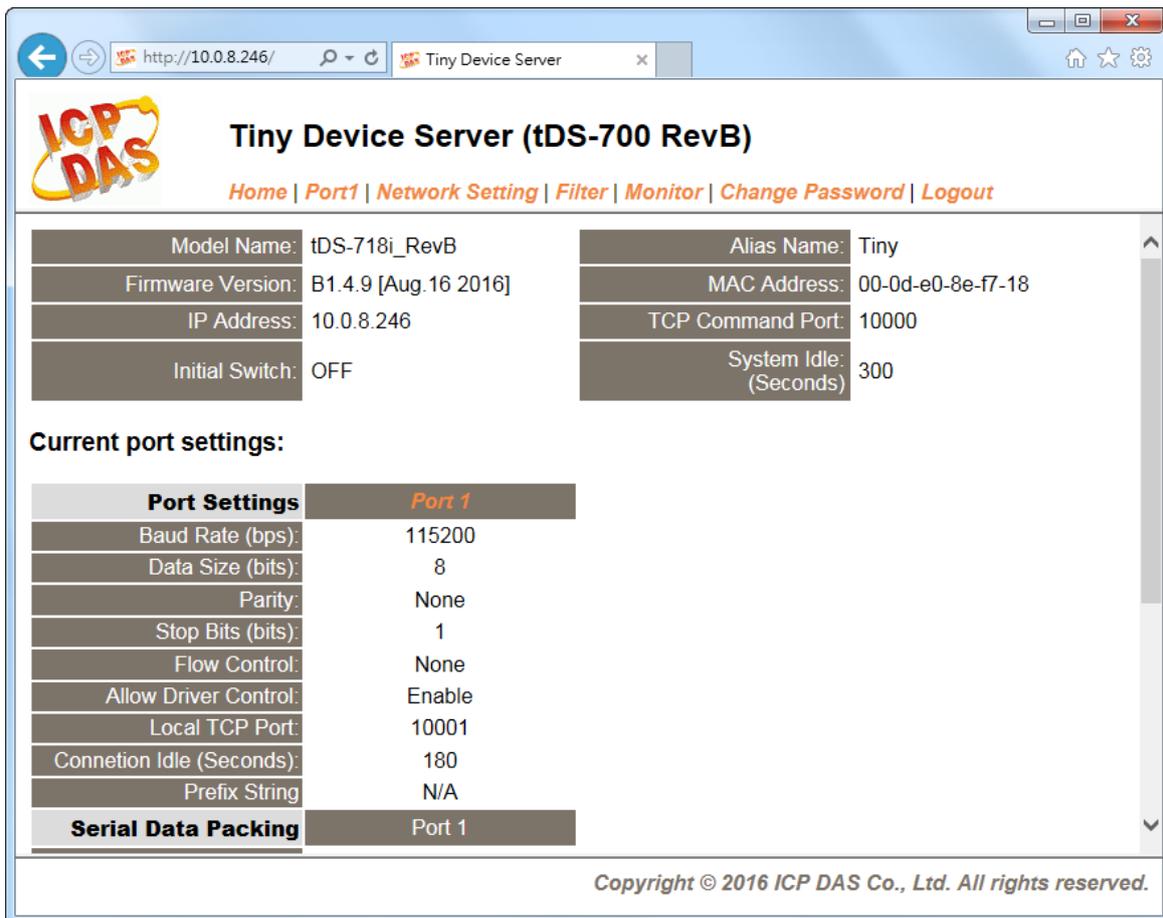

2. Hardware Information

This chapter provides a detailed description of the front panel, the hardware specifications, the pin assignments, the wiring notes and the dimensions for the tDS-700 series modules.


2.1 Specifications

Model	tDS-712 tDS-712i	tDSM-712	tDS-722 tDS-722i	tDS-732 tDS-732i	tDS-715 tDS-715i	tDS-725 tDS-725i	tDS-735 tDS-735i	tDS-718 tDS-718i tDS-718i-D	tDS-724 tDS-724i	tDS-734 tDS-734i
System										
CPU	32-bit ARM									
Communication Interface										
Ethernet	10/100 Base-TX, 8-pin RJ-45 x 1, (Auto-negotiating, Auto-MDI/MDIX, LED indicator) PoE (IEEE 802.3af, Class 1)									
COM1	5-wire RS-232	5-wire RS-232	3-wire RS-232	2-wire RS-485 4-wire RS-422	2-wire RS-485	2-wire RS-485	tDS-718(i): 3-wire RS-232 tDS-718i-D: 5-wire RS-232 2-wire RS-485 4-wire RS-422	2-wire RS-485	2-wire RS-485	
COM2	-	5-wire RS-232	3-wire RS-232	-	2-wire RS-485	2-wire RS-485	-	5-wire RS-232	3-wire RS-232	
COM3	-	-	3-wire RS-232	-	-	2-wire RS-485	-	-	3-wire RS-232	
Self-Tuner	-				Yes, automatic RS-485 direction control					
RS-485	Bias Resistor	-			Yes, 1 K Ω					
	Node	-			254 (max.)					
UART	16c550 or compatible									
Power Isolation	1000 V _{DC} for tDS-722i / 732i / 718i-D only									
Signal Isolation	3000 V _{DC} for tDS-712i / 715i / 725i / 735i / 718i / 724i / 734i only									
ESD Protection	+/-4 kV									
COM Port Format										
Baud Rate	115200 bps Max.									
Data Bit	5, 6, 7, 8									
Parity	None, Odd, Even, Mark, Space									
Stop Bit	1, 2									
Power										
Power Input	PoE: IEEE 802.3af, Class 1 DC jack: +12 ~ 48 V _{DC}									
Power Consumption	0.07 A @ 24 V _{DC}									
Mechanism										
Connector	Male DB-9 x1 for tDS-712(i)/718i-D and tDSM-712 10-Pin Removable Terminal Block x 1 for tDS-722(i)/732(i)/715(i)/725(i)/735(i)/718(i)/724(i)/734(i)									
Mounting	DIN-Rail									
Case	Plastic	Metal	Plastic							
Environment										
Operating Temperature	-25 ~ +75 °C									
Storage Temperature	-30 ~ +80 °C									
Humidity	10 ~ 90% RH, non-condensing									
Note: COM1/COM2/COM3 = TCP Port 10001/10002/10003										

2.2 Features

- Incorporates any RS-232/422/485 serial device in Ethernet
- Data transmission via Virtual COM or raw TCP connection
- VxComm Driver for 32-bit and 64-bit Windows XP/7/8/2012/2016/10
- Max. connections: 1 socket per serial port is suggested
- Supports pair-connection (serial-bridge, serial-tunnel) applications
- Supports TCP client-mode and TCP server-mode operations
- Supports UDP responder for device discovery (UDP Search)
- Static IP or DHCP network configuration
- Easy firmware update via the Ethernet (BOOTP, TFTP)
- Tiny Web server for configuration (HTTP)
- Contains a 32-bit MCU that efficiently handles network traffic
- 10/100 Base-TX Ethernet, RJ-45 x1 (Auto-negotiating, auto MDI/MDIX, LED Indicators)
- Includes redundant power inputs: PoE (IEEE 802.3af, Class 1) and DC jack
- Allows automatic RS-485 direction control
- Power or Signal isolation for i versions
- +/- 4 kV ESD protection
- Male DB-9 or terminal block connector for easy wiring
- Tiny form-factor and low power consumption
- RoHS compliant with no Halogen
- Cost-effective device servers

2.3 Appearance

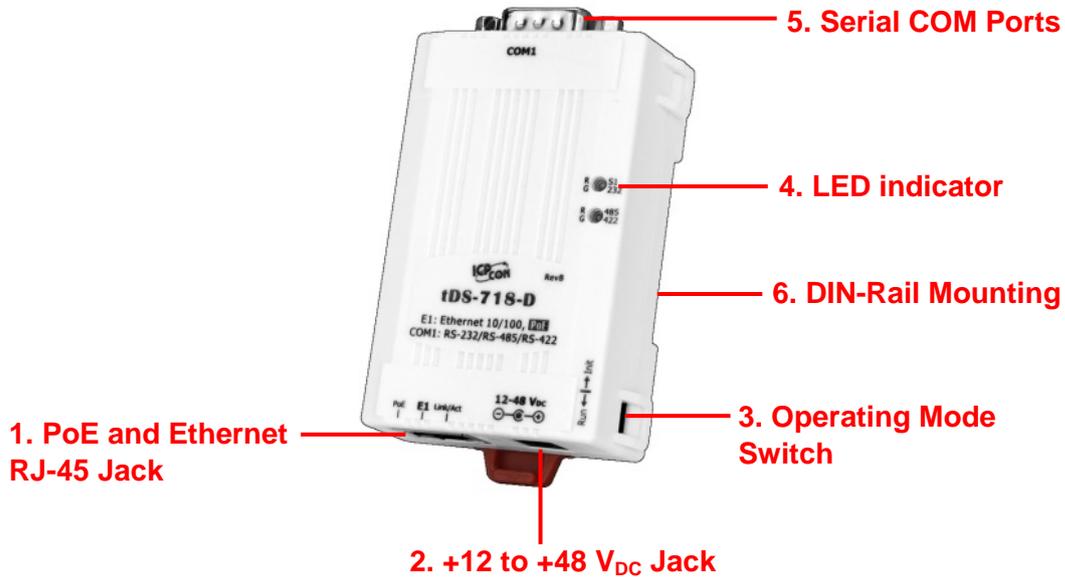

PoE and Ethernet RJ-45 Jack


The tDS-700 series module is equipped with an RJ-45 jack that is used as the 10/100 Base-TX Ethernet port and features networking capabilities. When an Ethernet link is detected and an Ethernet packet is received, the **Link/Act LED (Orange)** indicator will be illuminated. When power is supplied via PoE (Power-over-Ethernet), the **PoE LED (Green)** indicator will be illuminated.

+12 to +48 VDC Jack


The tDS-700 series is equipped with a +12V_{DC} to +48 V_{DC} jack that can be used to connect a power supply. If no PoE switch is available on site, a DC adapter can be used to power the tDS-700 series module.

Operating Mode Switch

Run Mode: Firmware operation

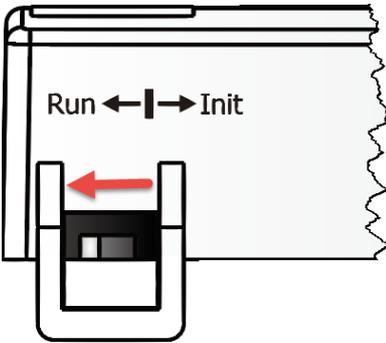

Init Mode: Configuration mode

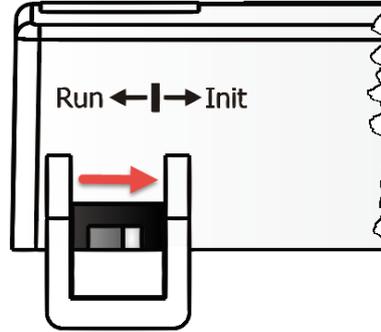

For tDS-700 series modules, the operating mode switch is set to the **Run** position by default. In order to update the firmware for the tDS-700 series module, the switch must be moved from the **Run** position to the **Init** position. The switch must be returned to the Run position after the update is complete.

LED Indicator

Once power is supplied to the tDS-700 series module, the system LED (S1) indicator will illuminate. An overview of the S1 LED functions is given below:

Function	Color	S1 LED Behavior
Running Firmware		Steady ON
Network Ready	Red  S1	Slow flashing – Once every 3 seconds
Serial Port Busy		Rapid flashing – Once every 0.2 seconds

The following serial port LED indicators are tDS-718i-D only. You can change the serial interface via web server. An overview of the serial Port LED functions is given below:


Function	RS-232	RS-485	RS-422
LED Behavior	R  S1 G 232 R  485 G 422	R  S1 G 232 R  485 G 422	R  S1 G 232 R  485 G 422

Serial COM Ports


The number of serial COM Ports available depends on the type of tDS-700 series module. For more detailed information regarding the pin assignments for the Serial COM ports, refer to [Section 2.5 “Pin Assignments”](#).

DIN-Rail Mounting


The tDS-700 series modules include simple rail clips on the bottom of the chassis that allow them to be reliably mounted on a DIN-Rail or a wall. For more detailed information regarding DIN-Rail Mounting, refer to the illustration in figure below.

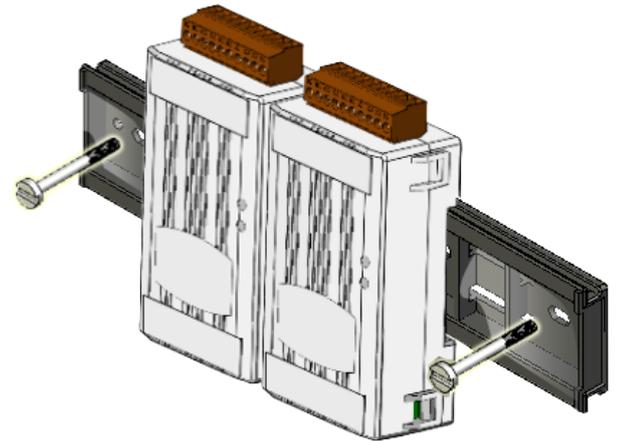

Mounting on a DIN-Rail

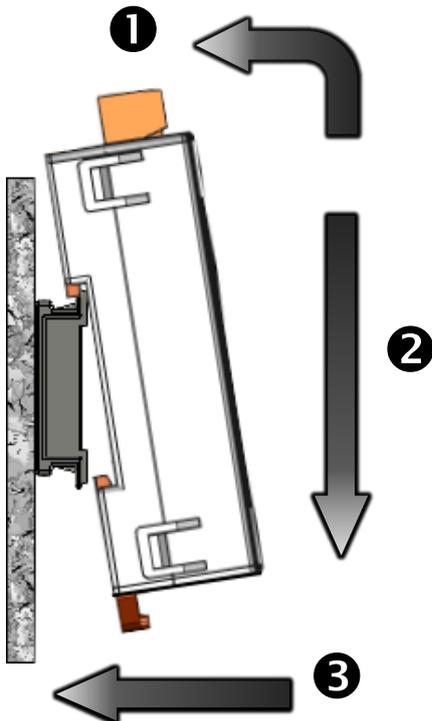

Dismounting from a DIN-Rail

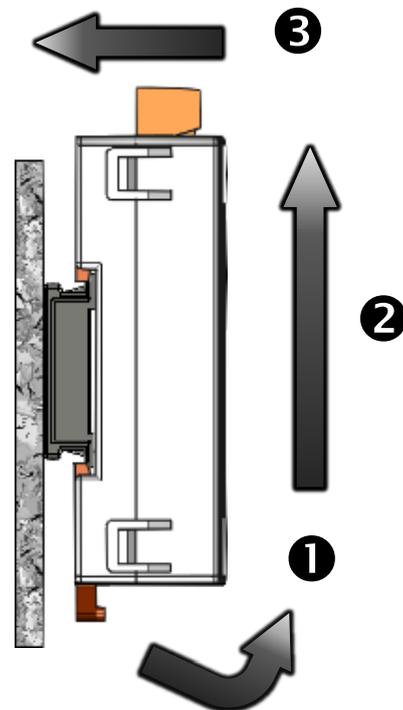


2.4 Dimensions


The following diagrams provide the dimensions of the tDS-700 series module and CA-002 cable that can be used as a reference when defining the specifications and the DC power supply plug for any custom enclosures. All dimensions are in millimeters.

2.4.1 tDS-700 Series Module


➤ **tDS-712:**

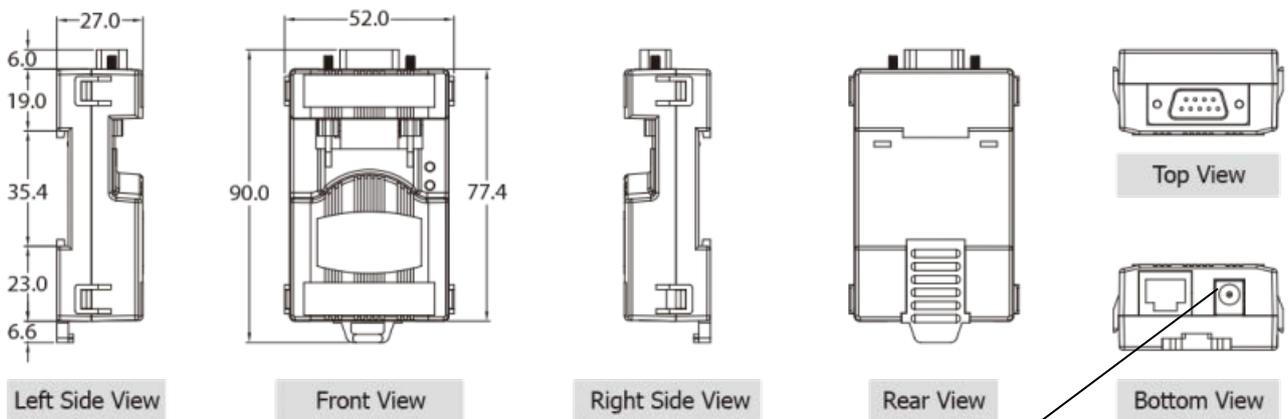


➤ **tDSM-712:**

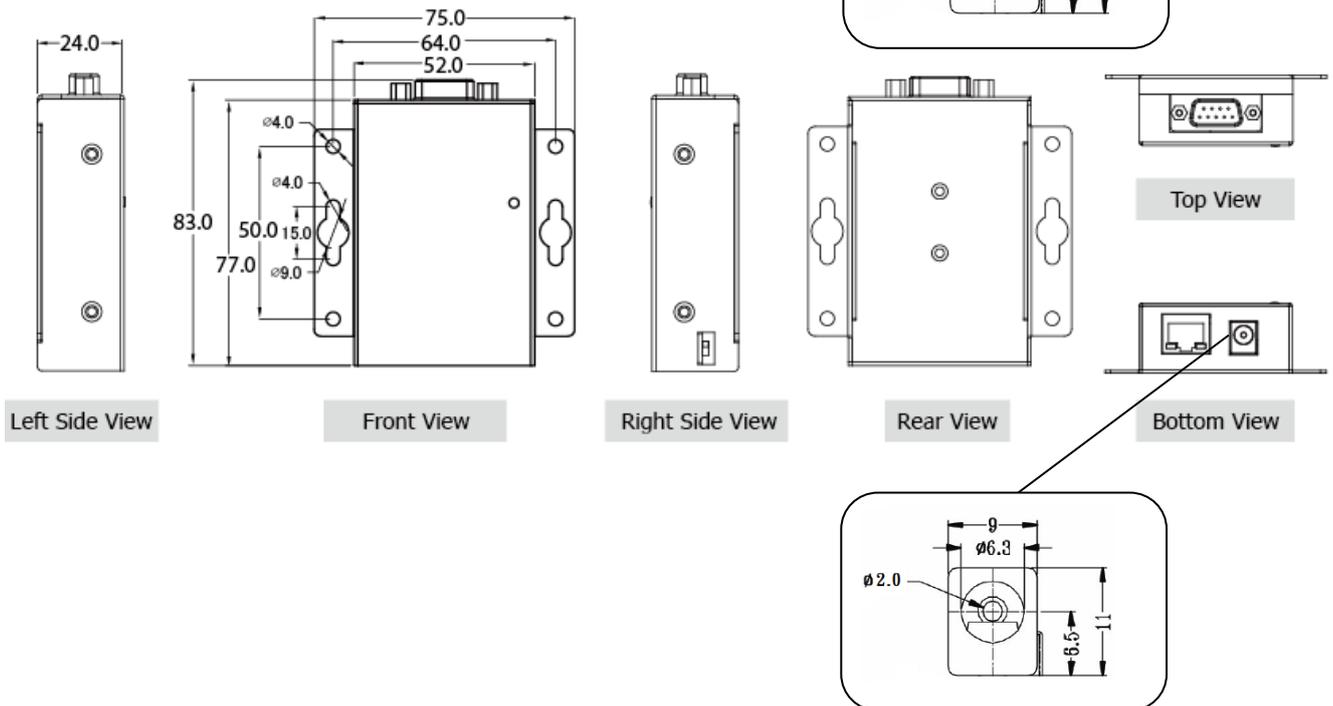


➤ **tDS-712i/718i-D:**

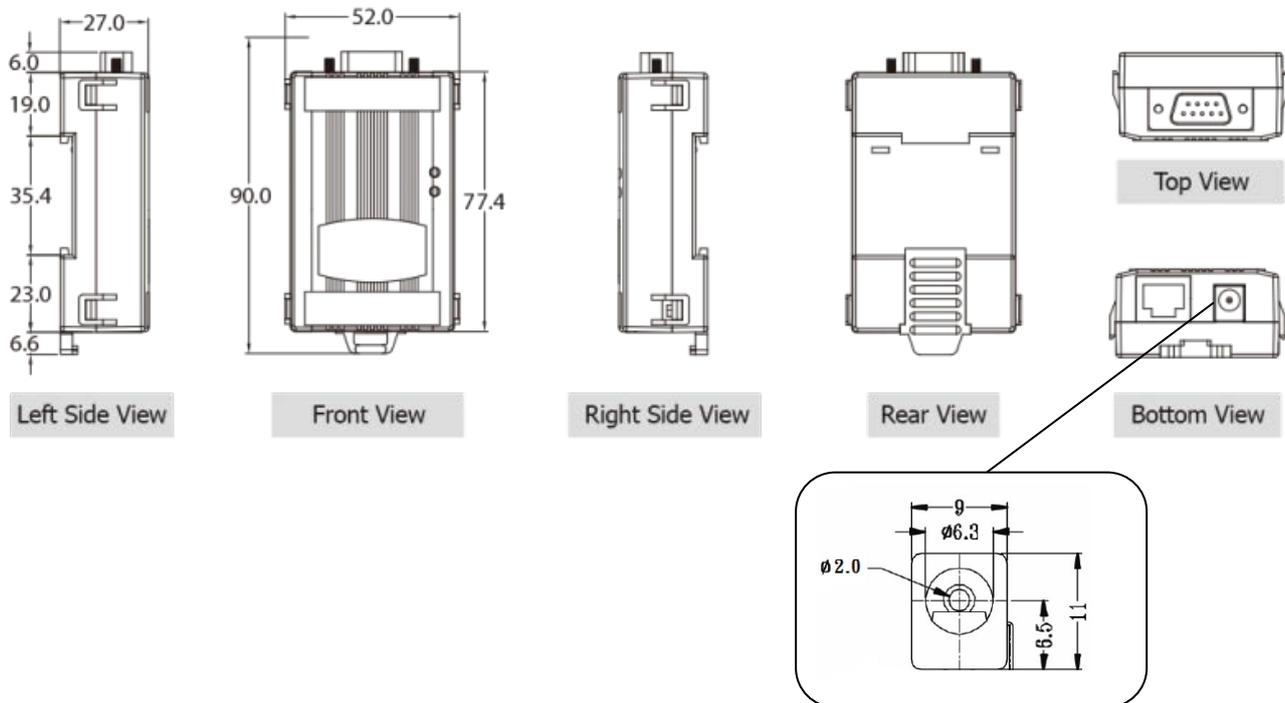

➤ **tDS-722(i)/732(i)/715(i)/725(i)/735(i)/718(i)/724(i)/734(i):**

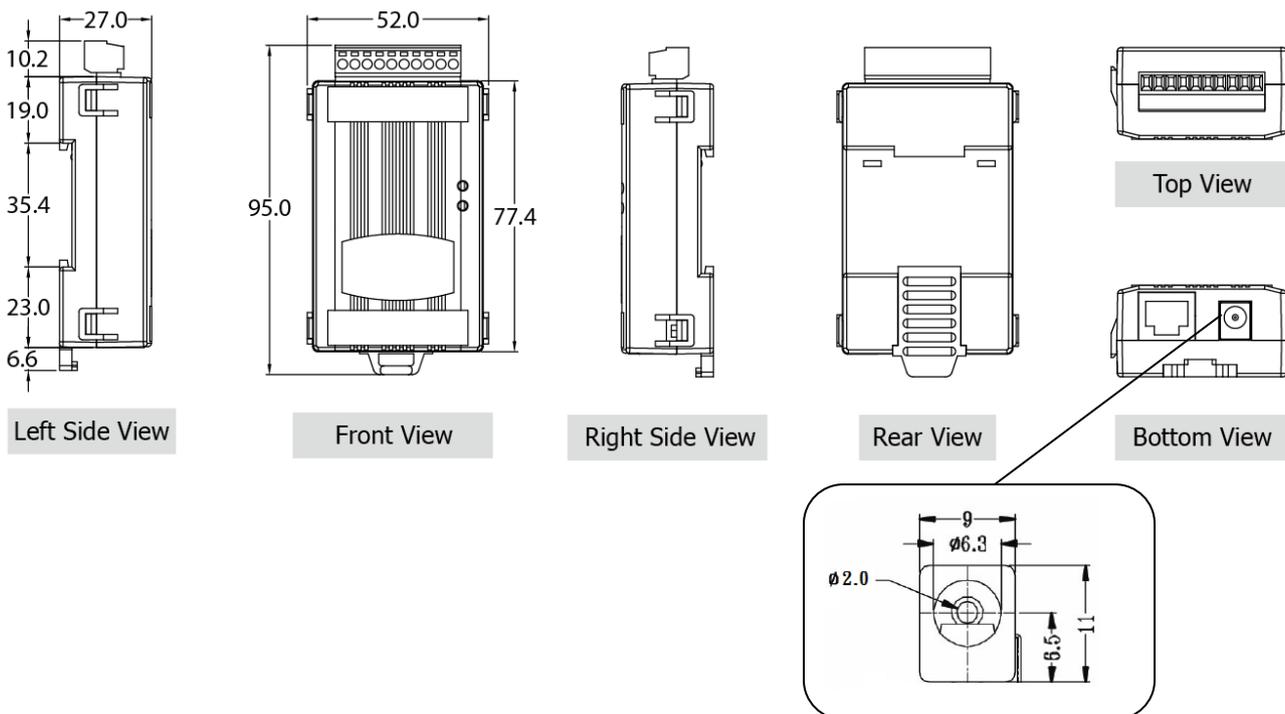

2.4.2CA-002 Cable

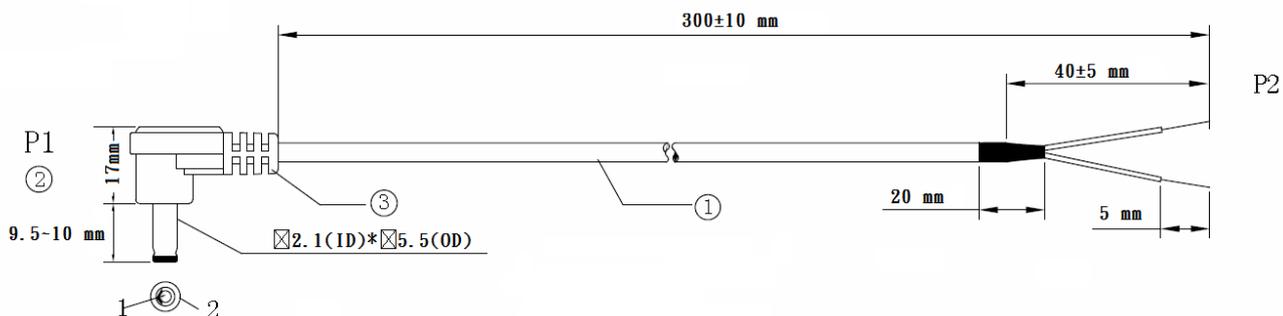

Note: Cable color: BLACK

<u>Pin Assignment</u>			
P1			P2
1	RED		OPEN
2	BLACK		OPEN

NO	DESCRIPTION	QTY	UNIT
1	UL2464 18AWG 2C(RED/BLACK) OD5.0 COLOR BLACK	1	PCS
2	DC PLUG 5.5*2.1	1	PCS
3	PVC:45/P BLACK		G

2.5 Pin Assignments

tDS-712/tDS-712i/tDSM-712

		tDS-712/tDSM-712	tDS-712i
Terminal No.		Pin Assignment	
 <p>COM1</p>	09	N/A	N/A
	08	CTS1	CTS1
	07	RTS1	RTS1
	06	N/A	N/A
	05	GND	ISO.GND
	04	N/A	N/A
	03	TxD1	TxD1
	02	RxD1	RxD1
	01	N/A	N/A

tDS-722/tDS-722i

		tDS-722	tDS-722i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
COM2	09	CTS2	CTS2
	08	RTS2	RTS2
	07	RxD2	RxD2
	06	TxD2	TxD2
COM1	05	GND	ISO.GND
	04	CTS1	CTS1
	03	RTS1	RTS1
	02	RxD1	RxD1
	01	TxD1	TxD1

tDS-732/tDS-732i

		tDS-732	tDS-732i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
COM3	09	GND	ISO.GND
	08	RxD3	RxD3
	07	TxD3	TxD3
COM2	06	GND	ISO.GND
	05	RxD2	RxD2
	04	TxD2	TxD2
COM1	03	GND	ISO.GND
	02	RxD1	RxD1
	01	TxD1	TxD1

tDS-715/tDS-715i

		tDS-715	tDS-715i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
	09	N/A	N/A
	08	N/A	N/A
	07	N/A	N/A
	06	N/A	N/A
RS-485/RS-422	05	GND	ISO.GND
	04	RxD1-	RxD1-
	03	RxD1+	RxD1+
	02	TxD1-/D1-	TxD1-/D1-
	01	TxD1+/D1+	TxD1+/D1+

tDS-725/tDS-725i

		tDS-725	tDS-725i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
	09	N/A	N/A
	08	N/A	N/A
	07	N/A	N/A
COM2	06	GND	ISO.GND
	05	D2-	D2-
	04	D2+	D2+
COM1	03	GND	ISO.GND
	02	D1-	D1-
	01	D1+	D1+

tDS-735/tDS-735i

		tDS-735	tDS-735i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
COM3	09	GND	ISO.GND
	08	D3-	D3-
	07	D3+	D3+
COM2	06	GND	ISO.GND
	05	D2-	D2-
	04	D2+	D2+
COM1	03	GND	ISO.GND
	02	D1-	D1-
	01	D1+	D1+

tDS-718/tDS-718i

		tDS-718	tDS-718i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
	09	N/A	N/A
RS-232	08	GND	ISO.GND
	07	RxD1	RxD1
	06	TxD1	TxD1
RS-485/RS-422	05	GND	ISO.GND
	04	RxD1-	RxD1-
	03	RxD1+	RxD1+
	02	TxD1-/D1-	TxD1-/D1-
	01	TxD1/D1+	TxD1/D1+

tDS-718i-D

		RS-232	RS-422	RS-485
Terminal No.		Pin Assignment		
COM1 	09	-	-	-
	08	CTS	-	-
	07	RTS	-	-
	06	-	-	-
	05	GND	GND	GND
	04	-	RxD-	-
	03	TxD	RxD+	-
	02	RxD	TxD+	Data+
	01	-	TxD-	Data-

tDS-724/tDS-724i

		tDS-724	tDS-724i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
	09	GND	ISO.GND
COM2	08	CTS2	CTS2
	07	RTS2	RTS2
	06	GND	ISO.GND
	05	RxD2	RxD2
	04	TxD2	TxD2
COM1	03	GND	ISO.GND
	02	D1-	D1-
	01	D1+	D1+


tDS-734/tDS-734i

		tDS-734	tDS-734i
Terminal No.		Pin Assignment	
	10	F.G.	F.G.
COM3	09	GND	ISO.GND
	08	RxD3	RxD3
	07	TxD3	TxD3
COM2	06	GND	ISO.GND
	05	RxD2	RxD2
	04	TxD2	TxD2
COM1	03	GND	ISO.GND
	02	D1-	D1-
	01	D1+	D1+


2.6 Wiring Notes for RS-232/485/422 Interfaces

RS-232 Wiring

3-wire RS-232 Connection

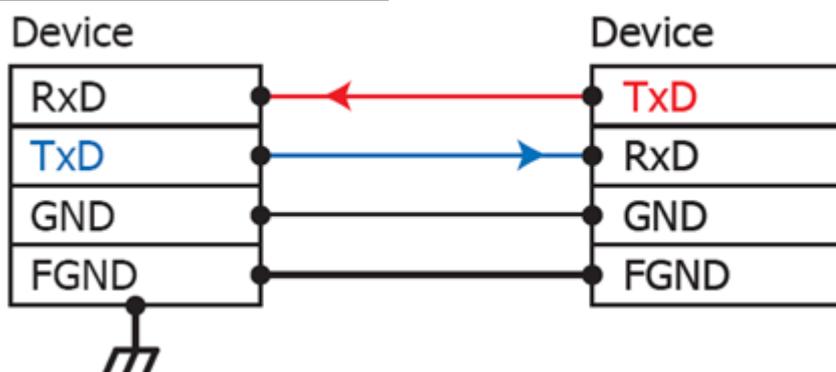


5-wire RS-232 Connection

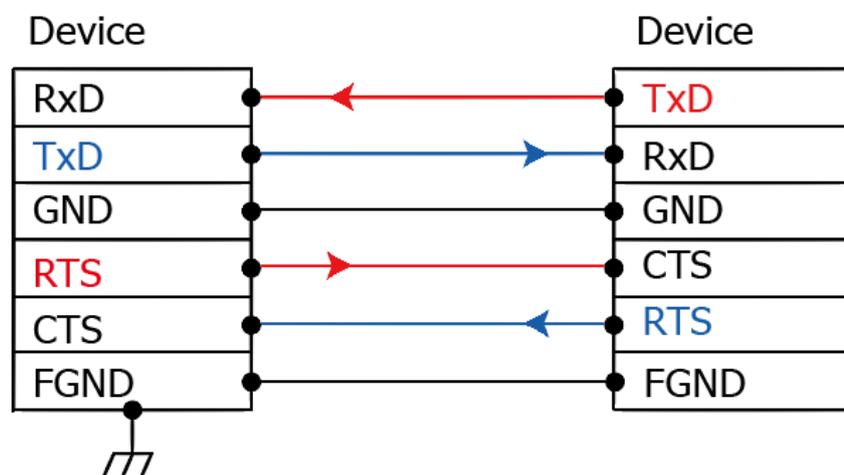


Note: FGND is the frame ground that is soldered to the metal shield on the DB-9 cable.

RS-422 Wiring

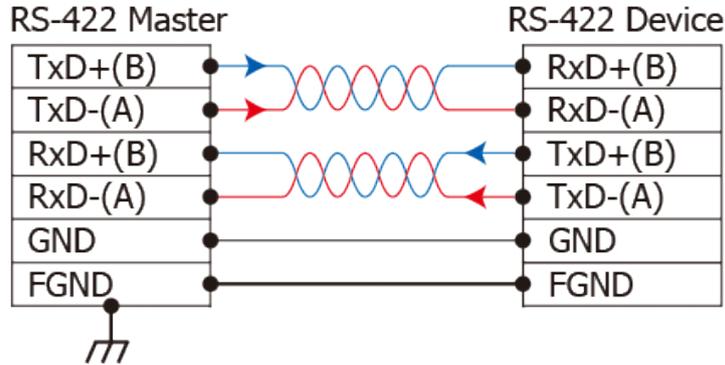

RS-485 Wiring

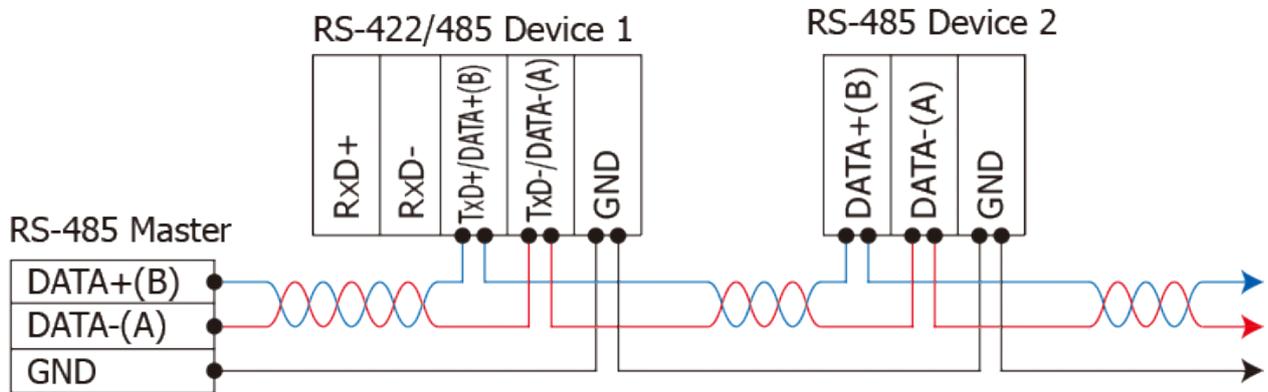

2-wire Only Device

Notes:

1. Usually, you have to connect all signal grounds of RS-422/485 devices together to reduce common-mode voltage between devices.
2. Twisted-pair cable must be used for the DATA+/- wires.
3. Both two ends of the cable may require a termination resistor connected across the two wires (DATA+ and DATA-). Typically 120 Ω resistors are used.
4. The Data+ and B pins are positive-voltage pins, and Data- and A pins are negative-voltage pins in the above figure. The B/A pins may be defined in another way depending on devices, please check it first.


3. Getting Started

This chapter provides detailed information about the “Self-Test” process, which is used to confirm that the tDS-700 series module is operating correctly. Before beginning the “Self-Test” process, the wiring test, Ethernet configuration and VxComm utility driver installation procedures must first be fully completed. Follow the procedure described below:

3.1 Connecting the Power and Host PC


1. Ensure that the network settings on your PC are configured correctly. Ensure that the Windows firewall or any Anti-Virus firewall software is correctly configured or temporarily disable these functions; otherwise the “**Search Servers**” function in the eSearch Utility may not work as required. You may need to contact your System Administrator for more details of how to do this.

2. Check that the **Init/Run switch** is in the “**Run**” position.

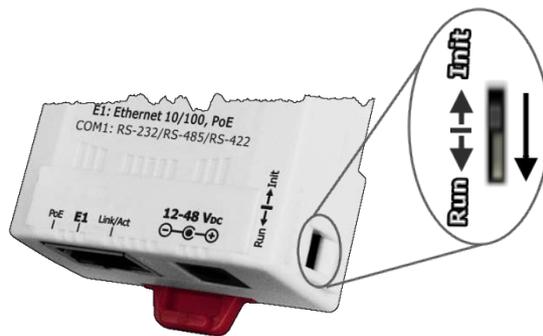


3. Connect both the tDS-700 and the Host computer to the same sub-network or the same Ethernet Switch, and then supply power (PoE or +12 to +48 VDC) to the tDS-700.


PoE Power Supply

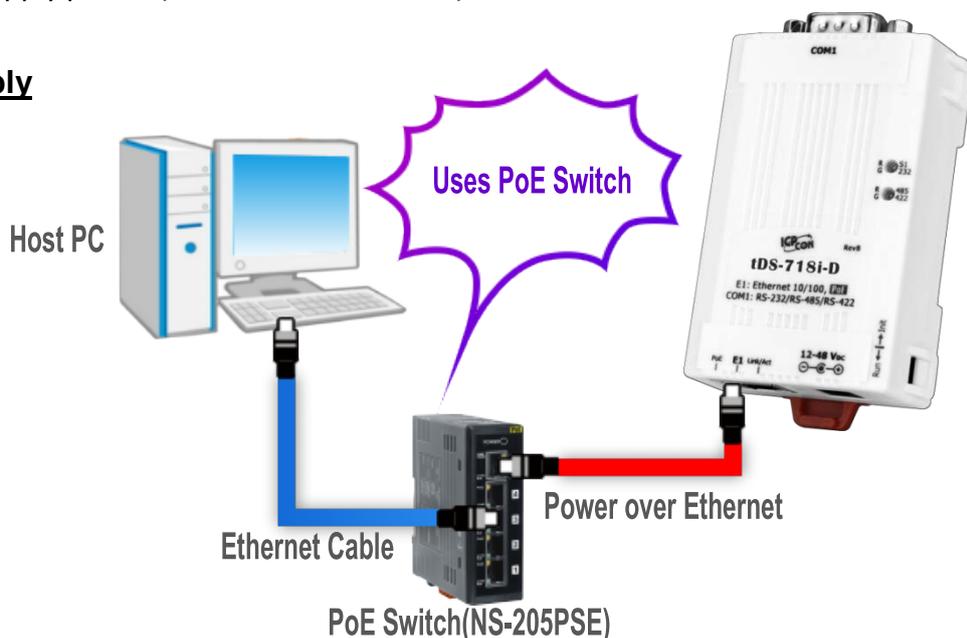

+12 to +48 Vdc Jack Power Supply (Non-PoE)

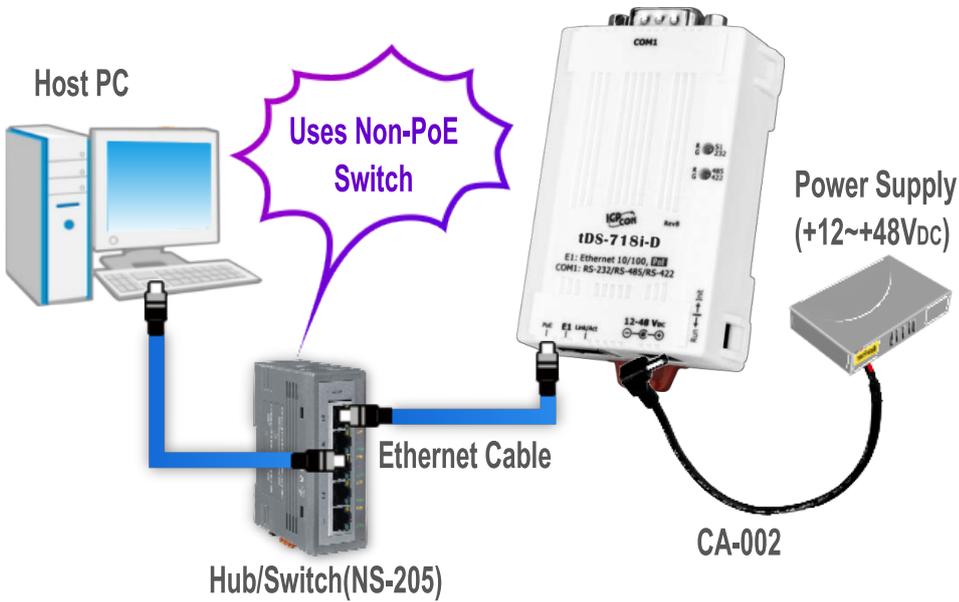


4. Verify that the **System (S1) LED** indicator is flashing.

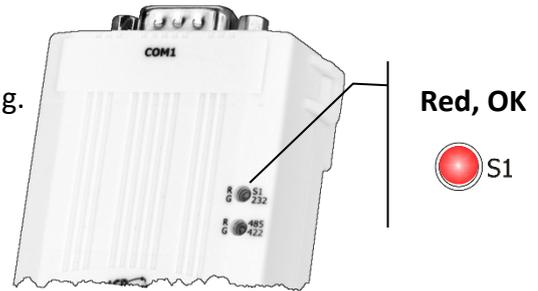

5. Perform a Self-test wiring check as follows:


➤ **RS-232 Wiring:**

Connect the RxD to the TxD pins

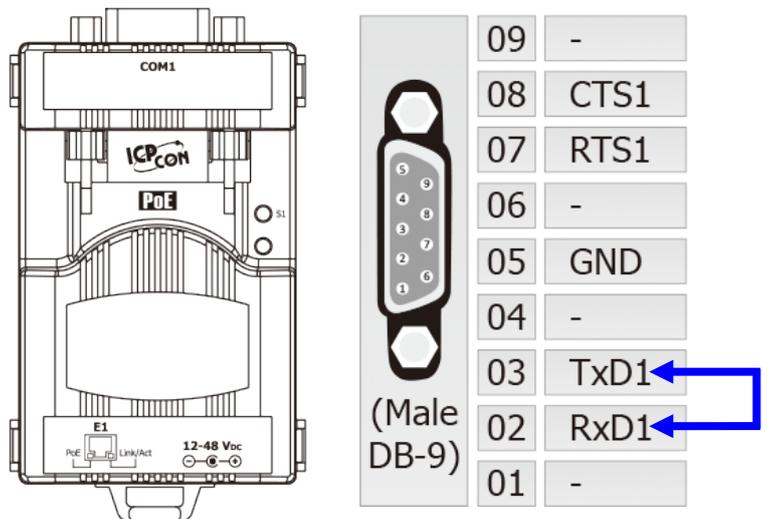


➤ **RS-422 Wiring:**

Connect the RxD1- to the TxD1- pins and connect the RxD1+ to the TxD1+ pins.

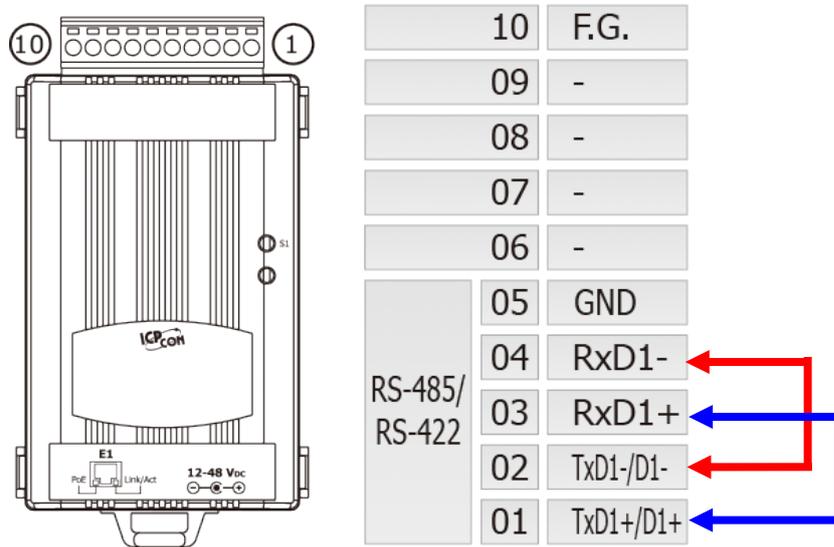

➤ **RS-485 Wiring:**

While using RS-485 modules (e.g., tDS-715), you should wire the Data1+ with Data2+ signals, and wire the Data1- with Data2- signals for self-test.

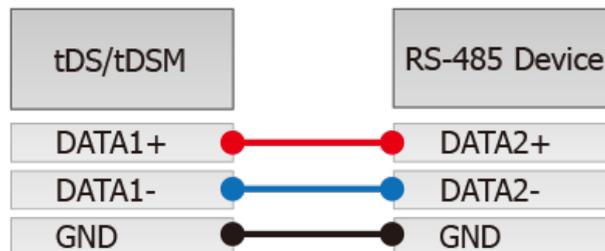

3.2 Install the VxComm Utility

The VxComm Utility can be obtained from the ICP DAS FTP site or the ICP DAS web site. The location of the download addresses are shown below:




 http://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/vxcomm_driver/windows/


 ftp://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/vxcomm_driver/windows/

3.3 Configuring Network Settings

1. Double-click the **VxComm Utility** shortcut on the desktop.
2. Click the **“Search Servers”** button to search for the tDS-700 module.
3. Once the search process is complete, **double-click the name of the tDS-700 module** to open the “Configure Server” dialog box.

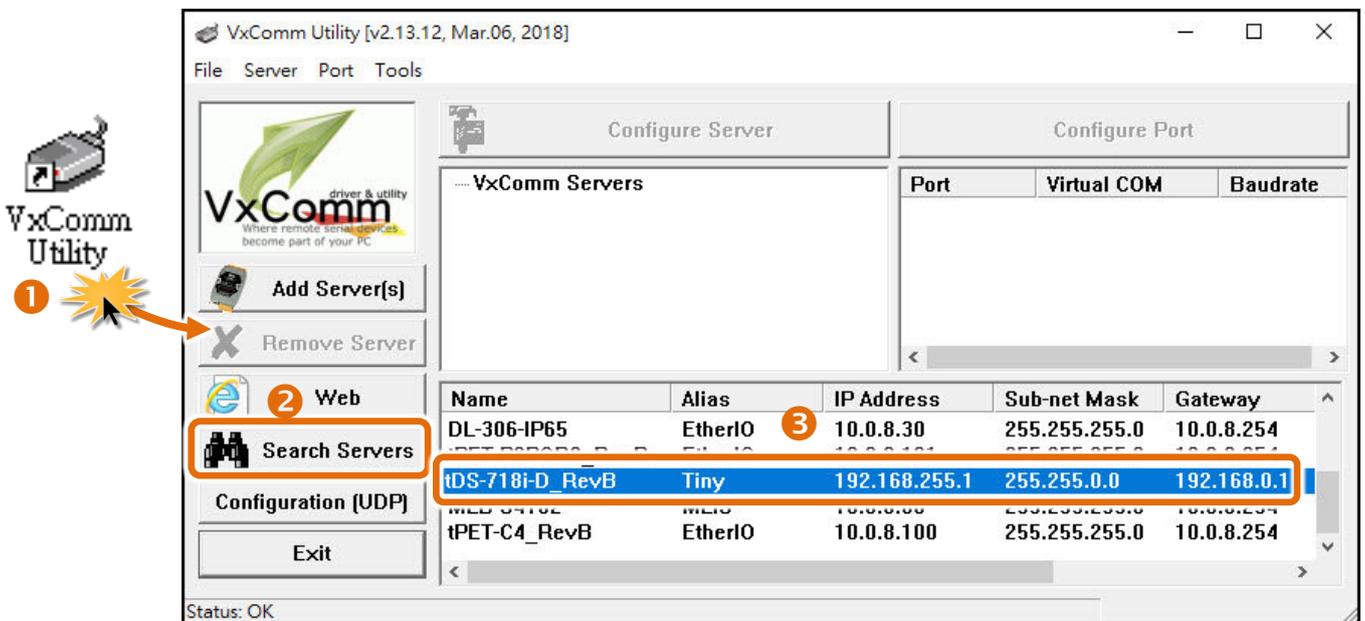

4. Enter the network settings information, including the **IP, Mask and Gateway addresses**, and then click “**OK**” button. The new settings for the tDS-700 will take effect within 2 seconds. If you don’t know the correct network configuration information, contact your Network Administrator to obtain the details.

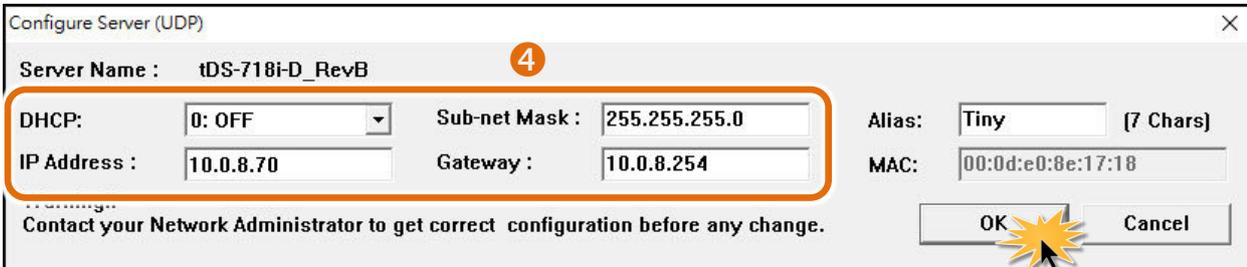


Factory Default Settings of tDS-700 Series Module:


IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

3.4 Configuring the Virtual COM Ports


1. Wait 2 seconds and then click the “**Search Servers**” button again to ensure that the tDS-700 is working correctly with the new configuration. **Note that the tDS-700 display name is “_RevB” for the M4 version module.**
2. Click the name of tDS-700 to select it.

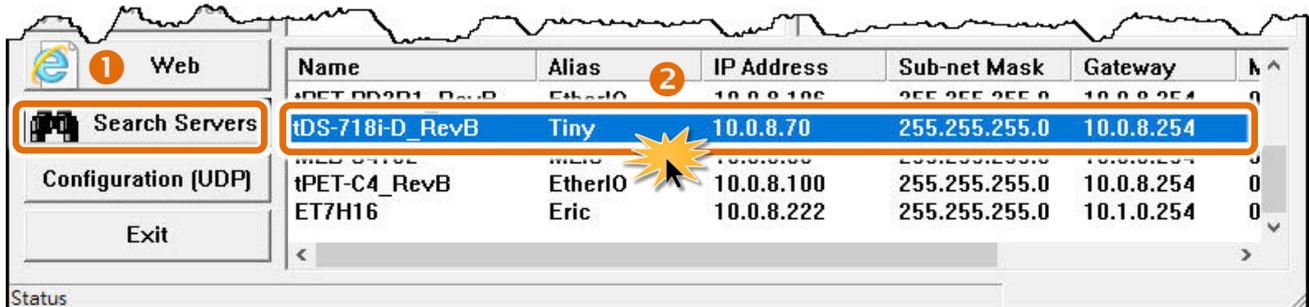


- 3. Click the “Add Server[s]” button.
- 4. Assign a COM Port number and click “OK” to save your settings.

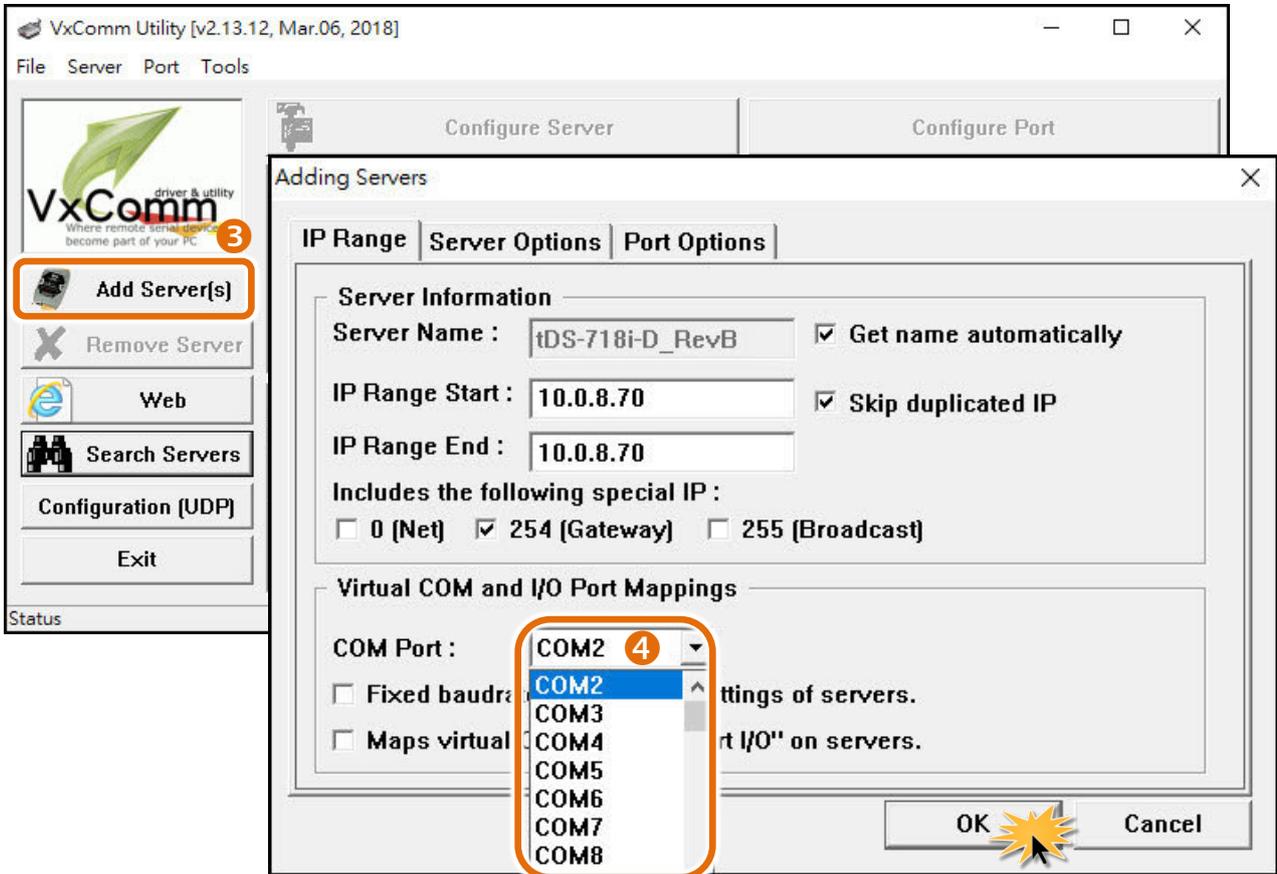

- 5. Click on tDS-700 name and check the virtual COM port mappings on the PC.

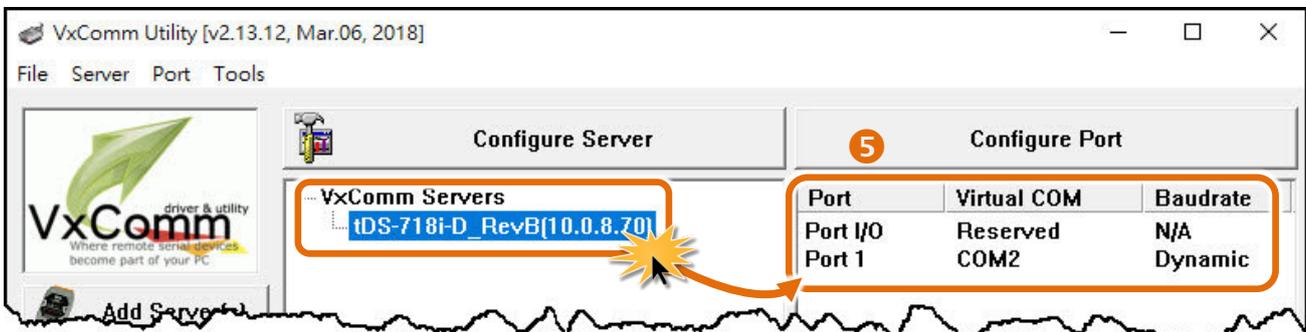


6. Click the “Restart Driver” item in the “Tools” menu to display the “VxComm Utility: Restarting Driver” dialog box.
7. Click the “Restart Driver” button.

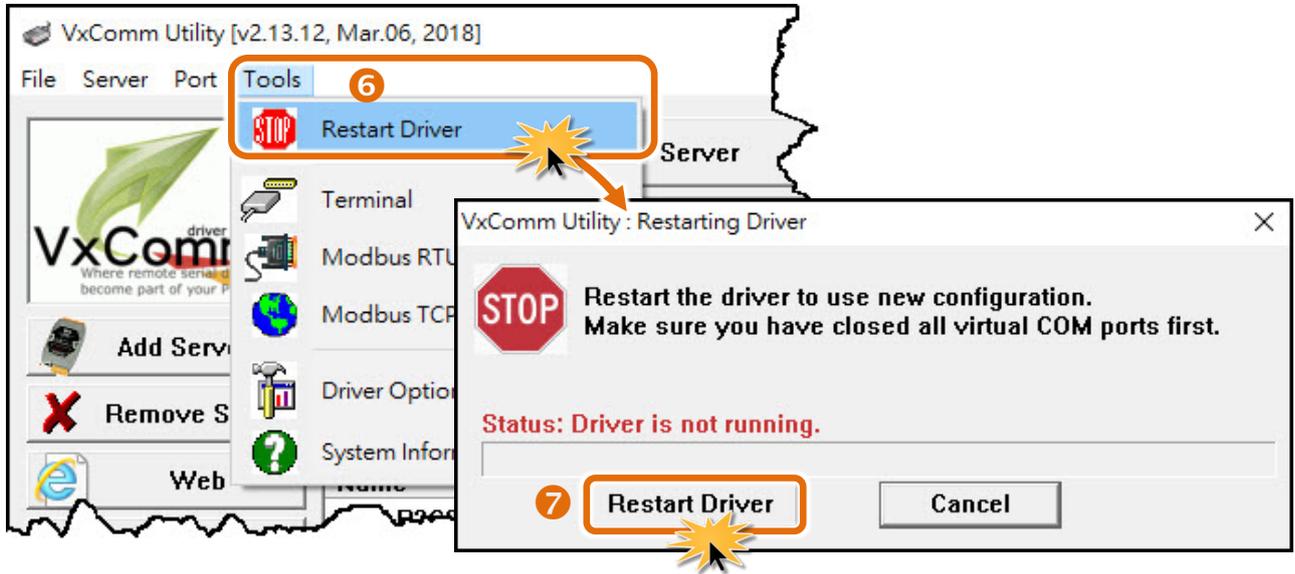


3.5 Configuring the Serial Port


1. Open a web browser, such as Google Chrome, Internet Explorer, or Firefox, and enter the URL for the tDS-700 module in the address bar of the browser, or click the “Web” button in the VxComm Utility.
2. When the login screen is displayed, enter the password (use the default password: **admin**) in the login password field, and then click the “Submit” button to enter the configuration web page.

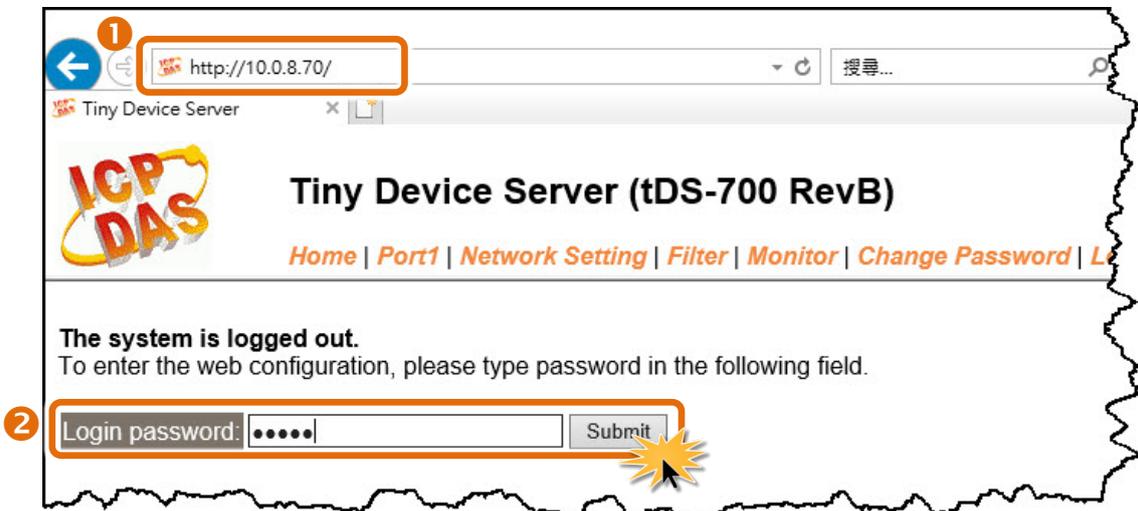

3. Click the “Port1” tab to display the Port1 Settings page.

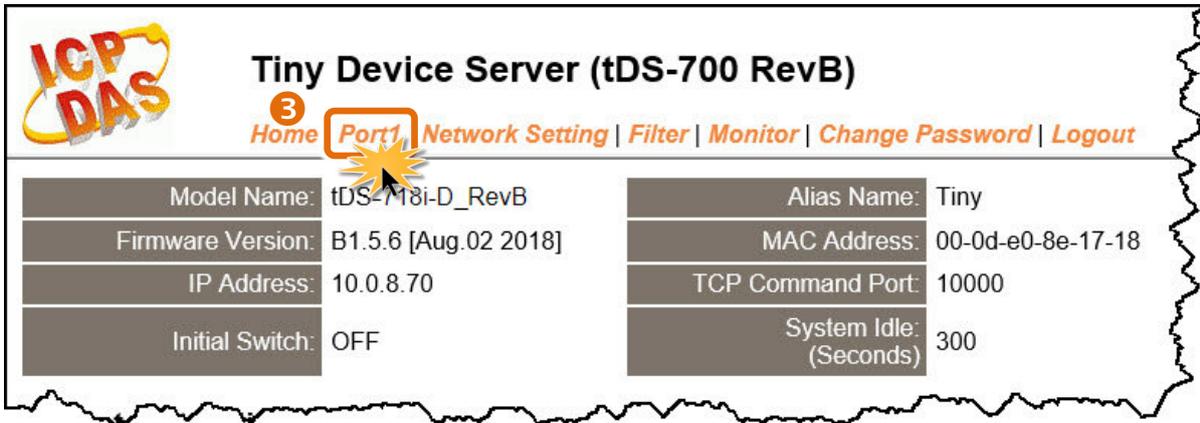


4. Set interface mode for the “Interface” drop down options. (For the tDS-718i-D module only, other tDS-700 module please skip this step) **Note:** The interface settings depends on wiring method of your device.
5. Select the appropriate Baud Rate and Data Format (e.g., 115200 and 8N1) from the relevant drop down options. **Note:** The Baud Rate and Data Format settings depends on your device.
6. Click “Submit” to save your settings.

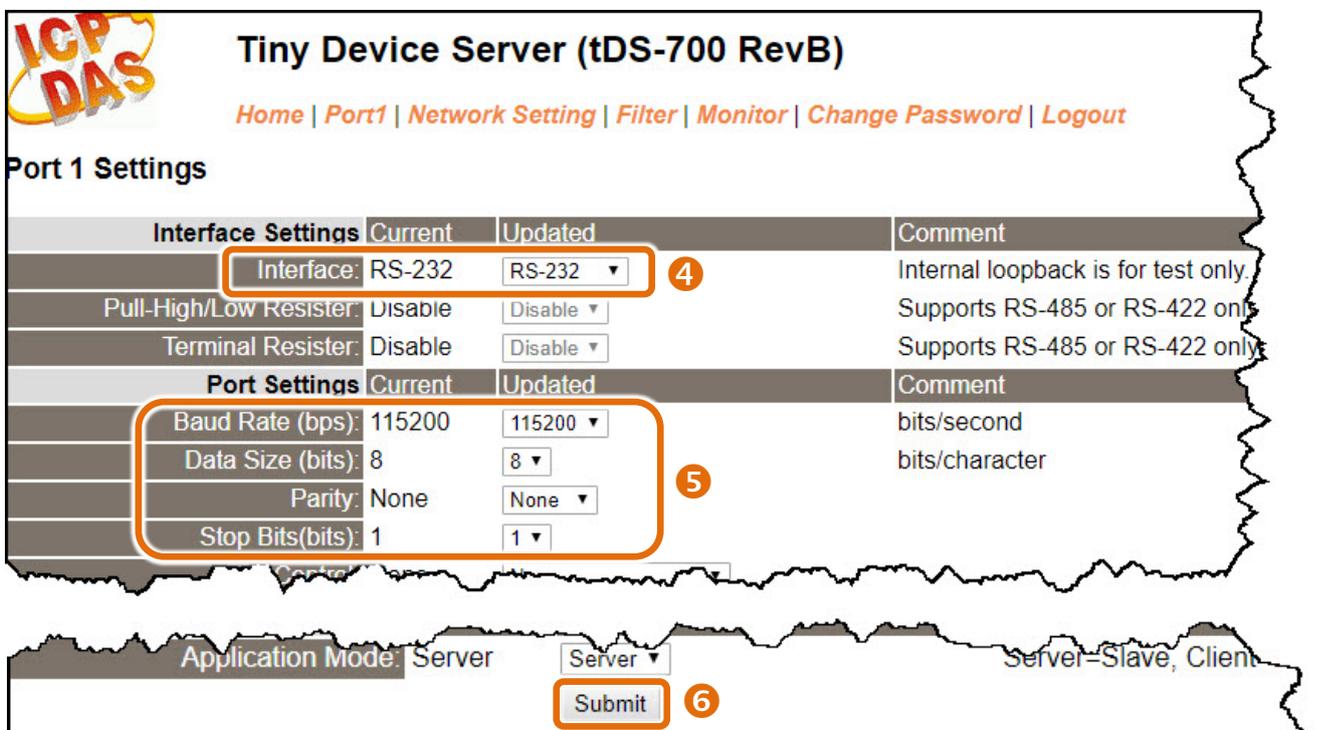


3.6 Testing Your tDS-700

1. Back to VxComm Utility, **Right click Port 1** and then choose the **“Open COM Port”** item.

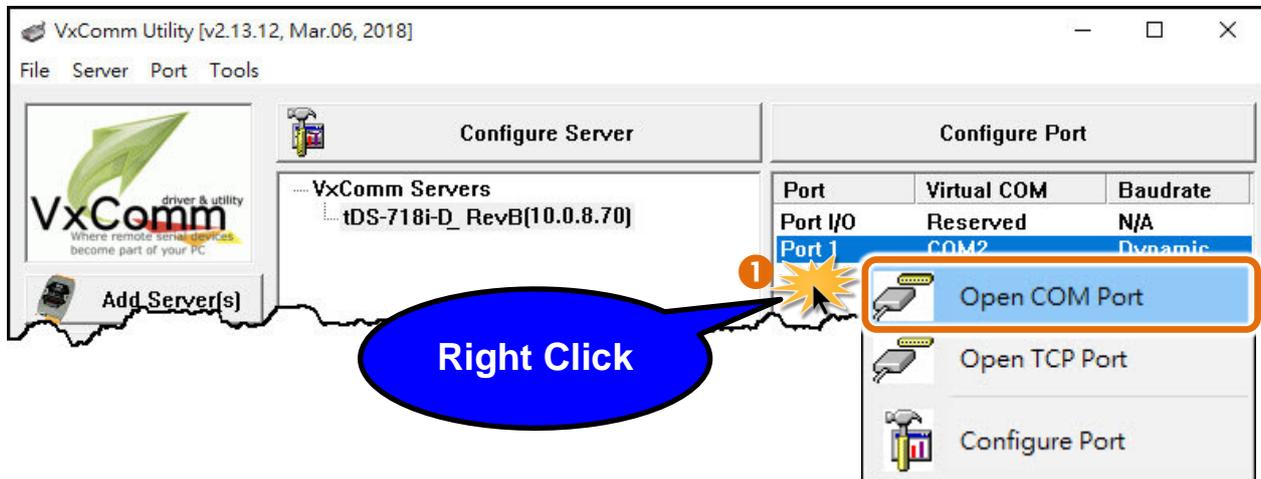


2. Check that the configuration of the COM Port is correct and then click the **“Open COM”** button.

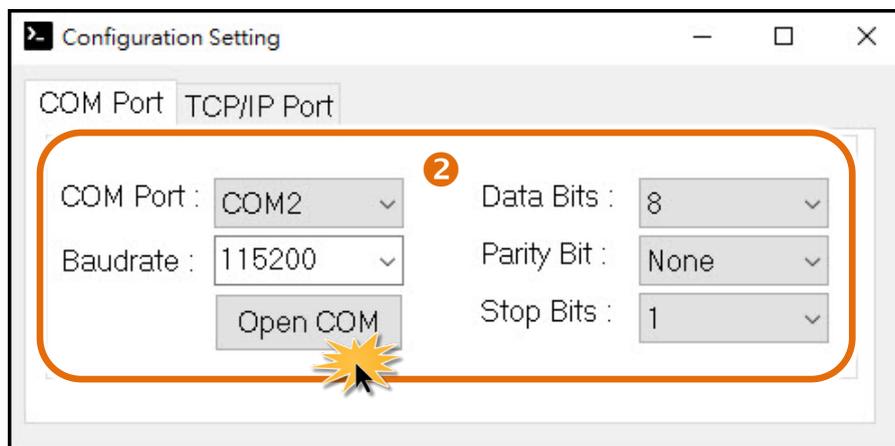


3. Type a string (e.g., \$01M) in the **“send”** field
4. Click the **“Hex/Text”** option in the **“Display”** section.
5. Click the **“Send”** button to send the message.
6. If a response is received, it will be displayed in the received field.

If the test is successful, then your COM port program should now be able to work with this Virtual COM Port.

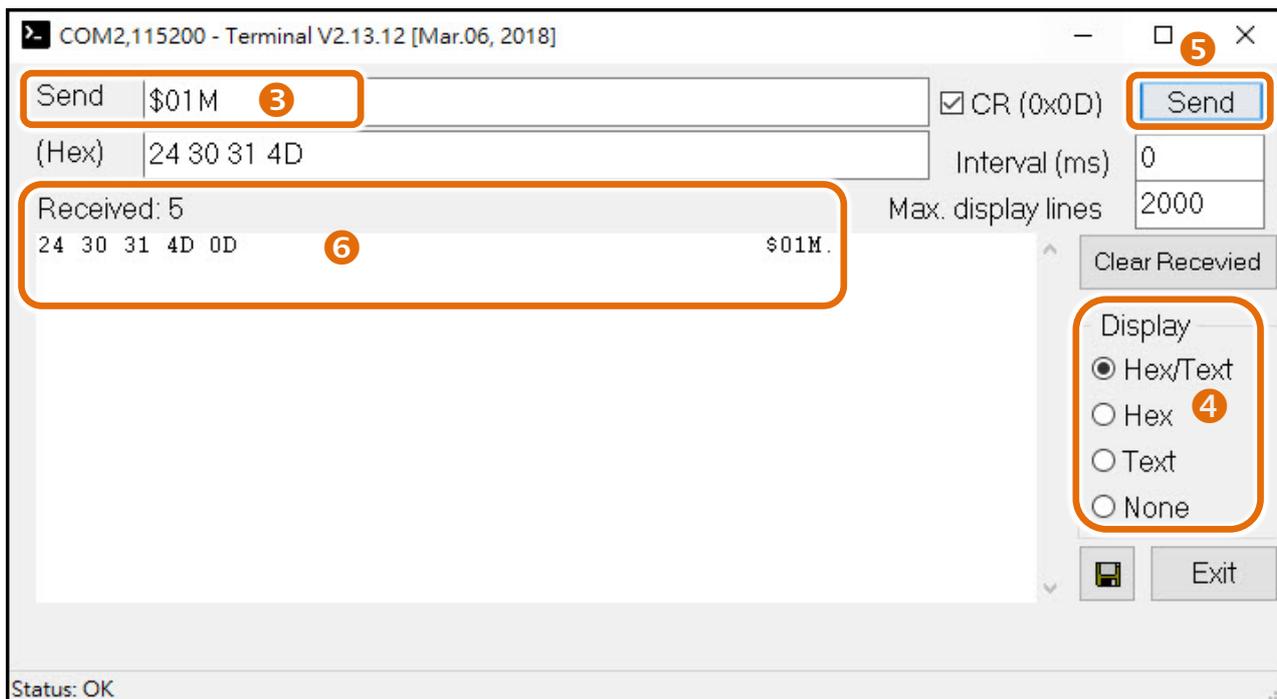

Note

While using RS-485 modules (e.g., tDS-715), open the first two COM Ports and use one (e.g., COM2) to send data to and the other (e.g., COM3) to receive data.

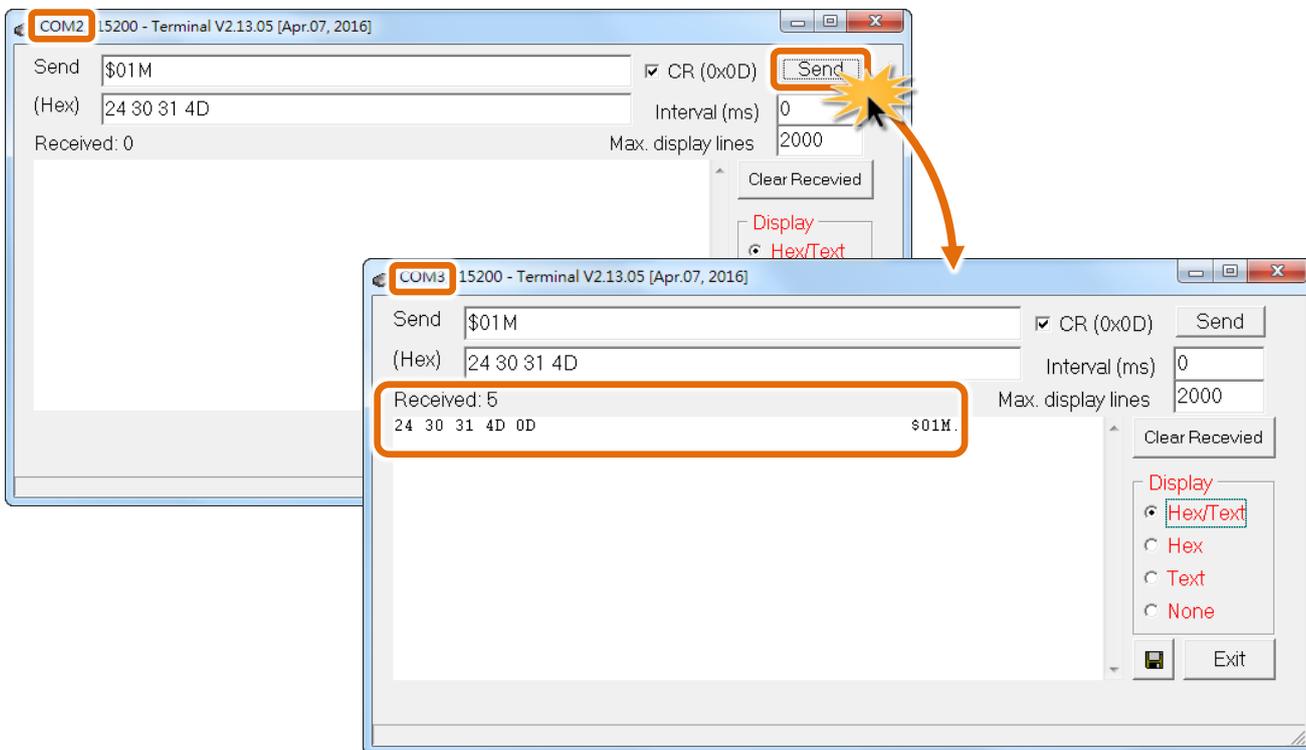

4. Web Configuration

Once the tDS-700 module has been correctly configured and is functioning on the network normally, the configuration details can be retrieved or modified using either the VxComm Utility or a standard web browser.

4.1 Logging in to the tDS-700 Web Server

The embedded tDS-700 series web server can be accessed from any computer that has an Internet connection.

Step 1: Open a new browser window.

Open a web browser, for example, Google Chrome, Firefox or Internet Explorer, which are reliable and popular Internet browsers that can be used to configure tDS-700 series module.




Internet Explorer

Note that if you intend to use Internet Explorer, ensure that the cache function is disabled in order to prevent browser access errors. Detailed instructions for how to do this can be found in [“FAQ: How to avoid a browser access error that causes a blank page to be displayed when using Internet Explorer”](#).


Step 2: Enter the URL for the tDS-700 web server

Ensure that you have correctly configured the network settings for the tDS-700 series module (refer to [Chapter 3 “Getting Started”](#) for detailed instructions), and then enter the URL for the tDS-700 web server in the address bar of the browser.

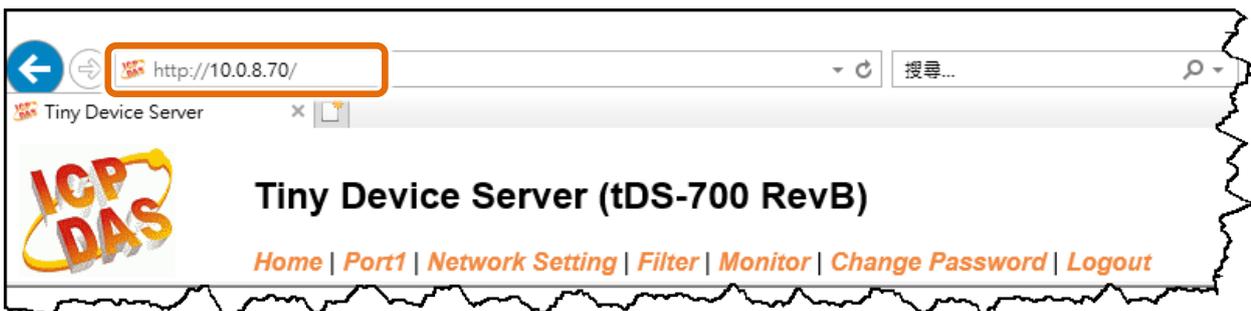


Step 3: Enter the Password

After the main login page is displayed, enter a password (the factory default password is “**admin**”), and then click the “**Submit**” button to continue.

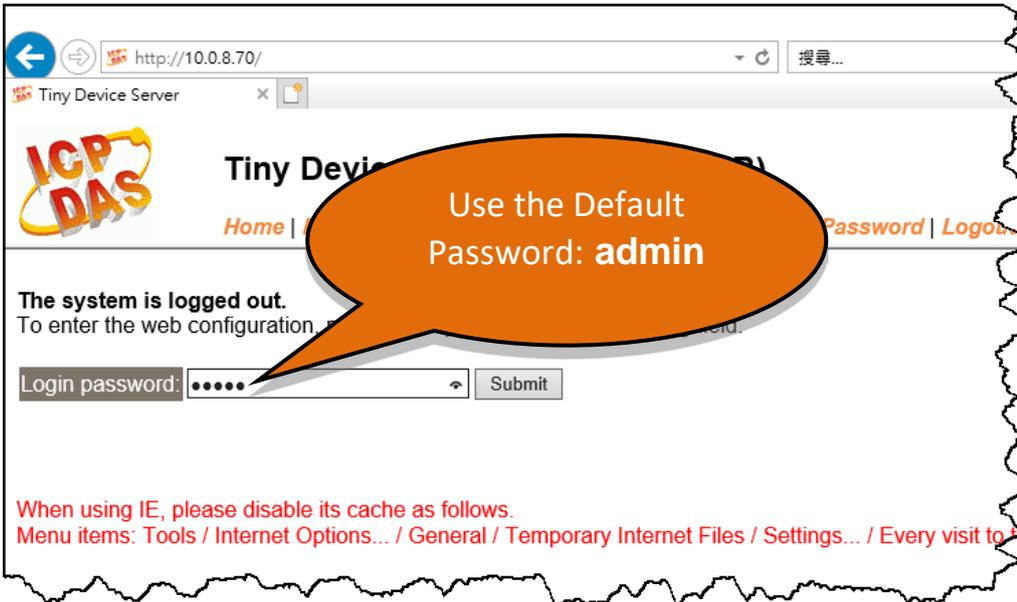


Step 4: Log in to the tDS-700 Web Server

After logging into the tDS-700 web server, the main page will be displayed.

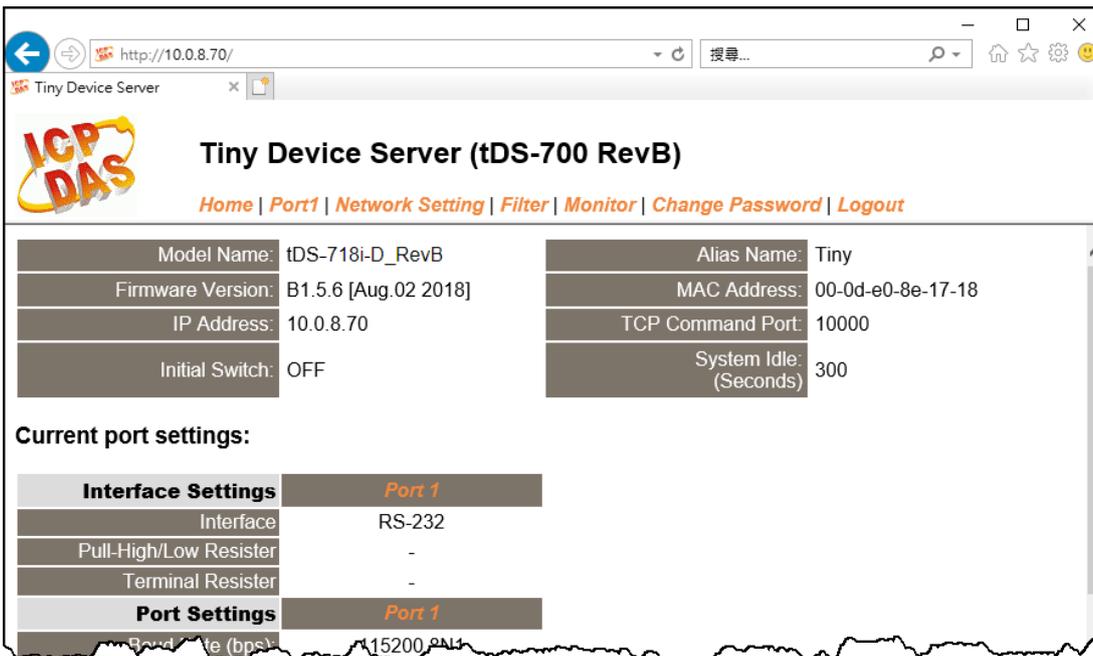

4.2 Home Page

The **Home** link connects to the main page, which contains two parts.

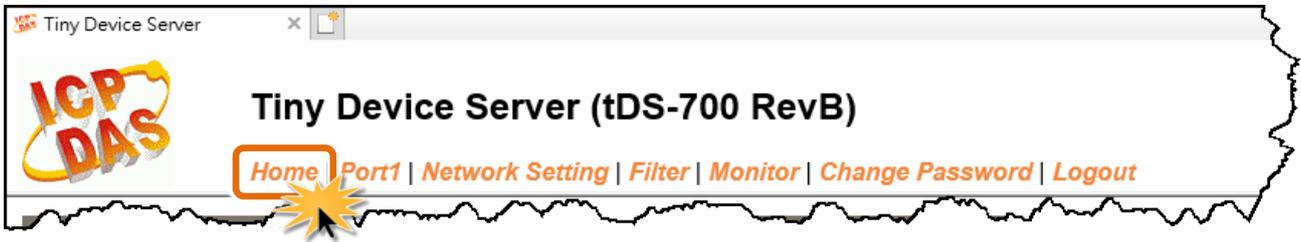


The first part of this page provides basic information about the tDS-700 hardware and software. The software and hardware information section includes information related to the Model Name, the current Firmware version, the IP Address, the current position of the Initial Switch, the Alias, the MAC Address, and the TCP Port, and the System Timeout values. **If you update the firmware for the tDS-700 module, this page can be used to check the version information** of the tDS-700 software.

Model Name:	tDS-718i-D_RevB	Alias Name:	Tiny
Firmware Version:	B1.5.6 [Aug.02 2018]	MAC Address:	00-0d-e0-8e-17-18
IP Address:	10.0.8.70	TCP Command Port:	10000
Initial Switch:	OFF	System Idle: (Seconds)	300

The lower section provides information related to the port settings and pair-connection settings.

Current port settings:	
Interface Settings	Port 1
Interface	RS-232
Pull-High/Low Resister	-
Terminal Resister	-
Port Settings	Port 1
Baud Rate (bps):	115200,8N1
Flow Control:	None
Allow Driver Control:	Enable
Local TCP Port:	10001
Connexion Idle (Seconds):	180
Prefix String	N/A
Serial Data Packing	Port 1
Slave Timeout (ms)	1000
Packing Length (bytes)	0
Serial Ending Chars: (Number[,char1][,char2])	0
Timeout Between Chars (ms)	10
Pair-Connection Settings (Client/Server Mode)	Port 1
Application Mode:	Server
Power to Server I/O:	Disable

4.3 Network Setting

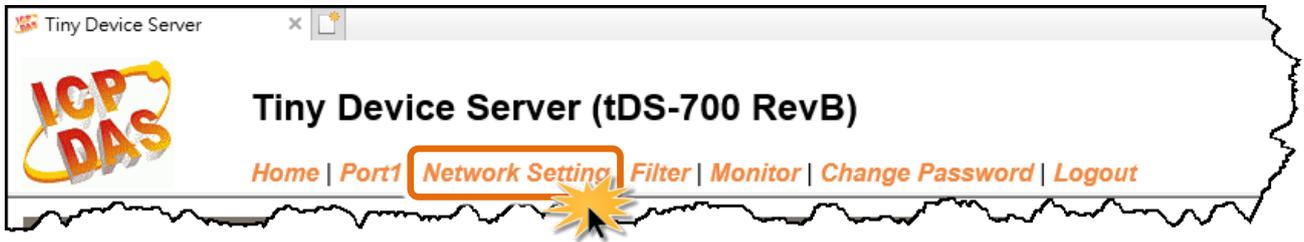

4.3.1 IP Address Settings

The **Address Type**, **Static IP Address**, **Subnet Mask** and **Default Gateway** values are the most important network settings and should always correspond to the LAN configuration. If they do not match, the tDS-700 module will not operate correctly. If the settings are changed while the module is operating, any connection currently in use will be lost and an error will occur.

IP Address Settings	
IP Address	
Address Type:	DHCP <input type="button" value="v"/>
Static IP Address:	10 . 0 . 8 . 70
Subnet Mask:	255 . 255 . 255 . 0
Default Gateway:	10 . 0 . 8 . 254
MAC Address:	00-0d-e0-8e-17-18 (Format: FF-FF-FF-FF-FF-FF)
Virtual COM	
TCP Command Port:	10000 (Default: 10000)
Command Port Timeout (Socket Watchdog)	180 (1 ~ 65535 seconds, 30=default, 0=disable)
<input type="button" value="Update Settings"/>	

A detailed description of the settings parameter is given the next page.

The following is an overview of the parameters contained in the **IP Address Settings** section:

Item	Description
IP Address	
Address Type	<p>Static IP: If no DHCP server is installed on the network, the network settings can be configured manually. Refer to Section “Manual Configuration” for more details.</p>
	<p>DHCP: The Dynamic Host Configuration Protocol (DHCP) is a network application protocol that automatically assigns an IP address to each device. Refer to Section “Dynamic Configuration” for more details.</p>
Static IP Address	<p>Each tDS-700 connected to the network must have its own unique IP address. This parameter is used to assign a specific IP address.</p>
Subnet Mask	<p>This parameter is used to assign the subnet mask for the tDS-700 device. The subnet mask indicates which portion of the IP address is used to identify the local network or subnet.</p>
Default Gateway	<p>This parameter is used to assign the IP Address of the Gateway to be used by the tDS-700. A Gateway (or router) is a device that is used to connect an individual network to one or more additional networks.</p>
MAC Address	<p>This parameter is used to set a user-defined MAC address, which must be in the format FF-FF-FF-FF-FF-FF.</p>
Virtual COM	
TCP Command Port	<p>This parameter is used to configure the TCP Command Port to a custom value depending on your requirement. Note that if the TCP Command Port configuration setting is completed, the TCP port of serial port will be change, as follows: COM1= TCP Command Port + 1 COM2= TCP Command Port + 2</p> <p>The default TCP Command Port is 10000, Thus, the serial COM port1/port2 is 10001/10002, and so on.</p>
Command Port Timeout (Socket Watchdog)	<p>If the command port does not receive any data from the TCP/IP socket for a certain period, the tDS-700 can disconnect the socket.</p> <p>Settings range value: 1 ~ 65535 (seconds); Default value: 30 (seconds); Disabled: 0;</p>
Update Settings	<p>Click this button to save the revised settings to the tDS-700.</p>

Manual Configuration

When using manual configuration, the network settings should be assigned in the following manner:

Step 1: Select the “Static IP” option from the “Address Type” drop-down menu.

Step 2: Enter the relevant details in the respective **network settings** fields.

Step 3: Click the “Update Settings” button to complete the configuration.

IP Address	
Address Type	Static IP 1
Static IP Address	10 . 0 . 8 . 70
Subnet Mask	255 . 255 . 255 . 0 2
Default Gateway	10 . 0 . 8 . 254
MAC Address:	00-0d-e0-8e-17-18 (Format: FF-FF-FF-FF-FF-FF)
Virtual COM	
TCP Command Port:	10000 (Default: 10000)
Command Port Timeout: (Socket Watchdog)	180 (1 ~ 65535 seconds, 30=default, 0=disable)
Update Settings 3	

Dynamic Configuration

Dynamic configuration is very easy to perform. If a DHCP server is connected to you network, a network address can be dynamically configured by using the following procedure:

Step 1: Select the “DHCP” option from the “Address Type” drop-down menu.

Step 2: Click the “Update Settings” button to complete the configuration.

IP Address	
Address Type	DHCP 1
Static IP Address:	10 . 0 . 8 . 70
Subnet Mask:	255 . 255 . 255 . 0
Default Gateway:	10 . 0 . 8 . 254
MAC Address:	00-0d-e0-8e-17-18 (Format: FF-FF-FF-FF-FF-FF)
Virtual COM	
TCP Command Port:	10000 (Default: 10000)
Command Port Timeout: (Socket Watchdog)	180 (1 ~ 65535 seconds, 30=default, 0=disable)
Update Settings 2	

4.3.2 General Settings

The General Settings provides functions allowing items such as the Alias Name, System Timeout value, UART Watchdog value, Auto-logout value, Debug Message and CGI Configuration to be configured.

General Settings	
Network	
Ethernet Speed:	Auto (Auto=10/100 Mbps Auto-negotiation)
HTTP port	80 (Default= 80)
System Idle:	300 (30 ~ 65535 seconds, 300=default, 0=disable) Action=Reboot
Web Auto-logout:	10 (1 ~ 255 minutes, 10=default, 0=disable)
CGI Configuration:	Enable (Enable/Disable the assign.cgi, Enable=default.)
UDP Configuration:	Enable (Enable/Disable the UDP Configuration, Enable=default.)
UDP Alarm	
Alarm IP Address(UDP):	255 . 255 . 255 . 255
Alarm Port(UDP):	54300
Misc.	
Alias Name:	Tiny (Max. 18 chars)
UART Watchdog:	Tx:0 Rx:0 (30 ~ 65535 seconds, 0=default=disable) Action=Reboot
Debug Message(UDP):	20 (1 ~ 255 seconds, 20=default, 0=disable)
Update Settings	

The following is an overview of the parameters contained in the **General Settings** section:

Item	Description	Default
Network		
Ethernet Speed	This parameter is used to set the Ethernet speed. The default value is Auto (Auto = 10/100 Mbps Auto-negotiation).	Auto
HTTP Port	This parameter is used to assign specific a HTTP port of tDS-700. The tDS-700 needs to be restarted when the HTTP port is changed. You need manually type the new HTTP port in the address bar of the browser. The default is 80. For example: if the HTTP port is set to 81, then enter the "IP address:HTTP port" (10.0.8.123:81).	80


Item	Description	Default
System Idle (Network Watchdog)	<p>This parameter is used to configure the system timeout value. If there is no activity on the network for a specific period of time, the system will be rebooted based on the configured system timeout value.</p> <p>Timeout value range: 30 to 65535 (seconds); Disable = 0.</p>	300
Web Auto-logout	<p>This parameter is used to configure the automatic logout value. If there is no activity on the web server for a certain period of time, the current user account will be automatically logged out.</p> <p>Range: 1 to 65535 (minutes); Disable = 0.</p>	10
CGI Configuration	<p>The tDS-700 can be configured by CGI command. For detailed CGI command and configuration information, refer to Chapter 6 "CGI Configuration"</p> <p>Enable/Disable the assign.cgi.</p>	Enable
UDP Configuration	<p>This parameter is used to enable or disable UDP configuration function.</p>	Enable
UDP Alarm		
Alarm IP Address (UDP)	<p>The tDS-700 can send and UDP package (include alarm message) to specified network location (Alarm IP Address/Port).</p>	
Alarm Port (UDP)		
Misc.		
Alias Name	<p>This parameter is used to assign an alias for each tDS-700 device to assist with easy identification.</p>	Tiny
UART Watchdog	<p>If the serial port does not communication occurs for a certain period, the system will be rebooted based on the UART Watchdog value.</p> <p>Settings range: 30 ~ 65535 (seconds); Disable: 0.</p>	0
Debug Message(UDP)	Reserved.	20
Update Settings	Click this button to save the revised settings to the tDS-700.	

4.3.3 Restore Factory Defaults

Use the following procedure to reset all parameters to their original factory default settings:

- Step 1:** Click the “Restore Defaults” button to reset the configuration.
- Step 2:** Click the “OK” button in the message dialog box.
- Step 3:** Check whether the module has been reset to the original factory default settings for use with the VxComm Utility. Refer to [Chapter 3 “Getting Started”](#) for more details.

Restore Factory Defaults

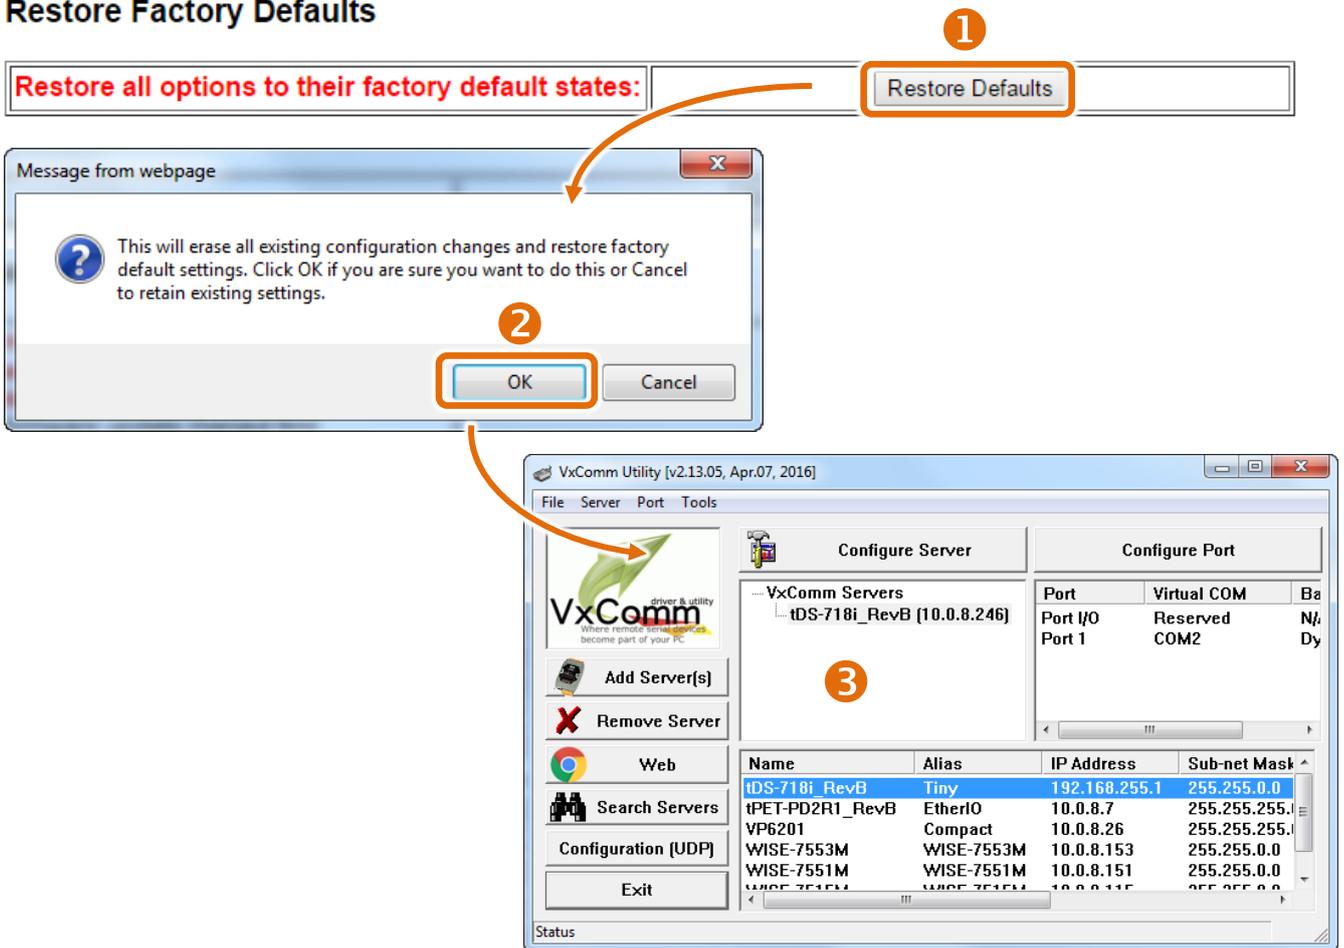

The following is an overview of the factory default settings:

Factory Default Settings			
Network Settings		Basic Settings	
IP Address	192.168.255.1	Alias	Tiny
Gateway Address	192.168.0.1		
Subnet Mask	255.255.0.0		
DHCP	Disabled		

The **Forced Reboot** function: can be used to force the tDS-700 to reboot or to remotely reboot the device. After the tDS-700 module has rebooted, the original login screen will be displayed requesting that you enter your Login Password before continuing.




4.3.4 Remote Firmware Update

Remote Firmware Update

If the remote firmware update is failed, then the traditional firmware update (on-site) is required to make the module working again.
Step 1: Refer to firmware update manual first.
Step 2: Run eSearch Utility to prepare and wait for update.
Step 3: Click the [Update] button to **reboot** the module and start update.
Step 4: Configure the module again.

Update

Firmware update requires initialization and local network operations. Traditional firmware update requires adjusting the Init/Run Switch and reboots the module manually for the initialization of firmware update, while new firmware allows user to initialize the module via web interface without adjusting the hardware switch. Initialization via web is useful when module is installed in remote site and can be accessed by a remote PC via TeamViewer.

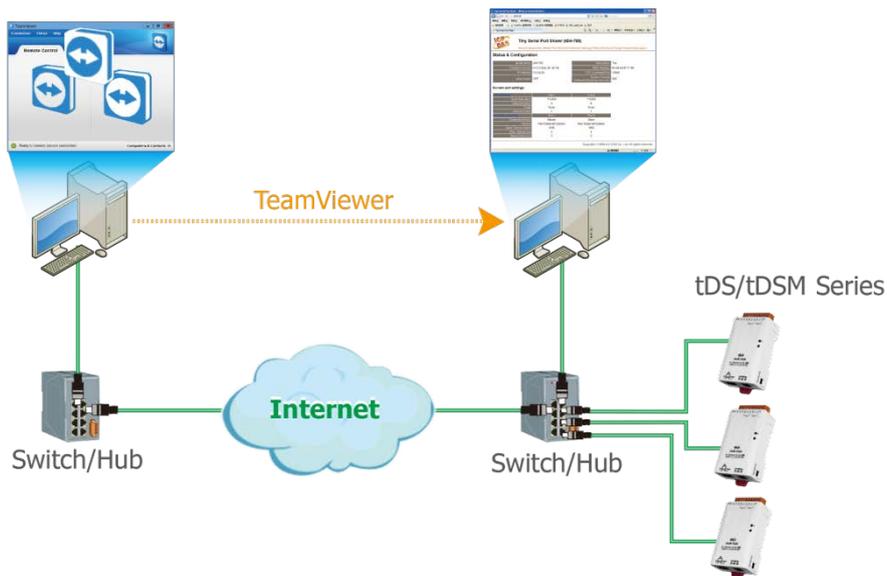


Note:

If the remote firmware update is failed, then the traditional firmware update (Local) is required to make the module working again.

For detailed information regarding how to use this function to update the Firmware for tDS-700 series module, refer to the **tDS_Firmware_v138_and_later_Update_vxxx_en.pdf**. The download address is shown below:

 <http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tds-700/firmware/>

4.4 Serial Port Page

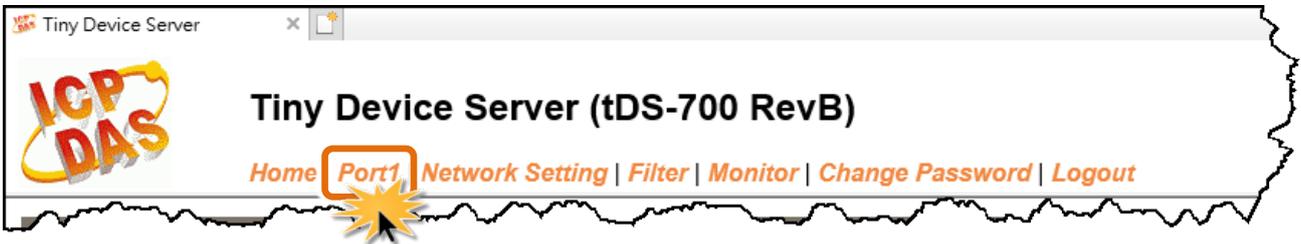

The **Port 1 Settings** section provides functions allowing items such as port settings, serial data packing and pair-connection settings to be configured.

4.4.1 Port1 Settings

Port 1 Settings			
Interface Settings	Current	Updated	Comment
Interface:	RS-232	<input type="text" value="RS-232"/>	Internal loopback is for test only.
Pull-High/Low Resister:	Disable	<input type="text" value="Disable"/>	Supports RS-485 or RS-422 only.
Terminal Resister:	Disable	<input type="text" value="Disable"/>	Supports RS-485 or RS-422 only.
Port Settings	Current	Updated	Comment
Baud Rate (bps):	115200	<input type="text" value="115200"/>	bits/second
Data Size (bits):	8	<input type="text" value="8"/>	bits/character
Parity:	None	<input type="text" value="None"/>	
Stop Bits(bits):	1	<input type="text" value="1"/>	
Flow Control:	None	<input type="text" value="None"/>	
Allow Driver Control:	Enable	<input type="text" value="Enable"/>	
Operation Mode:	0	<input type="text" value="0"/>	0=Data-sharing, 1=Non-sharing
Local TCP Port:	10001	<input type="text" value="10001"/>	=TCP Command Port +1
Connexion Idle (seconds):	180	<input type="text" value="180"/>	1 ~ 65535, 180=default, 0=disable
Prefix String:	N/A	<input type="text" value="N/A"/>	Max. 7 chars
Serial Data Packing	Current	Updated	Comment
Slave Timeout (ms):	1000	<input type="text" value="1000"/>	After last TX
Packing Length (bytes):	0	<input type="text" value="0"/>	0 ~ 1024, 0=default=disable
Serial Ending Chars: (Number[,char1][,char2])	0	<input type="text" value="0"/>	e.g.: 2,0x0D,0x0A
Timeout Between Chars (ms):	10	<input type="text" value="10"/>	After last RX 10 ~ 65535, 10=default, 0=disable
Pair-Connection Settings (Client/Server Mode)	Current	Updated	Comment
Application Mode:	Server	<input type="text" value="Server"/>	Server=Slave, Client=Master
		<input type="button" value="Submit"/>	

A detailed description of the settings parameter is given the next page.

The following is an overview of the parameters contained in the **Port1 Settings** section:


Item	Description	Default
Interface Settings		
Interface	This parameter is used to set the interface mode (Loopback, RS-232, RS-422 or RS-485) of serial port for the tDS-718i-D only . Loopback: the internal loopback is used to self-testing.	RS-232
Pull-High/Low Resister	This parameter is used to enable or disable pull-high/low resister for RS-485 or RS-422 of the tDS-718i-D only (1K Ohm) .	Disable
Terminal Resister	This parameter is used to enable or disable terminal resister for RS-485 or RS-422 of t the tDS-718i-D only (120 Ohm) .	Disable
Port Settings		
Baud Rate (bps)	This parameter is used to set the Baud Rate for the COM ports.	115200
Data Size (bits)	This parameter is used to set the Data Size for the COM ports.	8
Parity	This parameter is used to set the Parity for the COM ports.	None
Stop Bits (bits)	This parameter is used to set the Stop Bits for the COM ports.	1
Flow Control	This parameter is used to set the Flow Control for the COM ports.	None
Allow Driver Control	Enable client (VxComm Driver) to dynamically change the data format and baud rate settings.	Enable
Operation Mode	M0/Multi-echo: Share received serial data between clients. M1/Single-echo: Send received serial data to the requested client only. 0 = Data-sharing; 1 = Non-sharing	0
Local TCP Port	TCP Command Port +1 Note: COM1/COM2/COM3 = TCP port 10001/10002/10003	10001
Connection Idle (seconds)	If the Local TCP port does not receive any data via the TCP/IP for a certain period, the tDS-700 will disconnect the socket based on the TCP timeout value. Settings range: 1 ~ 65535 (seconds); Disabled: 0;	180
Prefix String	This parameter is used to set the first character in a line of data. Settings range: Max. 8 chars.	

Item	Description		Default
Serial Data Packing			
Slave Timeout (ms)	Set the waiting time after last Tx of the request sent to the device. If the device does not respond within the timeout value, the tDS-700 will return existing data via TCP package and process next request.		1000
Packing Length (bytes)	When the input serial data length reaches to the value, it will be sent out. Settings range: 0 ~ 1024; Disabled: 0.		0
Serial Ending Chars (Number[,char1][,char2])	The tDS-700 outputs an Ethernet packet immediately after the ending-chars pattern is identified from the incoming serial data. The number of ending-chars can be 0 (disabled), 1 or 2 chars. Disabled=0; 1 char: 1,0x0D ; 2 chars: 2,0x0D,0x0A		0
Timeout Between Chars (ms)	Set the waiting time after Rx of the response sent from the device. If the device does not respond within the timeout value, the tDS-700 will process this response. Settings range: 10 ~ 65535; Disabled: 0.		10
Pair-Connection Settings (Client/Server Mode)			
Application Mode	Server	Client	
Remote Server IP	-	IP address of the remote device	
Remote TCP Port	-	TCP Port number of the remote device	
Submit	Click this button to save the revised settings to the tDS-700.		

Note

For more detailed information regarding pair-connection applications settings, refer to [Section 5.4 "Pair-Connection Applications"](#).

4.5 Filter Page

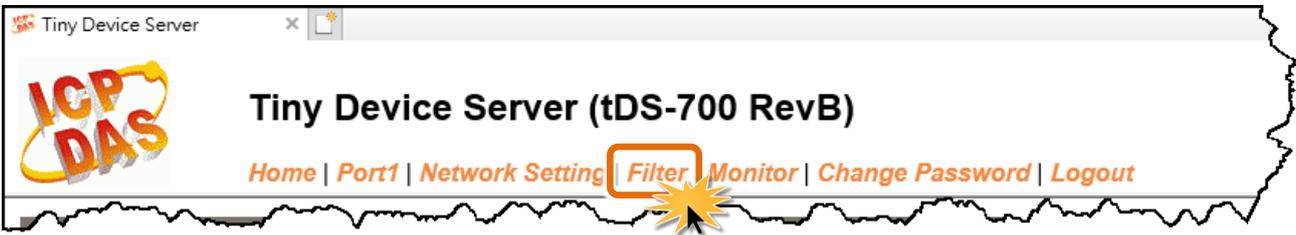

4.5.1 Accessible IP (filter is disabled when all zero)

The Accessible IP Settings section is used to query or edit the IP Filter List. The IP Filter List restricts the access of packets based on the IP header. If one or more IP address are saved to the IP Filter table, only clients whose IP is specified in the IP Filter List can access the tDS-700.

Accessible IP (filter is disabled when all zero):

IP Filter List	IP Address
IP0:	0.0.0.0
IP1:	0.0.0.0
IP2:	0.0.0.0
IP3:	0.0.0.0
IP4:	0.0.0.0

Add . . . To The List
 Add Range . . . & Mask: . . .
 Delete IP# (Number: 0 ~ 4)
 Delete ALL
 Save Configuration (finish)


submit

Note: Remember to include the IP address of your configuration computer.

The following is an overview of the parameters contained in the Filter Settings (white list) section:

Item	Description
Add "IP" To The List	Add an IP address to the IP Filter List.
Add Range "IP"& Mask "IP"	Add an IP address range to the IP Filter List.
Delete IP# "Number"	Delete a specific IP# address from the IP Filter List. (Number: 0 ~ 4)
Delete All	Delete all items from the IP Filter List.
Save Configuration (finish)	Save a new IP Filter List to the Flash memory.
Submit	Click this button to save the revised settings to the tDS-700.

4.6 Monitor Page

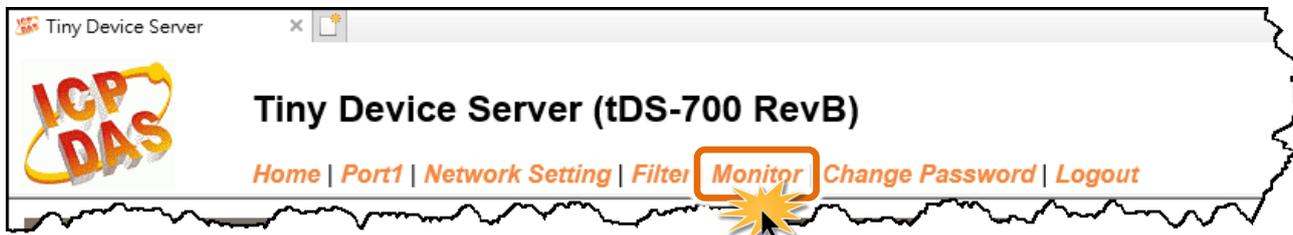

After clicking the **Monitor** tab, the Current Connection Status page will be displayed showing detailed information regarding the current status of the serial port connection settings for the tDS-700 module.

Current Status(Socket):


Port Number	Port 1
Application Mode:	Server
Connected IP1:	0.0.0.0
IP2:	0.0.0.0
IP3:	0.0.0.0
IP4:	0.0.0.0

Note: Multi-connection may be used in light-loading communications only, not for heavy-loading.

Current Status(UART):

Port Number	Port 1
Last Tx Count (bytes):	0
Last Rx Count (bytes):	0
Total Tx Count (bytes):	0
Total Rx Count (bytes):	0

4.7 Change Password

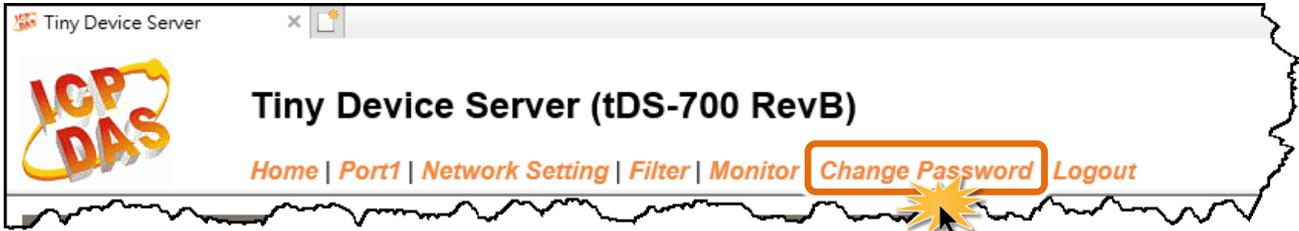


After clicking the **Password** tab, the **Change Password** page will be displayed. To change a password, first enter the old password in the “**Current password**” field (use the default password “**admin**”) and then enter a new password in the “**New password**” field. Re-enter the new password in the “**Confirm new password**” field, and then click the “**Submit**” button to update the password.

A screenshot of the "Change Password" web form. The title "Change Password" is at the top left. Below it is a note: "The length of the password is 12 characters maximum." The form contains three input fields: "Current password:" with five dots, "New password:" with four dots, and "Confirm new password:" with four dots and a small eye icon to its right. A "Submit" button is located to the right of the "Confirm new password" field.


Note

If you forgot password, please refer to [Section A1. How do I restore the web password for the module to the factory default password?](#)

4.8 Logout Page

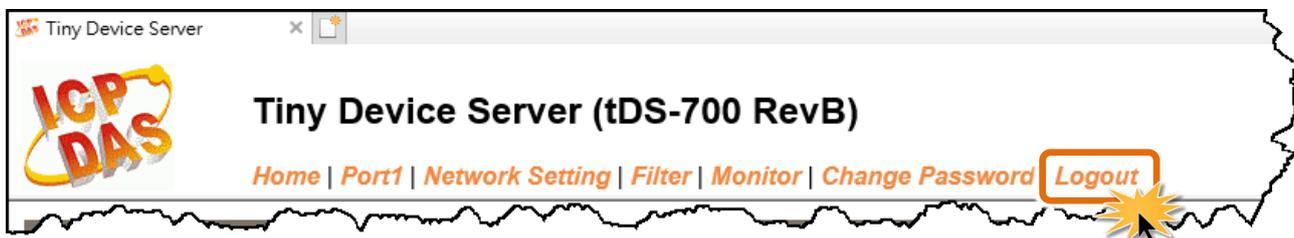


After clicking the **Logout** tab, you will be immediately logged out from the system and be returned to the login page.

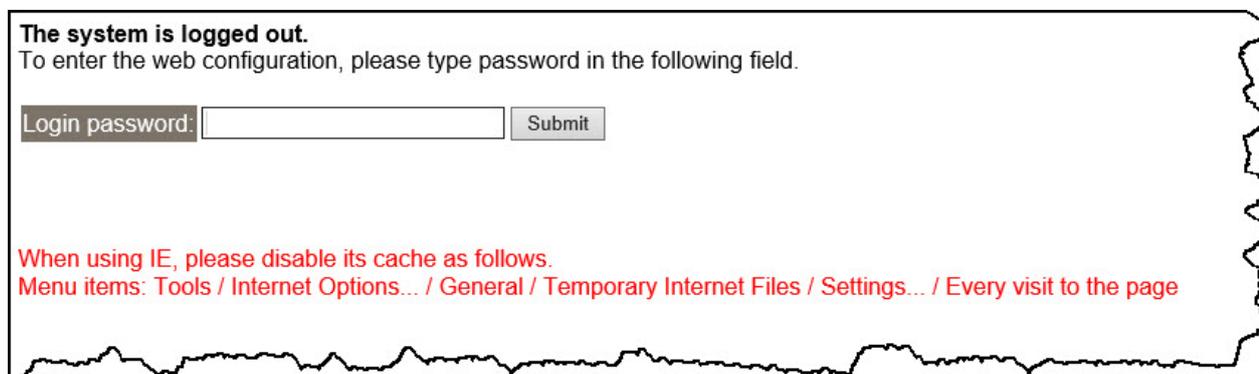


5. Typical Applications

This chapter provides some examples of typical scenarios for the tDS-700 module, including applications focused on the Virtual COM, Direct Socket Connection, Ethernet I/O, Pair-connection and TCP Client Mode, etc...

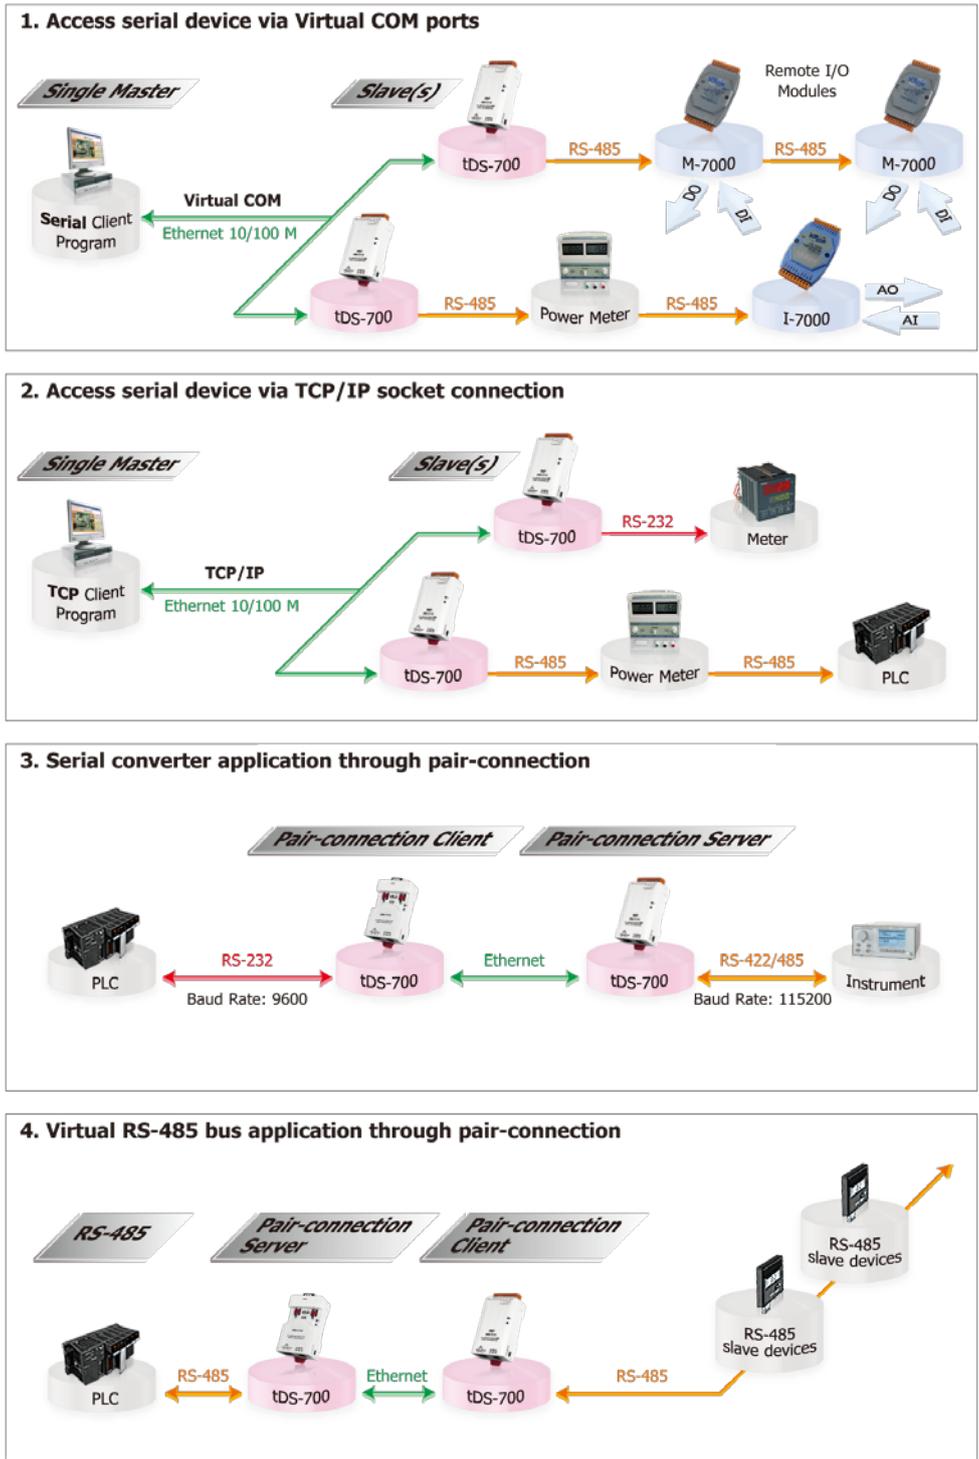


5.1 Virtual COM Application

The tDS-700 series is designed to link RS-232/422/485 devices to an Ethernet network. The VxComm utility allows the built-in tDS-700 COM Port to be virtualized to a standard COM Port of a host PC, as shown below:

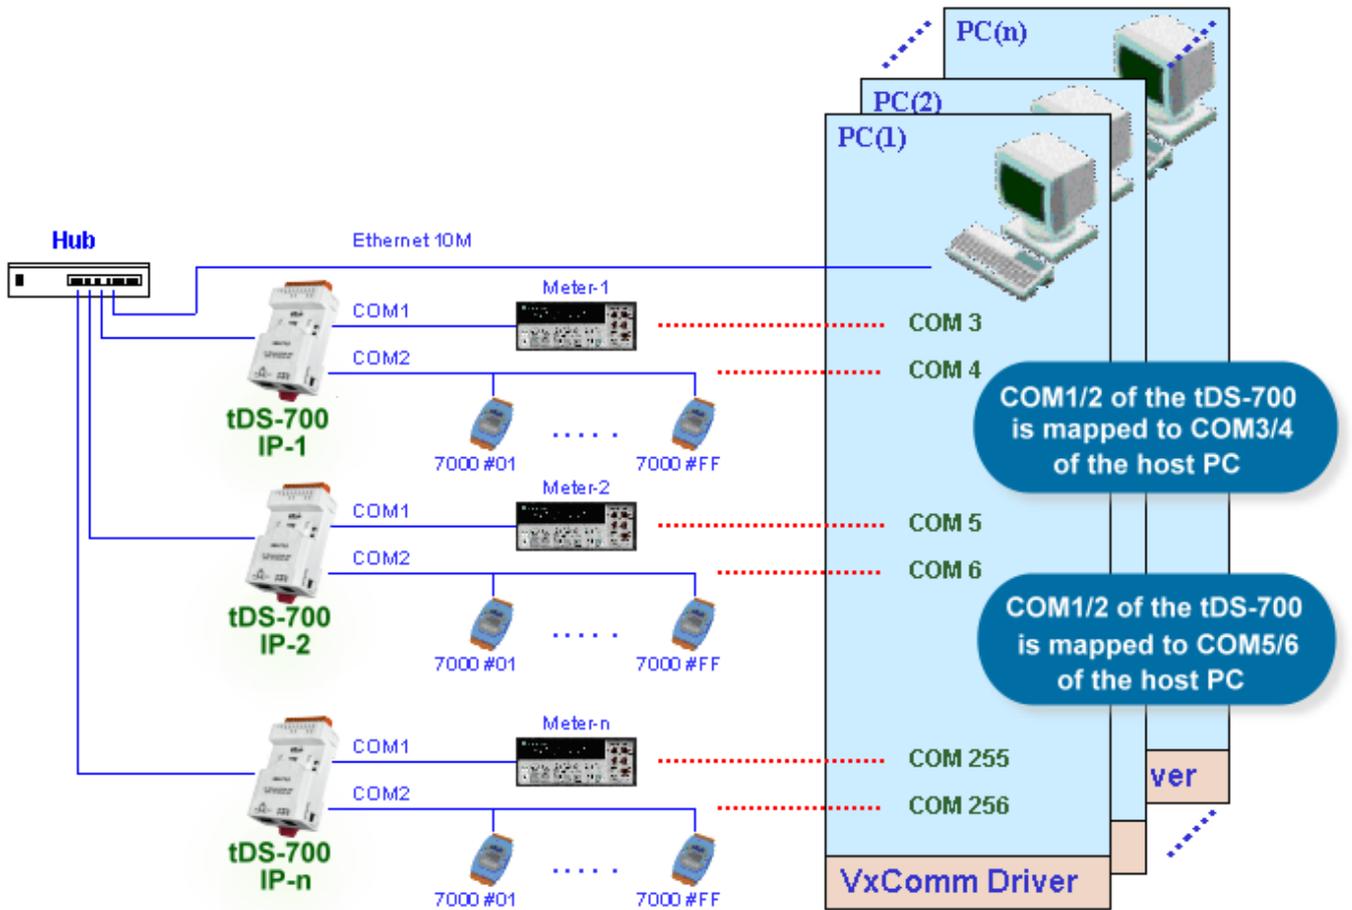

In the configuration above, Meter-1 is virtualized to link to COM3 of the host PC. Therefore, a program originally designed for the MS-COMM standard can access the meter without the need for any modification.

5.2 Direct Socket Connection Applications

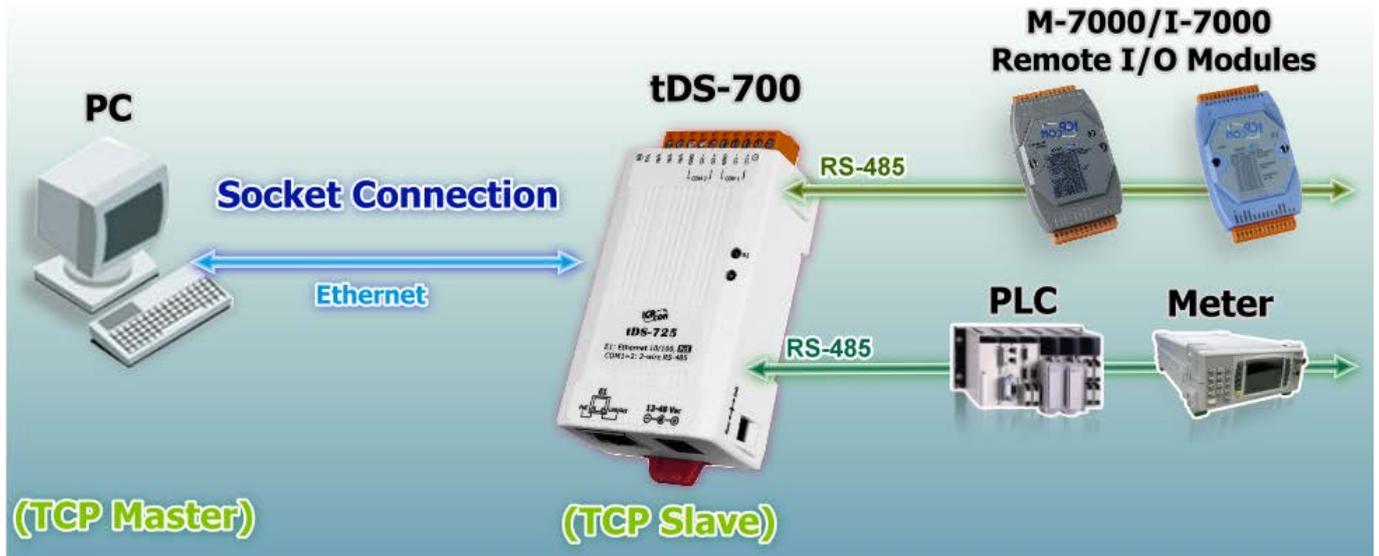

tDS-700 series module can accept the TCP connection (include raw data) directly, it also can communicate with TCP client and Serial Device in this way.

For examples of socket connection test as follows:




1. Confirm that the tDS-700 modules are functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details.
2. Wire the slave device (e.g., M-7015, optional) with your tDS-700. For detailed RS-422/485 wiring information, refer to [Section 2.6 “Wiring Notes for RS-232/485/422 Interfaces”](#).
3. Supply power to the slave device (e.g., M-7015, Device ID: 2, +10 to +30 V_{DC} power used.)
4. Install VxComm utility, and then configuration Ethernet setting (such as IP/Mask/Gateway details) for tDS-700 series module; refer to [Chapter 3 “Getting Started”](#).
5. Confirm the serial port settings (Baud Rate and Data Format) must be the same between the tDS-700 and slave device (e.g., M-7015).


For example:

Model	Port Settings		TCP Port
	Baud Rate	Data Format	
tDS-700	9600	8,N,1	10001
Slave Device (M-7015)	9600	8,N,1	-


6. Right click in the **Port-List panel** and then choose the **“Open TCP Port”** item under the VxComm utility.

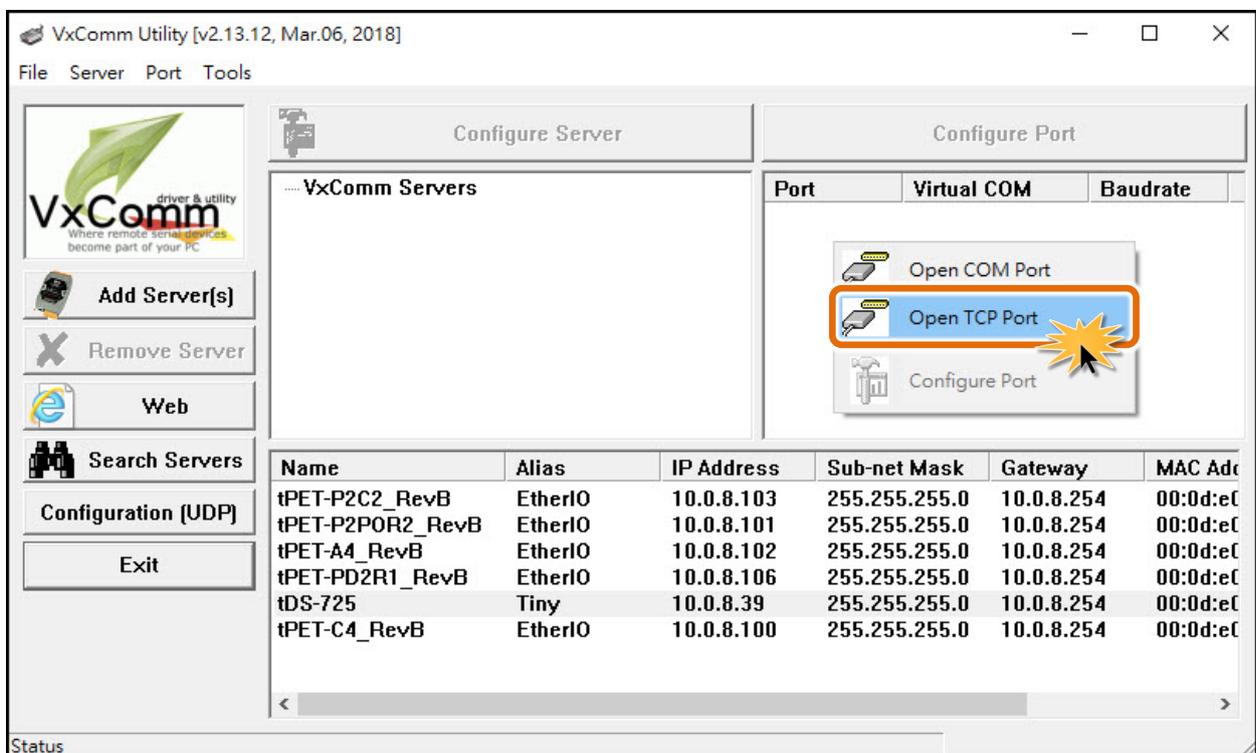

- 7. Type the **IP address of tDS-700** in the IP Address field and assign a **TCP/IP port of tDS-700**, and then click the **“Open TCP”** button.

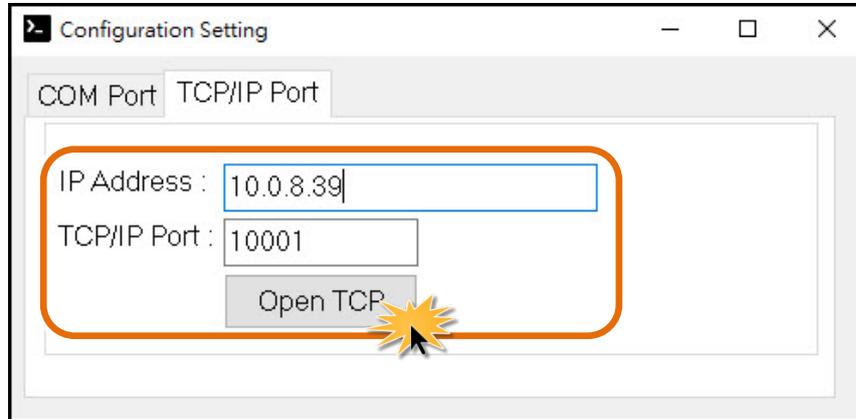

- 8. Type a string (e.g., \$02M) in the **“Send”** field and then click the **“Send”** button. If a response is received, it will be displayed in the received field.

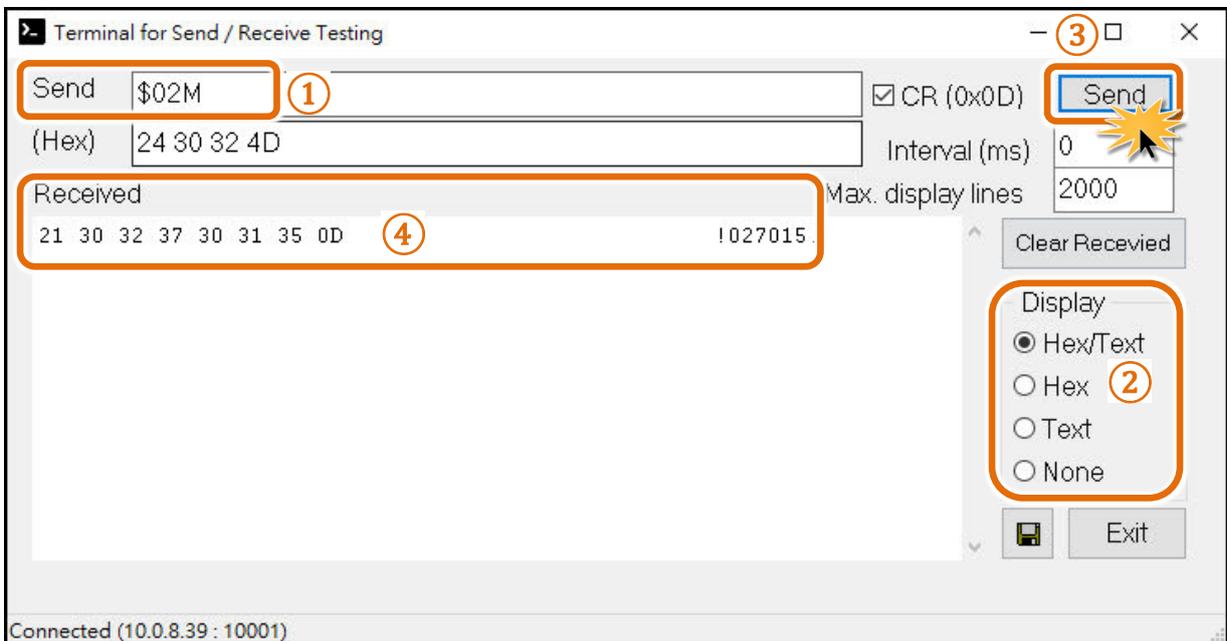

5.3 Ethernet I/O Applications


Linking to I-7000 series modules

The I-7000 series provides a variety of I/O operations, such as D/I, D/O, A/D, D/A, Counter and Frequency Measurement, etc. The I-7000 series was originally designed to be used with RS-485 networks, so the RS-485 of COM on the tDS-700 can be used to link to I-7000 series modules.


By using VxComm technology, programs that support serial devices on the host PC can be upgraded from an RS-485 network to an Ethernet network without requiring any modifications to the program.

Configurable Ethernet Data Logger


Using the VxComm driver, the tDS-700 +7000 modules can be virtualized to become COM Port+7000 modules located on the host PC, and then the Data Logger in the DCON Utility can be used to access data related to the I-7000 from the Ethernet. Signal data originating from the I-7000 modules can be analyzed using MS Excel without the need to write any custom programs.

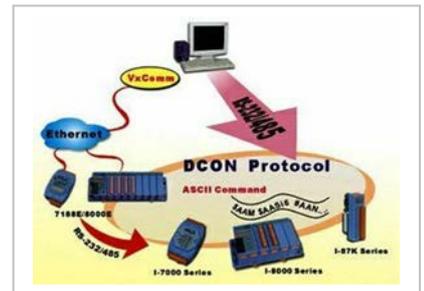


1: The DCON utility includes a log function, as show below:

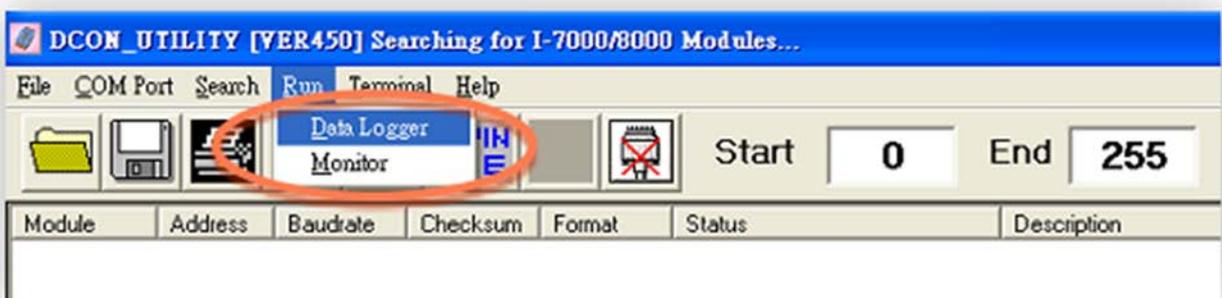

2: Configure the system connection as shown below and click the “Start” button to begin logging data.

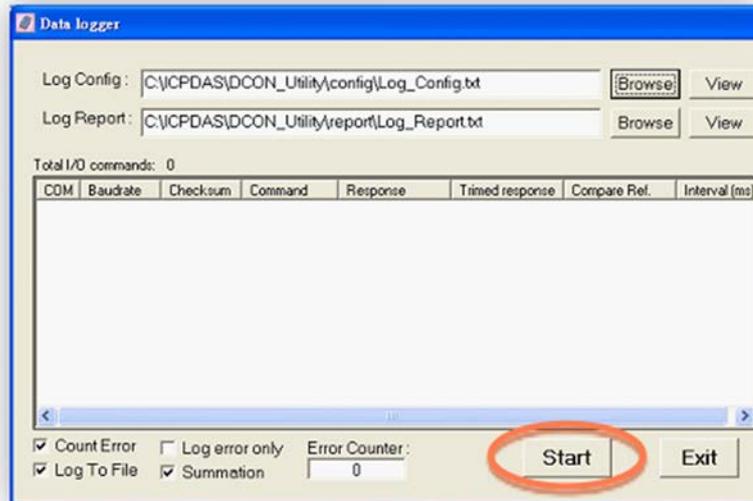

3: Open the log file in MS Excel to view the log data as shown in the example below:

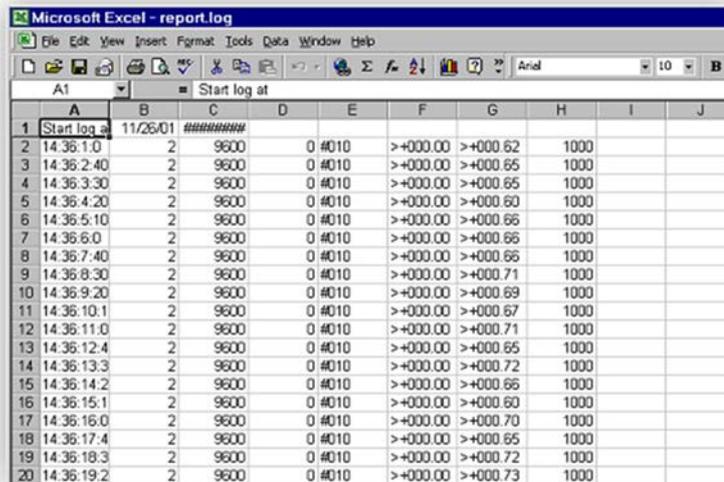

By using the I-7000 DCON utility and MS Excel in conjunction with **VxComm technology**, the signal data originating from I-7000 modules via the Ethernet network can be analyzed without the need to write custom programs. For more information about the **log function**, refer to the online help feature (English and Traditional Chinese) of the DCON utility.



5.4 Pair-connection Applications

tDS-700 device servers can be used to create a pair-connection application (as well as serial-bridge or serial-tunnel), and then route data between two serial devices via TCP/IP, which is useful when connecting mainframe computers, servers or other serial devices that do not themselves have Ethernet capability.



The following are examples of pair-connection tests:

Pair-connection Settings:

Model	Port Settings (default)		Pair-connection Settings		
	Baud Rate	Data Format	Application Mode	Remote Server IP	Remote TCP Port (default)
tDS-700 #1	115200	8N1	Client	IP Address of tDS-700 #2	10001
tDS-700 #2	115200	8N1	Server	-	-

Note

The Baud Rate and Data Format settings of the client and server (tDS-700 #1 and #2) depend on the COM ports of the PC (or the connected device). The serial port settings between tDS-700 #1 and tDS-700#2 can be different.

Ensure that the following items are available:

A DN-09-2F Terminal Board

(Optional, Website: http://www.icpdas.com/products/DAQ/screw_terminal/dn_09_2.htm)

A I-7520 module

(Optional, Website: http://www.icpdas.com/products/Remote_IO/i-7000/i-7520.htm)

Step 1: Connecting to a network, PC and Power

1. Confirm that the tDS-700 modules are functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details.
2. Use a DN-09-2F wiring terminal board to connect COM1 of the PC to COM1 of the tDS-700 #1, refer to [Section 2.6 “Wiring Notes for RS-232/485/422 Interfaces”](#) for RS-232 wiring details information.
3. Use an I-7520 module to connect COM2 of PC to COM1 of the tDS-700 #2, refer to [Section 2.6 “Wiring Notes for RS-232/485/422 Interfaces”](#) for RS-422/485 wiring details information.

✂Refer to Figure 5-1 for an illustration of how to perform the above steps.

The image below shows an example of the setup for a pair-connection test:

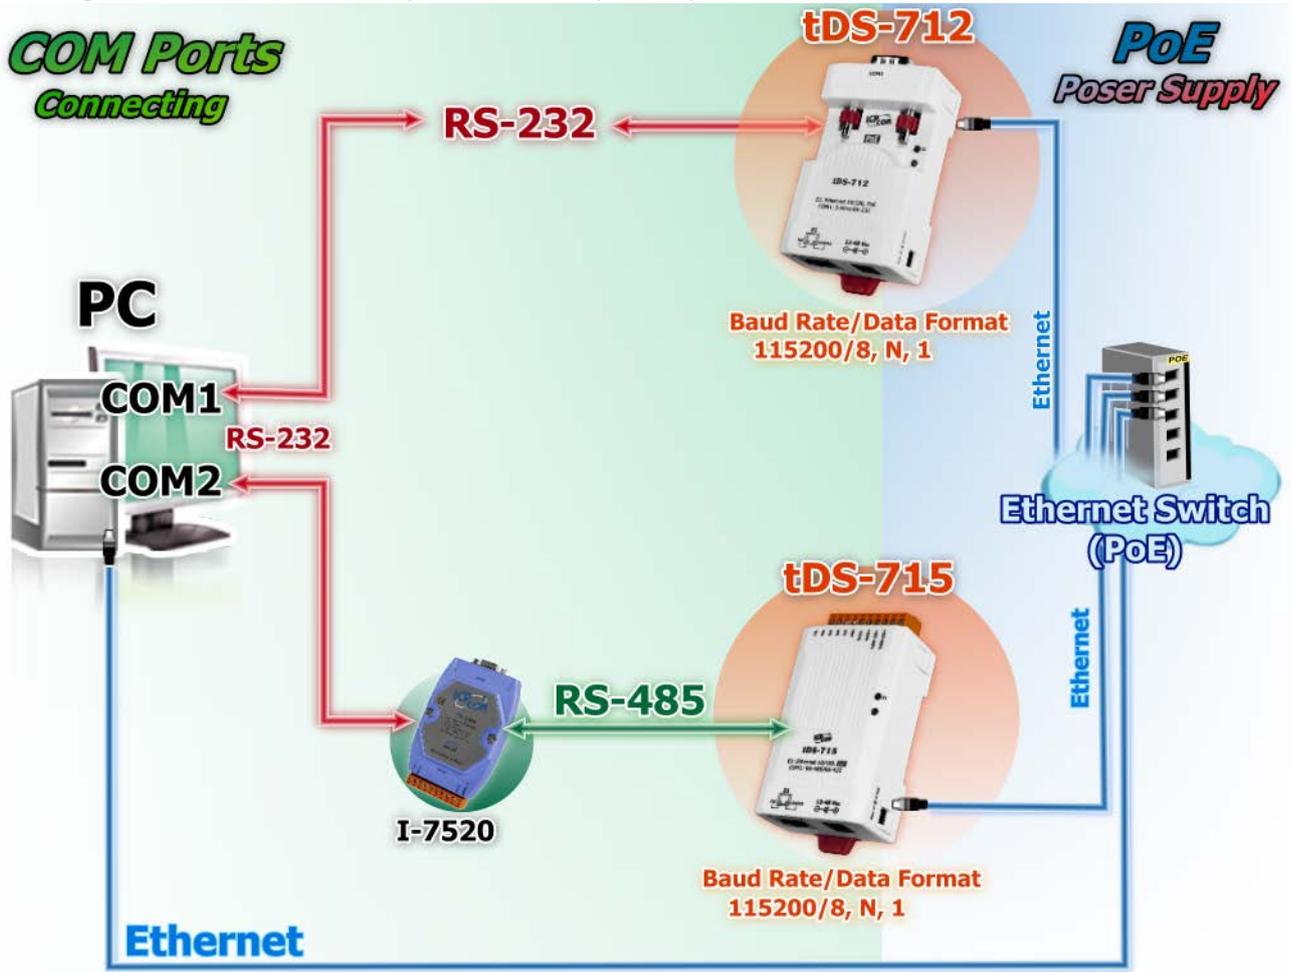


Figure 5-1

Step 2: Configuring the Ethernet Settings

Contact your Network Administrator to obtain the correct and functioning network configuration for the tDS-700 modules (including the **IP Address, Mask and Gateway details**). Also refer to [Chapter 3 “Getting Started”](#) for more details.

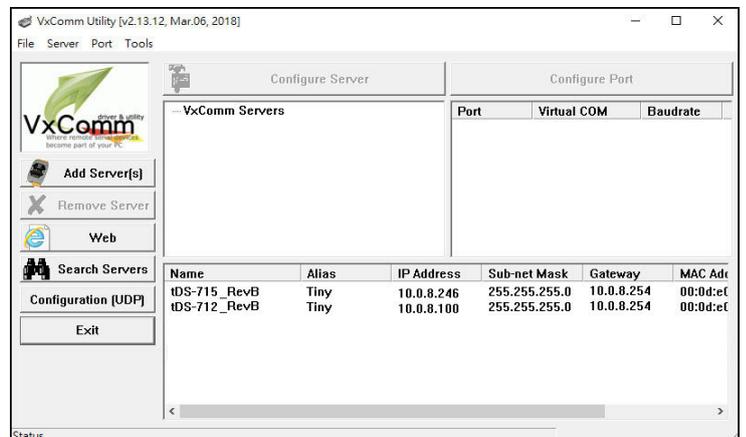


Figure 5-2

Step 3: Configuring the Pair-connection (Client Mode) on the Web Server for tDS-700#1

1. Enter the **URL address of the tDS-700#1** in the address bar of the browser.
2. Enter the **password (default: admin)** in the Login password field, and click the **“Submit”** button to enter the configuration page.



Figure 5-3

3. Click the **“Port1”** tab to display to the **Port1 Settings** page.

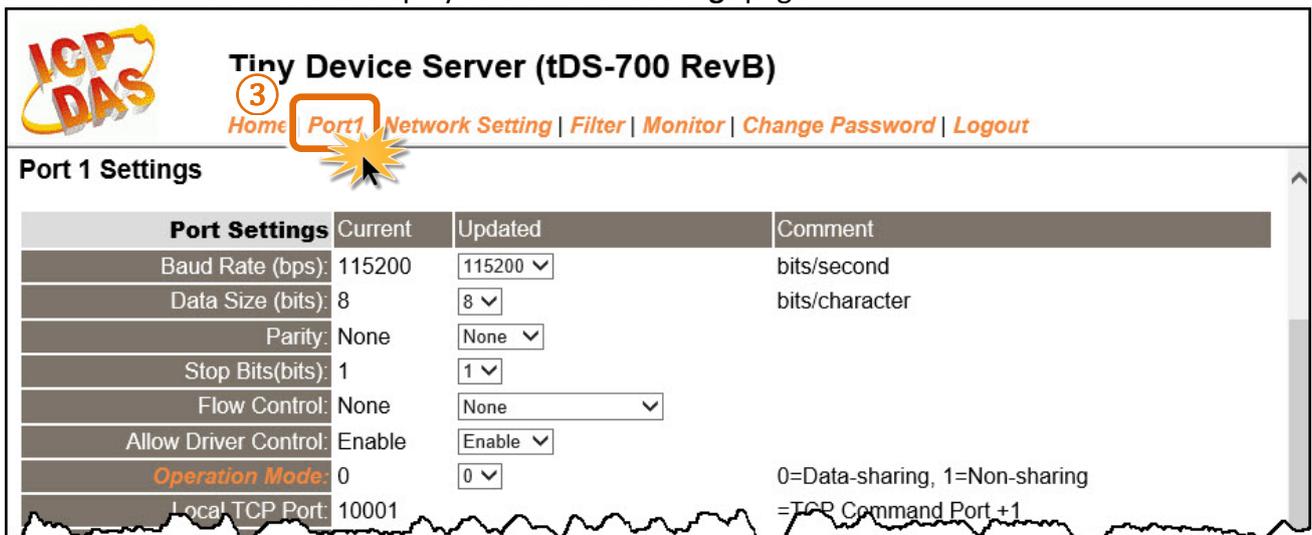


Figure 5-4

4. Select the appropriate **Baud Rate and Data Format** settings from the relevant drop down options, for example “115200”, “8”, “None” and “1”.
5. The pair-connection settings area as follows:
 - 5-1: Select “Client” from the “**Application Mode (Server Mode)**” drop down options
 - 5-2: Type the IP address of the tDS-700 #2 in the “**Remote Server IP**” field.
 - 5-3: Assign a TCP port for the tDS-700 #2 in the “**Remote TCP Port**” field.
6. Click the “**Submit**” button to complete the configuration.

Port Settings		Current	Updated	Comment	
Baud Rate (bps):	115200	115200	▼	bits/second	
Data Size (bits):	8	8	▼	bits/character	
Parity:	None	None	▼		
Stop Bits(bits):	1	1	▼		
Flow Control:	None	None	▼		
Allow Driver Control:	Enable	Enable	▼		
Operation Mode:	0	0	▼	0=Data-sharing, 1=Non-sharing	
Local TCP Port:	10001			=TCP Command Port +1	
Connexion Idle (seconds):	180	180		1 ~ 65535, 180=default, 0=disable	
Prefix String:	N/A	N/A		Max. 7 chars	
Serial Data Packing		Current	Updated	Comment	
Slave Timeout (ms):	1000	1000		After last TX	
Packing Length (bytes):	0	0		0 ~ 1024, 0=default=disable	
Serial Ending Chars: (Number[,char1][,char2])	0	0		e.g.: 2,0x0D,0x0A	
Timeout Between Chars (ms):	10	10		After last RX 10 ~ 65535, 10=default, 0=disable	
Pair-Connection Settings (Client/Server Mode)		Current	Updated	Comment	
Application Mode:	Server	Client	▼	Server=Slave, Client=Master	
Remote Server IP:	Disable	10	. 0	. 8	. 246
Remote TCP Port:	Disable	10001		Required on client-mode.	
		Submit		Required on client-mode.	

Figure 5-5

Step 4: Configuring the Pair-connection (Server Mode) on the Web Server for tDS-700#2

1. Enter the configuration page for the tDS-700 #2 web server.
2. Click the “**Port1**” link to enter the settings page of the tDS-700 #2.
3. Set the Baud Rate to “**115200**” and the Data Format to “**8, None, 1**”.

➤ Refer to Figures 5-3 to 5-5 for illustrations of how to perform the above steps.

4. Select “**Server**” from the “Application Mode (Server Mode)” drop down options and then click the “**Submit**” button to complete the configuration.

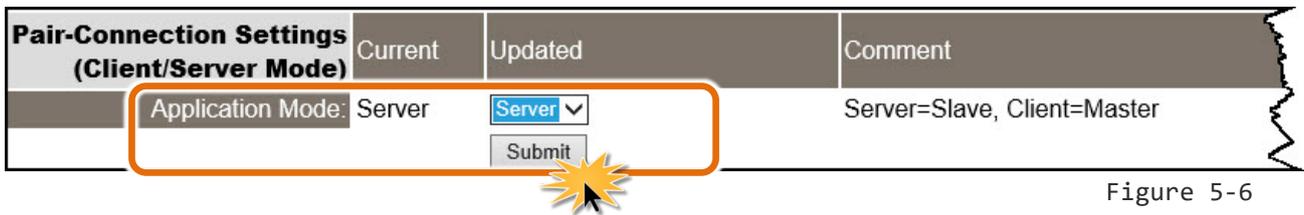


Figure 5-6

Step 5: Testing the Pair-connection Functions

1. Launch the Test Program.

The following example use Test2COM.exe to perform self-test.



The Test2COM.exe program can be obtained from the ICP DAS FTP site or the ICP DAS web site. The location of the download addresses are shown below:

 <http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/multiport/utility/>

 <ftp://ftp.icpdas.com/pub/cd/iocard/pci/napdos/multiport/utility/>

2. Double-click the Test2COM.exe program and type the relevant configuration as follows:

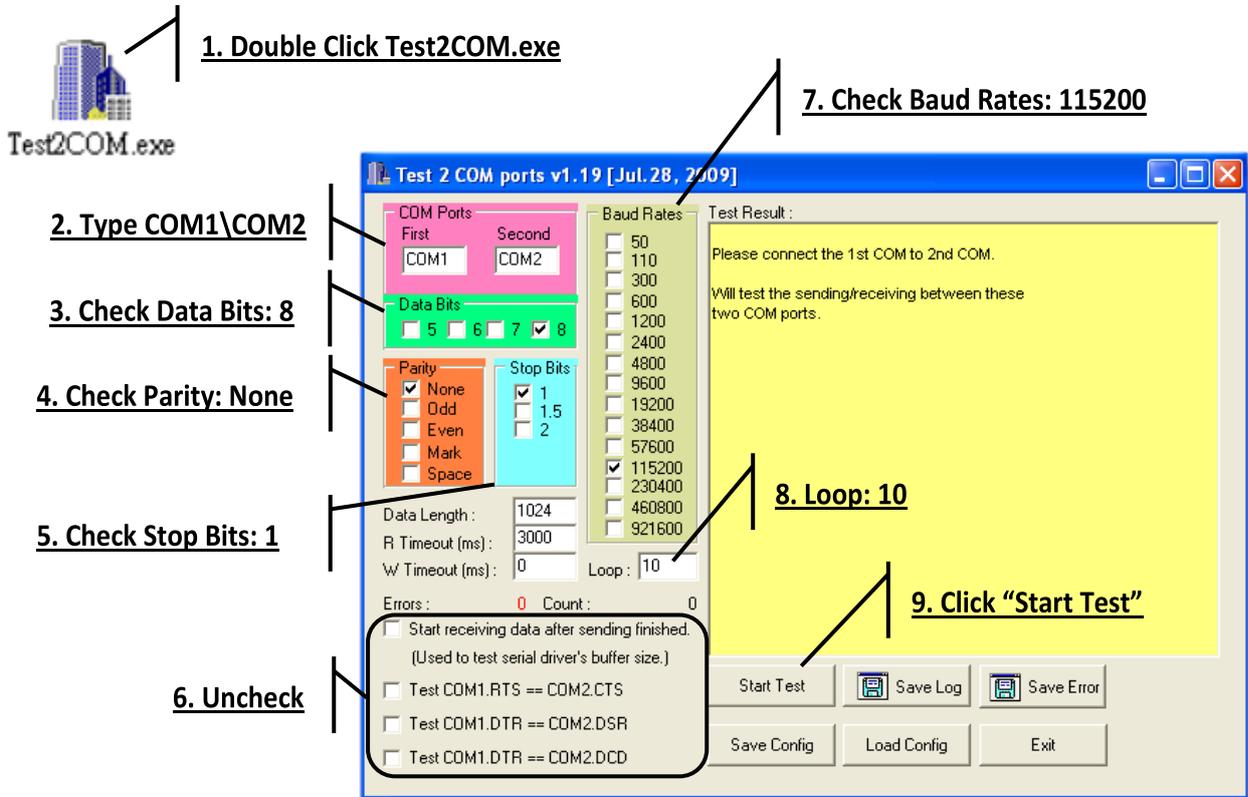


Figure 5-7

Note

The Baud Rate and data format depend on the serial port settings for the web configuration above.


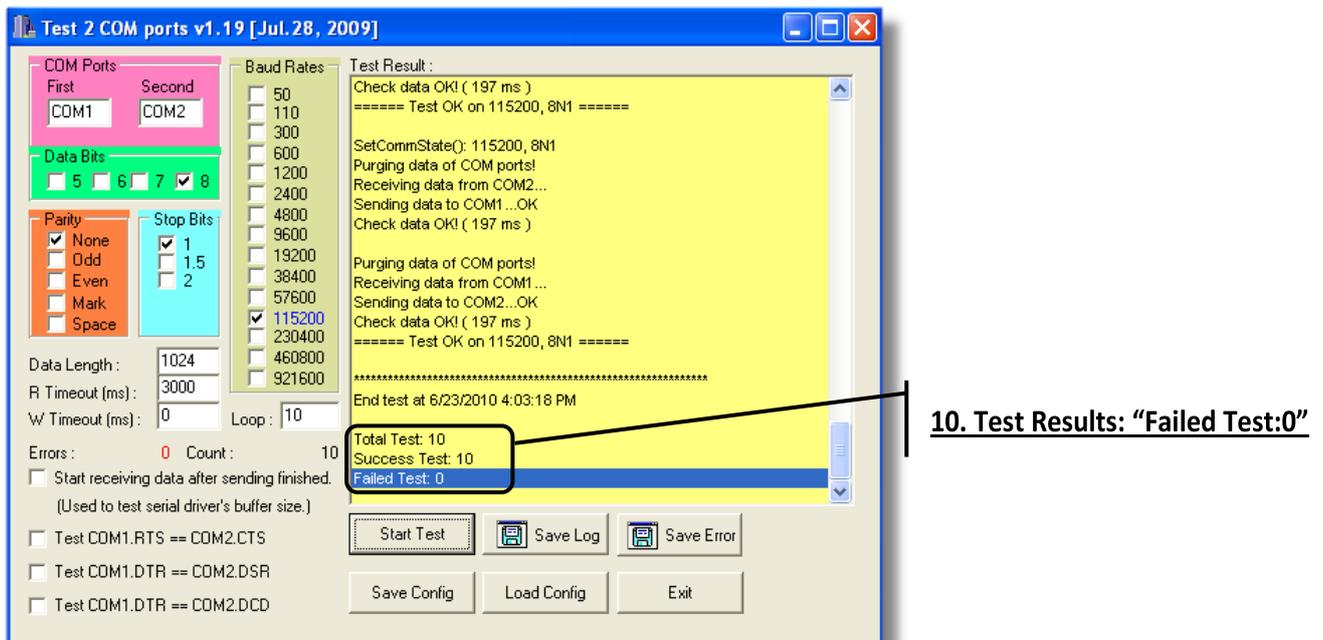


Figure 5-8

5.5 TCP Client Mode Applications

In TCP Client Mode, the tDS-700 can establish a TCP connection to a specific TCP slave device actively by TCP server program. The whole system should operate like this:

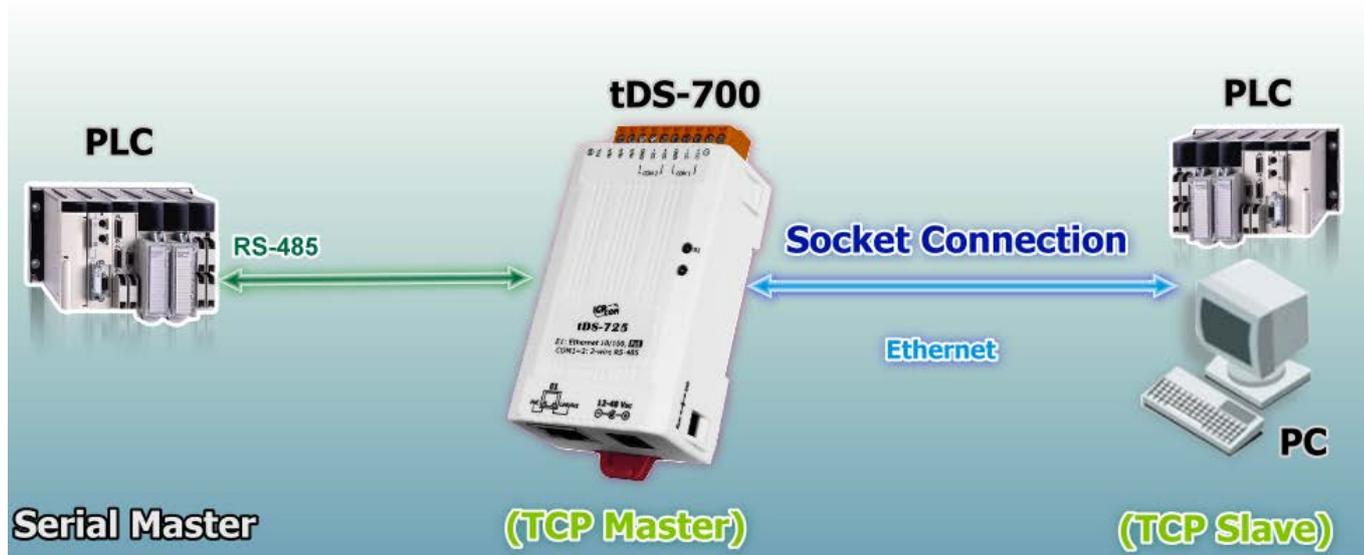

The following are examples of TCP Client Mode tests:

TCP Client Mode Settings:

Model	Port Settings (default)		Pair-connection Settings		
	Baud Rate	Data Format	Application Mode	Remote Server IP	Remote TCP Port
tDS-700	115200	8, N, 1	Client	10.0.8.21	500
				IP address and TCP port for the PC #2 (TCP Server)	
PC #2 (TCP Server)	-	-	-	-	-
PC #1 (Serial Master)	115200	8, N, 1	-	-	-

Follow the procedure described below:

Step 1: Connecting to a network, a PC and a Power Supply

1. Confirm that the tDS-700 module is functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details.
2. Connect both the tDS-700, TCP server (PC #2) and hyper terminal (PC #1) to the same sub network or the same Ethernet Switch. For detailed RS-232/RS-422/485 wiring information, refer to [Section 2.6 “Wiring Notes for RS-232/485/422 Interfaces”](#).

The wiring diagram is as follows:

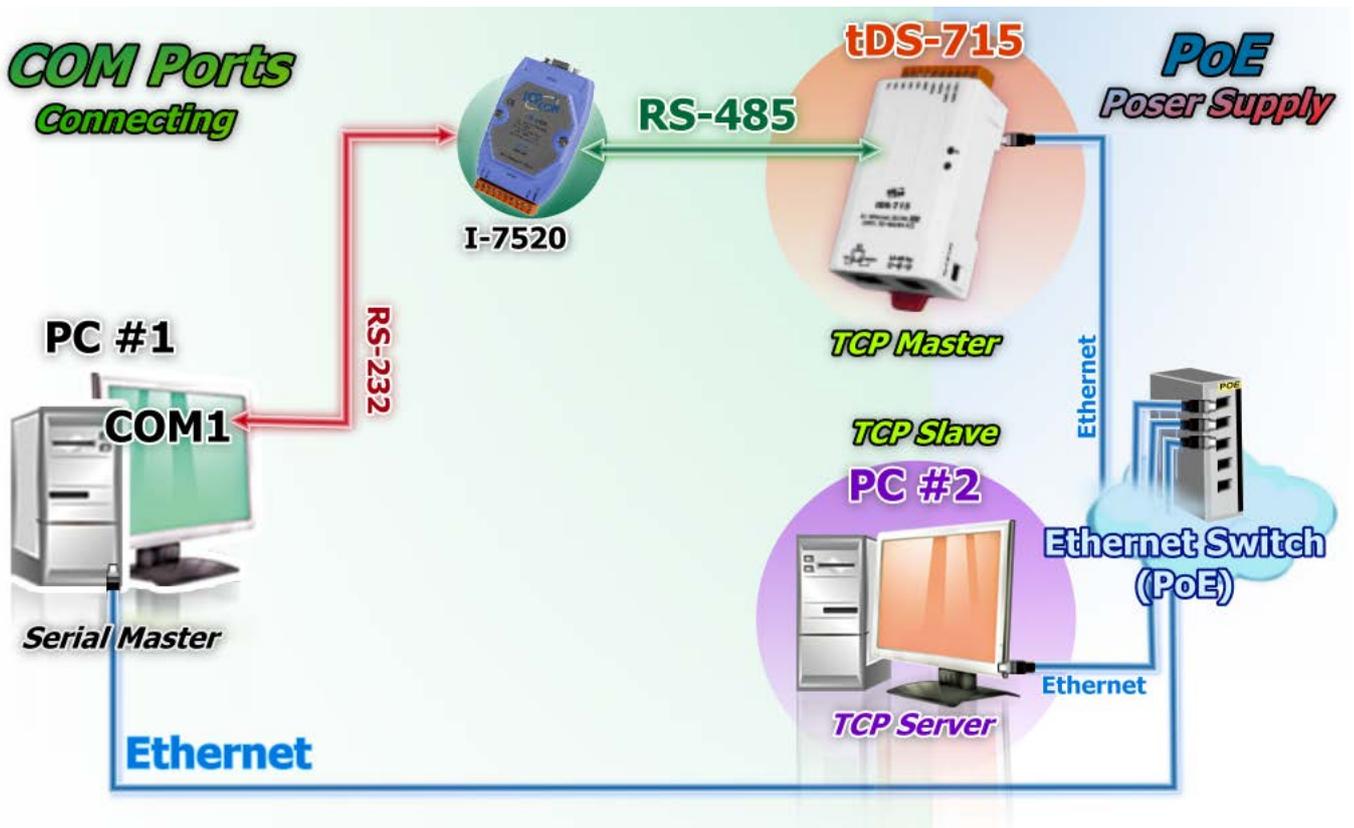


Figure 5-9

Step 2: Configuring the Ethernet Settings

Contact your Network Administrator to obtain a correct and functioning network configuration (including the **IP Address, Mask and Gateway details**) for the tDS-700 module. Also refer to [Chapter 3 “Getting Started”](#) for more details.

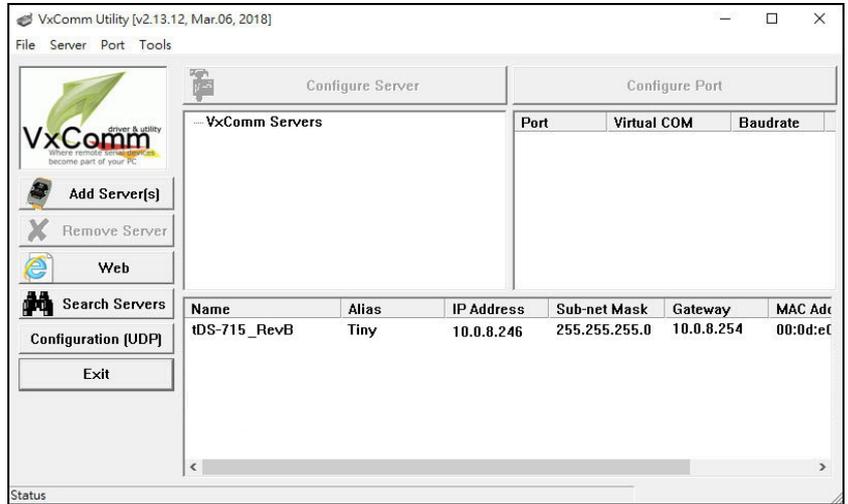


Figure 5-10

Step 3: Configuring Pair-connection (TCP Client Mode) on the Web Server for the tDS-700 module

1. Enter the **URL address of the tDS-700** in the address bar of the browser.
2. Enter the **password (default: admin)** in the Login password field, and click the **“Submit”** button to enter the configuration page.

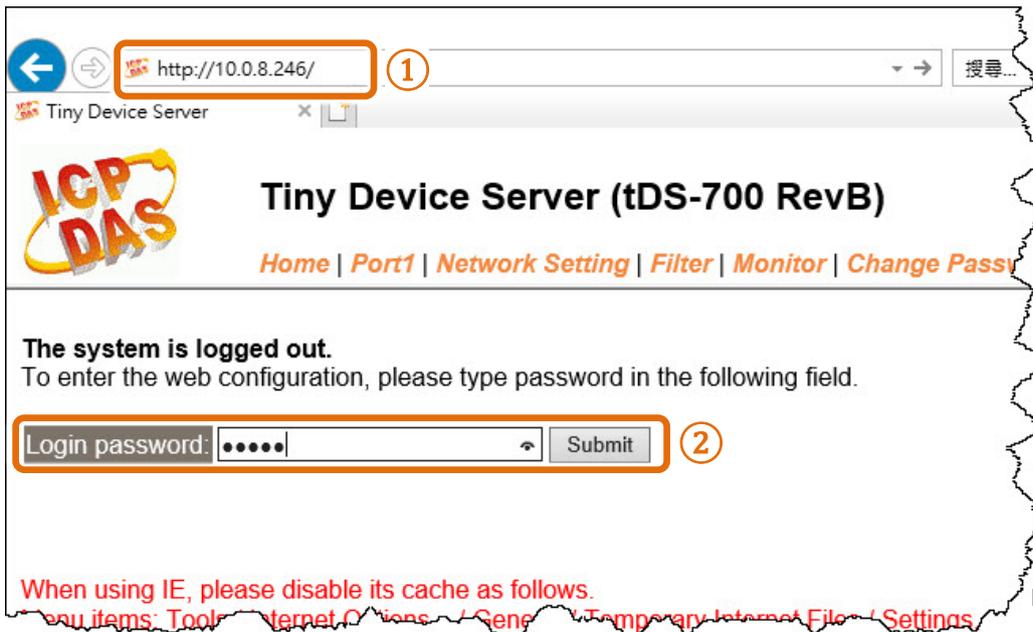


Figure 5-11

3. Click the **“Port1”** link to enter the settings page.
4. Select the appropriate **Baud Rate and Data Format** settings from the relevant drop down options, for example **“115200”, “8”, “None”** and **1”**.
5. The pair-connection settings area as follows:
 - 5-1: Select **“Client”** from the **“Application Mode (Server Mode)”** drop down options
 - 5-2: Type the **IP address of the TCP Server (PC #2)** in the **“Remote Server IP”** field.
 - 5-3: Assign a **TCP port for the TCP Server (PC #2)** in the **“Remote TCP Port”** field.
6. Click the **“Submit”** button to complete the configuration.

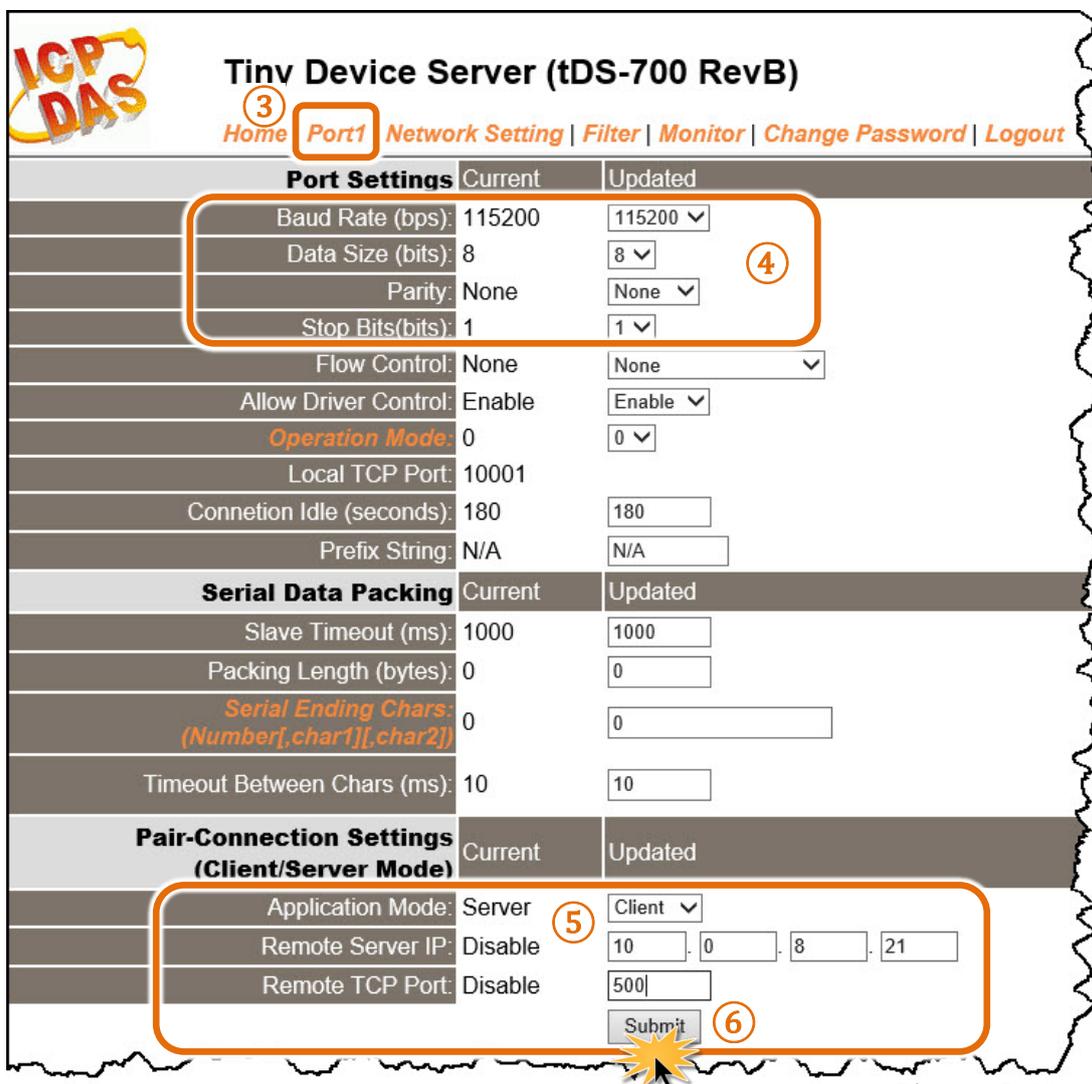


Figure 5-12

Step 4: Testing the Pair-connection (TCP Client Mode) Functions

1. Install **TcpIPEcho.exe (TCP/IP Test Server program)** on your PC.

The location of the download addresses are shown below:

<http://www.brothersoft.com/tcp-ip-test-server-27898.html>

2. Run the TCPIPEcho.exe program.

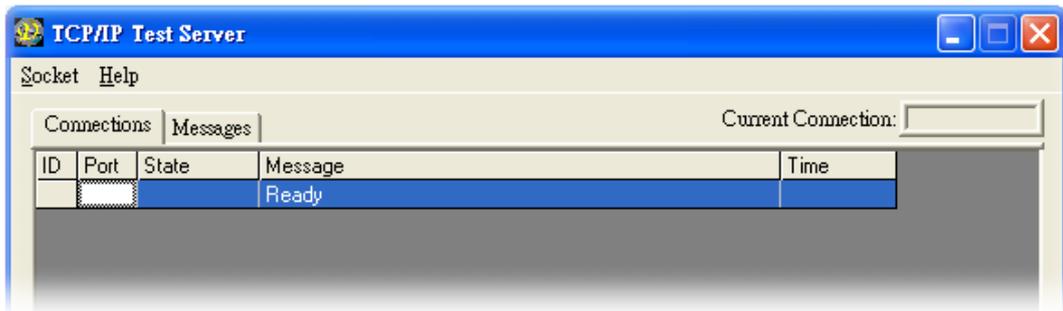


Figure 5-13

3. Click on **“Socket”** → **“Listen”**.
4. Type the **IP address** and **port number** of the TCP Server (PC#2) in the **“Server IP”** and **“Port Number”** field (e.g., **“10.0.8.21”** and **“500”**).
5. Click the **“Echo Messages Back To Client”** check box.
6. After clicking the **“OK”** button, the server will begin listening on the specific IP/Port.

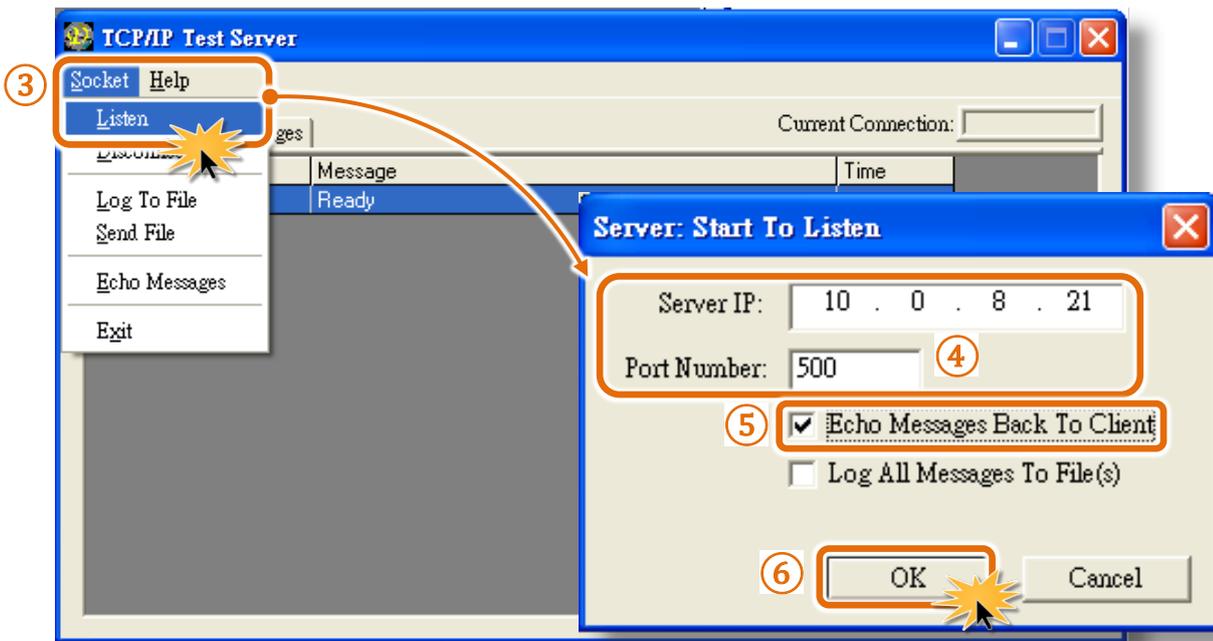


Figure 5-14

7. This will be indicated an **“Open”** line in the TCP/IP Test Server dialog box.

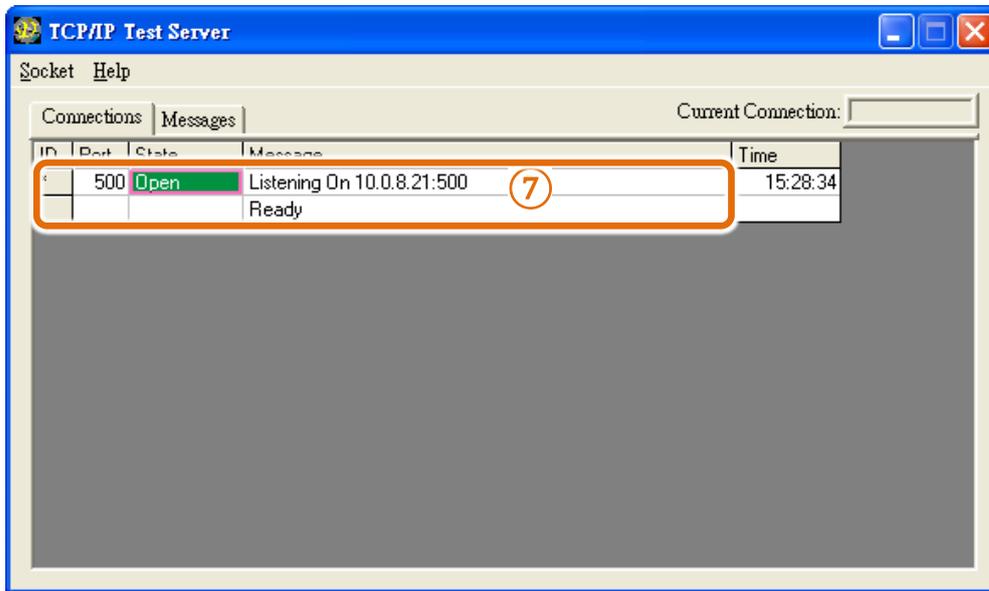


Figure 5-15

8. Right click in the **Port-List** panel and then choose the **“Open COM Port”** item under the VxComm utility.

9. Select the appropriate **COM Port, Baud Rate and Data Format** settings from the relevant drop down options (e.g., **“COM1”**, **“115200”** , **“8”**, **“None”** and **1”**), and then click the **“Open COM”** button.

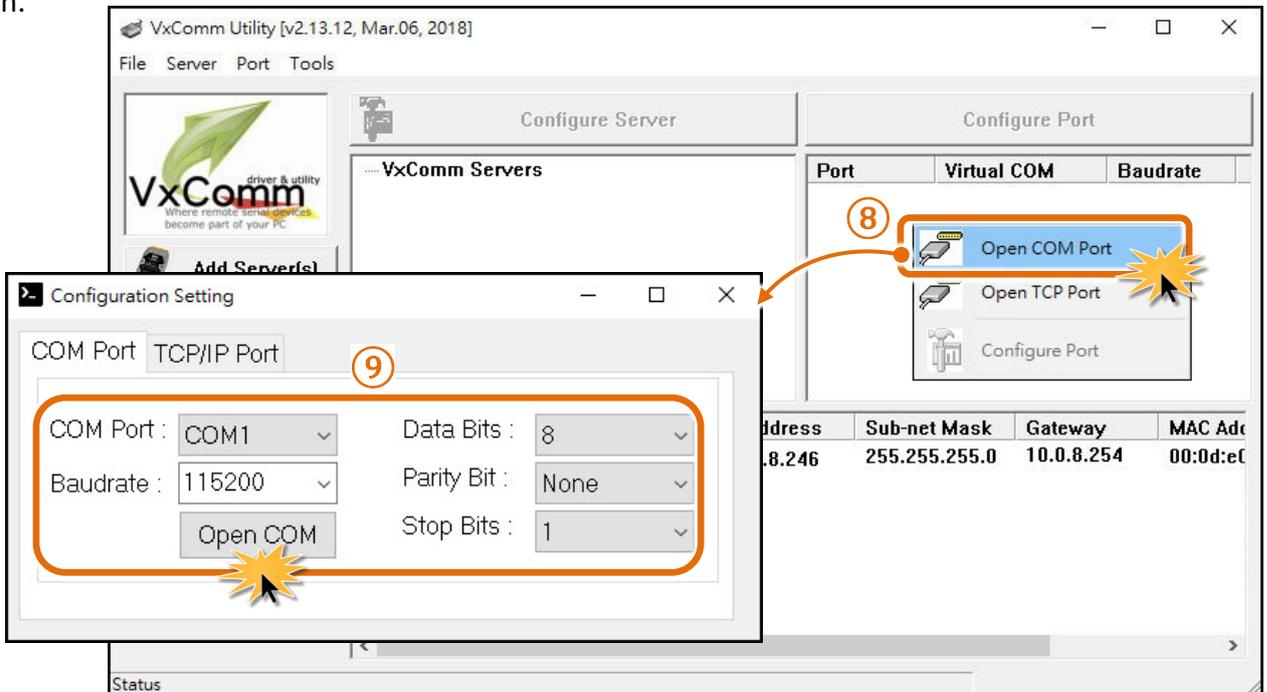


Figure 5-16

10. Type a string (e.g., \$01M) in the “send” field.
11. Click the “Send” button on the COM1 terminal (PC #1).
12. Confirm that TCP server (PC #2) will receive this string under the TCP/IP Test Server.
13. When a response is received, it will be displayed in the received field on the COM1 terminal (PC #1).

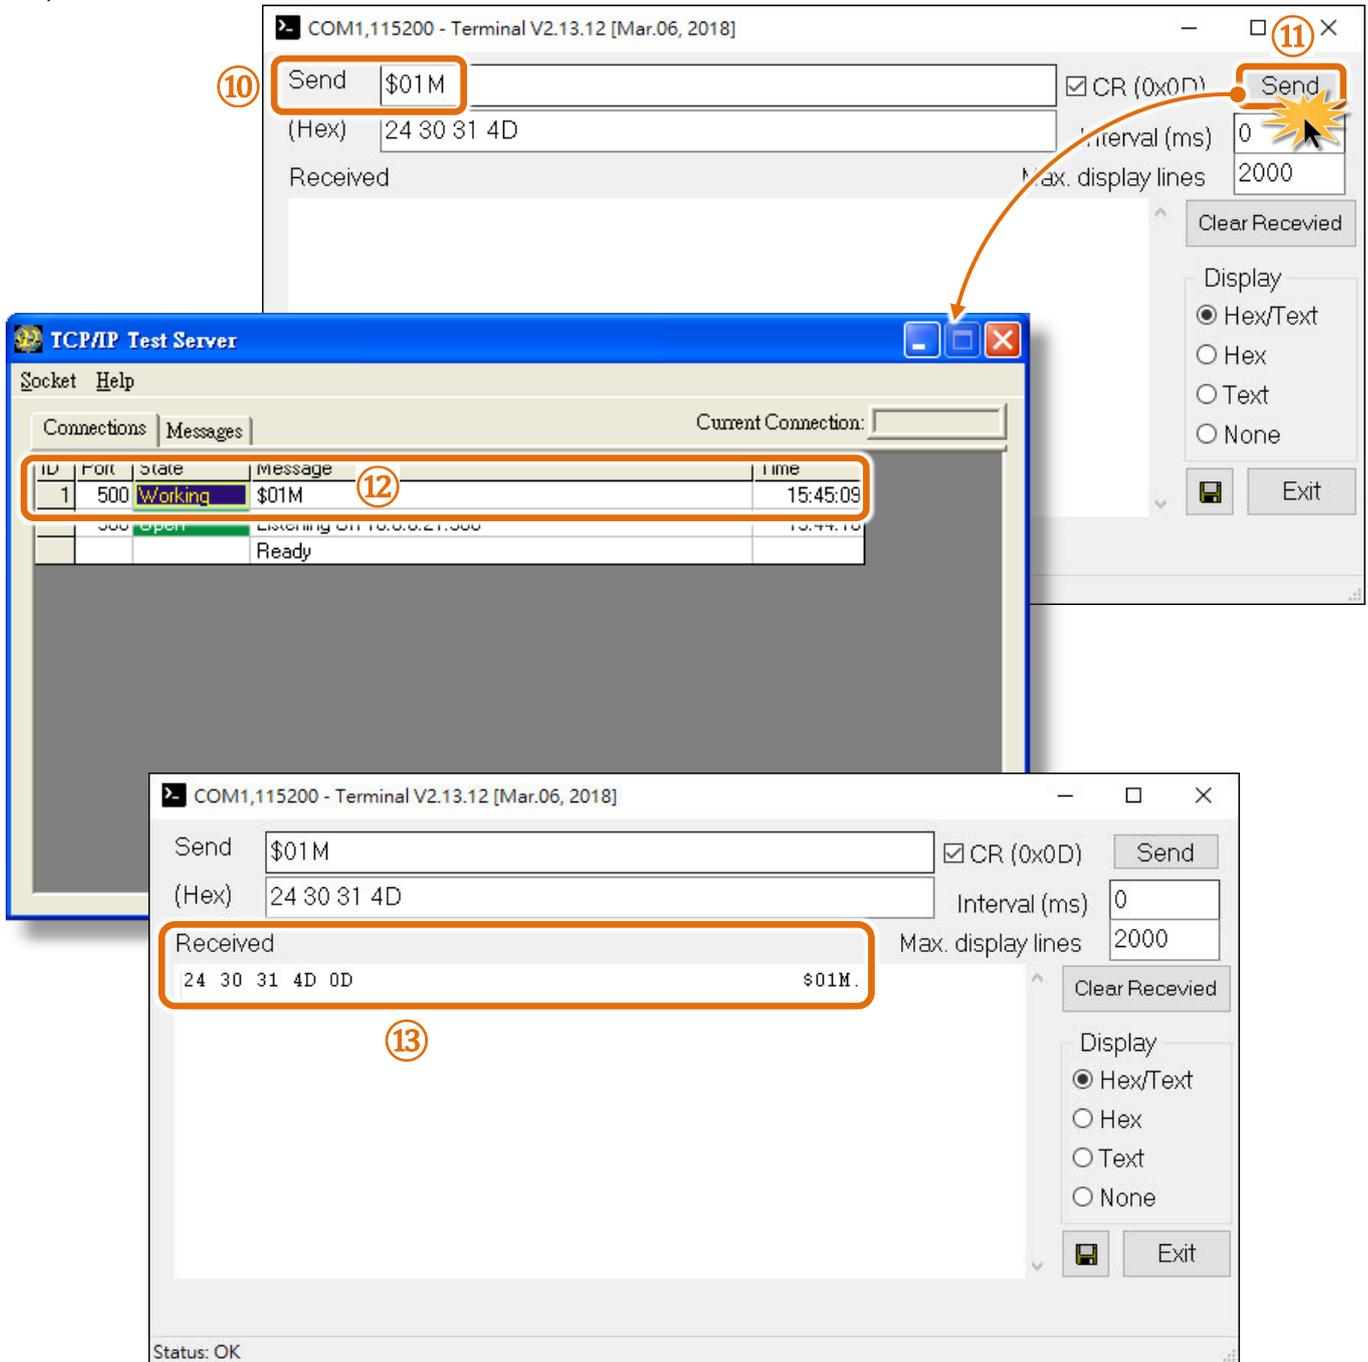


Figure 5-17

6. GI Configuration

The tDS-700 series can be configured via convenient URL commands. This section lists the commands in URL format corresponding to the basic functions of tDS-700. Please make sure you have correctly configured the network settings for the tDS-700 before using CGI configuration. (Please refer to [Chapter 3 “Getting Started”](#) about the Ethernet settings.)

6.1 CGI URL Syntax

Type the CGI URL syntax in the browser, as follows:

Syntax: `http:// <IP address of tDS-700>/<CGI>?<Parameter Name>=<Value>`

Example: `http://10.0.8.6/assign.cgi?baud0=115200&format0=8n1`

Refer to Section 6.2 “CGI Command List”

1. Type the CGI command in the browser.

2. Complete

6.2 CGI Command List

Network Settings				
No.	Function Name	Parameter Name	Value Constraint	CGI
01	Set Address Type	dhcp	0,1 0: Disable; 1: Enable;	assign.cgi
02	Set IP Address	ip	xxx.xxx.xxx.xxx	
03	Set Gateway	gway	xxx.xxx.xxx.xxx	
04	Set Net Mask	mask	xxx.xxx.xxx.xxx	
05	Set TCP Command Port	cmdport	1~65535 Default: 10000	
06	Set Command Port Timeout (Socket Watchdog)	cmdwdt	1~65535 seconds, Default: 30; Disable: 0;	
07	Set MAC Address	mac	Format: FF-FF-FF-FF-FF-FF	
08	Set Alarm IP Address(UDP)	aip	xxx.xxx.xxx.xxx	
09	Set Alarm Port(UDP)	aport	1~65535 seconds, Default: 30; Disable: 0;	

General Configuration Settings				
No.	Function Name	Parameter Name	Value Constraint	CGI
01	Set Alias Name	aliname	Max. 18 chars	assign.cgi
02	Set System Timeout	syswdt	30 ~ 65535 seconds, Default: 300; Disable: 0	

Filter Settings				
No.	Function Name	Parameter Name	Value Constraint	CGI
01	Add IP to List (white list)	fip0 ~ fip4 fipm0 ~ fipm4 (mask)	xxx.xxx.xxx.xxx	assign.cgi
02	Delete IP#	delfip	0 ~ 4	
03	Delete All	delfip	all	

Serial Port Settings				
No.	Function Name	Parameter Name	Value Constraint	CGI
01	Set Baud Rate	baud0 & baud1	(bits/S)	assign.cgi
02	Set Data Format	format0 & format1	8n1 Data bits: 5 ~ 8; Parity: n, e, o, m, s; Stop bits: 1, 2;	
03	Set Flow Control	flow0 & flow1	0,1 0: None; 1: CTS/RTS	
04	Set Dynamic Serial Setting	dyna0 & dyna1	0,1 0: Disable; 1: Enable	
05	Set Serial Ending Chars	endchr0 & endchr1	Number[,char1][,char2]	
06	Set Operation Mode	opmode0 & opmode1	0,1	
07	Set Slave Timeout	slto0 & slto1	(ms)	
08	Set Data Buffer Delay Time	dbdt0 & dbdt1	(ms)	
09	Set Packing Length	Packlen0 & packlen1	0 ~ 255 bytes	
10	Set TCP Timeout	tto0 & tto1	1~65535 seconds, Default: 180; Disable: 0	

Restore Factory Defaults				
No.	Function Name	Parameter Name	Value Constraint	CGI
01	Reboot	-	-	Reboot.cgi
02	Reset To Factory	-	-	Reset.cgi


Queries Setting Status					
No.	Function Name	Access Method	Parameter Name	Value Constraint	CGI
01	Get module status.	-	-	-	status.cgi
02	Get the serial port configuration information.	-	-	-	conf_port.cgi
03	Get the network configuration information.	-	-	-	conf_net.cgi

Appendix A: Troubleshooting

A1. How do I restore the web password for the module to the factory default password?

The instructions below outline the procedure for resetting the web password to the factory default value. **Note:** Be aware that **ALL** settings will be restored to the factory default values after the module is reset.


Step 1 Locate the Init/Run switch that can be found on the right-hand side of the tDS-700 module and set it to the "Init" position. Reboot the module to **load factory default settings** including default web password.

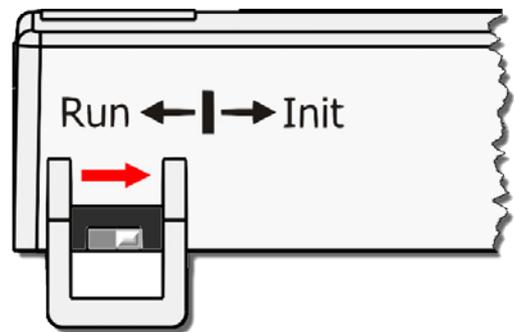

Step 2 Execute either the VxComm Utility or the eSearch Utility to search for any tDS-700 modules connected to the network. Verify that the tDS-700 has been reset to the original factory default settings. For example, the module should be shown as having the default IP address, which is 192.168.255.1.


Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address
tDS-735 RevB	Tiny	192.168.255.1	255.255.0.0	192.168.0.1	00:0d:e0:8e:43:21
tDS-2215i	Tiny	10.0.8.35	255.255.255.0	10.0.8.254	00:0d:e0:9b:66:4c
WP5231	WP5231	10.0.8.18	255.255.255.0	10.0.8.254	D0:FF:50:C6:B5:C
WP9000	Compact	10.0.8.22	255.255.255.0	10.0.8.254	00:0D:E0:30:56:0

Step 3 Double-click the name of the module to open the Configure Server (UDP) dialog box, and modify the basic settings as necessary, e.g., the IP, Mask and Gateway addresses, and then click the "OK" button to **save the new settings**.

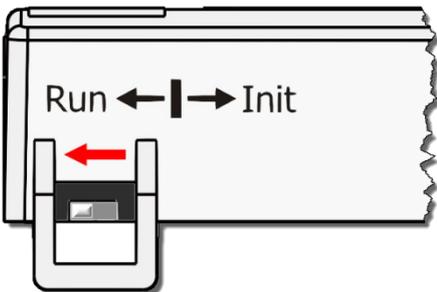

Step 4 Reset the Init/Run switch on the tDS-700 module to the "Run" position and reboot the device.

Step 5 Log in to the web configuration pages for the tDS-700 module, using the default web password, "admin".

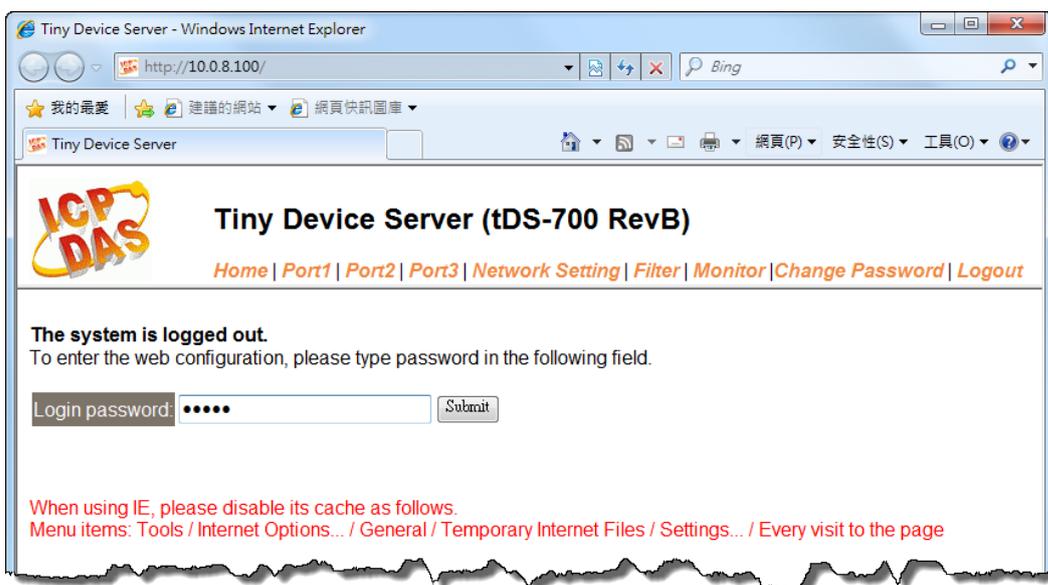

Appendix B: Glossary

1. ARP (Address Resolution Protocol)

The Address Resolution Protocol (ARP) is a telecommunication protocol that is used to convert an IP address to a physical address, such as an Ethernet address.

Consider two machines A and B that share the same physical network. Each has an assigned IP address IP_A and IP_B , and a MAC address, MAC_A and MAC_B . The goal is to devise a low-level software application that hides the MAC addresses and allows higher-level programs to work only with the IP addresses. Ultimately, however, communication must be carried out by the physical networks using whatever MAC address scheme the hardware supplies.

Suppose machine a wants to send a packet to machine B across a physical network to which they are both attached, but an only has the Internet address for B, IP_B . The question arises: how does A map that address to the MAC address for B, MAC_B ?

ARP provides a method of dynamically mapping 32-bit IP address to the corresponding 48-bit MAC address. The term dynamic is used since the mapping is performed automatically and is normally not a concern for either the application user or the system administrator.

2. Clients and Servers

The client-server paradigm uses the direction of initiation to categorize whether a program is a client or server. In general, an application that initiates peer-to-peer communication is called a client. End users usually invoke client programs when they use network services.

By comparison, a server is any program that waits for incoming requests from a client program. The server receives a request from a client, performs the necessary action sand returns the result to the client.

3. Ethernet

The term Ethernet generally refers to a standard published in 1982 by Digital Equipment Corp., Intel Corp. and Xerox Corp. Ethernet is the most popular physical layer Local Area Network (LAN) technology in use today.

4. Firmware

Firmware is an embedded software program or set of instructions programmed on a device that provides the necessary instructions for how the device communicated with other computer hardware, and is located or stored in a semi-permanent storage area, e.g., ROM, EEPROM, or Flash memory. Firmware can often be updated by downloading a file from the manufacturer's web site or FTP.

5. Gateway

Computers that interconnect two networks and pass packets from one to the other are called Internet Gateways or Internet Routers. Gateways route packets that are based on the destination network, rather than the destination host.

6. ICMP (Internet Control Message Protocol)

ICMP provides a method of communicating between the Internet Protocol software on one machine and the corresponding software on another. It allows a gateway to send error or control messages to other gateways, or allows a host to diagnose problems with the network communication.

7. Internet

Physically, the Internet is a collection of packet switching networks interconnected by gateways that together with the TCP/IP protocol, allows them to perform logically as a single, large and virtual network. The Internet recognizes hosts using 32-bit IP address.

8. IP (Internet Protocol) Address

Each interface on the Internet must have a unique IP address (also called an Internet address). These addresses are 32-bit numbers, and are normally written as four decimal numbers, one for each byte of the address for example “192.168.41.1”. This is called dotted-decimal notation.

9. MAC (Media Access Control) Address

To allow a computer to determine which packets are meant for it, each device attached to an Ethernet network is assigned a 48-bit integer known as its MAC address (also called the Ethernet address, the hardware address or the physical address). A MAC address is normally written as eight hexadecimal numbers, for example “00:71:88:af:12:3e:0f:01”. Ethernet hardware manufacturers purchase blocks of MAC addresses and assign them in sequence as they manufacture Ethernet interface hardware. Thus, no two hardware interfaces can have the same MAC address.

10. Packet


A packet is the unit of data sent across a physical network. It consists of a series of bits containing data and control information, including the source and the destination node (host) address, and is formatted for transmission from one node to another.

11. Ping

Ping is a network administration utility used to test the whether a host on an Internet network is active, and to measure the round-trip time for messages sent from the originating host to a destination computer. Ping operates by sending an ICMP echo request message to a host, expecting an ICMP echo reply to be returned. Normally, if a host cannot be pinged, Telnet or FTP cannot be used to connect to the host. Conversely, if Telnet or FTP cannot be used to connect to a host, Ping is often the starting point to determine the nature of the problem.

12. RARP (Reverse Address Resolution Protocol)

RARP provides a method of dynamically mapping 48-bit MAC address to the corresponding 32-bit IP address. RARP has now been replaced by the Bootstrap Protocol (BOOTP) and the modern Dynamic Host Configuration Protocol (DHCP).

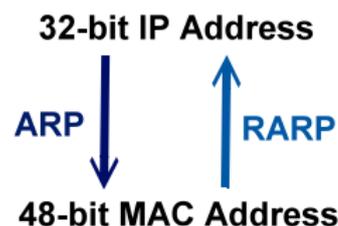

13. Socket

Each TCP segment contains a source and destination port number that can be used to identify the sending and receiving application. These two values, along with the source and destination IP addresses in the IP header, uniquely identify each connection. The combination of an IP address and a port number is called a socket.

14. Subnet Mask

A Subnet mask, often simply called the “Mask”, is a 32-bit number that masks an IP address, and divides the IP address into the network address and the host address. Given its own IP address and its subnet mask, a host can determine whether a TCP/IP packet is destined for a host that is (1) on its own subnet, or (2) on a different network. If (1), the packet will be delivered directly; otherwise it, will be delivered via a gateway or a router.

15. TCP (Transmission Control Protocol)

TCP is a set of rules used in combination with the Internet Protocol to send data in the form of message units between computers over the Internet. TCP provides a reliable flow of data between two hosts and is associated with tasks such as dividing the data passed to it from an application into appropriately sized chunks for the network layer below, acknowledging received packets, setting timeouts to make certain that the other end acknowledges packets that are sent, and so on.

16. TCP/IP

The Transmission Control Protocol (TCP) and the Internet Protocol (IP) is standard network protocols that are almost always implemented and used together in a formation are known as TCP/IP. TCP/IP can be used to communicate across any set of interconnected networks.

17. UDP (User Datagram Protocol)

UDP is an internet protocol that provides a much simpler service to the application layer as it only sends packets of data from one host to another, but there is no guarantee that the packets will reach the destination host. UDP is suitable for purposes where error checking and correction is either not necessary or is performed in the application.

Appendix C: Actual Baud Rate Measurement

Ideal Baud Rate (bps)	Actual Baud Rate (bps)	Error
50	50	0.00%
110	109.92	0.07%
300	298.48	0.51%
600	597.04	0.49%
1200	1197.6	0.20%
2400	2395.2	0.20%
4800	4790.4	0.20%
9600	9568.0	0.33%
14400	14392	0.05%
19200	19136	0.33%
38400	38464	0.17%
57600	57552	0.08%
115200	114960	0.21%
128000	128240	0.18%
230400	229920	0.21%
250000	250000	0.00%
256000	256400	0.15%
460800	459760	0.22%
921600	921600	0.00%

Note

Recommended max baud rate is 115200 bps or below. Because the loading of the module, we don't guarantee a proper operation if using a larger buad rate (over 115200 bps).

Appendix D: Revision History

This chapter provides revision history information to this document.

The table below shows the revision history.

Revision	Date	Description
1.0	Jul. 2010	Initial issue
1.1	Dec. 2010	Added the software and hardware information about the tDS-712/722/732/715/725/735/718.
1.2	Jan. 2011	Added the software and hardware information about the tDS-724/734.
1.9	Feb.2017	Added the software and hardware information about the tDSM-712 and tDS-712i/722i/732i/715i/725i/735i/718i/724i/734i.
2.0	Aug.2017	Added Chapter Appendix A: Troubleshooting. Added Chapter Appendix D: Revision History.
2.1	Mar. 2018	Remove the package CD.
2.2	Aug. 2018	Added the software and hardware information about the tDS-718i-D.