

Classification	System and Application FAQ on XPAC				No.	1-005-04	
Author	WeiKei	Version	1.0.1	Date	2011/6/29	Page	1/5

How to calibrate an Egalax serial touch panel

Applies to:


Platform	OS version	XPAC utility version
XPAC series	All versions (WinCE6)	All versions

N/A: Not applicable to this platform and OS.

Tips & Warnings


! Serial COM Ports 2 and 5 on XP-8000 are standard female/male RS-232 COM Ports. If COM4 is used to connect to the touch panel, you will need a "NULL MODEM".

Standard Wiring

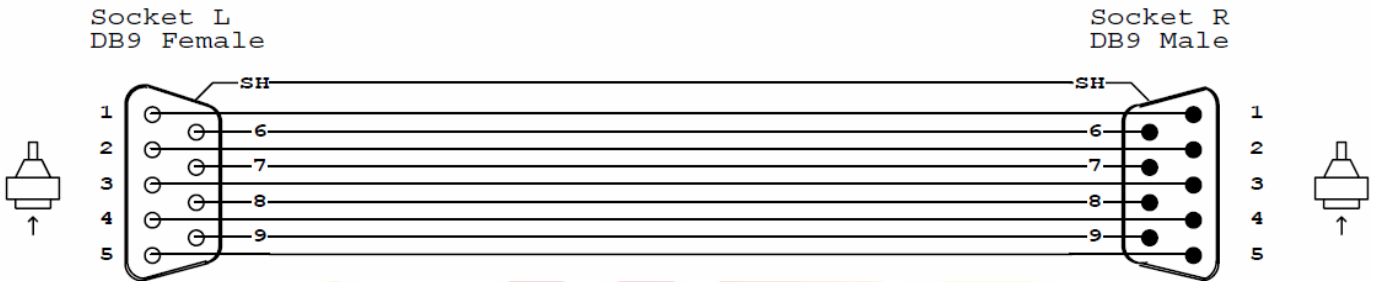

NULL MODEM


Null Modem DB9 cable : Dreambox Serial cable

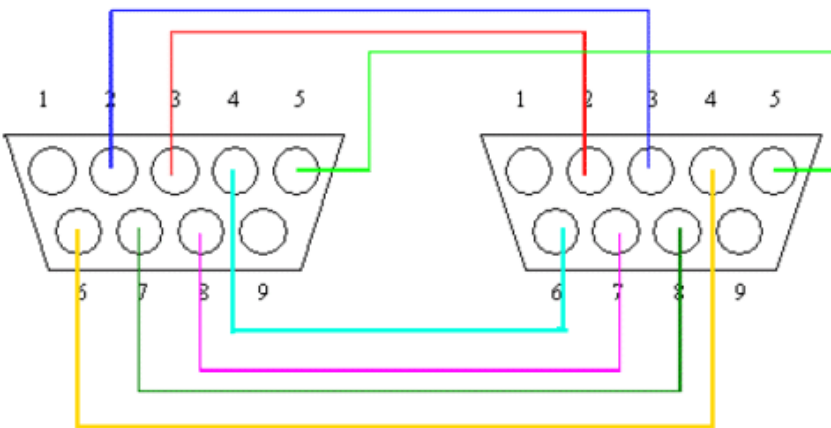


The DB9 side showed here is the one you solder the wires

Classification	System and Application FAQ on XPAC				No.	1-005-04	
Author	WeiKei	Version	1.0.1	Date	2011/6/29	Page	2/5


Connecting to COM 2

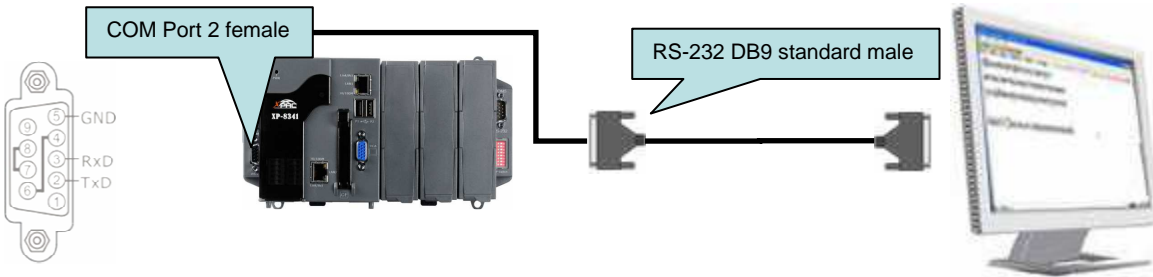

Connecting to COM 5

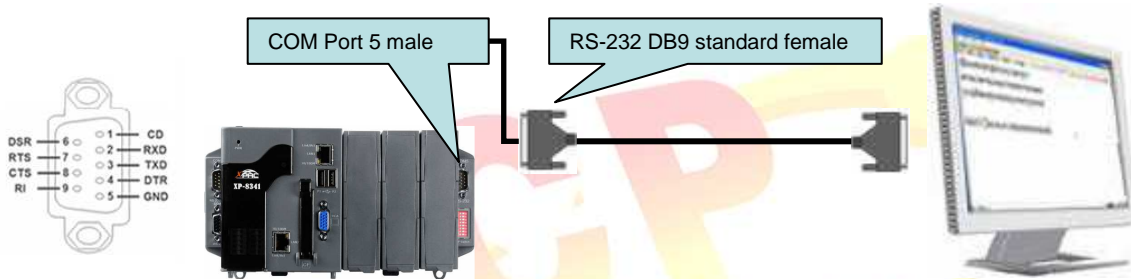

Connecting to COM 4

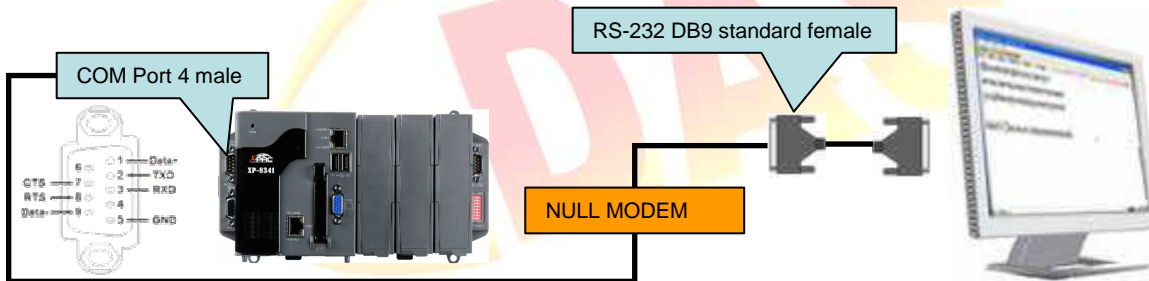

To Set your COM port and calibrate an Egalax serial touch panel, perform the following steps:

Step 1: Set your COM port.

1.1 After rebooting, select a COM Port be used to connect to the touch panel.

Classification	System and Application FAQ on XPAC					No.	1-005-04
Author	WeiKei	Version	1.0.1	Date	2011/6/29	Page	3/5

1.2 Click Start->Programs->Searial_TOUCH->Egalax->SetCom.exe




1.3 Perform the SetCOM process.



1.4 Select you use the COM port. (Default COM port is 5)

Step 2: Reboot your XPAC.

2.1. Start the XPAC utility on the desktop. **Click** the “File->Reboot” menu option.

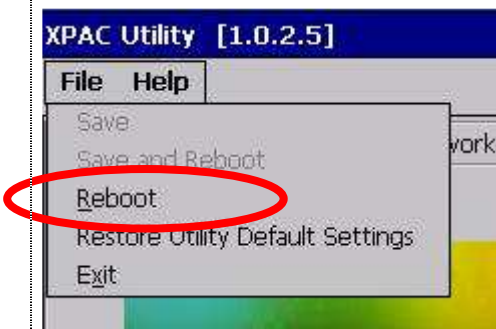

Classification	System and Application FAQ on XPAC				No.	1-005-04	
Author	WeiKei	Version	1.0.1	Date	2011/6/29	Page	4/5

2.2. **Click** the “Yes” button and wait for the device to reboot.




Step 3: Execute the calibration program.

3.1 Click Start->Programs->Searial_TOUCH->Egalax->eGalaxTouch.exe



3.2 Click the “4 Pts Cal” button. (Click the “25 Pts Cal” button to obtain a more accurate calibration for the touch panel)

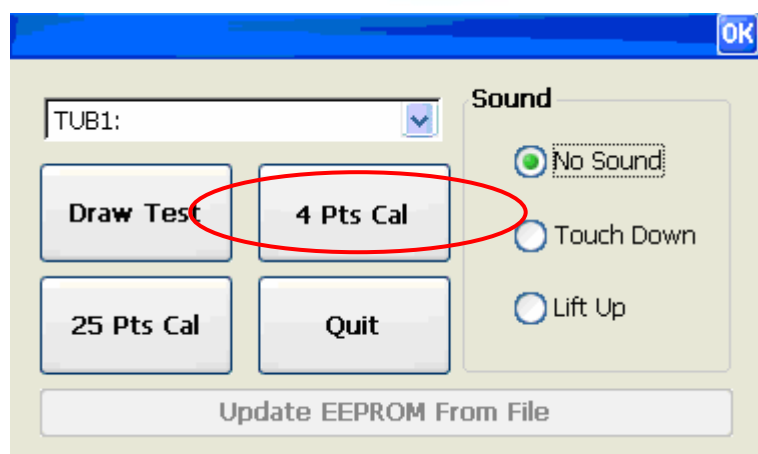

Classification	System and Application FAQ on XPAC				No.	1-005-04	
Author	WeiKei	Version	1.0.1	Date	2011/6/29	Page	5/5

3.3. Perform the calibration process.

3.4. Touch the "X" icons on the monitor to perform the calibration process.

