

FSM-6228G

28-Port Industrial Ethernet Managed Switch

Web Configuration Tool Guide

15, April 2015

[CONTENTS]

1. Introductions.....	5
1.1 System Description.....	5
1.2 Using the Web Interface	5
1.2.1 Web Browser Support	5
1.2.2 Navigation	6
1.2.3 Title Bar Icons.....	6
1.2.4 Ending a Session.....	7
1.3 Using the Online Help	7
2. Using the Web.....	8
2.1 Login.....	8
2.2 Tree View.....	9
2.2.2 Status Menu	11
2.2.3 System Menu.....	12
2.3 Configuration.....	13
2.3.1 Link Aggregation.....	13
2.3.2 802.1x Authentication.....	14
2.3.3 Layer 3	17
2.3.4 Interface VLAN	34
2.3.5 Static Route	35
2.3.6 Port Configuration.....	36
2.3.7 VLAN.....	46
2.3.8 MAC Learning & Forwarding.....	52
2.3.9 Spanning Tree Protocol (STP)	54
2.3.10 Policer.....	65
2.3.11 ACL.....	68
2.3.12 Shaper	74
2.3.13 Queue & Scheduler	76
2.3.14 Storm Control.....	79
2.3.15 IGMP.....	85
2.4 Status.....	96
2.4.1 Front Panel	96
2.4.2 Alarm/Event	97
2.4.3 DHCP Binding	99

2.4.4 Fdb.....	100
2.4.5 Giga Port Statistics.....	101
2.4.6 RMON.....	103
2.4.7 Users.....	105
2.4.8 Ring Protection Status.....	106
2.4.9 802.1x.....	109
2.4.10 IGMP.....	114
2.4.11 Layer 3	116
2.5 System	122
2.5.1 Restart	122
2.5.2 Save & Restore	123
2.5.3 Firmware	125
2.5.4 Alarm Profile	127
2.5.5 CLI Options	128
2.5.6 HTTP (HTTPS)	129
2.5.7 SLL (new)	130
2.5.8 SNTP	131
2.5.9 Syslog.....	132
2.5.10 User Administration	133
2.5.11 SNMP.....	135

1. Introductions

1.1 System Description

FSM-6228G is 28-port Managed switches deliver high quality, wide operating temperature range, extended power input range, IP-30 design, and advanced VLAN & QoS features. It's ideal for harsh environments and mission critical applications.

Managed QoS FSM-6228G provides enterprise-class networking features to fulfill the needs of large network infrastructure and extreme environments.

FSM-6228G series Managed switches ease the effort to build a network infrastructure which offers a reliable, well managed and good QoS networking for any business requiring continuous and well-protected services in industrial environments. With the features such as Fast Failover ring protection, Ethernet OAM, IEEE 1588v2 / Sync-E and QoS, customers can ensure their network is qualified to deliver any real-time and high quality applications.

1.2 Using the Web Interface

The object of this document "FSM-6228G Series Web Configuration Tool Guide" is to address the web feature, design layout and describe how to use the web interface.

1.2.1 Web Browser Support

IE 7 (or newer version) with the following default settings is recommended:

Language script	Latin based
Web page font	Times New Roman
Plain text font	Courier New
Encoding	Unicode (UTF-8)
Text size	Medium

Firefox with the following default settings is recommended:

Web page font	Times New Roman
Encoding	Unicode (UTF-8)
Text size	16

Google Chrome with the following default settings is recommended:

Web page font	Times New Roman
Encoding	Unicode (UTF-8)
Text size	Medium

1.2.2 Navigation

All main screens of the web interface can be reached by clicking on hyperlinks in the three menu boxes on the left side of the screen:

- **Status** - Display statistics, status, and contents of memory.
- **Configuration** - Configure the system, interfaces, and filters.
- **System** - Display system information, download firmware, back up configurations, and modify users.

You can find the detailed information in section 2.2 Tree View.

1.2.3 Title Bar Icons

[Logout](#)

Configuration / Bridge Port

Modify Refresh

Related: [Giga Port](#) [VLAN](#)

Previous Command Result: Normal

	Port	PVID	Default Priority	Accept Frame Type	Max MAC Limit	Max MAC	Link Mode
<input type="checkbox"/>	GE-1	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-2	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-3	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-4	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-5	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-6	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-7	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-8	1	0	All	Disabled	8	Downlink
<input type="checkbox"/>	GE-9	1	0	All	Disabled	8	Uplink
<input type="checkbox"/>	GE-10	1	0	All	Disabled	8	Uplink

Help Button

For more information about any screen, click on the Help button on the screen.

Help information is displayed in the same window.

Save Button


If any unsaved change has been made to the *configuration* (by you during this or a prior session, or by any other administrator using the web interface or the Command Line Interface), a Save icon appears in the title line. To save the running configuration to the startup configuration:

1. Click on the Save icon. The System/Save and Restore screen appears.
2. Click on Submit next to Data Control Action drop-down list on top of System/Save and Restore screen.

1.2.4 Ending a Session

To end a session, close your web browser. This prevents an unauthorized user from accessing the system using your user name and password.

1.3 Using the Online Help

Each screen has a  Help button that invokes a page of information relevant to the particular screen. The Help is displayed in a new window.

Each web page of Configuration/Status/System functions has a corresponding help page.

2. Using the Web

2.1 Login

Web Interface Login

Username:

Password:

Operation	1. Fill Username and Password 2. Click "Sign in"
Field	Description
Username	Login user name. The maximum length is 32. Default: admin
Password	Login user password. The maximum length is 32. Default: admin

2.2 Tree View

The tree view is a menu of the web. It offers user quickly to get the page for expected data or configuration.



2.2.1 Configuration Menu

VLAN

- [Static VLAN](#)
- [Protocol Based VLAN](#)
- [VLAN Translation](#)
- [VLAN Stacking](#)

MAC Learning & Forwarding

- [Fdb Static](#)
- [Aging Time](#)

Spanning Tree Protocol (STP)

- [STP Bridge](#)
- [STP Port](#)
- [MSTP Bridge](#)
- [MSTP Port](#)

Policer

- [Policer Ingress Color](#)
- [Policer Color Marking](#)
- [Ingress Policer](#)

ACL

- [Profile Entry Binding](#)
- [Mirror Analyzer Port](#)

Shaper

- [Port](#)
- [Queue](#)

Queue & Scheduler

- [CoS & Queue Mapping](#)
- [Scheduling Profile Binding](#)


Storm Control

- [Unknown Unicast Control](#)
- [Unknown Multicast Control](#)
- [Broadcast Control](#)
- [Unknown Unicast by VLAN](#)
- [Unknown Multicast by VLAN](#)
- [Broadcast by VLAN](#)


IGMP

- [ACL Profile Entry Binding](#)
- [MVR Profile Entry Binding](#)
- [VLAN Interface](#)
- [Static Group Membership](#)

2.2.2 Status Menu

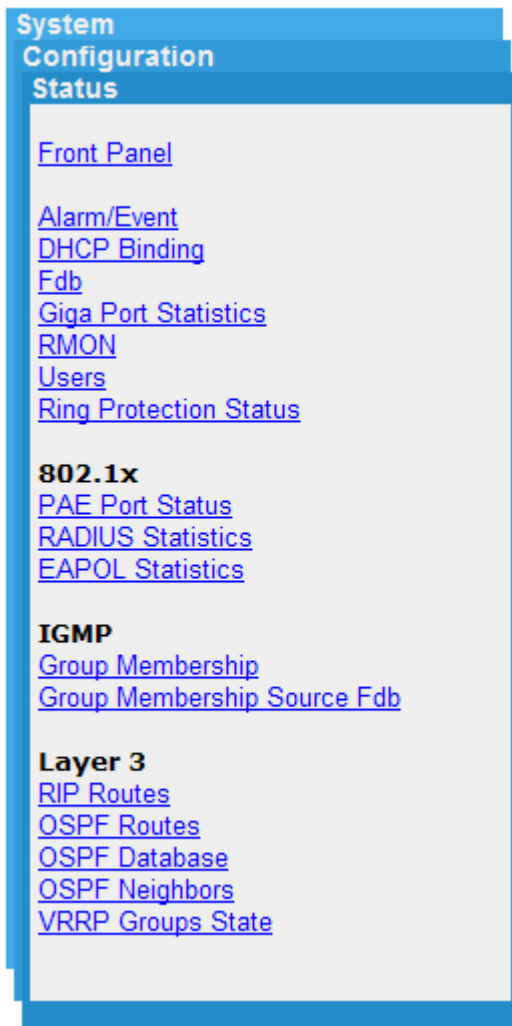

2.2.3 System Menu

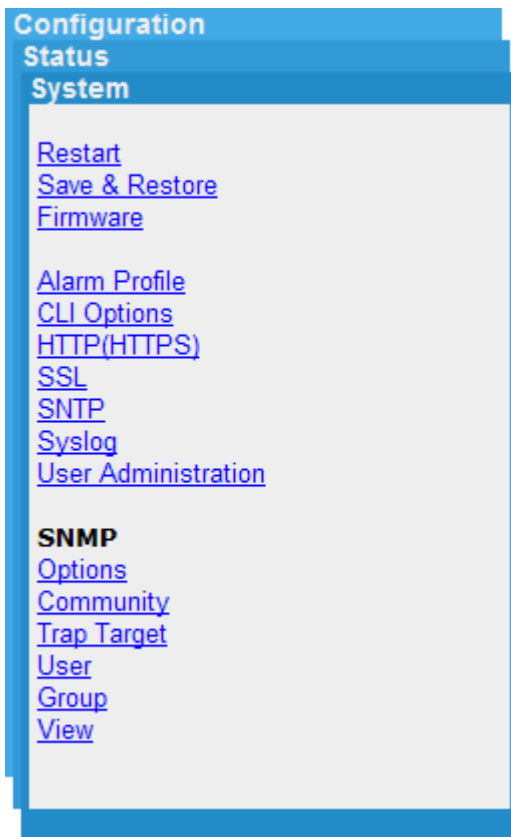

2.3 Configuration

2.3.1 Link Aggregation

Configuration / Link Aggregation

Previous Command Result: Normal

(Note: Trunk Group 1, 2, CANNOT take the same member port to each other; Max 4 member ports in a Trunk Group.)

Trunk Group 1 Disabled

Member Port									
Select Member Port									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		

Trunk Group 2 Disabled

Member Port									
Select Member Port									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select port with check box from GE-1 ~ MAX Number of Port. 2. Click Modify button.
Field	Description
Trunk Group	<p>Trunk Group number.</p> <p><u>Note:</u></p> <p>Trunk Group CANNOT take the member port that is already assigned to another Trunk Group; Max 4 member ports in a Trunk Group. Otherwise, the modification would be failed.</p>
Member Port	Display current member port of Trunk Group.
Mode	To enable/disable Link Aggregation for Trunk Group.
GE-1~MAX Number of Port	To select member ports for Trunk Group. If Link Aggregation mode is disabled, then the member port would be cleared, that represents no member port is assigned to Trunk Group.

2.3.2 802.1x Authentication

2.3.2.1 RADIUS Setting

Configuration / 802.1x / RADIUS Setting
📄 ?

Related: [RADIUS Statistics](#)

Previous Command Result: Normal

Server IP	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Auth Port	<input type="text" value="1812"/>			
Secret Key	<input type="text"/>			

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify Server IP, Authentication Port and Secret Key fields. 2. Click "Modify" button to apply change.
Field	Description
Server IP	<p>The IP address of RADIUS server.</p> <p>Allow IPv4 address. 0.0.0.0 means disable RADIUS.</p> <p>Default is 0.0.0.0.</p>
Auth Port	<p>The UDP port of RADIUS server for authentication.</p> <p>Range 1~65535.</p> <p>Default is 1812.</p>
Secret Key	<p>The key to be used between RADIUS server and Authenticator.</p> <p>Range 0~16 chars.</p> <p>Default is empty string.</p>

2.3.2.2 PAE Port Authentication

Configuration / 802.1x / PAE Port Authentication

Previous Command Result: Normal Related: [PAE Port Status](#) [EAPOL Statistics](#)

System AuthControl Disabled Modify

Modify

<input type="checkbox"/>	Port	Auth Control	ReAuth Enabled	ReAuth Period(sec)	Quiet Period(sec)	Tx Period(sec)	Supp. Timeout(sec)	Server Timeout(sec)	Max Request
<input type="checkbox"/>	1	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	2	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	3	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	4	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	5	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	6	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	7	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	8	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	9	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	10	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	11	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	12	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	13	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	14	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	15	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	16	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	17	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	18	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	19	Force_Authorized	Disabled	3600	60	30	30	30	2
<input type="checkbox"/>	20	Force_Authorized	Disabled	3600	60	30	30	30	2

Operation	<p><u>Modify System Auth. Control:</u></p> <ol style="list-style-type: none"> Select System Auth. Control. Click "Modify" button to apply change. <p><u>Modify PAE Port Authentication:</u></p> <ol style="list-style-type: none"> Update below fields. Check up the port(s) to be changed. <p>Click "Modify" button to modify PAE Port Authentication options.</p>
Field	Description
System AuthControl	Enable/Disable system 802.1x authentication function. Default value is Disabled.
Port	PAE port: 1 ~ MAX Number of Port.
Auth Control	The authentication type of PAE port. Allow Force_Unauthorized/Force_Authorized/Auto. Default is Force_Authorized.
ReAuth Enabled	Enable/Disable re-authenticate of PAE port. Default is Disable.

ReAuth Period	<p>The period of re-authenticate of PAE port.</p> <p>Range 1~3600 sec.</p> <p>Default is 3600 sec.</p>
Quiet Period	<p>The quiet period of PAE port.</p> <p>Range 1~255 sec.</p> <p>Default is 60 sec.</p>
Tx Period	<p>The timeout of authenticator waiting for EAP-Response/ Identity from supplication of PAE port.</p> <p>Range 1~255 sec.</p> <p>Default is 30 sec.</p>
Supp. Timeout	<p>The timeout of authenticator wait for EAP-Response (exclude EAP-Request/Identify) after sending EAP-Request.</p> <p>Range 1~255 sec.</p> <p>Default is 30 sec.</p>
Server Timeout	<p>The timeout time of Authenticator wait Access-Challenge/ Access-Accept/ Access-Reject after sending Access-Request.</p> <p>Range 1~255 sec.</p> <p>Default is 30 sec.</p>
Max Request	<p>The max times of backend Authenticator send EAP-Request to supplicant before restarting the authentication process.</p> <p>Range 1~10.</p> <p>Default is 2.</p>

2.3.3 Layer 3

2.3.3.1 Interface VLAN

Configuration / Interface VLAN

Previous Command Result: Normal Related: [DHCP Server](#) [DHCP Binding](#)

IP Routing
Disabled
▼
Modify

Create New
VID:
IP Address: . . .
Netmask: . . .

Modify
Delete

	VID	IP Address	Netmask	Mac Address
<input type="checkbox"/>	1	192.168.8.238	255.255.0.0	00:11:22:DD:F0:00

Operation	<p><u>Modify the IP Routing:</u></p> <ol style="list-style-type: none"> 1. Select IP Routing field. 2. Click "Modify" button to apply change. <p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Fill VID, IP Address and Netmask. 2. Click "Create New" button to create Interface VLAN. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Multi-select a row data in Interface VLAN table. 2. Click "Delete" button to delete Interface VLAN.
Field	Description
IP Routing	Layer 3 IP routing/forward. Allow Disabled/Enabled. Default value is Disabled.
VID	The identity for the VLAN Interface. Range 1~4094. 1st RIP interface VLAN always exist for VLAN 1. (Only support set can't be deleted)
IP Address	IP address for the VLAN interface. Range 0~255. Default value is 0.

Netmask	Network subnet mask for the VLAN interface. Range 0~255. Default value is 0.
Mac Address	MAC address for the VLAN interface. Read only.

2.3.3.2 Static Route

Configuration / Static Route

Previous Command Result: Normal

Default Gateway

Modify

Create New

Destination:

Netmask:

Gateway:

Delete

Index
Destination
Netmask
Gateway

Operation	<p><u>Modify default gateway:</u></p> <p>Click "Modify" button to apply new gateway.</p> <p><u>Create new static route:</u></p> <ol style="list-style-type: none"> 1. Fill Destination, Netmask and Gateway. 2. Click "Create New" button to create one static route. <p><u>Delete static route:</u></p> <ol style="list-style-type: none"> 1. Select static route entry(s). 2. Click "Delete" button to delete selection.
Field	Description
Default Gateway	Input default gateway IP address for management and Layer3 VLAN interface routing.
Destination	Destination network address of static route.
Netmask	Network subnet mask for the route.
Gateway	Next hop IP address for the destination network.
Index	The index of the static route.

2.3.3.3 RIP v1/v2

Configuration / RIP v1/v2
📄 ?

Previous Command Result: Normal Related: [RIP Route Table](#)

Modify

RIP Mode	Disabled ▾	Enable/Disable RIP protocol. Value range Disabled/Enabled. Default is Disabled.
Routing Update Time (sec)	30	Routing table update timer. Value range is 20~3600. Default is 30 sec.
Garbage Collection Timeout (sec)	120	Garbage collection timer. Value range is 20~3600. Default is 120 sec.
Routing Timeout (sec)	180	Routing information timeout timer. Value range is 20~3600. Default is 180 sec.

Create

VID	Auth Type	Auth Key	Send Version	Recv Version	Split Horizon
1 ▾	Disabled ▾	N/A	No Send ▾	No Recv ▾	Disabled ▾

Modify


Delete

	VID	Auth Type	Auth Key	Send Version	Recv Version	Split Horizon
<input type="checkbox"/>						

Operation	<p><u>Modify RIP settings:</u></p> <ol style="list-style-type: none"> 1. Select RIP Mode, Routing Update Time, Garbage Collection Timeout and Routing Timeout. 2. Click "Modify" button to apply changes. <p><u>Create RIP interface VLAN settings:</u></p> <ol style="list-style-type: none"> 1. Create VID, RIP Mode, Auth Type, Auth Key, Send Version, Recv Version and Split Horizon. 2. Click "Modify" button to apply changes. <p><u>Modify RIP interface VLAN settings:</u></p> <ol style="list-style-type: none"> 1. Modify RIP Mode, Auth Type, Auth Key, Send Version, Recv Version and Split Horizon. 2. Click "Modify" button to apply changes.
Field	Description
RIP Mode	<p>RIP protocol mode.</p> <p>Allow Disabled/Enabled.</p> <p>Default value is Disabled.</p>

Routing Update Time	<p>Routing table update timer.</p> <p>Range is 20~3600.</p> <p>Default value is 30 sec.</p>
Garbage Collection Timeout	<p>Garbage collection timer.</p> <p>Range is 20~3600.</p> <p>Default value is 120 sec.</p>
Routing Timeout	<p>Routing information timeout timer.</p> <p>Range is 20~3600.</p> <p>Default value is 180 sec.</p>
VID	<p>The identity for the RIP interface VLAN.</p> <p>Range 1~4094.</p> <p>1st RIP interface VLAN always exists for VLAN 1. (Only support set can't be deleted)</p>
RIP Mode	<p>RIP Mode is used to enable RIP on an VLAN interface.</p> <p>Range Disabled/Enabled.</p> <p>Default value is Disabled.</p>
Auth Type	<p>Auth Type is the type of Authentication used on this interface.</p> <p>Range Disabled/Enabled.</p> <p>Default value is Disabled.</p>
Auth Key	<p>The Authentication Key.</p> <p>The max is 16 chars.</p> <p>The default value is empty string which is all nulls.</p>
Send Version	<p>Version of RIP packet sent from this interface.</p> <p>Range No Send/RIP 1/RIP 2/ Both</p> <p>The default value is RIP1.</p>
Recv Version	<p>Version of RIP packet which will be received by this interface.</p> <p>Range No Recv/RIP 1/RIP 2/ RIP 1 or RIP 2.</p> <p>Default value is RIP 1 or RIP 2.</p>
Split Horizon	<p>Split Horizon is used to control split horizon routing update behavior.</p> <p>Range Disabled/ Simple /Poison.</p> <p>Default value is Simple.</p>

2.3.3.4 RIP Redistribute

Configuration / RIP Redistribute  

Previous Command Result: Normal Related: [RIP Route Table](#)

Protocol	State	Metric
Connect	Disabled <input type="button" value="v"/>	0 <input type="text" value="0"/>
Static	Disabled <input type="button" value="v"/>	0 <input type="text" value="0"/>
OSPF	Disabled <input type="button" value="v"/>	0 <input type="text" value="0"/>

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify State, and Metric. 2. Click "Modify" button to apply changes.
Field	Description
Protocol	RIP Redistribute System support Connect, Static, OSPF Three entry Protocol.
State	Disabled / Enabled Protocol.
Metric	<p>Range is 0~ 16.</p> <p>Default value is 0.</p>

2.3.3.5 OSPF Config

Configuration / OSPF Config
🖨️ ?

Previous Command Result: Normal Related: [OSPF Redistribute](#) [OSPF STUB/NSSA](#) [OSPF Virtual-Link](#)

OSPF	Disabled ▾	OSPF Enabled/Disabled Mode.
ABR Type	Cisco ▾	Set OSPF ABR Type. Cisco: Alternative ABR, cisco implementation. Shortcut: Shortcut ABR. Standard: Standard behavior (RFC2328).
RFC1583	Disabled ▾	Enabled/Disabled RFC1583 compatibility.
Router-ID	0 . 0 . 0 . 0	Router-ID for the OSPF Process.

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify OSPF, ABR Type, RFC 1583, and Router-ID. 2. Click "Modify" button to apply changes.
Field	Description
OSPF	Value range Disabled/Enabled, default is Disabled.
ABR Type	Set OSPF ABR Type. Cisco: Alternative ABR, cisco implementation. Shortcut: Shortcut ABR. Standard: Standard behavior (RFC2328).
RFC 1583	Enabled/Disabled RFC1583 compatibility. Value range Disabled/Enabled, default is Disabled.
Route-ID	Router-ID for the OSPF Process.

2.3.3.6 OSPF Redistribute

Configuration / OSPF Redistribute

Previous Command Result: Normal Related: [OSPF Config](#) [OSPF STUB/NSSA](#) [OSPF Virtual-Link](#)

Protocol	State	Metric Type	Metric
Connect	Disabled <input type="button" value="v"/>	External Type 2 <input type="button" value="v"/>	20
Static	Disabled <input type="button" value="v"/>	External Type 2 <input type="button" value="v"/>	20
RIP	Disabled <input type="button" value="v"/>	External Type 2 <input type="button" value="v"/>	20

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify State, Metric Type, and Metric. 2. Click "Modify" button to apply changes.
Field	Description
Protocol	OSPF Redistribute System supports Connect, Static, RIP Three entry Protocol.
State	Disabled / Enabled Protocol.
Metric Type	Select External Type1, External Type2, Default: External Type2.
Metric	<p>Range is 0~ 16777214.</p> <p>Default value is 20.</p>

2.3.3.7 OSPF STUB/NSSA

Configuration / OSPF STUB/NSSA
📄 ?

Previous Command Result: Success Related: [OSPF Redistribute](#) [OSPF Config](#) [OSPF Virtual-Link](#)

Create New
 Area ID: . . .

Type : STUB

Translate : Disabled

Modify
Delete

	Area ID	Type	Translate
<input type="checkbox"/>	<input style="width: 20px;" type="text" value="0"/> . <input style="width: 20px;" type="text" value="0"/> . <input style="width: 20px;" type="text" value="0"/> . <input style="width: 20px;" type="text" value="2"/>	STUB	Disabled

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Fill the fields of Area ID, Type, and Translate. 2. Click "Create New" to create a new Area ID. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify Area ID, Type, and Translate . 2. Click "Modify" button to apply changes. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. To select checkbox. 2. Click "Delete" button to Delete OSPF STUB/NSSA.
Field	Description
Area ID	IP Address Format Range 0.0.0.1~ 255.255.255.255.
Type	<ol style="list-style-type: none"> 1. STUB (No support Translate Function) 2. STUB NO SUMMARY (No support Translate Function) 3. NSSA 4. NSSA NO SUMMARY
Translate	Range: Disabled / Enabled. Default: Disabled.

2.3.3.8 OSPF Virtual-Link

Configuration / OSPF Virtual-Link

Previous Command Result: Normal Related: [OSPF Config](#) [OSPF Redistribute](#) [OSPF STUB/NSSA](#)

Area ID: ...
Neighbor ID: ...

	Area ID	Neighbor ID
<input type="checkbox"/>	0.0.0.2	0.0.255.255

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Fill the fields of Area ID, and Neighbor ID. 2. Click "Create New" to create OSPF Virtual-Link. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. To select checkbox. 2. Click "Delete" button to Delete OSPF Virtual-Link .
Field	Description
Area ID	IP Address Format Range 0.0.0.1~ 255.255.255.255.
Neighbor ID	IP Address Format Range 0.0.0.0~ 255.255.255.255.

2.3.3.9 OSPF Interface Config

Configuration / OSPF Interface Config 📄 ?

Modify
Delete

Previous Command Result: Normal

Interface VLAN: 1

- No data -

Modify:

Configuration / OSPF Interface Config 📄 ?

Modify
Delete

Previous Command Result: Success

Interface VLAN: 1

Area ID	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>	OSPF Area ID as a Decimal Value.
Network Type	Broadcast	1. Point to Point: Specify OSPF point-to-point network. 2. Broadcast: Specify OSPF broadcast multi-access network. 3. No Broadcast: Specify OSPF NBMA network. 4. Point to Multi-Point: Specify OSPF point-to-multipoint network.
Priority	<input type="text" value="1"/>	Router priority. Value Range 0-255, Default Value 1.
Cost	<input type="text" value="10"/>	Interface cost. Value Range 1-65535, Default Value 10.
Hello-Interval	<input type="text" value="10"/>	Time between HELLO packets. Value Range 1-65535, Default Value 10.
Dead-Interval	<input type="text" value="40"/>	Interval after which a neighbor is declared dead. Value Range 1-65535, Default Value 40.
Retransmit-Interval	<input type="text" value="5"/>	Time between retransmitting lost link state advertisements. Value Range 3-65535, Default Value 5.
Transmit-Delay	<input type="text" value="1"/>	Link state transmit delay. Value Range 1-65535, Default Value 1.
MTU-Ignore	Disabled	Disable mtu mismatch detection.
Auth Mode / Auth-key	Disabled <input style="width: 50px;" type="text"/>	1. Simple Mode: Support Authentication-key Config. 2. Crypt Mode: Support Message Digest Key-ID and Message Digest Key Config. Authentication password (key)
Message Digest Key-ID / Key	<input type="text" value="1"/> / <input style="width: 50px;" type="text"/>	Message Digest Key-ID: Message digest authentication password (key)Key ID Range: 1-255. Message Digest Key: The OSPF password (key) (maximum 16 characters).

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> To modify setting data Click "Modify" button to modify OSPF Interface Config data. <p><u>Delete:</u></p> <p>Click "Delete" button to delete OSPF Interface Config data..</p>
Field	Description
Area ID	OSPF Area ID as a Decimal Value.
Network Type	<ol style="list-style-type: none"> Point to Point: Specify OSPF point-to-point network. Broadcast: Specify OSPF broadcast multi-access network. No Broadcast: Specify OSPF NBMA network. Point to Multi-Point: Specify OSPF point-to-multipoint network.
Priority	<p>Router priority.</p> <p>Value Range 0~255, Default Value 1.</p>
Cost	<p>Interface cost.</p> <p>Value Range 1~65535, Default Value 10.</p>
Hello-Interval	<p>Time between HELLO packets.</p> <p>Value Range 1~65535, Default Value 10.</p>
Dead-Interval	<p>Interval after which a neighbor is declared dead.</p> <p>Value Range 1~65535, Default Value 40.</p>
Retransmit-Interval	<p>Time between retransmitting lost link state advertisements.</p> <p>Value Range 3~65535, Default Value 5.</p>
Transmit-Delay	<p>Link state transmit delay.</p> <p>Value Range 1~65535, Default Value 1.</p>
MTU-Ignore	Disable mtu mismatch detection.
Auth Mode / Auth-key	<ol style="list-style-type: none"> Simple Mode: Support Authentication-key Config. Crypt Mode: Support Message Digest Key-ID and Message Digest Key Config. Authentication password (key)
Message Digest Key-ID / Key	<p>Message Digest Key-ID: Message digest authentication password (key)Key ID Range: 1~255.</p> <p>Message Digest Key: The OSPF password (key) (maximum 16 characters).</p>

2.3.3.10 OSPF Neighbor Config

Configuration / OSPF Neighbor Configure

Previous Command Result: Normal Related: [OSPF Config](#) [OSPF Redistribute](#) [OSPF STUB/NSSA](#)

Address: . . .
Poll-Interval:
Priority :

	Address	Poll-Interval	Priority

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. To fill Address, Poll-Interval and Priority 2. Click "Create New" button to create OSPF Neighbor Config. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. To modify setting data 2. Select checkbox 3. Click "Modify" button to modify OSPF Neighbor Config data. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select checkbox 2. Click "Delete" button to delete OSPF Neighbor Config data.
Field	Description
Address	IP Address Format Range 0.0.0.1~ 255.255.255.255.
Poll-Interval	Value Range 1~65535 second, Default Value 60.
Priority	Value Range 1~255, Default Value 0.

2.3.3.11 VRRP Group Config

Configuration / VRRP Group Config
?

Related: [VRRP Group State](#)

Previous Command Result: Normal

<input type="checkbox"/>	VLAN Interface	VRRP ID	Virtual Router Address	Advertise-Interval (0.1sec)	Priority	Preemption	Learn Master's adv-interval	Auth Mode
<input type="checkbox"/>	1	0	0 . 0 . 0 . 0	10	100	Enabled	Disabled	Disabled

Operation	<p><u>Modify (Create):</u></p> <ol style="list-style-type: none"> 1. Fill first row data. 2. Click "Modify" button to Modify (Create) VRRP Group Config data. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Update setting data. 2. Select a row item selected. 3. Click "Modify" button to Modify VRRP Group Config data. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select a row item selected. 2. Click "Delete" button to Delete VRRP Group Config data.
Field	Description
VLAN Interface	The identity for the VLAN Interface. Range 1~4094.
VRRP ID	VRRP group index identity.
Virtual Router Address	Virtual router IP should be in same subnet with VLAN interface. Different VRRP group should not have same virtual router IP.
Advertise-Interval (0.1sec)	Value Range 1~2550, Default Value 10. Value 10 stands for 1 second. (0.1s * 10 = 1s)
Priority	Value Range 1~254, Default Value 100.
Preemption	Range: Disabled / Enabled Default: Enabled.

Learn Master's adv-interval	Range: Disabled / Enabled Default: Disabled.
Auth Mode	Range: Disabled / Enabled Default: Disabled. Enabled Support VRRP Group Auth Data.

2.3.3.12 DHCP Server

Configuration / DHCP Server

Previous Command Result: Normal Related: [Interface VLAN](#) [DHCP Binding](#)

DHCP Server	Disabled	▼	
Lease Time	86400	seconds	<input type="button" value="Modify"/>

Pool	DHCP Server Setting	Modify
1	Network: -- / -- Address Range: -- ~ -- Default Router: -- Domain Name: -- DNS: -- Lease Time: --	<input type="button" value="Modify"/> <input type="button" value="Disable"/>
2	Network: -- / -- Address Range: -- ~ -- Default Router: -- Domain Name: -- DNS: -- Lease Time: --	<input type="button" value="Modify"/> <input type="button" value="Disable"/>
3	Network: -- / -- Address Range: -- ~ -- Default Router: -- Domain Name: -- DNS: -- Lease Time: --	<input type="button" value="Modify"/> <input type="button" value="Disable"/>
4	Network: -- / -- Address Range: -- ~ -- Default Router: -- Domain Name: -- DNS: -- Lease Time: --	<input type="button" value="Modify"/> <input type="button" value="Disable"/>

Modify:

Configuration / DHCP Server - Modify

Pool 1

Network	Subnet:	0	0	0	0
	Netmask:	0	0	0	0
Address Range	Start IP:	0	0	0	0
	End IP:	0	0	0	0
Default Router	0 . 0 . 0 . 0				
Domain Name	<input style="width: 95%;" type="text"/>				
DNS	0 . 0 . 0 . 0				
Lease Time	86400	seconds			

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Fill the fields of DHCP server and Lease time. 2. Click "Modify" to apply changes
------------------	---

	<ol style="list-style-type: none"> 1. Click "Modify" button to enter "DHCP server - Modify" page. 2. Fill the data. 3. Click "Apply" to apply changes or Click "Cancel" to cancel and go back to main page of DHCP server. <p><u>Disable:</u></p> <p>To disable the specific DHCP pool. DHCP server won't be closed, if any DHCP pool is still active.</p>
Field	Description
Network	<p>Network subnet and netmask.</p> <p>It should match IP address subnet of specific VLAN interface.</p>
Address Range	<p>It indicates available range of address for DHCP client. Both Start-IP and End-IP must in the same subnet of the network setting. And the Start-IP must smaller than End-IP.</p> <p>Max. DHCP Pool size is 1024 per system.</p>
Default Router	Default-router in this network.
Domain Name	<p>Domain name of this network.</p> <p>Max. length is 64 characters.</p>
DNS	DNS server of this network.
Lease Time	<p>Define the lease time for IP Address lease.</p> <p>(Range: 1 ~ 31536000 seconds)</p>

2.3.4 Interface VLAN

Configuration / Interface VLAN

Previous Command Result: Normal

VID:
IP Address: . . .
Netmask: . . .

	VID	IP Address	Netmask	Mac Address
<input type="checkbox"/>	1	172 . 16 . 100 . 115	255 . 255 . 255 . 0	00:05:65:72:41:76

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Fill VID, IP Address and Netmask 2. Click "Create New" button to create Interface VLAN. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Multi-select a row data in Interface VLAN table. 2. Click "Delete" button to delete Interface VLAN.
Field	Description
VID	The identity for the VLAN Interface. Range 1~4094. 1st RIP interface VLAN always exist for VLAN 1. (Only support set can't be deleted)
IP Address	IP address for the VLAN interface. Range 0~255. Default value is 0.
Netmask	Network subnet mask for the VLAN interface. Range 0~255. Default value is 0.
Mac Address	MAC address for the VLAN interface. Read only.

2.3.5 Static Route

Configuration / Static Route

Previous Command Result: Normal

Default Gateway

Modify

Create New
Delete

Destination: ...

Netmask: ...

Gateway: ...

Index
 Destination
 Netmask
 Gateway

Operation

Modify:

Click "Modify" button to apply new gateway.

Create:

1. Fill Destination, Netmask and Gateway.
2. Click "Create New" button to create one static route.

Delete:

1. Select static route entry(s).
2. Click "Delete" button to delete selection.

Field	Description
Default Gateway	Input default gateway IP address for management and Layer3 VLAN interface routing
Destination	Destination network address of static route.
Netmask	Network subnet mask for the route.
Gateway	Next hop IP address for the destination network.
Index	The index of the static route.

2.3.6 Port Configuration

2.3.6.1 Bridge Port

Configuration / Bridge Port

Modify
Related: [Giga Port](#), [VLAN](#)

Previous Command Result: Normal

	Port	PVID	Default Priority	Accept Frame Type	Max MAC Limit	Max MAC
<input type="checkbox"/>	GE-1	1	0	All	Disabled	8
<input type="checkbox"/>	GE-2	1	0	All	Disabled	8
<input type="checkbox"/>	GE-3	1	0	All	Disabled	8
<input type="checkbox"/>	GE-4	1	0	All	Disabled	8
<input type="checkbox"/>	GE-5	1	0	All	Disabled	8
<input type="checkbox"/>	GE-6	1	0	All	Disabled	8
<input type="checkbox"/>	GE-7	1	0	All	Disabled	8
<input type="checkbox"/>	GE-8	1	0	All	Disabled	8
<input type="checkbox"/>	GE-9	1	0	All	Disabled	8
<input type="checkbox"/>	GE-10	1	0	All	Disabled	8
<input type="checkbox"/>	GE-11	1	0	All	Disabled	8
<input type="checkbox"/>	GE-12	1	0	All	Disabled	8
<input type="checkbox"/>	GE-13	1	0	All	Disabled	8
<input type="checkbox"/>	GE-14	1	0	All	Disabled	8
<input type="checkbox"/>	GE-15	1	0	All	Disabled	8
<input type="checkbox"/>	GE-16	1	0	All	Disabled	8
<input type="checkbox"/>	GE-17	1	0	All	Disabled	8
<input type="checkbox"/>	GE-18	1	0	All	Disabled	8
<input type="checkbox"/>	GE-19	1	0	All	Disabled	8
<input type="checkbox"/>	GE-20	1	0	All	Disabled	8
<input type="checkbox"/>	GE-21	1	0	All	Disabled	8

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Enter or select row by checking up check box. 2. Modify the configuration 3. Press "Modify" button to apply modification. <p><u>Refresh:</u></p> <ol style="list-style-type: none"> 1. Click "Refresh" button to get current data.
Field	Description
Port	Bridge port number

PVID	Value: 1~4094. Default value is 1.
Default Priority	Default Priority value: 0~7. Default is 0.
Accept Frame Type	Type: All/ OnlyVlanTagged/ Only Untagged. Default is All.
Max MAC Limit	Range: Enabled/ Disabled. Default is Disabled.
Max MAC	Range: 0~32. Default is 8.

2.3.6.2 Giga Port

Configuration / Giga Port

Related: [Giga Port Statistics](#), [Bridge Port](#).

Previous Command Result: Normal

	Port	Admin Status	Link Mode	Link Status	Flow Control
<input type="checkbox"/>	GE-1	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-2	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-3	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-4	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-5	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-6	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-7	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-8	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-9	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-10	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-11	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-12	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-13	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-14	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-15	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-16	Enabled	Auto	Copper / 1000Mbps Full-Duplex	Disabled
<input type="checkbox"/>	GE-17	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-18	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-19	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-20	Enabled	Auto	Link Down	Disabled
<input type="checkbox"/>	GE-21	Enabled	Auto	Link Down	Disabled

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Select a row item to selected 2. Set or select the following fields. 3. Click "Modify" button to modify.
Field	Description
Port	GE-1~ MAX Number of Port.
Admin Status	Enabled/Disabled, default is Enabled.
Link Mode	Configuration for Link Mode: Auto (default is Auto) 10Mbps Half/Full Duplex 100Mbps Half/Full Duplex 1000Mbps Full Duplex 2500Mbps Full Duplex (only in some model)

Link Status	Display Link type and speed Possible Type: Copper/ SFP Possible Status: 10Mbps Half-Duplex or Full-Duplex 100Mbps Half-Duplex or Full-Duplex 1000Mbps Full-Duplex 2500Mbps Full-Duplex (only in some model)
Copper/ SFP Priority	Only some model supports Copper/SFP combo port, default is SFP first.
Flow Control	Range: Enabled/Disabled, default=Disabled.

2.3.6.3 Port Isolation

Configuration / Port Isolation

Related: [Giga Port](#), [Giga Port Statistics](#), [Bridge Port](#)

Previous Command Result: Normal

Port: GE-1 Modify

GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
-	N	N	N	N	N	N	N	N	N
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
N	N	N	N	N	N	N	N	N	N
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
N	N	N	N	N	N	N	N		

Port Isolation-Modify

Configuration / Port Isolation-Modify

Source Port GE-1

Port 1~10									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
-	N	N	N	N	N	N	N	N	N
Port 11~20									
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
N	N	N	N	N	N	N	N	N	N
Port 21~28									
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
N	N	N	N	N	N	N	N		

Disable All
Enable All



Apply
Cancel

Y: Enable Port Isolation
N: Disable Port Isolation
-: Not permit setting(Isolation port is the same as source port).

Operation	<p><u>Modify:</u></p> <p>Click "Modify" button to open modification page.</p> <p><u>Port Isolation - Modify:</u></p> <ol style="list-style-type: none"> 1. Click "Disable All", "Enable All" or click on (Y/N/-) to change isolation setting by port. 2. Click "Apply" to apply change or Press "Cancel" to cancel and go back to main page of Isolation.
Field	Description
Source Port	GE-1 ~ MAX Number of Port.
Isolation Port	<p>Option: Y/ N/ -.</p> <p>Y: Isolation is true</p> <p>N: Isolation is false</p> <p> -: Not permit setting (Isolation port is the same as source port)</p>
Disable All	Disable Isolation to all ports
Enable All	Enable Isolation to all ports
Apply	Apply setting data.
Cancel	Cancel setting data.

2.3.6.4. Jumbo Frame

Configuration / Jumbo Frame

Related: [Bridge Port](#).

Previous Command Result: Normal

Jumbo Frame	Disabled	Enabled/Disabled, default=Disabled
Size	1536	bytes, default=1536

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Jumbo Frame	Option: Enabled/ Disabled, Default is Disabled.
Size	Range: 1536–9000 bytes, Default is 1536 bytes.

2.3.6.5 Port Mirror

Configuration / Port Mirror

Modify
Related: [Giga Port](#)

Previous Command Result: Normal

Port Mirror	Disabled
Monitored Port	GE-1
Tx Analyzer Port	GE-1
Rx Analyzer Port	GE-1

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Modify the configuration 2. Click "Modify" button to apply change
Field	Description
Port Mirror	Enable/Disable Port Mirror function, default is Disabled.
Monitored Port	Value range is GE-1 ~ Port MAX Number, default is GE-1. Port to be monitored.
Tx Analyzer Port	Value range is GE-1 ~ Port MAX Number, default is GE-1. It monitors 'out' packet of monitored port.
Rx Analyzer Port	Value range is GE-1 ~ Port MAX Number, default is GE-1. It monitors 'in' packet of monitored port.

2.3.6.6 Ring Protection

Configuration / Ring Protection

Previous Command Result: Normal

Group	1	2	3
Ring ID	<input type="text" value="1"/>	<input type="text" value="2"/>	<input type="text" value="3"/>
Ring Mode	Disabled ▾	Disabled ▾	Disabled ▾
Role	Slave ▾	Slave ▾	Slave ▾
Inter-Connection	Disabled ▾	Disabled ▾	Disabled ▾
Guard Timer (Range: 10-3600, Unit: sec)	<input type="text" value="10"/>	<input type="text" value="10"/>	<input type="text" value="10"/>
Protect Port	Node 2 ▾	Node 2 ▾	Node 2 ▾
Node 1	GE-1 ▾ SF ▾	GE-3 ▾ SF ▾	GE-5 ▾ SF ▾
Node 2	GE-2 ▾ SF ▾	GE-4 ▾ SF ▾	GE-6 ▾ SF ▾
Discovery Mode	Disabled ▾	Disabled ▾	Disabled ▾
Discovery Timer (Range: 10-300, Unit: sec)	<input type="text" value="10"/>	<input type="text" value="10"/>	<input type="text" value="10"/>
	<input type="button" value="Modify"/>	<input type="button" value="Modify"/>	<input type="button" value="Modify"/>

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> Modify the configuration <p>Press “Modify” button to apply change.</p>
Field	Description
Group	The group index. This parameter is used for easy to identify the ring when user to configure it.
Ring ID	The Ring parameter is used for identify whether ring in same group on protocol level. Range: 1 ~ 255.
Ring Mode	Enable Ring on the specify group.
Role	Enable the Ring group on this switch as Master, else the switch will be Slave of the Ring group.
Inter-Connection	Enable the Ring group as inter-connection group for coupling and multi-homing application. For detail, see application notes.

Guard Time	<p>Guard timer is a timeout value for count down a port from blocking to forwarding state when link up. This is in order to protect the ring do not switch the protection state from Active to Idle frequently when link status is not stable.</p> <p>Range: 10 ~ 3600 seconds. Default value is 10 seconds.</p>
Protect Port	<p>Select Node1 or Node2 as Ring protection port when the switch is the Master of the Ring. This parameter only can modify in Master of Ring.</p>
Node 1	<p>Select port of Node1. And also you need to select the port type SF or Non-SF when inter-connection is enabled.</p> <p>SF port (In general case, all of the ring ports must configure as SF port) or Non-SF port (Only use for coupling or multi-homing application).</p> <p>For detail, see application notes.</p>
Node 2	<p>Select port of Node2. And also you need to select the port type SF or Non-SF when inter-connection is enabled.</p> <p>SF port (In general case, all of the ring ports must configure as SF port) or Non-SF port (Only use for coupling or multi-homing application).</p> <p>For detail, see application notes.</p>
Discovery Mode	<p>Enable the ring neighbor discovery protocol. This parameter only for management purpose.</p> <p>It is in order to let management system to well identify the ring topology.</p>
Discovery Timer	<p>Discovery timer is the timeout value for count down to send ring neighbor discovery protocol to other ring nodes for ring topology discovery purpose.</p> <p>Range: 10 ~ 300 seconds. Default value is 10 seconds.</p>

2.3.7 VLAN

2.3.7.1 Static VLAN

Configuration / VLAN

Create New Related: [Bridge Port](#)

VID: 1 (default)

Previous Command Result: Normal

Port 1 ~ 10									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
U	U	U	U	U	U	U	U	U	U
Port 11 ~ 20									
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
U	U	U	U	U	U	U	U	U	U
Port 21 ~ 28									
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
U	U	U	U	U	U	U	U		

Create New VLAN

Configuration / VLAN - Create

VID **Name**

Port 1 ~ 10									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
-	-	-	-	-	-	-	-	-	-
Port 11 ~ 20									
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
-	-	-	-	-	-	-	-	-	-
Port 21 ~ 28									
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
-	-	-	-	-	-	-	-		

T: Tagged
U: Untagged
-: None

Modify VLAN

Configuration / VLAN - Modify

VID Name

Port 1 ~ 10									
GE-1	GE-2	GE-3	GE-4	GE-5	GE-6	GE-7	GE-8	GE-9	GE-10
U	U	U	U	U	U	U	U	U	U
Port 11 ~ 20									
GE-11	GE-12	GE-13	GE-14	GE-15	GE-16	GE-17	GE-18	GE-19	GE-20
U	U	U	U	U	U	U	U	U	U
Port 21 ~ 28									
GE-21	GE-22	GE-23	GE-24	GE-25	GE-26	GE-27	GE-28		
U	U	U	U	U	U	U	U		

Set All Ports to None

Set All Ports to Tagged

Set All Ports to Untagged

Apply

Cancel

T: Tagged

U: Untagged

—: None

Operation

Create New:

1. Click "Create New" button to open "Create New" page.
2. Set VID and Name.
3. Click fields to change status.
4. Click "Apply" button to create, or click "Cancel" button to cancel.

Modify:

1. Click "Modify" button to open "Modify" page.
2. Modify Name.
3. Click "Apply" button to modify, click "Cancel" button to cancel.

Delete:

1. Choice "VID" to select.
2. Click "Delete" to delete selected VLAN.

Refresh:

1. Click "Refresh" button to get current data.

47

Field	Description
VID	Value: 1~4094. Default value is 1.
Name	Range:0~32 characters
Tagged	Range: T/ U/ - . T: Tagged U: Untagged - : None (not join this VLAN)
Set All Ports to None	Set all ports to None (no port join this VLAN) -
Set All Ports to Tagged	Set all ports join the VLAN as Tagged. T
Set All Ports to Untagged	Set all ports join the VLAN as Untagged. U

2.3.7.2 Protocol Based VLAN

Configuration / Protocol Based VLAN

Create New

Port: GE-1

SVLAN:

S-Prio:

Ether Type: PPPoE Discovery Stage (0x8863)

Delete

Previous Command Result: Normal

Index

Port

Ether Type

SVLAN

S-Prio

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to Create New page. 2. Set Port and Ether Type, input SVLAN and S-Prio. 3. Click Create New button. (Max entry: 10.) <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select Index with check box. <p>Click "Delete" button to delete data.</p>
Field	Description
Index	Index 1~10.
Port	Protocol-base VLAN config port number, Port range: 1 ~ MAX Number of Port.
Ether Type	<p>Select Ether Type:</p> <ol style="list-style-type: none"> 1. PPPoE Discovery Stage (0x8863). 2. PPPoE Session Stage (0x8864). 3. Internet Protocol (0x0800). 4. Address Resolution Protocol (ARP) (0x0806). 5. Others (input ether type), Range 0000~FFFF.
SVLAN	Service VLAN ID, Range 1 ~ 4094
S-Prio	CoS of SVLAN: 0~7, 8: reserve

2.3.7.3 VLAN Translation

Configuration / VLAN Translation

Create New

Port:

CVLAN:

C-Prio:

SVLAN:

S-Prio:

[VLAN Mode always Replaced N:1]

Delete

Previous Command Result: Normal

Index	Port	CVLAN	C-Prio	SVLAN	S-Prio	VLAN Mode
-------	------	-------	--------	-------	--------	-----------

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Select Port, fill CVLAN, C-Prio, SVLAN and S-Prio. 2. Click "Create New" button to create new entry. Click Delete button to delete selected entry(s).
Field	Description
Index	Index 1~10, max entry number: 10.
Port	VLAN translation port number: GE-1 ~ MAX Number of Port.
CVLAN	Customer VLAN ID: Range: 1 ~ 4094
C-Prio	CoS of CVLAN: Range: 0~7, 8: reserve
SVLAN	Service VLAN ID: Range: 1 ~ 4094
S-Prio	CoS of SVLAN: Range: 0~7, 8: reserve
VLAN Mode	Currently only supports: Replaced N to 1.

2.3.7.4 VLAN Stacking

Configuration / VLAN Stacking

Modify

Previous Command Result: Normal

Ext-TPID:0x (0x1 to 0xffff)

	Port	VLAN Stacking
<input type="checkbox"/>	GE-1	Disabled ▾
<input type="checkbox"/>	GE-2	Disabled ▾
<input type="checkbox"/>	GE-3	Disabled ▾
<input type="checkbox"/>	GE-4	Disabled ▾
<input type="checkbox"/>	GE-5	Disabled ▾
<input type="checkbox"/>	GE-6	Disabled ▾
<input type="checkbox"/>	GE-7	Disabled ▾
<input type="checkbox"/>	GE-8	Disabled ▾
<input type="checkbox"/>	GE-9	Disabled ▾
<input type="checkbox"/>	GE-10	Disabled ▾
<input type="checkbox"/>	GE-11	Disabled ▾
<input type="checkbox"/>	GE-12	Disabled ▾
<input type="checkbox"/>	GE-13	Disabled ▾

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select Port check box : 2. Select VLAN Stacking Disabled/ Enabled, click "Modify" button to apply change.
Field	Description
Ext-TPID (Hex)	The range is from 1~FFFF (0x1 to 0xffff) Default is 0x8100
VLAN Stacking Port	Port: GE-1 ~ MAX Number of Port.
VLAN Stacking	Enable/Disable VLAN Stacking (QinQ) mode. Default value is disable.

2.3.8 MAC Learning & Forwarding

2.3.8.1 Fdb Static

Configuration / Fdb Static

Related: [Fdb](#), [Aging Time](#).

Port GE-1 ▼
VID 1
MAC : : : : :

Delete Type All ▼



Previous Command Result: Normal

Port	VID	MAC Address

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Setting Port, VID and MAC Address 2. Click “Create New” to create a new data <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select a delete type “All/Port/VID/Selected” 2. If delete type is “Port”, then select a port from list. 3. If delete type is “VID”, then input a VID. 4. If delete type is “Selected”, then select row(s) to be deleted. 5. Click “Delete” button to delete.
Field	Description
Port	Giga Port: GE-1~MAX Number of Port
VID	Range: 1~4094. Default value is 1.
MAC Address	Format XX:XX:XX:XX:XX:XX

2.3.8.2 Aging Time

Configuration / Aging Time

Modify

Related: [Fdb](#), [Fdb Static](#).

Previous Command Result: Normal

Aging Time(Sec)

300

Operation	<u>Modify:</u> 1. Modify the configuration 2. Click "Modify" button to apply the change
Field	Description
Aging Time(Sec)	Range: 10~1000000, Default is 300 seconds.

2.3.9 Spanning Tree Protocol (STP)

2.3.9.1 STP Bridge

Status:

Configuration / STP Bridge

Modify
Refresh
Related: [Bridge Port](#) [STP Port](#) [MSTP Bridge](#) [MSTP Port](#)

Previous Command Result: Normal

Status
Config

STP	Disabled	Enabled/Disabled, default=Disabled
Protocol	STP	STP/RSTP/MSTP, Default=STP
Priority	0x8000(32768)	0-61440 in step 4096, default=0x8000
Bridge Max Age	20	6-40 seconds, default=20. Configure value for this system, when this switch is root bridge.
Bridge Hello Time	2	1-10 seconds, default=2. Configure value for this system, when this switch is root bridge.
Bridge Forward Delay	15	4-30 seconds, default=15. Configure value for this system, when this switch is root bridge.
BPDU Filter	Deny	Deny/Flooding when STP is Disable
Region Name		STP Region Name. Default value is empty.
Revision Level	0	MST revision level. Default value is 0.
Time since last TC	0	seconds, Time since LAST topology change.
Topology Changes	0	the total number of topology changes
Designate Root (hex)	8000-001122DDF000	Root Priority + Root Bridge MAC
Bridge ID (hex)	8000-001122DDF000	Priority + Bridge MAC
Root Cost	0	the cost of the path to the root
Root Port	NA	the port which offers the lowest cost path
Max Age	0	seconds, Current running value learned from root bridge.
Hello Time	0	seconds, Current running value learned from root bridge.
Hold Time	2	seconds, Current running value learned from root bridge.
Forward Delay	0	seconds, Current running value learned from root bridge.

The MaxAge, HelloTime and ForwardDelay times are constrained as follows:
 $2 \times (\text{ForwardDelay} - 1) \geq \text{MaxAge} \geq 2 \times (\text{HelloTime} + 1)$

Config:

Configuration / STP Bridge

Related: [Bridge Port](#) [STP Port](#) [MSTP Bridge](#) [MSTP Port](#)

Previous Command Result: Normal

Status
Config

STP	Disabled	Enabled/Disabled, default=Disabled
Protocol	STP	STP/RSTP/MSTP, Default=STP
Priority	0x8000(32768)	0~61440 in step 4096, default=0x8000
Bridge Max Age	20	6~40 seconds, default=20
Bridge Hello Time	2	1~10 seconds, default=2
Bridge Forward Delay	15	4~30 seconds, default=15
BPDU Filter	Deny	Deny/Flooding when STP is Disable
Region Name		STP Region Name. Default value is empty.
Revision Level	0	MST revision level. Default value is 0.



The MaxAge, HelloTime and ForwardDelay times are constrained as follows:
 $2 \times (\text{ForwardDelay} - 1) \geq \text{MaxAge} \geq 2 \times (\text{HelloTime} + 1)$

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select "Config" page. 2. Modify the configuration. 3. Clicks "Modify" button to apply change. <p><u>Refresh:</u></p> <p>Click "Refresh" button to get current data.</p>
Field	Description
STP	Specify whether or not the system is to implement the spanning tree protocol. Range: Enabled/Disabled, default=Disabled.
Protocol	RSTP (IEEE 802.1W), STP (IEEE 802.1D) Option: STP/RSTP, Default=STP.
Priority	Sets the spanning tree protocol priority. The lower the priority number, the more significant the bridge becomes in protocol terms. Where two bridges have the same priority, their MAC address is compared and the smaller MAC address is treated as the most significant. Range: 0~61440 in step 4096, Default is default=0x8000(32768).

<p>Bridge MaxAge</p>	<p>Sets the maximum age of received spanning tree protocol information before it is discarded. This is used when the bridge is or is attempting to become the root bridge. Range: 6~40 seconds, Default=20 seconds.</p>
<p>Bridge Hello Time</p>	<p>Sets the time after which the spanning tree process sends notification of topology changes to the root bridge. This is used when the bridge is or is attempting to become the root bridge. Range: 1~10 seconds, Default=2 seconds.</p>
<p>Bridge Forward Delay</p>	<p>Sets the time that the bridge spends in listening or learning states when the bridge is or is attempting to become the root bridge. Range: 4~30 seconds, Default=15 seconds. The maxage, hellotime and forwarddelay times are constrained as follows: $2 \times (\text{forwarddelay} - 1) \geq \text{maxage}$ $\text{maxage} \geq 2 \times (\text{hellotime} + 1)$ For example, the default settings are: $2 \times (15 - 1) \geq 20$ $20 \geq 2 \times (2 + 1)$</p>
<p>BPDU Filter</p>	<p>Deny/Flooding when STP is Disable.</p>
<p>Region Name</p>	<p>STP Region Name. Max length: 32, Default value is empty.</p>
<p>Revision Level</p>	<p>MST revision level. Range: 0~65535, Default value is 0.</p>

2.3.9.2 STP Port

Major:

Configuration / STP Port  						
<input type="button" value="Modify"/>		<input type="button" value="Refresh"/>		Related: Bridge Port STP Bridge MSTP Bridge MSTP Port		
Previous Command Result: Normal						
<input type="button" value="Major"/> <input type="button" value="Minor"/>						
	Port	Priority	Edge	State	STP Port	Path Cost
<input type="checkbox"/>	GE-1	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-2	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-3	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-4	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-5	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-6	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-7	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-8	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-9	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-10	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-11	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-12	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-13	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-14	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-15	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-16	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-17	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-18	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-19	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000
<input type="checkbox"/>	GE-20	0x80(128) ▼	Disabled ▼	Forwarding	Enabled ▼	20000

Minor:

Configuration / STP Port

Modify
Refresh
Related: [Bridge Port](#) [STP Bridge](#) [MSTP Bridge](#) [MSTP Port](#)

Previous Command Result: Normal

Major
Minor

Port	Designated				Forward Transitions
	Root (hex)	Cost	Bridge (hex)	Port (hex)	
GE-1	0000-000000000000	0	0000-000000000000	8001	0
GE-2	0000-000000000000	0	0000-000000000000	8002	0
GE-3	0000-000000000000	0	0000-000000000000	8003	0
GE-4	0000-000000000000	0	0000-000000000000	8004	0
GE-5	0000-000000000000	0	0000-000000000000	8005	0
GE-6	0000-000000000000	0	0000-000000000000	8006	0
GE-7	0000-000000000000	0	0000-000000000000	8007	0
GE-8	0000-000000000000	0	0000-000000000000	8008	0
GE-9	0000-000000000000	0	0000-000000000000	8009	0
GE-10	0000-000000000000	0	0000-000000000000	800A	0
GE-11	0000-000000000000	0	0000-000000000000	800B	0
GE-12	0000-000000000000	0	0000-000000000000	800C	0
GE-13	0000-000000000000	0	0000-000000000000	800D	0
GE-14	0000-000000000000	0	0000-000000000000	800E	0
GE-15	0000-000000000000	0	0000-000000000000	800F	0
GE-16	0000-000000000000	0	0000-000000000000	8010	0
GE-17	0000-000000000000	0	0000-000000000000	8011	0

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select "Major" page 2. Select row(s) to be changed by checking up checkbox 3. Modify the configuration 4. Click "Modify" button to apply change. <p><u>Refresh:</u></p> <p>Click "Refresh" button to get current data.</p>
Field	Description
Port	Range: GE-1 ~ MAX Number of Port
Priority	Range: 0~240 in step 16, Default is default=0x80(128).

Edge	Range: Enabled/Disabled, default=Disabled.
State	<p><i>Range:</i> Disabled/ Blocking/ Listening/ Learning/ Forwarding/ Broken</p> <p><i>Disabled :</i> For ports which are disabled (see dot1dStpPortEnable), this object will have a value of disabled.</p> <p><i>Blocking:</i> The port will go into a blocking state at the time of selection process, when a switch receives a BPDU on a port that indicates a better path to the root switch, and if a port is not a root port or a designated port.</p> <p><i>Listening:</i> After blocking state, a root port or a designated port will move to a listening state. All other ports will remain in a blocked state. During the listening state the port discards frames received from the attached network segment and it also discards frames switched from another port for forwarding. At this state, the port receives BPDUs from the network segment and directs them to the switch system module for processing. After a forward time delay (The default forward delay time is 15 seconds.), the switch port moves from the listening state to the learning state.</p> <p><i>Learning:</i> A port changes to learning state after listening state. During the learning state, the port is listening for and processing BPDUs. In the listening state, the port begins to process user frames and start updating the MAC address table. But the user frames are not forwarded to the destination. After a forward time delay (The default forward delay time is 15 seconds), the switch port moves from the learning state to the forwarding state.</p> <p><i>Forwarding:</i> A port in the forwarding state forwards frames across the attached network segment. In a forwarding state, the port will process BPDUs, update its MAC Address table with frames that it receives, and forward user traffic through the port. Forwarding State is the normal state. Data and configuration messages are passed through the port, when it is in forwarding state.</p> <p><i>Broken:</i> If the bridge has detected a port that is malfunctioning it will place that port into the broken state.</p>
STP Port	Range: Enabled/ Disabled, Default is Enabled.
Path Cost	Range: 1 ~ 200000000, Default is 20000.
Designated Root	<p>The parameter is the unique Bridge Identifier of the Bridge recorded as the Root in the Configuration BPDUs transmitted by the Designated Bridge for the segment to which the port is attached.</p> <p>Format : Root bridge priority + Root Bridge MAC address</p>
Designated Cost	The parameter is the path cost of the Designated Port of the segment connected to this port. This value is compared to the Root Path Cost field in received BPDUs.

Designated Bridge	The parameter is the Bridge Identifier of the bridge which this port considers to be the Designated Bridge for this port's segment. Format: Designated bridge priority + Designated Bridge MAC address. [0x8000-001122334455]
Designated Port	The parameter (dot1dStpPortDesignatedPort) is the Port Identifier of the port of the Designated Bridge for this port's segment. Format: Designated port priority + Designated Port ID. [0x8001]
Forward Transitions	Forward Transitions count.

2.3.9.3 MSTP Bridge

Configuration / MSTP Bridge
📄 ?

Related: [Bridge Port](#) [STP Bridge](#) [STP Port](#) [MSTP Port](#)

Create New
ID
MSTI Name
Priority

Delete
Modify
Refresh
MSTI Name

Add
Remove
VID -

Previous Command Result: Normal

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Fill "MSTI Name" and select "Priority" fields. (Default MSTI Name will be set when name is not input.) 2. Click "Create New" button to create new data. 3. Max MSTI number is 10. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select "MSTI Name". 2. Click "Delete" button to the Instance. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select "MSTI Name" from list. 2. Modify "MSTI Name", "VID" or select "Priority". 3. Click "Modify" button. <p><u>Add or Remove VID:</u></p> <ol style="list-style-type: none"> 1. Fill start VID and end VID. 2. Click "Add" or "Remove" button to edit VID range. Or input the VID range with the format in the VID cell.
Field	Description
ID	MSTI ID, value range is 1~10.
MSTI Name	MSTI Name, 1~30 characters. Can not be empty, if empty, system will give default name.
VID Start	VLAN ID, Range 1-4094.
VID End	VLAN ID, Range 1-4094.

VID	VLAN ID, Format: 2-5,7,100-4094. Accept number, space, dash and comma.
Priority	MSTI's priority. The lower the priority number, the more significant the bridge becomes in protocol terms. Where two bridges have the same priority, their MAC address is compared and the smaller MAC address is treated as the most significant. Range: 0~61440 in step 4096, Default is default=0x8000(32768).
Designated Root	The parameter is the unique Bridge Identifier of the Bridge recorded as the Root in the Configuration BPDUs transmitted by the Designated Bridge for the segment to which the port is attached. Format: MSTI's Root bridge priority + Root Bridge MAC address
Bridge ID	The parameter is the Bridge Identifier of the bridge which this port considers to be the Designated Bridge for this port's segment. Format: MSTI's priority + Bridge MAC address. [0x8000-001122334455]
Root Cost	The parameter is the path cost of the MSTI's Designated Port of the segment connected to this port. This value is compared to the Root Path Cost field in received BPDUs.
Root Port	The parameter is the MSTI's Port Identifier of the port of the Designated Bridge for this port's segment. [0x8001]

2.3.9.4 MSTP Port

Configuration / MSTP Port

MSTI Name

Related: [Bridge Port](#) [STP Bridge](#) [STP Port](#) [MSTP Bridge](#)

Previous Command Result: Normal

<input type="checkbox"/>	Port	Priority	Path Cost	Role	State	Designated			
						Root (hex)	Cost	Bridge (hex)	Port (hex)

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select a row item to selected 2. Set or select the following fields. 3. Click "Modify" button.
Field	Description
Port	Range: GE-1 ~ MAX Number of Port
Priority	Range: 0~240 in step 16, Default is default=0x80(128).
Path Cost	Range: 1 ~ 200000000, Default is 20000.
Role	Range: Disabled/ Root/ Designated/ Alternate/ Backup/ Master/ Unknown.
State	<p><i>Range:</i> Disabled/ Blocking/ Listening/ Learning/ Forwarding/ Broken</p> <p><i>Disabled:</i> For ports which are disabled (see dot1dStpPortEnable), this object will have a value of disabled.</p> <p><i>Blocking:</i> The port will go into a blocking state at the time of selection process, when a switch receives a BPDU on a port that indicates a better path to the root switch, and if a port is not a root port or a designated port.</p> <p><i>Listening:</i> After blocking state, a root port or a designated port will move to a listening state. All other ports will remain in a blocked state. During the listening state the port discards frames received from the attached network segment and it also discards frames switched from another port for forwarding. At this state, the port receives BPDUs from the network segment and directs them to the switch system module for processing. After a forward time delay (The default forward delay time is 15 seconds.), the switch port moves from the listening state to the learning state.</p> <p><i>Learning:</i> A port changes to learning state after listening state. During the learning state, the port is listening for and processing BPDUs. In the listening state, the port begins to process user frames and start updating the MAC address table. But the user</p>

	<p>frames are not forwarded to the destination. After a forward time delay (The default forward delay time is 15 seconds), the switch port moves from the learning state to the forwarding state.</p> <p><i>Forwarding:</i> A port in the forwarding state forwards frames across the attached network segment. In a forwarding state, the port will process BPDUs, update its MAC Address table with frames that it receives, and forward user traffic through the port. Forwarding State is the normal state. Data and configuration messages are passed through the port, when it is in forwarding state.</p> <p><i>Broken:</i> If the bridge has detected a port that is malfunctioning it will place that port into the broken state.</p>
<p>Designated Root</p>	<p>The parameter is the unique Bridge Identifier of the Bridge recorded as the Root in the Configuration BPDUs transmitted by the Designated Bridge for the segment to which the port is attached.</p> <p>Format : Root bridge priority + Root Bridge MAC address</p>
<p>Designated Cost</p>	<p>The parameter is the path cost of the Designated Port of the segment connected to this port. This value is compared to the Root Path Cost field in received BPDUs.</p>
<p>Designated Bridge</p>	<p>The parameter is the Bridge Identifier of the bridge which this port considers to be the Designated Bridge for this port's segment.</p> <p>Format: Designated bridge priority + Designated Bridge MAC address. [0x8000-001122334455]</p>
<p>Designated Port</p>	<p>The parameter (dot1dStpPortDesignatedPort) is the Port Identifier of the port of the Designated Bridge for this port's segment.</p> <p>Format: Designated port priority + Designated Port ID. [0x8001]</p>

2.3.10 Policer

2.3.10.1 Policer Ingress Color

Configuration / Policer Ingress Color

Modify
Related: [Ingress Policer](#), [Policer Color Marking](#)

Previous Command Result: Normal

Color Aware Mode: Color Blind ▼

CoS Number	Color
CoS 0	Green ▼
CoS 1	Green ▼
CoS 2	Green ▼
CoS 3	Green ▼
CoS 4	Green ▼
CoS 5	Green ▼
CoS 6	Green ▼
CoS 7	Green ▼

Operation	Modify: <ol style="list-style-type: none"> 1. Select “Color Blind” or “Color Aware” 2. Modify the configuration 3. Click “Modify” button to apply change
Field	Description
Color Aware Mode	Color Blind/ Color Aware. Default is Color Blind.
CoS 0	Green/Yellow/Red, default is green
CoS 1	Green/Yellow/Red, default is green
CoS 2	Green/Yellow/Red, default is green
CoS 3	Green/Yellow/Red, default is green
CoS 4	Green/Yellow/Red, default is green
CoS 5	Green/Yellow/Red, default is green
CoS 6	Green/Yellow/Red, default is green
CoS 7	Green/Yellow/Red, default is green

2.3.10.2 Policer Color Marking

Configuration / Policer Color Marking

Modify
Related: [Policer Ingress Color](#) [Ingress Policer](#)

Previous Command Result: Normal

Type	Number
CoS Green	CoS <input style="width: 40px;" type="text" value="7"/>
CoS Yellow	CoS <input style="width: 40px;" type="text" value="5"/>
CoS Red	CoS <input style="width: 40px;" type="text" value="3"/>
DSCP Green	DSCP <input style="width: 40px;" type="text" value="56"/>
DSCP Yellow	DSCP <input style="width: 40px;" type="text" value="40"/>
DSCP Red	DSCP <input style="width: 40px;" type="text" value="24"/>

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Modify the configuration 2. Click "Modify" button to apply change
Field	Description
CoS Green	Range: 0~7, Default is 7
CoS Yellow	Range: 0~7, Default is 5
CoS Red	Range: 0~7, Default is 3
DSCP Green	Range: 0~63, Default is 56
DSCP Yellow	Range: 0~63, Default is 40
DSCP Red	Range: 0~63, Default is 24

2.3.10.3 Ingress Policer

Configuration / Ingress Policer

Modify
Related: [Policer Ingress Color](#) [Policer Color Marking](#)

Previous Command Result: Normal

	Port	Mode	Exceed Action	PIR (Kbps)	PBS (Bytes)	CIR (Kbps)	CBS (Bytes)
<input type="checkbox"/>	GE-1	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-2	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-3	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-4	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-5	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-6	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-7	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-8	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-9	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-10	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-11	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-12	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-13	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-14	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-15	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-16	Disabled	Drop	1000000	10000	500000	10000
<input type="checkbox"/>	GE-17	Disabled	Drop	1000000	10000	500000	10000

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify the configuration 2. Click "Modify" button to apply change
Field	Description
Port	Bridge port number. GE-1 ~ MAX Number of Port.
Mode	Ingress Policer Mode Enabled/Disabled, default is Disabled.
Exceed Action	Value range is Drop/CoS Mark/DSCP Mark, default is Drop.
PIR (Kbps)	Value range is 1~1000000 Kbps, default is 1000000 Kbps.
PBS (Bytes)	Value range is 1~65535 Bytes, default is 10000 Bytes.
CIR (Kbps)	Value range is 1~1000000 Kbps, default is 500000 Kbps.
CBS (Bytes)	Value range is 1~65535 Kbps, default is 10000 Kbps.

2.3.11 ACL

2.3.11.1 Profile

Configuration / ACL Profile

Related: [ACL Entry](#) [ACL Binding](#) [Mirror Analyzer Port](#)

Previous Command Result: Normal

	Index	Name
	1	default
<input type="checkbox"/>	2	<input style="width: 95%;" type="text" value="Name2"/>
<input type="checkbox"/>	3	<input style="width: 95%;" type="text" value="Name3"/>

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Fill ACL Profile Name, the max length is 31. 2. Click "Create New" button to Create New ACL profile. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select checkbox of profile to be changed. 2. Modify the "Name" of profile 3. Click "Modify" button to apply change <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select one row for delete 2. Click "Delete" button to delete data
Field	Description
Index	ACL Profile Index, range is 1 ~ MAX SIZE of profile, Profile 1 is a default profile, can not be modified
Name	ACL Profile Name, the max length 31 characters.

2.3.11.2 Entry

Configuration / ACL Entry

Related: [ACL Profile](#) [ACL Binding](#) [Mirror Analyzer Port](#)

Previous Command Result: Normal

Profile Index: Name:

	Entry Index	Type	Data	Modify
<input type="checkbox"/>	1	MAC	VLAN ID: 1 Source MAC: 00:01:02:03:04:05 Source MAC Mask: FF:FF:FF:FF:FF:FF Destination MAC: 00:0A:0B:0C:0D:0E Destination MAC Mask: FF:FF:FF:FF:FF:FF Ether Type: 0xFFFF Action: Deny	<input type="button" value="Modify"/>

Create New

Configuration / ACL Entry - Create

Profile Index: Name:

Entry Index: Type:

VLAN ID	<input type="text" value="1"/>
Source MAC	<input type="text" value="0"/> : <input type="text" value="1"/> : <input type="text" value="2"/> : <input type="text" value="3"/> : <input type="text" value="4"/> : <input type="text" value="5"/>
Source MAC Mask	<input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/>
Destination MAC	<input type="text" value="0"/> : <input type="text" value="a"/> : <input type="text" value="b"/> : <input type="text" value="c"/> : <input type="text" value="d"/> : <input type="text" value="e"/>
Destination MAC Mask	<input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/> : <input type="text" value="ff"/>
Ether Type(Hex)	0x <input type="text" value="ffff"/>
Action	<input type="text" value="Deny"/>

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to open page of Create New entry. 2. Fill ACL Entry Index field and select Type. 3. Fill fields and then click "Apply" to create or click "Cancel" to cancel. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify field data. 2. Click "Modify" button to open modification page. 3. Fill Entry Index field and select Type. 4. Fill fields and then click "Apply" to modify or click "Cancel" to cancel. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select one row. 2. Click "Delete" button to delete data.
Field	Description
Profile Index	Range: 1~MAX SIZE of profile
Entry Index	Range: 1~MAX SIZE of entry
Type	MAC/IPV4/L4PORT/TOS
Type = MAC	
VLAN ID	ACL Profile VLAN ID, value range is 1~4094.
Source MAC	ACL Profile Source MAC format XX:XX:XX:XX:XX:XX, each field value range 0~FF
Source MAC Mask	ACL Profile Source MAC Mask format XX:XX:XX:XX:XX:XX, each field value range 0~FF
Destination MAC	ACL Profile Destination MAC format XX:XX:XX:XX:XX:XX, each field value range 0~FF
Destination MAC Mask	ACL Profile Destination MAC Mask format XX:XX:XX:XX:XX:XX, each field value range 0~FF
Ether Type (Hex)	Value range 0,05DD~FFFF,format XXXX
Action	Value range Deny/Permit/Queue Mapping/CoS Marking/Copy Frame.
Type = IPV4	
Source IP	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Source IP Mask	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Destination IP	Format XXX:XXX:XXX:XXX, each field value range 0~255.

Destination IP Mask	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Protocol	Value range 0~255.
Action	Value range Deny/Permit/Queue Mapping/CoS Marking/Copy Frame.
Type = L4PORT	
Protocol	Value range TCP/UDP.
Source IP	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Source IP Mask	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Port	Source IP Port, value range 0~65535.
Destination IP	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Destination IP Mask	Format XXX:XXX:XXX:XXX, each field value range 0~255.
Port	Source IP Port, value range 0~65535.
Action	Value range Deny/Permit/Queue Mapping/CoS Marking/Copy Frame.
Type = ToS	
Source IP	Format XXX.XXX.XXX.XXX, each field value range 0~255.
Source IP Mask	Format XXX.XXX.XXX.XXX, each field value range 0~255.
Destination IP	Format XXX.XXX.XXX.XXX, each field value range 0~255.
Destination IP Mask	Format XXX.XXX.XXX.XXX, each field value range 0~255.
ToS Type	Value range Precedence/ToS/DSCP/Any,0~7 in Precedence,0~15 in ToS,0~63 in DSCP.
Action	Value range Deny/Permit/Queue Mapping/CoS Marking/Copy Frame.

2.3.11.3 Binding

Configuration / ACL Binding

Related: [ACL Profile](#) [ACL Entry](#) [Mirror Analyzer Port](#)

Previous Command Result: Normal

Port	Profile Index	Default ACL Rule	Modify
GE-1	1	Permit	Modify
GE-2	1	Permit	Modify
GE-3	1	Permit	Modify
GE-4	1	Permit	Modify
GE-5	1	Permit	Modify
GE-6	1	Permit	Modify
GE-7	1	Permit	Modify
GE-8	1	Permit	Modify
GE-9	1	Permit	Modify
GE-10	1	Permit	Modify
GE-11	1	Permit	Modify
GE-12	1	Permit	Modify
GE-13	1	Permit	Modify
GE-14	1	Permit	Modify
GE-15	1	Permit	Modify

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Giga Port, GE-1 ~ MAX Number of Port.
Profile Index	ACL Profile Index, range is 1 ~ MAX SIZE of profile, default is 1.
Default ACL Rule	ACL Default Rule, could be Permit/Deny, default is Permit.

2.3.11.4 Mirror Analyzer Port

Configuration / Mirror Analyzer Port

Modify

Related: [ACL Profile](#) [ACL Entry](#) [ACL Binding](#)



Previous Command Result: Normal

Analyzer Mode	Disabled
Analyzer Port	GE-1

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Analyzer Mode	Enabled/Disabled, default is Disabled.
Analyzer Port	Giga Port GE-1 ~ MAX Number of Port, default is GE-1.

2.3.12 Shaper

2.3.12.1 Port Shaper

Configuration / Port Shaper  

Related: [Shaper Queue](#)

Previous Command Result: Normal

Port	Mode	Rate (Kbps)	Modify
GE-1	Disabled	1000000	Modify
GE-2	Disabled	1000000	Modify
GE-3	Disabled	1000000	Modify
GE-4	Disabled	1000000	Modify
GE-5	Disabled	1000000	Modify
GE-6	Disabled	1000000	Modify
GE-7	Disabled	1000000	Modify
GE-8	Disabled	1000000	Modify
GE-9	Disabled	1000000	Modify
GE-10	Disabled	1000000	Modify
GE-11	Disabled	1000000	Modify
GE-12	Disabled	1000000	Modify
GE-13	Disabled	1000000	Modify
GE-14	Disabled	1000000	Modify
GE-15	Disabled	1000000	Modify

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Bridge port, range is 1 ~ MAX Number of Port.
Mode	Enabled/Disabled, default is Disabled.
Rate (Kbps)	Rate range is 1~1000000 Kbps, default is 1000000 Kbps.

2.3.12.2 Queue Shaper

Configuration / Queue Shaper

Related: [Shaper Port](#)



Previous Command Result: Normal

ID	Mode	Queue 0~3 (Rate)				Queue 4~7 (Rate)				Modify
GE-1	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-2	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-3	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-4	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-5	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-6	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-7	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-8	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-9	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-10	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-11	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-12	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-13	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-14	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-15	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-16	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-17	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-18	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify
GE-19	Disabled	1000000	1000000	1000000	1000000	1000000	1000000	1000000	1000000	Modify

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
ID	Bridge port, range is 1 ~ MAX Number of Port.
Mode	Option: Enabled/Disabled, default is Disabled.
Queue 0~3 (Rate)	Queue 0~3, rate range is 1~1000000 Kbps, default is 1000000 Kbps.
Queue 4~7 (Rate)	Queue 4~7, rate range is 1~1000000 Kbps, default is 1000000 Kbps.

2.3.13 Queue & Scheduler

2.3.13.1 CoS & Queue Mapping

Configuration / CoS & Queue Mapping  

Modify
Related: [Scheduler Profile](#) [Scheduler Binding](#)

Previous Command Result: Normal

CoS Number	Queue Number
CoS 0	Queue 0 ▾
CoS 1	Queue 1 ▾
CoS 2	Queue 2 ▾
CoS 3	Queue 3 ▾
CoS 4	Queue 4 ▾
CoS 5	Queue 5 ▾
CoS 6	Queue 6 ▾
CoS 7	Queue 7 ▾

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
CoS 0	Queue 0~7, default is Queue 0.
CoS 1	Queue 0~7, default is Queue 1.
CoS 2	Queue 0~7, default is Queue 2.
CoS 3	Queue 0~7, default is Queue 3.
CoS 4	Queue 0~7, default is Queue 4.
CoS 5	Queue 0~7, default is Queue 5.
CoS 6	Queue 0~7, default is Queue 6.
CoS 7	Queue 0~7, default is Queue 7.

2.3.13.2 Scheduler Profile

Configuration / Scheduler Profile

Related: [CoS & Queue Mapping](#), [Scheduler Binding](#)



Previous Command Result: Normal

Index	Mode	Queue 0~3 Weight				Queue 4~7 Weight				Modify
1	SP	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	NA
2	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
3	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
4	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
5	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
6	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
7	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>
8	SP <input type="text" value="v"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="button" value="Modify"/>

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Index	Value range is 1~8.
Mode	Option: SP/SPWRR/WRR, default is SP.
Queue 0~3 weight	Queue 0~3 Weight, range is 1~255, default is 1.
Queue 4~7 weight	Queue 4~7 Weight, range is 1~255, default is 1.

2.3.13.3 Binding

Configuration / Scheduler Binding

[Related: CoS & Queue Mapping, Scheduler Profile](#)

Previous Command Result: Normal

Port	Profile Index	Modify
GE-1	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-2	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-3	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-4	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-5	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-6	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-7	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-8	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-9	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-10	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-11	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-12	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-13	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-14	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-15	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-16	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-17	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-18	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>
GE-19	1 <input type="button" value="v"/>	<input type="button" value="Modify"/>

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Giga Port GE-1 ~ MAX Number of Port.
Profile Index	Range is 1~8, default is 1.

2.3.14 Storm Control

2.3.14.1 Unknown Unicast Control

Configuration / Unknown Unicast Control

Related: [Unknown Multicast Control](#) [Broadcast Control](#)

Previous Command Result: Normal

Port	Mode	Modify
GE-1	Forward ▼	Modify
GE-2	Forward ▼	Modify
GE-3	Forward ▼	Modify
GE-4	Forward ▼	Modify
GE-5	Forward ▼	Modify
GE-6	Forward ▼	Modify
GE-7	Forward ▼	Modify
GE-8	Forward ▼	Modify
GE-9	Forward ▼	Modify
GE-10	Forward ▼	Modify
GE-11	Forward ▼	Modify
GE-12	Forward ▼	Modify
GE-13	Forward ▼	Modify
GE-14	Forward ▼	Modify

Operation	<u>Modify:</u> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Giga Port GE-1 ~ MAX Number of Port.
Mode	Forward -> Forward unknown unicast packet (default) Block -> Block unknown unicast packet Rate limit -> Control rate. Rate range is 1~1000000 Kbps, default is 1000000 Kbps.

2.3.14.2 Unknown Multicast Control

Configuration / Unknown Multicast Control

Related: [Unknown Unicast Control](#) [Broadcast Control](#)



Previous Command Result: Normal

Port	Mode	Modify
GE-1	Forward	Modify
GE-2	Forward	Modify
GE-3	Forward	Modify
GE-4	Forward	Modify
GE-5	Forward	Modify
GE-6	Forward	Modify
GE-7	Forward	Modify
GE-8	Forward	Modify
GE-9	Forward	Modify
GE-10	Forward	Modify
GE-11	Forward	Modify
GE-12	Forward	Modify
GE-13	Forward	Modify
GE-14	Forward	Modify
GE-15	Forward	Modify

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Giga Port GE-1 ~ MAX Number of Port.
Mode	Forward -> Forward unknown unicast packet (default) Block -> Block unknown unicast packet Rate limit -> Control rate. Rate range is 1~1000000 Kbps, default is 1000000 Kbps.

2.3.14.3 Broadcast Control

Configuration / Broadcast Control

Related: [Unknown Unicast Control](#) [Unknown Multicast Control](#)

Previous Command Result: Normal

Port	Mode	Modify
GE-1	Forward	Modify
GE-2	Forward	Modify
GE-3	Forward	Modify
GE-4	Forward	Modify
GE-5	Forward	Modify
GE-6	Forward	Modify
GE-7	Forward	Modify
GE-8	Forward	Modify
GE-9	Forward	Modify
GE-10	Forward	Modify
GE-11	Forward	Modify
GE-12	Forward	Modify
GE-13	Forward	Modify
GE-14	Forward	Modify
GE-15	Forward	Modify

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click "Modify" button to apply change.
Field	Description
Port	Giga Port GE-1 ~ MAX Number of Port.
Mode	Forward -> Forward broadcast packet (default) Block -> Block broadcast packet Rate limit -> Control rate. Rate range is 1~1000000 Kbps, default is 1000000 Kbps.

2.3.14.4 Unknown Unicast by VLAN

Configuration / Unknown Unicast by VLAN
📄 ?

Modify
VLAN ID
Mode Forward ▼
Related: [Unknown Multicast by VLAN](#), [Broadcast by VLAN](#)

Previous Command Result: Normal

Block VLAN ID		
2	3	4

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Fill VLAN ID 2. Change Mode 3. Click “Modify” button to apply change
Field	Description
VLAN ID	Value range is 1~4094.
Mode	Forward -> Forward unicast packet (default). Block -> Block unicast packet.
Block VLAN ID	All blocked VLAN ID

2.3.14.5 Unknown Multicast by VLAN

Configuration / Unknown Multicast by VLAN

Related: [Unknown Unicast by VLAN](#), [Broadcast by VLAN](#).



Previous Command Result: Normal

Block VLAN ID		
2	3	4

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Fill VLAN ID 2. Change Mode 3. Click "Modify" button to apply change
Field	Description
VLAN ID	Value range is 1~4094.
Mode	<p>Forward -> Forward unknown multicast packet (default).</p> <p>Block -> Block unknown multicast packet.</p>
Block VLAN ID	All blocked VLAN ID

2.3.14.6 Broadcast by VLAN

Configuration / Broadcast by VLAN

Modify
VLAN ID
Mode
Forward ▾
Related: [Unknow Unicast by VLAN](#), [Unknow Multicast by VLAN](#)



Previous Command Result: Normal

Block VLAN ID		
2	3	4

Operation	<u>Modify:</u> <ol style="list-style-type: none"> 1. Fill VLAN ID 2. Change Mode 3. Click "Modify" button to apply change
Field	Description
VLAN ID	Value range is 1~4094.
Mode	Forward -> Forward broadcast packet (default). Block -> Block broadcast packet.
Block VLAN ID	All blocked VLAN ID

2.3.15 IGMP

2.3.15.1 ACL Profile

Configuration / IGMP ACL Profile  

Create New
Modify
Delete

Related: [IGMP ACL Entry](#) [IGMP ACL Binding](#)

Previous Command Result: Normal

<input type="checkbox"/>	Index	Default Rule
<input type="checkbox"/>	1	Permit

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to create a default profile. 2. Click "Modify" button to modify existing profile. <p><u>Modify (allow multiple selection):</u></p> <ol style="list-style-type: none"> 1. Check up Profile Index and select Default Rule for profile. 2. Click "Modify" button to modify IGMP ACL Profile. <p><u>Delete:</u></p> <p>Click Delete button to delete profile. (also allow multiple delete) If profile is in use, delete action will be failed.</p>
Field	Description
Profile Index	IGMP ACL Profile Index: 1~15, but profile 1 is default existing and read-only.
Default Rule	IGMP ACL Default rule: Permit/Deny. Default is permit.

2.3.15.2 ACL Entry

Configuration / IGMP ACL Entry
📄 ?

Create New
Delete
Related: [IGMP ACL Profile](#) [IGMP ACL Binding](#)

Previous Command Result: Normal

Profile Index 1

<input type="checkbox"/>	Entry Index	SVLAN	Start/End IP	Permission Rule
	-	-	Profile Index 1 is default, No entry data.	NA

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to open new page for create. 2. Fill Entry Index, SVLAN, Start IP, End IP and select Permission Rule. 3. Click "Apply" button to create IGMP ACL entry or click "Cancel" to cancel create. <p><u>Delete:</u></p> <p>Check up target entry, click Delete button to delete them. (also allow multiple delete)</p> <p><u>Refresh:</u></p> <ol style="list-style-type: none"> 1. Select Profile index. 2. Click "Refresh" button to refresh current IGMP ACL profile entry(s).
Field	Description
Profile Index	IGMP ACL profile index. Index range is 2~Max number of IGMP profile.
Entry Index	IGMP ACL entry index. Range is 1~Max number of IGMP entry.
SVLAN	IGMP ACL VLAN: VLAN to be Permitted/Denied, 0 is any VLAN.
Start IP ~ End IP	IGMP ACL Start IP address. Range: 224.0.1.0 - 239.255.255.255 Start IP address <= End IP address
Permission Rule	IGMP ACL entry parameter. Default is Permit.

2.3.15.3 ACL Binding

Configuration / IGMP ACL Binding

Modify
Related: [IGMP ACL Profile](#) [IGMP ACL Entry](#)

Previous Command Result: Normal

<input type="checkbox"/>	Port	Profile Index	Max Channel
<input type="checkbox"/>	GE-1	1	512
<input type="checkbox"/>	GE-2	1	512
<input type="checkbox"/>	GE-3	1	512
<input type="checkbox"/>	GE-4	1	512
<input type="checkbox"/>	GE-5	1	512
<input type="checkbox"/>	GE-6	1	512
<input type="checkbox"/>	GE-7	1	512
<input type="checkbox"/>	GE-8	1	512
<input type="checkbox"/>	GE-9	1	512
<input type="checkbox"/>	GE-10	1	512
<input type="checkbox"/>	GE-11	1	512
<input type="checkbox"/>	GE-12	1	512
<input type="checkbox"/>	GE-13	1	512
<input type="checkbox"/>	GE-14	1	512
<input type="checkbox"/>	GE-15	1	512
<input type="checkbox"/>	GE-16	1	512
<input type="checkbox"/>	GE-17	1	512
<input type="checkbox"/>	GE-18	1	512
<input type="checkbox"/>	GE-19	1	512
<input type="checkbox"/>	GE-20	1	512

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Check up the rows to be modified, select ACL Profile and set Max channel. 2. Click "Modify" button to change IGMP ACL Binding.
Field	Description
Port	GE Port: 1 ~ MAX Number of Port.
Profile Index	IGMP ACL profile index: 1~Max number of IGMP profile. Default is 1.
Max channel	Port Max channel. Range is 1~512. Default is 512.

2.3.15.4 MVR Profile

Configuration / IGMP MVR Profile
📄 ?

Related: [IGMP MVR Entry](#) [IGMP MVR Binding](#)

Previous Command Result: Normal

<input type="checkbox"/>	Index
1	

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to create a new profile. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Check up Profile Index. 2. Click the Profile Index hyper link to open page for profile entry modification. <p>[or click "Delete" delete Profile, allow multiple delete. If profile is in use, delete action will be failed.]</p>
Field	Description
Profile Index	Profile 1 is default existing and read-only, IGMP MVR Profile 2~15 allow to create.

2.3.15.5 MVR Entry

Configuration / IGMP MVR Entry
📄 ?

Related: [IGMP MVR Profile](#) [IGMP MVR Binding](#)

Previous Command Result: Normal

Profile Index

<input type="checkbox"/>	Entry Index	SVLAN	Start/End IP
-	-	Profile Index 1 is default, No entry data.	

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to open new page for create. 2. Fill Entry Index, SVLAN, Start IP, End IP. 3. Click "Apply" button to create IGMP MVR entry or click "Cancel" to cancel create. <p><u>Delete:</u></p> <p>Check up target entry, click Delete button to delete them. (also allow multiple delete)</p> <p><u>Refresh:</u></p> <ol style="list-style-type: none"> 1. Change the Profile Index to refresh the data.
Field	Description
Profile Index	IGMP MVR profile index. Index range is 2~Max number of IGMP MVR profile.
Entry Index	IGMP MVR entry index. Range is 1~32.
SVLAN	IGMP MVR VLAN: VLAN to be Permitted/Denied, 0 is any VLAN..
Start IP ~ End IP	IGMP MVR Start IP address. Range: 224.0.1.0 - 239.255.255.255 Start IP address <= End IP address

2.3.15.6 MVR Binding

Configuration / IGMP MVR Binding

Modify
Related: [IGMP MVR Profile](#) [IGMP MVR Entry](#)

Previous Command Result: Normal

<input type="checkbox"/>	Port	Profile Index
<input type="checkbox"/>	GE-1	1
<input type="checkbox"/>	GE-2	1
<input type="checkbox"/>	GE-3	1
<input type="checkbox"/>	GE-4	1
<input type="checkbox"/>	GE-5	1
<input type="checkbox"/>	GE-6	1
<input type="checkbox"/>	GE-7	1
<input type="checkbox"/>	GE-8	1
<input type="checkbox"/>	GE-9	1
<input type="checkbox"/>	GE-10	1
<input type="checkbox"/>	GE-11	1
<input type="checkbox"/>	GE-12	1
<input type="checkbox"/>	GE-13	1
<input type="checkbox"/>	GE-14	1
<input type="checkbox"/>	GE-15	1
<input type="checkbox"/>	GE-16	1
<input type="checkbox"/>	GE-17	1
<input type="checkbox"/>	GE-18	1
<input type="checkbox"/>	GE-19	1
<input type="checkbox"/>	GE-20	1

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Check up the rows to be modified, select MVR Profile. 2. Click "Modify" button to change IGMP MVR Binding.
Field	Description
Port	GE Port: 1 ~ MAX Number of Port
Profile Index	<p>IGMP MVR profile index.</p> <p>Value range is 1~Max number of IGMP MVR profile.</p> <p>Default is 1.</p>

2.3.15.7 VLAN Interface

Configuration / IGMP / VLAN Interface



Related: [Group Member Status](#) [Static Group Membersh](#)

Previous Command Result: Normal

NO	VID	Version (RunVersion)	Mode	Leave Mode	Robustness (RunValue)	Query Interval (RunValue) (sec)	Max Response Time (sec)	Group Membership Time(sec)	Last Member Query Interval (sec)	Last Member Query Count	Router Port	V2 Present Time (sec)	Querier Source IP Address
----	-----	----------------------	------	------------	-----------------------	---------------------------------	-------------------------	----------------------------	----------------------------------	-------------------------	-------------	-----------------------	---------------------------

Create

Configuration / IGMP / VLAN Interface-Create



IGMP Version	IGMPv2
VID	1 (1~4094)
IGMP Mode	Normal Snooping
IGMP Leave Mode	Normal Leave
Robustness	2
Query Interval(sec)	125 (1~1800)
Max Response Time(0.1 sec)	100 (1~255)
Last Member Query interval(0.1 sec)	1 (1~255)
Last Member Query Count	2
Router Port	GE-1
Querier Source IP Address	0 . 0 . 0 . 0

The Query Interval and Max Response Time are constrained as follows:
 Query Interval > Max Response Time

Modify

Configuration / IGMP / VLAN Interface-Modify

Apply
Cancel

IGMP Version	IGMPv2 <input type="button" value="v"/>
VID	<input type="text" value="2"/>
IGMP Mode	Normal Snooping <input type="button" value="v"/>
IGMP Leave Mode	Normal Leave <input type="button" value="v"/>
Robustness	<input type="text" value="2"/> <input type="button" value="v"/>
Query Interval(sec)	<input type="text" value="125"/> (1~1800)
Max Response Time(0.1 sec)	<input type="text" value="100"/> (1~255)
Last Member Query interval(0.1 sec)	<input type="text" value="1"/> (1~255)
Last Member Query Count	<input type="text" value="2"/> <input type="button" value="v"/>
Router Port	GE-1 <input type="button" value="v"/>
Querier Source IP Address	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/>

The Query Interval and Max Response Time are constrained as follows:
Query Interval > Max Response Time

Operation	<p><u>Refresh:</u> Refresh to get current data.</p> <p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Into Create web page. 2. Setting data 3. Click "Apply" to setting data or click "Cancel" to cancel setting data. <p><u>Delete:</u> Delete current selected row data.</p> <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Into Modify web page. 2. Setting data <p>Click "Apply" to setting data or click "Cancel" to cancel setting data.</p>
Field	Description
NO	Entry Index, max 64.
VID	VLAN ID (1~4094)

Version	IGMP Version: IGMPv2 or IGMPv3.
Run Version	Current running IGMP version.
Mode	IGMP Access Mode: Normal Snooping (default) or Proxy.
Leave Mode	IGMP Leave Mode: Normal Leave (default) or Fast Leave.
Robustness	IGMP VLAN robustness variable. (1~3)
Robustness Run Value	<p>Display QRV value or configured value:</p> <p>To support QRV and QQIC in IGMPv3 mode. Industrial Ethernet Switch support 2 parameters to represent the running Robustness Variable and running Query Interval. These 2 parameters is support for each IGMP VLAN interface. When IGMPv3 proxy mode, these 2 value will apply the value which get from IGMPv3 Query packet. In other mode, the value is applied the configured value.</p>
Query Interval (sec)	<p>IGMP VLAN query interval.(unit: sec)</p> <p>Default: 125 seconds</p> <p>Limitation: Query Interval>Max Response Time</p>
Query Interval Run Value (sec)	<p>Display QQIC value or configured value:</p> <p>To support QRV and QQIC in IGMPv3 mode. Industrial Ethernet Switch support 2 parameters to represent the running Robustness Variable and running Query Interval. These 2 parameters is support for each IGMP VLAN interface. When IGMPv3 proxy mode, these 2 value will apply the value which get from IGMPv3 Query packet. In other mode, the value is applied the configured value</p>
Max Response Time	<p>IGMP VLAN max response time.</p> <p>Default: 10.0 seconds. (Display in second, configure it with 0.1 second)</p> <p>The Query Interval and Max Response Time are constrained as follows: Query Interval > Max Response Time</p>
Group Membership Time	IGMP Group Membership Time (Unit: sec) Read-only
Last Member Query Interval	IGMP VLAN last member query interval. (Display in second, configure it with 0.1 second) Default: 0.1 second
Last Member Query Count	IGMP VLAN last member query count, range 1~3. Default: 2
Router Port	<p>IGMP VLAN interface:</p> <p>Bridge port:GE-1 ~ Port MAX Number.</p> <p>Default value is 1</p>

V2 Present Time(sec)	Read-only, it can be tuned by (last RunQueryInterval *10*robustness + maxRespTime)
Querier Source IP Address	Querier Source IP Address. Default: 0.0.0.0

2.3.15.8 Static Group Membership

Configuration / Static Group Membership

Create New
IP Address . . . VID Membership
Related: [VLAN Interface](#), [Group Membership Status](#).

Delete Delete Type

Previous Command Result: Normal


	ID	IP Address	VID	Membership
<input type="radio"/>	1	224.1.2.3	2	GE-2
<input type="radio"/>	2	224.1.2.3	2	GE-4
<input type="radio"/>	3	224.1.2.3	2	GE-9
<input type="radio"/>	4	239.255.255.255	3	GE-2
<input type="radio"/>	5	239.255.255.255	3	GE-10
<input type="radio"/>	6	225.2.3.4	4	GE-8
<input type="radio"/>	7	225.2.3.4	4	GE-9

Operation	<p><u>Create New:</u></p> <ol style="list-style-type: none"> 1. Fill IP Address, VID and select Membership. 2. Click "Create New" button to create new data. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select Delete Type "All/ Membership/ VID/ Selected" 2. If delete type is "Port", then select a port 3. If delete type is "VID", then fill a VID 4. If delete type is "Selected", then select one row 5. Click "Delete" button to delete data.
Field	Description
ID	Entry Index, value range is 1~128.
IP Address	Group Membership IP Address, range is 224.0.0.0~239.255.255.255
VID	VLAN ID, range is 1 ~ 4094.
Membership	Giga Port, GE-1 ~ MAX Number of Port.


2.4 Status

2.4.1 Front Panel

10 Ports

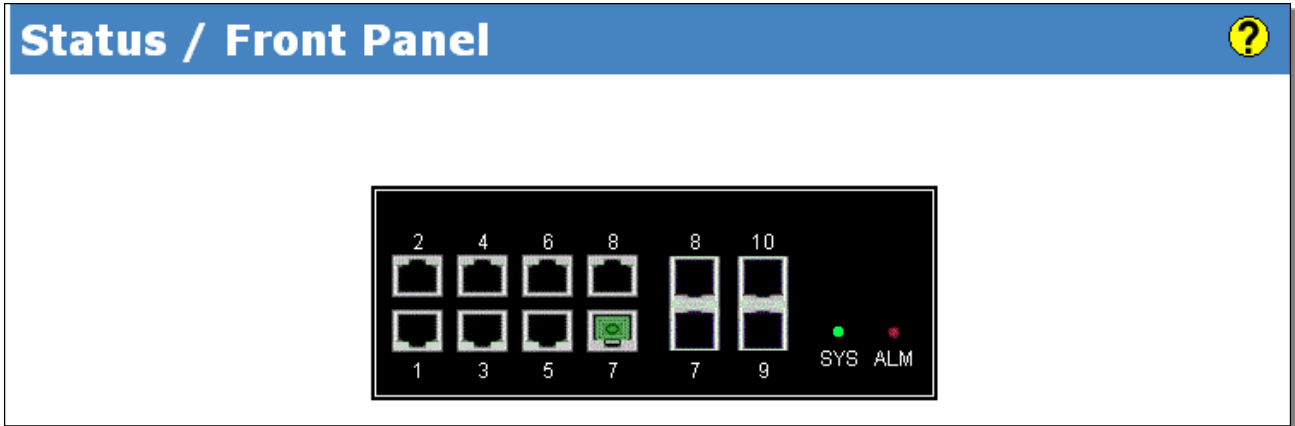

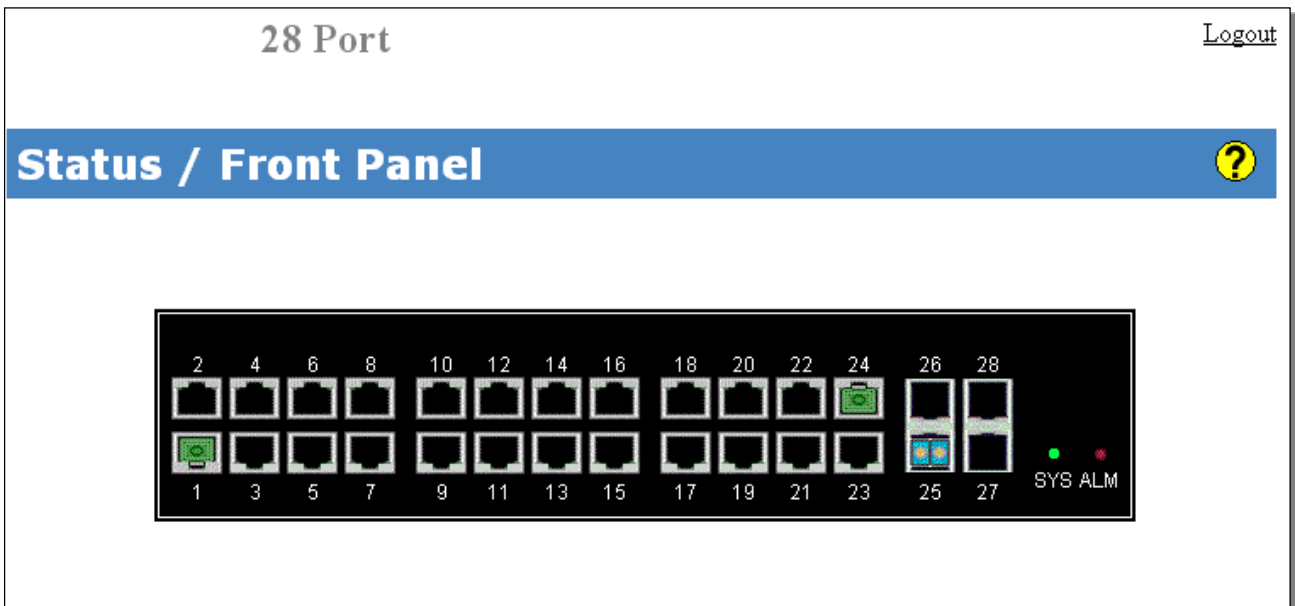

28 Ports



2.4.2 Alarm/Event

Alarm Current

Status / Alarm Current  


Refresh
Related: [Alarm Profile](#) [Alarm History](#) [Event Log](#)

Previous Command Result: Normal

Alarm Current
Alarm History
Event Log

SeqNo	ID	Description	Level	State	Time
-------	----	-------------	-------	-------	------

Alarm History

Status / Alarm History  



Clear
Refresh
Related: [Alarm Profile](#) [Alarm Current](#) [Event Log](#)

Previous Command Result: Normal

Alarm Current
Alarm History
Event Log

SeqNo	ID	Description	Level	State	Time
-------	----	-------------	-------	-------	------

Event Log

Status / Event Log  

Clear
Refresh
Related: [Alarm Profile](#) [Alarm Current](#) [Alarm History](#)

Previous Command Result: Normal

Alarm Current
Alarm History
Event Log

SeqNo	ID	Position/Name	Description	Time
18	29	System	User Timeout Logout	01/03/2000 05:11:56
17	28	System	User Logout	01/03/2000 05:08:42
16	28	System	User Logout	01/03/2000 05:06:26
15	26	System	User Login Success	01/03/2000 05:04:32
14	26	System	User Login Success	01/03/2000 04:58:28
13	28	System	User Logout	01/03/2000 04:58:24
12	26	System	User Login Success	01/03/2000 04:58:17
11	502	GE-10	GE Port Link Down	01/03/2000 04:57:40
10	502	GE-9	GE Port Link Down	01/03/2000 04:57:40
9	502	GE-1	GE Port Link Down	01/03/2000 04:57:37
8	502	GE-2	GE Port Link Down	01/03/2000 04:57:37
7	502	GE-3	GE Port Link Down	01/03/2000 04:57:37
6	502	GE-4	GE Port Link Down	01/03/2000 04:57:37
5	501	GE-5	GE Port Link Up	01/03/2000 04:57:37
4	502	GE-6	GE Port Link Down	01/03/2000 04:57:37
3	502	GE-7	GE Port Link Down	01/03/2000 04:57:37
2	502	GE-8	GE Port Link Down	01/03/2000 04:57:37
1	1	System	System Restart	01/03/2000 04:57:37

Operation	<p><u>Refresh:</u></p> <p>1. Click "Refresh" button to refresh data.</p> <p><u>Clear:</u></p> <p>1. Click "Clear" to clear data.</p>
Field	Description
SeqNo	Alarm/Event Sequential Number.
ID	Alarm/Event Type ID.
Description	Alarm/Event Type Description.
Position/Name	Event Position/Name.
Level	No matter alarm is major/minor, Alarm LED color always be red.
State	Alarm State. Value is Set/Cleared.
Time	Time.

2.4.3 DHCP Binding

Status / DHCP Binding					
<input type="button" value="Query"/>		VLAN Interface	<input type="text" value="Display All"/>	Index: <input type="text" value="1"/> to <input type="text" value="200"/>	Related: Interface VLAN DHCP Server
Previous Command Result: Normal					
Index	IP Address	Hardware Address	Start Time	End Time	Interface

Operation

Query:

Click "Query" button to display DHCP Binding Table.

The DHCP binding table contains the IP address, MAC address, start/end time and VLAN interface. Select "Display All" to show all DHCP binding entries , or show specific binding per VLAN interface.

2.4.4 Fdb

Status / Fdb ?

Query Type By Index Related: [Aging Time](#), [Fdb Static](#)

Query Index: 1 to 100

Delete All ▼

Previous Command Result: Normal

Index	Port	VID	MAC Address	Status
1	GE-1	1	F4:6D:04:22:C0:FD	Dynamic
2	GE-1	1	00:13:60:D6:12:8B	Dynamic
3	GE-1	1	00:0E:A6:74:26:41	Dynamic
4	GE-1	1	00:1A:92:C4:86:02	Dynamic
5	GE-1	1	60:EB:69:33:02:98	Dynamic
6	GE-1	1	20:6A:8A:48:28:B7	Dynamic
7	GE-1	1	00:1A:4D:8D:EE:9F	Dynamic
8	GE-1	1	00:40:F4:7F:7A:5D	Dynamic
9	GE-1	1	00:1F:D0:86:CB:1F	Dynamic
10	GE-1	1	00:1A:4D:8D:EE:6A	Dynamic
11	GE-1	1	00:50:BA:00:D8:8C	Dynamic
12	GE-1	1	10:BF:48:62:FF:B7	Dynamic

Operation	<p><u>Query:</u></p> <ol style="list-style-type: none"> 1. Select a Query Type 2. Fill query condition 3. Modify query record range 4. Click “Query” button to query <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select delete type (All/ By VID/By Port) 2. Fill delete condition 3. Click “Delete” to delete data.
Field	Description
Port	GE-1 ~ MAX Number of Port or Trunk Group.
VID	VLAN ID: 1~4094
MAC Address	Format xx:xx:xx:xx:xx:xx
Status	Data type: Dynamic/ Static

2.4.5 Giga Port Statistics

Status / Giga Port Statistics ?

Port: GE-1 ▼
Related: [Giga Port](#), [Bridge Port](#)

Previous Command Result: Normal

Input Counter	Value	Output Counter	Value
Input Bytes	0	Output Bytes	0
Unicast Pkts	0	Unicast Pkts	0
Multicast Pkts	0	Multicast Pkts	0
Broadcast Pkts	0	Broadcast Pkts	0
Discard Pkts	0	Discard Pkts	0
Error Pkts	0	Error Pkts	0

Operation	<p><u>Refresh:</u></p> <ol style="list-style-type: none"> 1. Fill query condition (Port) 2. Refresh current data. <p><u>Clear:</u></p> <ol style="list-style-type: none"> 1. Select clear port. 2. Click “Clear” to clear setting port data.
Field	Description
Port	Range: GE-1 ~Maximum Number of Port.
Input Bytes	The total number of octets received on the interface, including framing characters.
Input Unicast Pkts	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were not addressed to a multicast or broadcast address at this sub-layer.
Input Multicast Pkts	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a multicast address at this sub-layer. For a MAC layer protocol, this includes both Group and Functional address.
Input Broadcast Pkts	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a broadcast address at this sub-layer.
Input Discard Pkts	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.

Input Error Pkts	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
Output Bytes	The total number of octets transmitted out of the interface, including framing characters.
Output Unicast Pkts	The total number of packets that higher-level protocols requested be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent.
Output Multicast Pkts	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional address.
Output Broadcast Pkts	The total number of packets that higher-level protocol requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent.
Output Discard Pkts	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
Output Error Pkts	For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.

2.4.6 RMON

Status / RMON(Ethernet Stats) ?

Physical Port: GE-1

Previous Command Result: Normal

Counter	Value	Counter	Value
Pkts 64 Octets	20990	Pkts 65 to 127 Octets	5040
Pkts 128 to 255 Octets	1635	Pkts 256 to 511 Octets	1680
Pkts 512 to 1023 Octets	12823	Pkts 1024 to 1518 Octets	846
Octets	8670973	Packets	25637
Broadcast Pkts	2783	Multicast Pkts	5377
CRC Aligh Errors	0	Undersize Pkts	0
Oversize Pkts	0	Fragments	0
Jabbers	0	Collisions	0
Drop Events	0		

Operation	<p><u>Refresh:</u></p> <p>Click "Refresh" button to refresh current data.</p> <p><u>Clear:</u></p> <ol style="list-style-type: none"> 1. Select clear port. 2. Click "Clear" to clear setting physical port data.
Field	Description
Pkts 64 Octets	Total number of packets (including bad packets) received that were 64 octets in length.
Pkts 65 to 127 Octets	Total number of packets (including bad packets) received that were between 65 and 127 octets in length.
Pkts 128 to 255 Octets	Total number of packets (including bad packets) received that were between 128 and 255 octets in length.
Pkts 256 to 511 Octets	Total number of packets (including bad packets) received that were between 256 and 511 octets in length.
Pkts 512 to 1023 Octets	Total number of packets (including bad packets) received that were between 512 and 1023 octets in length.
Pkts 1024 to 1518 Octets	Total number of packets (including bad packets) received that were between 1024 and 1518 octets in length.
Octets	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets).

Packets	The total number of packets (including bad packets, broadcast packets, and multicast packets)received
Broadcast Pkts	The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets
Multicast Pkts	The total number of good packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.
CRC Align Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Undersize Pkts	The total number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Oversize Pkts	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
Fragments	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Jabbers	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Collisions	The best estimate of the total number of collisions on this Ethernet segment.
Drop Events	The total number of events in which packets were dropped by the probe due to lack of resources. Note that this number is not necessarily the number of packets dropped; it is just the number of times this condition has been detected.

2.4.7 Users

Status / Users ?			
<input type="button" value="Refresh"/>		Related: User Admin CLI Options	
Index	Interface Type	Account Name	Information
1	CLI	root	from 172.16.10.243
2	CLI	root	from 172.16.10.243
3	WEB	admin	from 172.16.10.224

Operation	<p><u>Refresh:</u></p> <p>Click "Refresh" button to refresh current data.</p>
Field	Description
Index	Show the index of login user list.
Interface Type	Show the mode of access. Possible values Console, CLI, WEB.
Account Name	Show the account name of the user.
Information	Show more information about the user, including IP address of the management host.

2.4.8 Ring Protection Status

Status / Ring Status
?

Refresh

Previous Command Result: Normal

Ring Status

Group index	Ring ID	Mode	Role	State	Guard timer	Node1	Node2
1	1	Disabled	Slave	Idle (No Link error)	10	Port-1 Link status : Link Down Port state : Forwarding Port type : SF Port	Port-2 Link status : Link Down Port state : Forwarding Port type : SF Port
2	2	Disabled	Slave	Idle (No Link error)	10	Port-3 Link status : Link Down Port state : Forwarding Port type : SF Port	Port-4 Link status : Link Down Port state : Forwarding Port type : SF Port
3	3	Disabled	Slave	Idle (No Link error)	10	Port-5 Link status : Link Down Port state : Forwarding Port type : SF Port	Port-6 Link status : Link Down Port state : Forwarding Port type : SF Port

Ring Neighbors

Group index	Ring ID	Discovery Mode	Discovery timer	Master Mac	Node1 Neighbor	Node2 Neighbor
1	1	Disabled	10	--	--	--
2	2	Disabled	10	--	--	--
3	3	Disabled	10	--	--	--

Operation	<u>Refresh:</u> Click "Refresh" button to refresh current data.
Field	Description
Group Index	The group index. This parameter is used for easy to identify the ring when user to configure it.
Ring ID	The Ring parameter is used for identify whether ring in same group on protocol level. Range: 1 ~ 255
Mode	The Ring is Enabled or Disabled.

Role	<p>The role (Master/Slave) of the switch in the Ring. Per Ring can have one Master and more Slaves.</p> <p>If this cell display with Interconnect which is meaning the Ring can inter-connect with other Ring for coupling and multi-homing application. In another words, this switch have 2 ring group share one port as the ring node. Per ring group have 2 nodes in one switch.</p>
State	<p>The protection state of the ring. Idle (No error) may means ring is Disabled or Protection port is blocking state and no any link error on all of the ring nodes belong to this ring group on the switch. If this switch is master of the ring, then this parameter can help operators to well identify the ring happen link broken or not.</p> <p>Active (Link error) may have link broken on ring ports.</p> <p>If this switch is master of the ring, then this state also will meaning the Signal failure happen between ring nodes at least in one of the switches belong to the ring.</p>
Guard timer	<p>Guard timer is a timeout value for count down a port from blocking to forwarding state when link up.</p> <p>This is in order to protect the ring do not switch the protection state from Active to Idle frequently when link status is not stable.</p>
Node1	<p>Include below information:</p> <p>Port id of Node1. (Protect Port) may display when the switch in the ring group is Master. When Ring is Idle and no any link error, the Protect Port of the Master is blocking state to prevent loop in a physical loop condition</p> <p>Link status of Node1 : Link down or Link up.</p> <p>Port state of Node1 : Forwarding or Blocking</p> <p>Port type of Node1 : SF port(In general case, all of the ring ports must configure as SF port) or Non-SF port(Only use for coupling or multi-homing application).</p>

<p>Node2</p>	<p>Include below information:</p> <p>Port id of Node2. (Protect Port) may display when the switch in the ring group is Master. When Ring is Idle and no any link error, the Protect Port of the Master is blocking state to prevent loop in a physical loop condition</p> <p>Link status of Node2 : Link down or Link up.</p> <p>Port state of Node2 : Forwarding or Blocking</p> <p>Port type of Node2 : SF port(In general case, all of the ring ports must configure as SF port) or Non-SF port(Only use for coupling or multi-homing application).</p>
<p>Discovery Mode</p>	<p>Discovery Mode is to enable or disable the ring neighbor discovery protocol. This parameter only for management purpose. It is in order to let management system to well identify the ring topology.</p>
<p>Discovery timer</p>	<p>Discovery timer is the timeout value for count down to send ring neighbor discovery protocol to other ring nodes for ring topology discovery purpose.</p>
<p>Master Mac</p>	<p>Master Mac is the Mac address of the Master switch in the ring. -- is meaning Master Mac is unknown (The ring may under learning or some link is broken in the beginning. Check all of the ring links first.) or Discovery Mode is disabled.</p>
	<p>Node2 Neighbor will display the Mac address and Port-id of the Node1's neighbor switch in the ring. -- is meaning neighbor Mac is unknown (The ring may under learning or some link is broken in the beginning. Check all of the ring links first.) or Discovery Mode is disabled.</p>
<p>Node2 Neighbor</p>	<p>Node2 Neighbor will display the Mac address and Port-id of the Node2's neighbor switch in the ring. -- is meaning neighbor Mac is unknown (The ring may under learning or some link is broken in the beginning. Check all of the ring links first.) or Discovery Mode is disabled.</p>

2.4.9 802.1x

2.4.9.1 PAE Port Status

Status/ 802.1x / PAE Port Status
?

Related: [PAE Port](#) [EAPOL Statistics](#)

Previous Command Result: Normal

Protocol Version: 2, Capability: Authenticator

Port	PAE State	Backend State	Port Status	Initiating	Re-Initialize	Re-Authenticate
1	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
2	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
3	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
4	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
5	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
6	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
7	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
8	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
9	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
10	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
11	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
12	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
13	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>
14	Disconnected	Idle	Authorized	Disabled	<input type="button" value="Enable"/>	<input type="button" value="Enable"/>

Operation	<u>Refresh:</u> Click "Refresh" button to refresh current data.
Field	Description
Port	The index of PAE Port: Value Range 1 ~ MAX Number of Port.
PAE State	The authenticator status of PAE port: Possible state: Initialize Disconnected Authenticating Authenticated Aborting

	<p>Held</p> <p>Force Auth</p> <p>Force Unauth</p>
Backend State	<p>The number of RADIUS Access-Accept received from RADIUS server.</p> <p>Range: 0~65535.</p>
Rejects	<p>The backend authenticator status of PAE port.</p> <p>Possible state:</p> <p>Initialize</p> <p>Idle</p> <p>Request</p> <p>Response</p> <p>Success</p> <p>Fail</p> <p>Timeout</p> <p>Ignore</p>
Port Status	<p>The authentication status of PAE port.</p> <p>Possible state:</p> <p>Authorized/Unauthorized</p>
Initiating	<p>Enable for force PAE port re-initialize.</p> <p>Option:</p> <p>Disabled/Enabled</p>
Re-Initialize	<p>Set Enable to force PAE port re-initialize.</p>
Re-Authenticate	<p>Set Enable to force PAE port re-authenticate.</p>

2.4.9.2 RADIUS Statistics

Status / 802.1x / RADIUS Statistics
?

Related: [RADIUS Setting](#)

Previous Command Result: Normal

Index	Tx Access Requests	Rx Access Accepts	Rx Access Rejects	Rx Access Challenges	Rx Bad Authenticators	Timeouts Count	Packets Dropped
1	0	0	0	0	0	0	0

Operation	<p><u>Refresh:</u> Click "Refresh" button to refresh current data.</p> <p><u>Clear:</u> Click "Clear" button to reset the counters.</p>
Field	Description
Index	The index of RADIUS Server: Current only support 1 RADIUS server
Requests	The number of RADIUS Access-Request sent to RADIUS server Range 0~65535.
Accepts	The number of RADIUS Access-Accept received from RADIUS server: Range 0~65535.
Rejects	The number of RADIUS Access-Reject received from RADIUS server: Range 0~65535.
Challenges	The number of RADIUS Access-Challenge received from RADIUS server: Range 0~65535.
Bad Authenticators	The number of invalid RADIUS response packet received from RADIUS server: Range 0~65535.
Timeout	The number of server Timeout happens on Backend Authentication state machine: Range 0~65535
Packets Dropped	The number of packet from RADIUS server to be silent drop by Authenticator Range 0~65535

2.4.9.3 EAPOL Statistics

Status / 802.1x / EAPOL Statistics ?												
Refresh		Clear		Clear Type All ▼		Related: PAE Port PAE Port Status						
Previous Command Result: Normal												
Port	Frame version	Frame Tx			Frame Rx							
		Total	ReqID	Req	Total	Start	Logoff	RespID	Resp	Invalid	Length Error	
1	0	0	0	0	0	0	0	0	0	0	0	
2	0	0	0	0	0	0	0	0	0	0	0	
3	0	0	0	0	0	0	0	0	0	0	0	
4	0	0	0	0	0	0	0	0	0	0	0	
5	0	0	0	0	0	0	0	0	0	0	0	
6	0	0	0	0	0	0	0	0	0	0	0	
7	0	0	0	0	0	0	0	0	0	0	0	
8	0	0	0	0	0	0	0	0	0	0	0	
9	0	0	0	0	0	0	0	0	0	0	0	
10	0	0	0	0	0	0	0	0	0	0	0	
11	0	0	0	0	0	0	0	0	0	0	0	
12	0	0	0	0	0	0	0	0	0	0	0	
13	0	0	0	0	0	0	0	0	0	0	0	
14	0	0	0	0	0	0	0	0	0	0	0	
15	0	0	0	0	0	0	0	0	0	0	0	
16	0	0	0	0	0	0	0	0	0	0	0	
17	0	0	0	0	0	0	0	0	0	0	0	
18	0	0	0	0	0	0	0	0	0	0	0	
19	0	0	0	0	0	0	0	0	0	0	0	
20	0	0	0	0	0	0	0	0	0	0	0	
21	0	0	0	0	0	0	0	0	0	0	0	
22	0	0	0	0	0	0	0	0	0	0	0	
23	0	0	0	0	0	0	0	0	0	0	0	
24	0	0	0	0	0	0	0	0	0	0	0	

Operation	<p><u>Clear:</u></p> <ol style="list-style-type: none"> 1. Select "Clear Type". 2. If clear type is "Port", then select port number to be cleared. 3. Click "Clear" button.
Field	Description
Port	The index of PAE port: Value range 1 ~ MAX Number of port.
Protocol Version	The protocol version number carried in the most recently received EAPOL frame. Range 0~65535.
Frame Tx	The number of EAPOL frames of any type that has been transmitted. Range 0~65535.
Req Id Frame Tx	The number of EAP Req/Id frames that have been transmitted. Range 0~65535.

Req Frame Tx	The number of EAP Request frames (other than Req/Id frames) that have been transmitted. Range 0~65535.
Frame Rx	The number of valid EAPOL frames of any type that has been received. Range 0~65535.
Start Frame Rx	The number of EAPOL Start frames that have been received. Range 0~65535.
Logoff Frame Rx	The number of EAPOL Logoff frames that have been received. Range 0~65535.
Resp Id Frame Rx	The number of EAP Resp/Id frames that have been received. Range 0~65535.
Resp Frame Rx	The number of valid EAP Response frames(other than Resp/Id frames) that have been received. Range 0~65535.
Invalid Frame Rx	The number of EAPOL frames that have been received by this Authenticator in which the frame type is not recognized. Range 0~65535.
Length Error Frame Rx	The number of EAPOL frames that have been received by this Authenticator in which the Packet Body Length field is invalid. Range 0~65535.

2.4.10 IGMP

2.4.10.1 Group Membership

Status / IGMP / Group Membership
?

Query Type By All & Index Related: [VLAN Interface](#), [Static Group Membership](#).

Query
Index 1 to 100 (Query Range: 1~512)

Delete
All

Previous Command Result: Normal

Index
IP Address
VID
Filter Mode
Membership
Time (sec)
Status

Operation	<p><u>Query:</u></p> <ol style="list-style-type: none"> 1. Select Query Type 2. Fill query condition 3. Modify query record range (Index range) 4. Click “Query” button to query data. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select Delete Type 2. Fill VLAN ID when delete type is “By VID” 3. Select one membership when delete type is “By Membership” <p>Click “Delete” button to delete data.</p>
Field	Description
Index	Index, value range 1~512
IP Address	Group IP Address.
VID	VLAN ID, range 1~4094
Filter Mode	Multicast FDB entry Filter Mode.
Membership	Bridge Port ID, range GE-1 ~ MAX Number of Port.
Time (sec)	Remain Time, unit is second
Status	Group Membership status, Dynamic or Static.

2.4.10.2 Group Membership Source Fdb

Status / IGMP / Group Membership Source Fdb
?

Query
Index
1
to
64
(Query Range: 1~64)

Related: [VLAN Interface Static Group Membership](#)

Previous Command Result: Normal

Index	Group IP	VID	Filter Mode	Source IP	GrpTime (sec)	SrcTime (sec)	Status

Operation	<u>Query:</u> <ol style="list-style-type: none"> 1. Select Query Type 2. Fill query condition (Index 1~64) 3. Click "Query" button to query data.
Field	Description
Index	Multicast Source FDB table. Max entry size: 64
Group IP	Multicast Source FDB group IP address.
VID	Multicast Source FDB VLAN ID, range 1~4094
Filter Mode	Multicast Source FDB Filter Mode: Include/Exclude In INCLUDE mode, the GroupRemainTime has no timeout. In EXCLUDE mode, the block list's source has no timeout.
Source IP	Source IP Address
GrpTime(sec)	Group Remain Time: if it show "--", represents time is 0.
SrcTime(sec)	Source Remain Time: if it show "--", represents time is 0.
Status	Multicast Source FDB entry type: Allow/Block

2.4.11 Layer 3

2.4.11.1 RIP Routes

Status / RIP Routes ?

Related: [RIP v1/v2](#)

Query Type: By All

Delete Type: By All

Previous Command Result: Normal

Destination	Netmask	Gateway	VID	Metric	Aging Time

Operation	<p><u>To query RIP Route Table:</u></p> <ol style="list-style-type: none"> 1. Select Query Type to query by All or by VID. 2. Fill VID when query type is "by VID". <p><u>To delete RIP Route entry:</u></p> <ol style="list-style-type: none"> 1. Select RIP route entry(s). 2. Click "Delete" button to delete RIP Route entry.
Field	Description
Destination	The destination network address for the RIP route.
Netmask	The network subnet mask for the RIP route.
Gateway	The next hop gateway address of the RIP route.
VID	The VLAN ID which is the Route of the RIP packet comes from. Range is 1 ~ 4094.
Metric	The metric of the route. Range 1~16.
Aging Time	The timeout value of Routing information timeout timer or Garbage collection timer. Range 0~3600 seconds.

2.4.11.2 OSPF Routes

Status / OSPF Routes ?

Table : Network Refresh

Previous Command Result: Success

Network/Netmask	Area ID	Cost	Gateway / Interface
---------------------------------	-------------------------	----------------------	-------------------------------------

Note:
(IA) is means inter area.

Operation	<p><u>To query RIP Route Table:</u></p> <ol style="list-style-type: none"> 1. Select Table type. 2. Click "Refresh" button to get OSPF Routes data.
Field	Description
Router	Router Address Area ID Cost Flag Gateway/Interface
Network	Network/Netmask Area ID Cost Gateway/Interface
External	Network/Netmask Area ID Cost/Ext Cost Gateway/Interface

2.4.11.3 OSPF Database

Status / OSPF Database Information ?

Information:

Previous Command Result: Success

Operation	<p><u>To display OSPF Database data:</u></p> <ol style="list-style-type: none"> 1. Select Information type. 2. Click "Refresh" button to get OSPF database information data.
Field	Description
Information	Router/Network/Summary/ASBRS Summary/ External/ NSSA External
Router	Index: max 16 Link Connected Link ID Link Data Number of TOS Metrics TOS 0 Metrics
Network	Network mask Attached Router
Summary	Network mask TOS Metric
ASBR Summary	Network mask TOS Metric
External	Network mask TOS Metric Forward Address External Route Tag
NSSA External	Network mask TOS Metric

	Forward Address External Route Tag
--	---------------------------------------

2.4.11.4 OSPF Neighbors

Status / OSPF Neighbors ?

Refresh

Previous Command Result: Normal

Index
Neighbor ID
Priority
State
Dead Time
Address
Interface

Operation	<p><u>To display OSPF Neighbor data:</u></p> <p>Click "Refresh" button to get OSPF neighbor information data.</p>
Field	Description
Index	OSPF Neighbor Index.
Neighbor ID	OSPF Neighbor ID.
Priority	OSPF Neighbor Priority.
State	<p>Display format NSM/ISM</p> <p>OSPF Neighbor NSM: DOWN/ Attempt/ Init/ To Way/ Exatart/ Loading/ Full</p> <p>OSPF Neighbor ISM: DOWN/ LoopBack/ Waiting/ Point to Point/ Drother/ Back Up/ DR</p>
Dead Time	OSPF Neighbor Dead Timer.
Address	OSPF Neighbor Source.
Interface	OSPF Neighbor interface VLAN.

2.4.11.5 VRRP Groups State

Status / VRRP Group State ?

Related: [VRRP Group Config](#)

Query Type By All

Previous Command Result: Normal

[Index](#) [Status](#)

Operation	<p><u>Query by All:</u></p> <ol style="list-style-type: none"> 1. Select Query type "By All" 2. Click "Query" button to query VRRP Group state. <p><u>Query by VLAN Interface ID:</u></p> <ol style="list-style-type: none"> 1. Select Query type "By VLAN Interface ID" 2. Select VLAN Interface. 3. Click "Query" button to Query VRRP Group state data. <p><u>Query by VRRP Group ID:</u></p> <ol style="list-style-type: none"> 1. Select Query type "By VRRP Group ID" 2. Select VRRP Group ID range. 3. Click "Query" button to Query VRRP Group state data.
Field	Description
Index	The index of VRRP.
Status	Display VRRP Group number on which VLAN interface and current VRRP State

2.5 System

2.5.1 Restart



Operation	<p><u>Restart:</u> Click "Restart" button will restart the system</p> <p><u>Save Running Config & Restart:</u> Click " Save Running Config & Restart" button will redirect page to "Save & Restore"</p>
------------------	---

2.5.2 Save & Restore

System / Save & Restore ?	
Database Control Action: [Select] <input type="button" value="Submit"/>	
FTP Server IP	
FTP Account	
FTP Password	
Filename	
Inband DB	
General DB	
Boot inband DB	16 11/19/2012 11:40:57
Boot general DB	16 11/19/2012 11:40:57
Set active inband DB	16 11/19/2012 11:40:57
Set active general DB	16 11/19/2012 11:40:57
Current Database Status	MEMORY WRITE SUCCESS

User Guide:

- (A) Save inband configuration and runtime configuration as the active restoration database for next power-on restoration.
- (B) Restore inband configuration and control plane configuration by setting another restoration database active.
- (C) Restore inband configuration and control plane configuration by setting another restoration database active and system restart.
- (D) Clear inband configuration and control plane configuration in the active restoration database. (Warn: runtime config. is also cleared and Inband configuration is lost)
- (E) Clear inband configuration and control plane configuration in the active restoration database and system restart. (Warn: runtime config. is also cleared and Inband configuration. is lost)
- (F) Clear control plane configuration in the active restoration database. (runtime config. is also changed.)
- (G) Clear control plane configuration in the active restoration database and restart. (runtime config. is also changed.)
- (H) Export runtime configuration in cli command format to ftp server.
- (I) Export runtime configuration in binary format to ftp server.
- (J) Import database in cli command format from ftp server and set it to the active restoration database.
- (K) Import database in cli command format from ftp server and set it to the active restoration database and system restart.
- (L) Import database in binary format from ftp server and set it to the active restoration database.
- (M) Import database in binary format from ftp server and set it to the active restoration database and system restart.
- (P) Save running config to flash replacing the specified backup.

Operation	<p><u>Submit:</u></p> <ol style="list-style-type: none"> 1. Select Control Action. 2. Fill necessary data for action. 3. Click "Submit" button to start the instruction.
Field	Description
Database Control action	<p>Select Database control.</p> <p>(A) Save Inband configuration and runtime configuration as the active restoration database for next power-on restoration.</p> <p>(B) Restore Inband configuration and control plane configuration by setting another restoration database active.</p> <p>(C) Restore Inband configuration and control plane configuration by setting another restoration database active and system restart.</p> <p>(D) Clear Inband configuration and control plane configuration in the active restoration database. (Warn: runtime configuration is also cleared and Inband configuration is lost)</p> <p>(E) Clear Inband configuration and control plane configuration in the active restoration database and system restart. (Warn: runtime configuration is also cleared and Inband configuration. is lost)</p>

	<p>(F)Clear control plane configuration in the active restoration database. (runtime configuration. is also changed.)</p> <p>(G)Clear control plane configuration in the active restoration database and restart. (runtime configuration is also changed.)</p> <p>(H)Export runtime configuration in CLI command format to ftp server.</p> <p>(I)Export runtime configuration in binary format to ftp server.</p> <p>(J)Import database in CLI command format from ftp server and set it to the active restoration database.</p> <p>(K)Import database in CLI command format from ftp server and set it to the active restoration database and system restart.</p> <p>(L)Import database in binary format from ftp server and set it to the active restoration database.</p> <p>(M)Import database in binary format from ftp server and set it to the active restoration database and system restart.</p> <p>(P)Save running configure to flash replacing the specified backup.</p>
FTP Server IP	Input FTP Server IP Address
FTP Account	Input FTP Name
FTP Password	Input FTP Password
Filename	Input File Name
Inband DB	Inband Backup Name (1 ~ 31 characters)
General DB	General Backup Name (1 ~ 31 characters)
Boot inband DB	Show runningcfg backup
Boot general DB	Show runningcfg backup
Set active inband DB	Show runningcfg backup
Set active general DB	Show runningcfg backup

2.5.3 Firmware

System / Firmware
?

Previous Command Result: Normal

FTP Information	
Remote Server IP	<input type="text" value=" . . . : 21"/>
Server User Name	<input type="text"/>
Server Password	<input type="password"/>
File Name	<input type="text"/>
Schedule Time <input type="checkbox"/> Enabled	<input style="width: 100px;" type="text" value=" / / : : "/> (Format: MM/DD/YYYY HH:MM:SS)
FTP Write Flash	<input type="button" value="FTP Get and Write Flash"/> <input type="checkbox"/> Reboot After Remote Download

Partition Information			
Partition Location	Current Boot	Next Boot	Description
Partition:0	---	---	00.03.02
Partition:1	YES	YES	00.03.02
Change Partition	<input type="text" value="Partition 1"/> <input type="button" value="Submit"/>		

Note:Upgrading firmware may disconnect this page.
Please refresh the page if it is disconnected.

Warning:Upgrading firmware may take a few minutes.
Please don't turn off or reset the BOX

Operation	<p><u>FTP Get and Write Flash:</u></p> <ol style="list-style-type: none"> 1. Select Schedule time checkbox to setting schedule 2. Fill schedule time 3. Click "FTP Get and Write Flash" button will load firmware from remote server IP, If the "Reboot After Remote Download" was selected it will restart system when the firmware was changed. <p><u>Submit:</u></p> <p>Click "Submit" button will change the partition. The system will use this partition number when the system is restart.</p>
Field	Description
Remote Server IP	Type in the IP address of the FTP server where the firmware is stored.
Server User Name	Type in a user name accepted by the FTP server.
Server Password	Type in a password accepted by the FTP server.
File Name	Type in the name of the firmware file (string length 1 ~ 64).
Schedule Time	<p>Select Enable checkbox and type in the schedule time to update of the firmware file.</p> <p>The time format: MM/DD/YYYY HH:MM:SS</p>

FTP Get and Write Flash	After you have entered the FTP server, user name, password and firmware file name, click on this button to start the firmware update process.
Reboot After Remote Download	Select the checkbox if you want the system reboot automatically once the firmware update is finished.

2.5.4 Alarm Profile

System / Alarm Profile

Modify
Related: [Alarm Current](#) [Alarm History](#) [Event Log](#)

Previous Command Result: Normal

<input type="checkbox"/>	ID	Description	Level	Mask
<input type="checkbox"/>	101	GE-1 Port Link Down	Minor	Mask
<input type="checkbox"/>	102	GE-2 Port Link Down	Minor	Mask
<input type="checkbox"/>	103	GE-3 Port Link Down	Minor	Mask
<input type="checkbox"/>	104	GE-4 Port Link Down	Minor	Mask
<input type="checkbox"/>	105	GE-5 Port Link Down	Minor	Mask
<input type="checkbox"/>	106	GE-6 Port Link Down	Minor	Mask
<input type="checkbox"/>	107	GE-7 Port Link Down	Minor	Mask
<input type="checkbox"/>	108	GE-8 Port Link Down	Minor	Mask
<input type="checkbox"/>	109	GE-9 Port Link Down	Minor	Mask
<input type="checkbox"/>	110	GE-10 Port Link Down	Minor	Mask
<input type="checkbox"/>	111	GE-11 Port Link Down	Minor	Mask
<input type="checkbox"/>	112	GE-12 Port Link Down	Minor	Mask
<input type="checkbox"/>	113	GE-13 Port Link Down	Minor	Mask
<input type="checkbox"/>	114	GE-14 Port Link Down	Minor	Mask
<input type="checkbox"/>	115	GE-15 Port Link Down	Minor	Mask
<input type="checkbox"/>	116	GE-16 Port Link Down	Minor	Mask
<input type="checkbox"/>	117	GE-17 Port Link Down	Minor	Mask
<input type="checkbox"/>	118	GE-18 Port Link Down	Minor	Mask
<input type="checkbox"/>	119	GE-19 Port Link Down	Minor	Mask
<input type="checkbox"/>	120	GE-20 Port Link Down	Minor	Mask
<input type="checkbox"/>	121	GE-21 Port Link Down	Minor	Mask
<input type="checkbox"/>	122	GE-22 Port Link Down	Minor	Mask

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select Row data checkbox. 2. Modify Level and Mask. <p style="font-size: 0.8em; margin-left: 20px;">Note: When any alarm exists, the Alarm LED will be lit, and Alarm Output Relay will also be enabled.</p> <ol style="list-style-type: none"> 3. Click "Modify" button to modify data.
Field	Description
ID	Alarm Type ID.
Description	Alarm Type Description.
Level	No matter alarm is major/minor, Alarm LED color always be red.
Mask	If alarm is masked, then alarm item will not be captured in alarm history/current; SNMP trap either. If specific alarm item is masked, then it will not trigger the Alarm LED on or off.

2.5.5 CLI Options



System /CLI Options
?

Previous Command Result: Normal

Idle Timeout	600	seconds	
Max session count	4		

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click “Modify” button to apply change.
Field	Description
Idle Timeout	<p>Specify the timeout seconds for the operational interface. The session will be closed once the idle time exceeds this timeout value.</p> <p>Value range is 60 ~ 65535. 0 means disable timeout.</p>
Max session count	<p>Specify the maximum allowed sessions for the CLI (command line interface): 1 ~ 10.</p>

2.5.6 HTTP (HTTPS)

System / HTTP(HTTPS)  

Modify

Previous Command Result: Normal


HTTP Service: HTTP

HTTP Port 80 For HTTP only. Default Port: 80

HTTPS Port 443 For HTTPS only. Default Port: 443

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select HTTP or HTTPS. 2. Change the port number if necessary. 3. Click “Modify” button to apply the change.
Field	Description
HTTPS Service	HTTPS / HTTP. Default is HTTP (HTTPS disabled).
HTTPS Port	HTTPS service port. Range: 1~65535, Default Port: 443.
HTTP Port	HTTP service port. Range: 1~65535, Default Port: 80.

2.5.7 SLL (new)

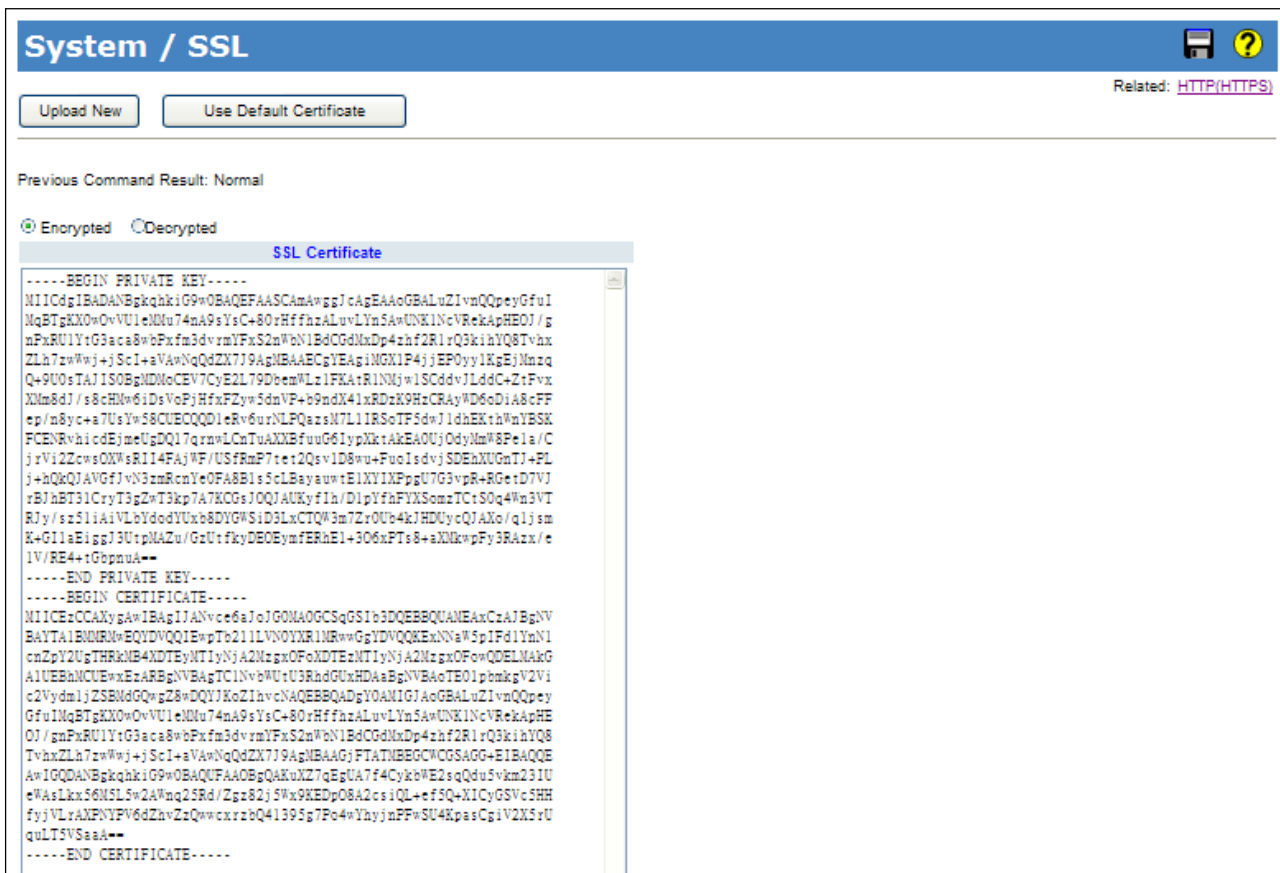

<p>Operation</p>	<p><u>Use Default Certificate:</u></p> <ol style="list-style-type: none"> 1. Click "Use Default Certificate" button. 2. System will delete uploaded certificate, if it's exist. 3. After delete success, it will show default SSL certificate. <p><u>Upload New:</u></p> <ol style="list-style-type: none"> 1. Click "Upload New" button. 2. Copy and Paste both Private Key (privatekey) and Self-Signed SSL Certificate (cert) in the input area. 3. The certificate must be in PEM format as the following, otherwise upload would be failed: <pre> -----BEGIN RSA PRIVATE KEY----- -----END RSA PRIVATE KEY----- -----BEGIN CERTIFICATE----- -----END CERTIFICATE----- </pre>
-------------------------	---

2.5.8 SNTP

System / SNTP ?

Previous Command Result: Normal

Select Time Zone: GMT +00:00 Greenwich Mean Time ▼

Time Zone	GMT
System Date (M/D/YYYY)	07 / 28 / 2014
System Time (H:M:S)	22 : 29 : 21
Polling Interval	0 Sec
SNTP Server Address	0 . 0 . 0 . 0

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Modify the configuration. 2. Click “Modify” button to modify data. <p><u>Sync:</u></p> <p>Click “Sync” button to manual synchronize system time from SNTP server.</p>
Field	Description
Select Time zone	Sets the local time zone with Time Zone list. Sixty-six of the world's time zones are presented (including those using standard time and summer/daylight savings time).
System Date	Sets system date (mm/dd/yyyy).
System Time	Sets system time (hh:mm:ss).
Polling Interval	Sets polling interval (seconds) that SNTP client will sync with designated SNTP server.
SNTP Server address	Sets SNTP server IP address for your system.

2.5.9 Syslog

System / Syslog ?

Modify

Previous Command Result: Normal

Status: Disabled ▼

Current Server	192.168.1.1
Syslog Server Address	<input style="width: 40px; text-align: center;" type="text" value="192"/> <input style="width: 40px; text-align: center;" type="text" value="168"/> <input style="width: 40px; text-align: center;" type="text" value="1"/> <input style="width: 40px; text-align: center;" type="text" value="1"/>

Operation	<p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select Enabled/Disabled option and click Modify button to enable Syslog function. 2. Modify the configuration. 3. Click “Modify” button to modify data.
Field	Description
Status	Select Enabled/Disabled option and click Modify button to enable Syslog function.
Current Server	This field shows the IP address of current Syslog server.
Syslog Server Address	Type in the new IP address of Syslog server. The server must be a remote host.

2.5.10 User Administration

System / User Administration ?

Create Delete Modify Related: [CLI Options](#)

Previous Command Result: Normal

No.	User Name	Access Level	Comment
<input type="radio"/>	admin	Super User	

System / User Account - Create ?

Access Level:

User Name	<input type="text"/>
Password	<input type="text"/>
Confirm Password	<input type="text"/>
Comment	<input type="text"/>

Apply Cancel

System / User Account - Modify ?

Access Level:

User Name	<input type="text" value="admin"/>
	<input type="checkbox"/> Change Password
New Password	<input type="text"/>
Retry Password	<input type="text"/>
Comment	<input type="text"/>

Apply Cancel

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Click "Create" button to create page. 2. Fill user name, access level, password, confirm password and comment fields. 3. Click "Apply" to create setting data or click "Cancel" to cancel it.
------------------	--

	<p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select one row data for delete. 2. Click “Delete” to delete selected data. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Click “Modify” button to modify page. 2. Select “Change Password” checkbox if you want to change password. 3. Fill user name, access level, New Password, Retry Password and comment fields. 4. Click “Apply” to apply change or click “Cancel” to cancel it.
Field	Description
User Name	Shows the user name (up to 32 characters).
Access Level	<p>Show the access level of the user:</p> <p>Super User - The user can access to all functions.</p> <p>Engineer - The user can access to all functions except user account management.</p> <p>Guest - The user can access to basic display functions.</p>
Password	Enter a login password of 1-31 characters.
Confirm Password	Enter the login password of previous field again.
Comment	Description of the user account (up to 31 characters).

2.5.11 SNMP

2.5.11.1 SNMP Options

System / SNMP Options			
Previous Command Result: Normal		Related: Community Target User Group View	
SNMP Restart	Loading SNMP configuration to system.	<input type="button" value="Restart"/>	
SNMP v3	Disabled <input type="button" value="v"/>	<input type="button" value="Modify"/>	

Operation	
	<p><u>Restart:</u></p> <p>After any SNMP setting changed, only configuration is changed, but not apply to the system yet. All SNMP changed configuration could work after restart SNMP. It will not reboot system, but may take several seconds to load SNMP setting.</p> <p><u>Modify SNMP Version:</u></p> <p>This button is used to set whether snmp v3 is enable or not. If snmpV3 switch is set to disable, the system would use snmp v2c only. If snmpV3 switch is set to enable, the system would use snmp v3 setting. Changing this will restart SNMP automatically.</p> <p>The snmp v3 parameters would be valid only if snmp v3 is enabled.</p>

2.5.11.2 SNMP Community

System / SNMP Community

Related: [Options](#) [Target](#) [User](#) [Group](#) [View](#)

Community Name:
View/Group Name: none
Access Mode: Get/Set

Previous Command Result: Normal

	Index	Community Name	View/Group Name	Access Mode
<input type="checkbox"/>	1	public	none	Get/Set



Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Fill the Community name. 2. Click "Create New" button to create new Community. <p><u>Modify community entry:</u></p> <ol style="list-style-type: none"> 1. Select entry by check up the check box 2. Modify field data: 3. Click "Modify" button to apply the change <p><u>Delete community entry:</u></p> <p>Select entry by check box, then click "Delete".</p> <p>Note: This page supports multi-selection, click one or more row items to delete. User also could click "select all" to delete all target items.</p>
Field	Description
Index	SNMP Community index, The system supports up to 32 Community data.
Community Name	SNMP Community name, for SNMP v1/v2c. Only if community name match, the SNMP request would be received. Community Name max size is 31 characters.
View/Group Name	View and Group are used for SNMP v3 only. A community is allowed to bind one of the view or group name. If it does not take any group or view, it will be a v1/v2c community. If it takes a view or a group name, the community will be treated as a v3 community. The v2c and v3 communities could exist in the community table concurrently.

	It will display "unknown(name) when view/group name doesn't exist in view/group table.
Access Mode	Choice access right. Allow Get operation only, or allow both Get and Set.

2.5.11.3 Trap Target

SNMP Modify:

System / SNMP Trap Target

Create New
Related: [Options](#) [Community](#) [User Group](#) [View](#)

Modify
Delete

Previous Command Result: Normal

[Notify](#)
[Target](#)

	Index	Notify Name	Notify Tag
<input type="checkbox"/>			

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to create new notify tag. 2. Fill the notify name and notify tag. 3. Click "Apply" to create, "Cancel" to abort. <p><u>Modify:</u></p> <ol style="list-style-type: none"> 1. Select entry by check box 2. Modify field data 3. Click "Modify" button to apply change. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select entry by check box 2. Click "Delete" button to delete Notify Tag item.
Field	Description
Index	SNMP notify tag index, The system supports up to 32 notify tags.
Notify Name	Name of Notify entry. Notify Name max size is 31 characters.
Notify Tag	<p>Notify Tag string.</p> <p>If tag of Target entry matches any tag from tags of Notify Table, then SNMP trap function would work.</p> <p>Notify Tag max size is 31 characters.</p>

SNMP Target:

System / SNMP Trap Target

Create New
Related: [Options](#) [Community](#) [User](#) [Group](#) [View](#)

Delete

Previous Command Result: Normal

Notify
Target

<input type="checkbox"/>	Index	Target Data	Modify
--------------------------	-------	-------------	------------------------

Operation	<p><u>Create:</u></p> <ol style="list-style-type: none"> 1. Click "Create New" button to create new target data 2. Fill the target IP address, name, port number, and trap version. Give a new tag name or select a existing notify tag name as target name 3. Click "Apply" to create, "Cancel" to abort. <p><u>Modify:</u></p> <p>Click row item "modify" button to modify existence target data.</p> <p><u>Delete:</u></p> <p>Select entry by check box, then click "Delete".</p> <p>Note: This page supports multi-selection, click one or more row items to delete. User also could click "select all" to delete all target items.</p>
Field	Description
Index	SNMP target index, The system supports up to 32 target entries.
Target Address	Target IP address, the host IP address of trap receiver. Value range 0.0.0.0 ~ 255.255.255.255
Address Port	Target Address port number. TCP Port number of Trap receiver. Range: 0 ~ 65535, Default is 162
Target Name	Name of target. Target Name max size is 31 characters.
Target Tag	Add a target tag, or pick up existing notify tag from Notify Table.
Trap Version	Select SNMP trap version. Supports v1/v2c

2.5.11.4 User

System / SNMP User

[Options](#) [Community](#) [Target](#) [Group](#) [View](#)

User Name:

User Type:

Group Name:

Auth Protocol:

Auth Password:

Priv Protocol:

Priv Password:

Previous Command Result: Normal

<input type="checkbox"/>	No.	User Name	Security Level	User Type	Group Name	Auth Protocol	Auth Password	Priv Protocol	Priv Password
<input type="checkbox"/>									

Operation	<p><u>Create new:</u></p> <ol style="list-style-type: none"> 1. Fill "User Name" and select "User Type", "Auth Protocol" and "Priv Protocol". 2. Click "Create New" button to create new user. <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select a row data in user account table (also support multi-select). 2. Click "Delete" button to delete user account.
Field	Description
User Name	User name, length 1~31. Accept any characters except space, quote mark and "?".
User Type	SNMPv3 user type. Options: <ol style="list-style-type: none"> 1. Read Only 2. Read Write 3. v3 User If "User type" is "v3 User", the "Group Name" should be provided. No matter which User Type is selected, the authentication and Privacy options are allowed.
Group Name	Access Group name, length 1~15. Accept any characters except space, quote mark and "?". If user type is "Read Only" or "Read Write", then this field is not needed.

Auth Protocol	<p>User authentication protocol. Works only if SNMPv3 is enabled.</p> <p>Options:</p> <ol style="list-style-type: none"> 1. None 2. MD5 3. SHA <p>If "Auth Protocol" is "None", "Priv Protocol" always is "None". If "Auth Protocol" is MD5 or SHA, "Auth Password" should be input.</p>
Auth Password	<p>Authentication password, length 8~15. Works only if SNMPv3 is enabled.</p> <p>Accept any characters except space, quote mark and "?".</p> <p>If Authentication Protocol is "None", then Privacy options are not needed.</p>
Priv Protocol	<p>User Privacy protocol. Works only if SNMPv3 is enabled.</p> <p>If "Priv Protocol" is not "None", "Priv Password" should be input.</p> <p>Options:</p> <ol style="list-style-type: none"> 1. None 2. DES
Priv Password	<p>Privacy password, length 8~15. Works only if SNMPv3 is enabled.</p> <p>Accept any characters except space, quote mark and "?".</p> <p>If "Priv Protocol" is "None" the field not needed.</p>

2.5.11.5 Group

System / SNMP Group

Related: [Options](#) [Community](#) [Target](#) [User](#) [View](#)

Group Name:

Sec. Model:

Sec. Level:

Read View:

Write View:

Previous Command Result: Normal

No.	Group Name	Security Model	Security Level	Read View	Write View
<input type="checkbox"/>					

Operation	<p><u>Create new:</u></p> <ol style="list-style-type: none"> 1. Fill "Group Name" and select "Sec. Model", "Sec. Level". 2. Click "Create New" button to create new group. <p>Note: max group entry: 32</p> <p><u>Delete :</u></p> <ol style="list-style-type: none"> 1. Select a row data in VACM group table (also support multi-select). 2. Click "Delete" button to delete user account.
Field	Description
Group Name	Group name, length 1~15. Accept any characters except space, quote mark and "?".
Security Model	SNMP security model. Options: <ul style="list-style-type: none"> - v1 supports read/write view. - v2c supports read/write view. - v3usm supports read/write view & security level.
Security Level	User security level. If "Security Model" is "v1" or "v2c", the field is not used, it will be show as "--". States as below: <ul style="list-style-type: none"> - NoAuth, NoPriv (No authentication and no Privacy)

	<ul style="list-style-type: none">- Auth, NoPriv (Authentication and no Privacy)- Auth, Priv (Authentication and Privacy)
Read View	<p>Access View for Read (snmp-get)</p> <p>Select from the view list. If list is empty, create access view with page "SNMP View" first.</p> <p>It will display "unknown(xxxx) when the name of xxxx doesn't exist in view name.</p>
Write View	<p>Access View for Write (snmp-set)</p> <p>Select from the view list. If list is empty, create access view with page "SNMP View" first.</p> <p>It will display "unknown(xxxx) when the name of xxxx doesn't exist in view name.</p>

2.5.11.6 SNMP View

System / SNMP View
📄 ?

View Name:

View Type:

Sub Tree:

Related: [Options](#) [Community](#) [Target User Group](#)

Delete Type

Previous Command Result: Normal

[No.](#) [View Name](#) [View Type](#) [Sub Tree](#)

Operation	<p><u>Create new:</u></p> <ol style="list-style-type: none"> 1. Fill "View Name", "Sub Tree" and select "View Type". 2. Click "Create New" button to create new view. <p>Note: max group entry: 32</p> <p><u>Delete:</u></p> <ol style="list-style-type: none"> 1. Select a row data in VACM view table (also support multi-select). 2. Click "Delete" button to delete user account. <p>VACM View can be delete by Name or by Index. Note that if delete by name, all entries with the same name would be deleted together.</p>
Field	Description
View Name	View name, length 1~15. Accept any characters except space, quote mark and "?".

View Type	<p>Accessible/Not accessible of object (SNMP OID).</p> <p>Select down list box:</p> <ol style="list-style-type: none">1. Include, allow access the subtree/oid;2. Exclude, doesn't allow access the subtree/oid. <p>Note: the oid is a prefix, no need to match it exactly.</p> <p>For example: 1.3.6.1.2.1 (include), it means 1.3.6.1.2.1.* are accessible.</p> <p>For example: 1.3.6.1.2.1 (exclude), it means 1.3.6.1.2.1.* are NOT accessible.</p> <p>An example of wildcard(*):</p> <p>1.3.6.1.*.1 (include), it means that</p> <p>1.3.6.1.4.1.* are accessible and</p> <p>1.3.6.1.2.1.* are accessible.</p>
Sub Tree	<p>SNMP OID or Object Name of MIB</p> <p>Input format is OID, char length 1~31.</p> <p>Accept MIB object name "iswitch", or wildcard (*).</p> <p>iswitch represents 1.3.6.1.4.1.5833.2012</p> <p>For example:</p> <p>1.3.6.1.2.1</p> <p>1.3.6.1.4.1.5833.2012</p> <p>iswitch.1</p> <p>iswitch.2.6.1.1.*.4</p> <p>(iswitch.2.6.1.1 is EthernetPort Entry, it means this view include/exclude the 4th port of the table.)</p>