

# LP-8x3x Quick Start

Version 1.0, 2014/06/05

## ➔ What's In the Box?



LP-8x3x module

LP-813x: 1 slot  
LP-843x: 4 slots  
LP-883x: 8 slots



microSD card



CD



Screw Driver

(1C016)  
2.4mm



RS-232 Cable


CA-0910  
CA-0915  
CA-0915

In addition to this manual, the package includes the following items:


- One set of LP-8x3x hardware
- One microSD card for storing system files
- One quick start guide (this manual)
- One software utility CD with Software User's Manual included
- One screw driver (2.4 mm)
- RS-232 cable

# 1. Setting up the power supply and other I/O devices

- ❑ Power Supply: +10V to +30VDC (E.g., DP-665)  
[http://www.icpdas.com/products/Accessories/power\\_supply/power\\_list.htm](http://www.icpdas.com/products/Accessories/power_supply/power_list.htm)
- ❑ The diagram below shows the connections of LP-8131.

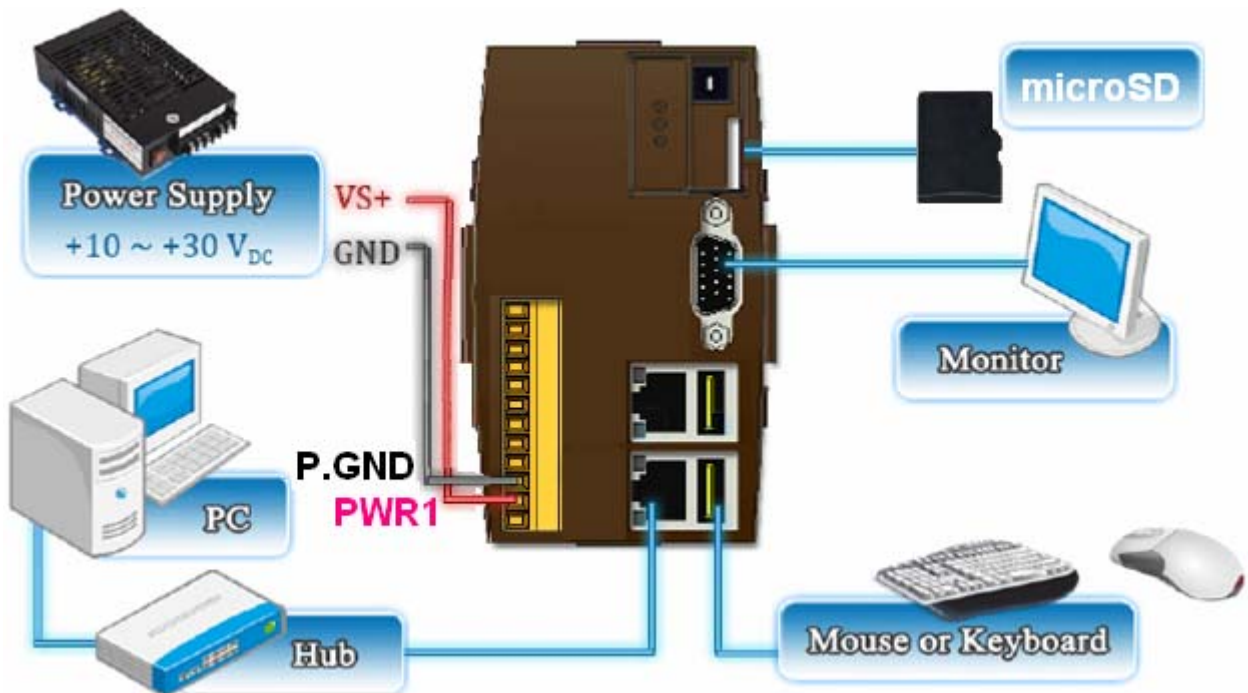


- ❑ The diagram below shows the connections of LP-8431/ LP-8831.

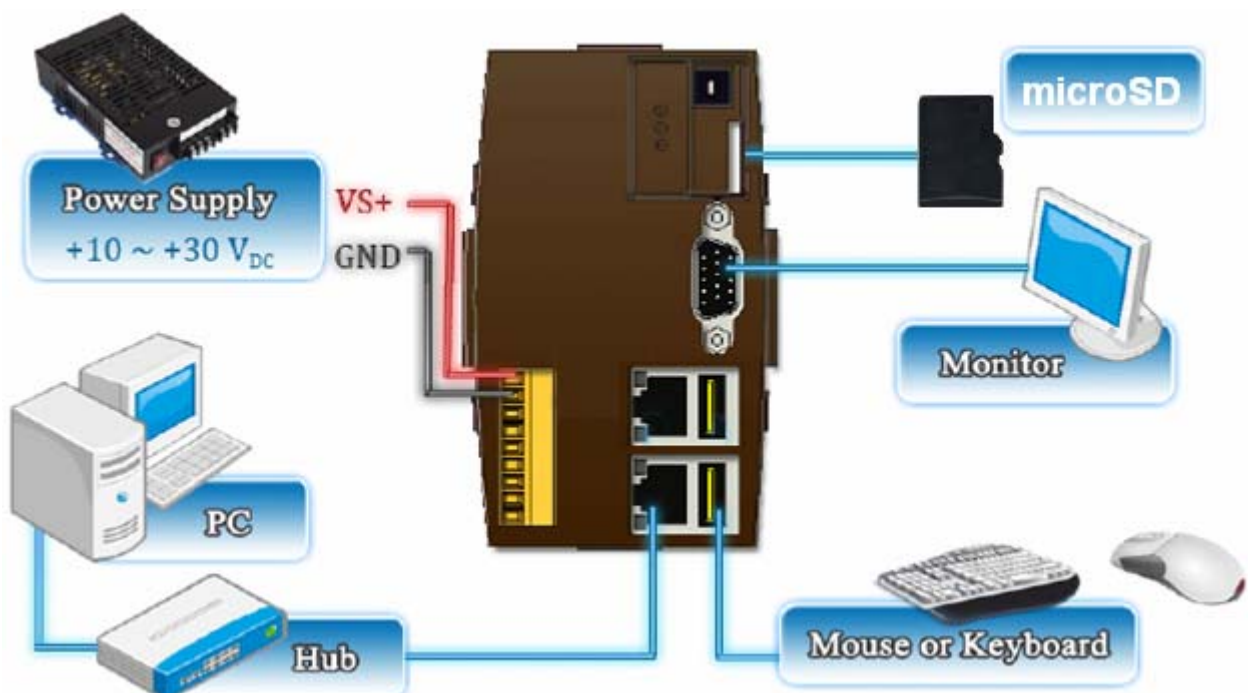

## 2. Configuring the Operating Mode

There are four basic operation modes for running LP-8x3x that can be determined through a rotary switch. The operating mode selection as below:

	Rotary Switch Position	Operation Mode
	0 : Normal mode	Default
	1 : Quick mode	Quick boot
	2 : OS update mode	Update OS image
	3 : Debug mode	Development by ICP DAS
	Others	Reserved

### Normal mode(Default)

Normal mode is the default operation mode for the LP-8x3x. Use this mode to perform additional tasks and configuration. Programs are also executed in this mode.

### Quick mode

Quick mode is used to bypass the LP-8x3x boot screen when booting from a microSD/microSDHC card, so as to speed up the booting process.

### OS update mode

This mode is used to update the OS image. Note that the Linux OS image is only suitable for the LP-8x3x. If the LP-8x3x cannot be booted or operated in normal mode, use this mode to update OS image again. Ensure that you backup any important files, before updating the OS image. For more information, refer to the “OS update manual”.

**The latest LP-8x3x OS Image:** <http://ftp.icpdas.com/pub/cd/linpac/napdos/lp-8x3x/>

### Debug mode

This mode is only for use by ICP DAS during development of the device.

### Reserved

Rotary switch positions 4~9 are reserved by ICP DAS.



### 3. Preparing start-up

Step 1: Make sure the rotary switch placed in the '0' position.

Step 2: Plug in your USB keyboard, mouse, microSD card, VGA monitor and LAN.

Step 3: Insert the high profile I-8K/87K series I/O modules into the LP-8x3x slots.

(Only high profile I-8K and I-87K series modules can be plugged)

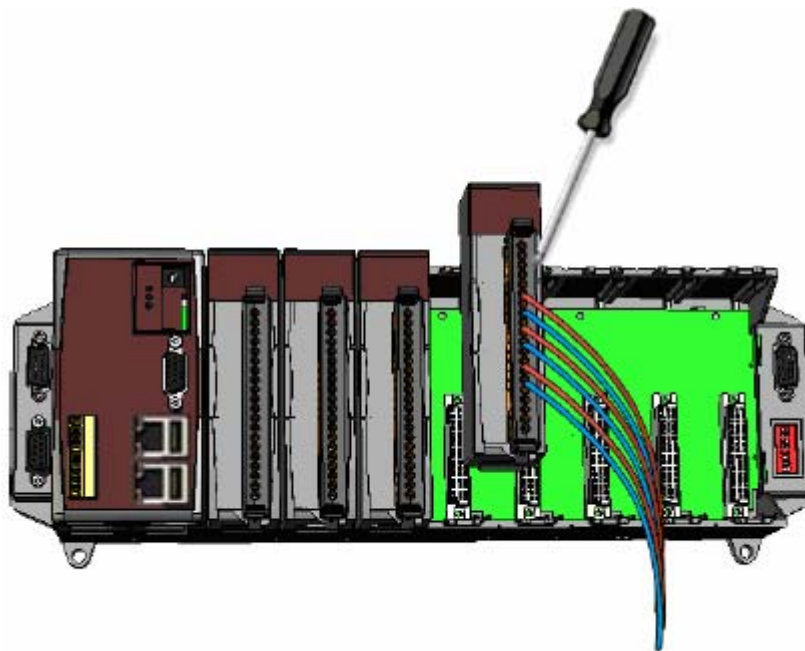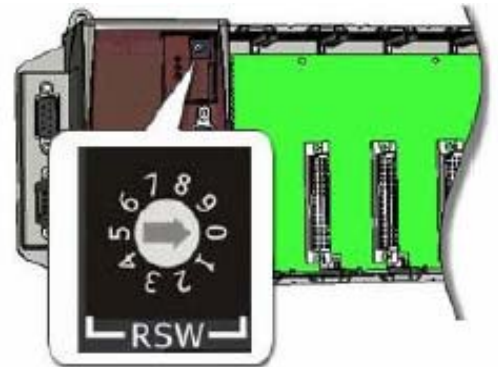

Step 4: Connect the COM2, COM3 or the COM4 ports to your devices controlled if necessary.

Step 5: Connect the DC power and turn it on.

(The input range of power supply is +10 to +30V<sub>DC</sub>)

Step 6: The LP-8x3x will start up, more detail information, refer to the software user's manual for further operations and for developing your own applications.

## 4. Connect the LP-8x3x to a Windows PC

- Open **HyperTerminal** by clicking on '**Start** → **Programs** → **Accessories** → **Communications** → **Hyper Terminal**'
- In the 'COM properties' dialog box, set the parameters for COM 1 to **115200 bps, 8 data bits, no parity, 1 stop bit and no flow control**, and then press the OK button to save the settings.
- **Turn on the LP-8x3x power**, and the following message will be displayed to indicate that the configuration process has been completed.
- Press 'Enter', you will see 'linpac-8000 login:' prompt.

```
Starting RAM Driver services: 1376 inodes
4096 blocks
Firstdatazone=47 (47)
Zonesize=1024
Maxsize=268966912
Setting the System Clock using the Hardware Clock as reference...
Mon May 18 14:22:38 2009 0.000000 seconds
Mon May 18 14:22:38 UTC 2009
Starting gqcam services: pwc: Philips webcam module version 10.0.12 loaded.
pwc: Supports Philips PCA645/646, PCVC675/680/690, PCVC720[401/730/740/750 & PCV
C830/840.
pwc: Also supports the Askey VC010, various Logitech Quickcams, Samsung MPC-C10
and MPC-C30,
pwc: the Creative WebCam 5 & Pro Ex, SOTEC Afina Eye and Visionite VCS-UC300 and
VCS-UM100.
usbcore: registered new interface driver Philips webcam
Starting X Server...
/bin/sh: can't access tty; job control turned off
#
icewm-session: using /root/.icewm for private configuration files
icewmbg: using /root/.icewm for private configuration files
IceWM: using /root/.icewm for private configuration files
icewmtray: using /root/.icewm for private configuration files
linpac-8000 login: root
Password:
Distributor ID:      ICP DAS
Description:         LinPAC-8x3x
Release OS:          1.0
Codename:             PACLNX 0.90
Apr  5 15:02:29 login[1230]: root login on 'ttySA0'
installed modules list
slot 1 ... not installed
slot 2 ... 87063
slot 3 ... not installed
slot 4 ... not installed
slot 5 ... not installed
slot 6 ... not installed
slot 7 ... not installed
slot 8 ... not installed
#
```

Default ID and  
password is root

## 5. Connect the LP-8x3x to a Linux PC

➤ Install HyperTerminal tool on the Linux PC, such as minicom, or gtkterm, etc.

➤ Using Minicom as an example:

- In the terminal window, type '**minicom -s**' to enter the Minicom configuration menu. To configure the COM1 port, use the keyboard arrow keys to select the menu item labeled '**Serial port setup**' and then press '**Enter**'. Set the parameters for COM 1 and then press '**Exit**'.

**1**

```
-----[configuration]-----+
| Filenames and paths          |
| File transfer protocols      |
| Serial port setup          |
| Modem and dialing           |
| Screen and keyboard         |
| Save setup as dfl           |
| Save setup as..             |
| Exit                         |
| Exit from Minicom           |
+-----+

2
```

```
A - Serial Device      : /dev/ttyS0
B - Lockfile Location  : /var/lock
C - Callin Program    :
D - Callout Program   :
E - Bps/Par/Bits      : 115200 8N1
F - Hardware Flow Control : No
G - Software Flow Control : No

Change which setting? [ ]

| Screen and keyboard         |
| Save setup as dfl           |
| Save setup as..             |
| Exit                         |
| Exit from Minicom           |
+-----+

3
```

```
-----[configuration]-----+
| Filenames and paths          |
| File transfer protocols      |
| Serial port setup           |
| Modem and dialing           |
| Screen and keyboard         |
| Save setup as dfl           |
| Save setup as..             |
| Exit                       |
| Exit from Minicom           |
+-----+

4
```

```
-----+
| Initializing Modem          |
+-----+
```

➤ A sample of the Minicom operation.

```
File Edit View Terminal Help
Welcome to minicom 2.3

OPTIONS: I18n
Compiled on Oct 24 2008, 06:37:44.
Port /dev/ttyS0

Press CTRL-A Z for help on special keys

# AT S7=45 S0=0 L1 V1 X4 &c1 E1 Q0
/bin/sh: c1: not found
/bin/sh: AT: not found

CTRL-A Z for help | 115200 8N1 | NOR | Minicom 2.3 | VT102 | Offline
```

## 6. Connect to the LP-8x3x via Telnet

- To view information about the configured network interfaces with 'ifconfig' cmd:

```
# ifconfig eth0
eth0      Link encap:Ethernet  HWaddr 00:0D:E0:AB:CD:33
          inet addr:10.1.0.8  Bcast:10.1.255.255  Mask:255.255.0.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:87724 errors:0 dropped:0 overruns:0 frame:0
          TX packets:966 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)
          Interrupt:41 Base address:0x8000

#
# ifconfig eth1
eth1      Link encap:Ethernet  HWaddr 00:0D:E0:AB:CD:44
          inet addr:10.1.0.17  Bcast:10.1.255.255  Mask:255.255.0.0

          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:50 errors:0 dropped:0 overruns:0 frame:0
          TX packets:11 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)
          Interrupt:114 Base address:0xc000

#
```

Use the TCP/IP protocol to establish connection to a remote system.

```
C:\WINDOWS\system32\cmd.exe
C:\Documents and Settings\Cindy> telnet 10.1.0.8
```

```
C:\ Telnet 10.1.0.8
.NN  _NNNNN  .NNNNN_ .NN  (L  .JNNNNNN
(NN  .NNNF"4F  (NN""NNL  (NN  2  .NN  .NNN"4F4F
JN)  (NN`  NN)  `NN  JN)  4NN  .NNN)  (N)
NN) .NN)  NN)  (NN NN)  NN  .NN4N)  (NNL
NN` (NN  (NN_NNN) NN  (NN  NN` NN  `NNNL .
(NN  (N)  JNNNNNF` (NN  JNF  NN)  NN.  4NN)N)
(N)  JNN` JNNNNNNN)  (N)N)
NNL_NNNN` JNF  (NN  .NL_NNN)N)
NNNNN`` (NN  `NN  `NNNNPF4`

Linux embedded controller

linpac-8000 login: root
Password:
Distributor ID: ICP DAS
Description: LinPAC-8x3x
Release OS: 1.0
Codename: PACLNX 0.90


installed modules list
slot 1 ... not installed
slot 2 ... 87063
slot 3 ... not installed
slot 4 ... not installed
slot 5 ... not installed
slot 6 ... not installed
slot 7 ... not installed
slot 8 ... not installed

#
```

## 7. Configure the IP Address for LP-8x3x

There are two methods of assigning the LP-8x3x network settings. The first uses **DHCP** and the other uses a manually **Assigned IP** address. The factory default setting for the LP-8x3x is DHCP, and this is the easiest method. However, if your network system does not include a DHCP server, then you will need to manually configure the network settings by using the Assigned IP method. To do this:

- Boot the device and establish a connection to the LP-8x3x via Telnet.
- Type in '**vi /etc/network/interfaces**' to open the network setting file.

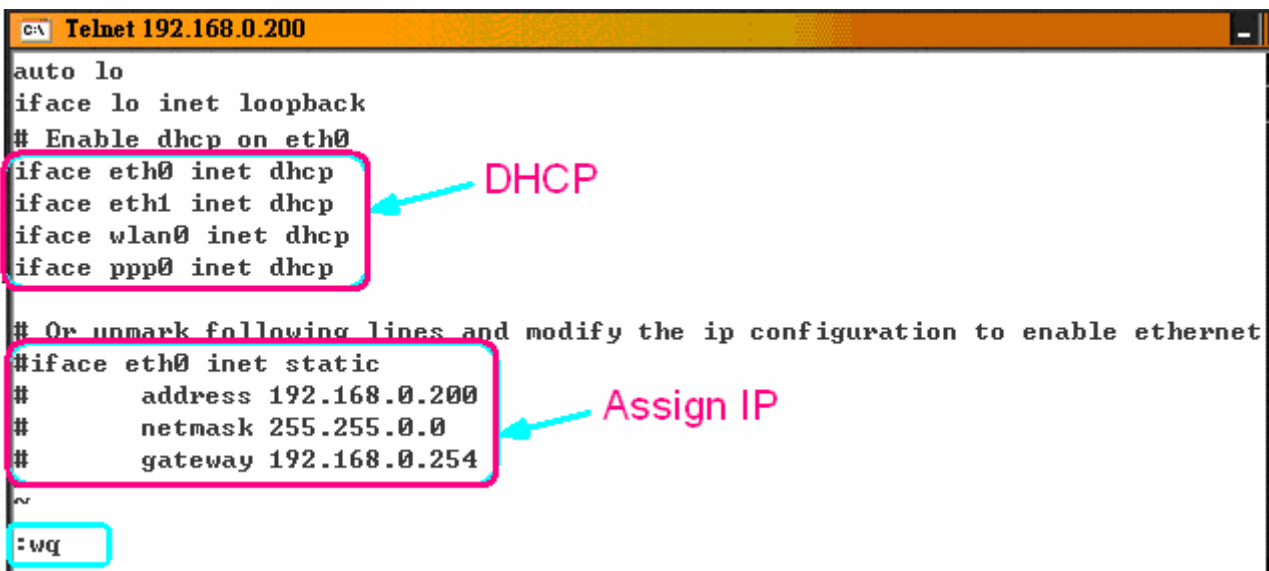

```

C:\> Telnet 192.168.0.200
auto lo
iface lo inet loopback
# Enable dhcp on eth0
iface eth0 inet dhcp
iface eth1 inet dhcp
iface wlan0 inet dhcp
iface ppp0 inet dhcp

# Or unmark following lines and modify the ip configuration to enable ethernet
#iface eth0 inet static
#   address 192.168.0.200
#   netmask 255.255.0.0
#   gateway 192.168.0.254
~
:wq
```

## 8. Technical Support

If any of these items are missing or damaged, contact the local distributors for more information. Save the shipping materials and cartons in case you want to ship in the future.



- Our service email account : [service@icpdas.com](mailto:service@icpdas.com)  
[service.icpdas@gmail.com](mailto:service.icpdas@gmail.com)
- LP-8x3x website:  
<http://www.icpdas.com/products/PAC/linpac-8000/introduction.htm>