

1 YEAR
WARRANTY



**Register
Table**

OMEGA® User's Guide

*Shop online at
omega.com®*

*e-mail: **info@omega.com**
For latest product manuals:
omegamanual.info*



OME-ET-7000 AND OME-PET-7000 SERIES Ethernet I/O Modules



OMEGAnet® On-Line Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.: ISO 9001 Certified

OMEGA Engineering, Inc., One Omega Drive
P.O. Box 4047, Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342
TEL: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar, Laval (Quebec)
H7L 5A1, Canada
Toll-Free: 1-800-826-6342
TEL: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada:

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

Mexico/ Latin America:

TEL: 001 (203) 359-1660
FAX: 001 (203) 359-7700
e-mail: espanol@omega.com

Servicing Asia

China: 1698 Yi Shan Road, Unit 102, Min Hang District
Shanghai, China 201103 P.R.C.
Hotline: 800 819 0559 / 400 619 0559
e-mail: info@cn.omega.com

Servicing Europe:

Benelux:

Toll-Free: 0800 099 3344
TEL: +31 20 347 21 21
FAX: +31 20 643 46 43
e-mail: sales@omega.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342
TEL: +420-59-6311899
FAX: +420-59-6311114
e-mail: info@omegashop.cz

France:

Toll-Free: 0850 541038
TEL: 01 57 32 48 17
FAX: 01 57 32 48 18
e-mail: esales@omega.fr

Germany/ Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0800 8266342
TEL: +49 (0) 7056 9398-0
FAX: +49 (0) 7056 9398-29
e-mail: info@omega.de

United Kingdom:

ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive
River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488
TEL: +44 (0) 161 777-6611
FAX: +44 (0) 161 777-6622
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

Table of Contents

Preface	1
About this Manual	1
Contents in this Manual	2
OME-ET-7002/OME-PET-7002	3
OME-ET-7015/OME-PET-7015	8
OME-ET-7017/OME-PET-7017	11
OME-ET-7017-10/OME-PET-7017-10	16
OME-ET-7018Z/OME-PET-7018Z	21
OME-ET-7019/OME-PET-7019	26
OME-ET-7019Z/OME-PET-7019Z	31
OME-ET-7026/OME-PET-7026	37
OME-ET-7042/OME-PET-7042	43
OME-ET-7044/OME-PET-7044	45
OME-ET-7050/OME-PET-7050	48
OME-ET-7051/OME-PET-7051	51
OME-ET-7052/OME-PET-7052	54
OME-ET-7053/OME-PET-7053	57
OME-ET-7060/OME-PET-7060	60
OME-ET-7067/OME-PET-7067	63
Appendix	65
A. Analog Input Type and Data Format Table	65
B. Analog Output Type and Data Format Table.....	67

Preface

About this Manual

This manual is intended to be used as a reference for users who need to communicate with the OME-ET-7000/OME-PET-7000 over a Modbus network.

This manual assumes that the user has some knowledge of commissioning and programming of Modbus devices, including some knowledge of the Modbus protocol and knowledge about your OME-ET-7000/OME-PET-7000 module.

This manual can be obtained from the companion CD:

CD:\OME-ET-7000_OME-PET-7000\Document\


Contents in this Manual

Each chapter contains the following information for each OME-ET-7000/OME-PET-7000 module:

- I/O Specifications
- Pin Assignments
- Wire Connections
- Modbus Register Table

The table below describes the properties of each field in a Modbus register table.

Register fields	Description
Register	The register addresses 1. DEX: Decimal format 2. HEX: Hexadecimal format
Point	The number of the I/O point
Description	The function description for the register address
Data Format	The read or write range of the I/O data
Attribute	The access type R: Read only W: Write only E: Save to the EEPROM
Factory Default	The factory default value after reset. The reset function can be found in the OME-ET-7000/OME-PET-7000 web page, as shown below.

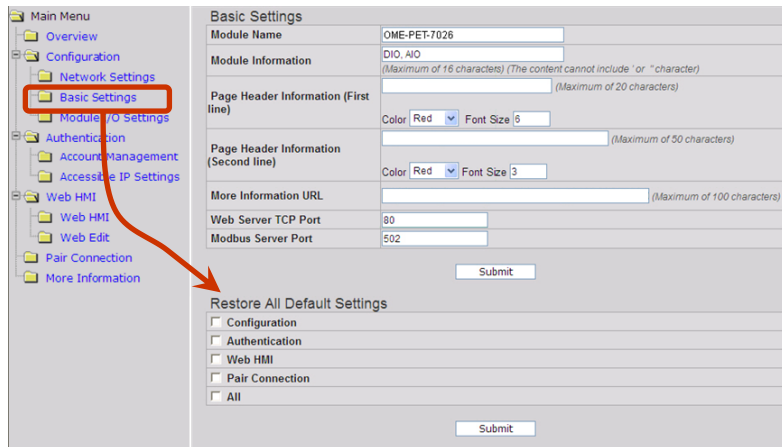


OME-ET-7002/OME-PET-7002


I/O Specifications

Analog Input		
Input Channels	3 (Differential)	
Input Type	+/-150 mV, +/-500 mV, +/-1 V, +/-5 V, +/-10 V, 0~20 mA, +/-20 mA, 4~20 mA (jumper selectable)	
Individual Channel Configuration	Yes	
Resolution	Normal Mode	16-bit
	Fast Mode	12-bit
Sampling Rate	Normal Mode	10 Samples/Sec. (Total)
	Fast Mode	60 Samples/Sec. (Total)
Accuracy	Normal Mode	+/-0.1%
	Fast Mode	+/-0.5% or better
Zero Drift	+/-20 uV/°C	
Span Drift	+/-25 ppm/°C	
Overvoltage Protection	240 Vrms	
Overcurrent Protection	50 mA max. at 110 V _{DC} /V _{AC} max.	
Input Impedance	Voltage	2 MΩ
	Current	124 Ω
Common Mode Rejection	86 dB Min.	
Normal Mode Rejection	100 dB	
Digital Input/Counter		
Input Channels	6	
Type	Wet Contact (Sink or Source)	
On Voltage Level	+10 V _{DC} ~ +50 V _{DC}	
Off Voltage Level	+4V V _{DC} max.	
Input Impedance	10 KΩ, 0.5W	
Counter	Channels	6
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	100 Hz
	Min. Pulse Width	5 ms
Overvoltage Protection	+50 V _{DC}	
Power Relay		
Output Channels	3	
Operating Voltage Range	Power Relay Form A (SPST N.O.)	
Max. Load Current	5.0 A/Channel at 25°C	
Operate Time	6 ms (Typical)	
Release Time	3 ms (Typical)	
Electrical Life (Resistive load)	VDE:	5 A @ 250 V _{AC} 30,000ops (10 ops/minute) at 75°C 5 A @ 30 V _{AC} 70,000ops (10 ops/minute) at 75°C
	UL:	5 A @ 250 V _{AC} /30 V _{DC} 6,000 ops. 3 A @ 250 V _{AC} /30 V _{DC} 100,000 ops.
Mechanical Life	20,000,000 ops at no load (300 ops/minute)	
Intra-module Isolation, Field-to-Logic	3750 V _{DC}	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	


Pin Assignments

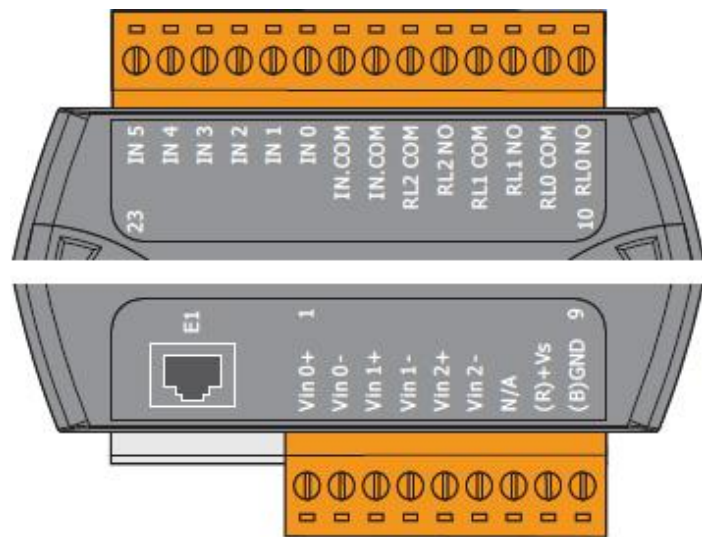

Voltage/Current Input Selection Jumper Wire Connections

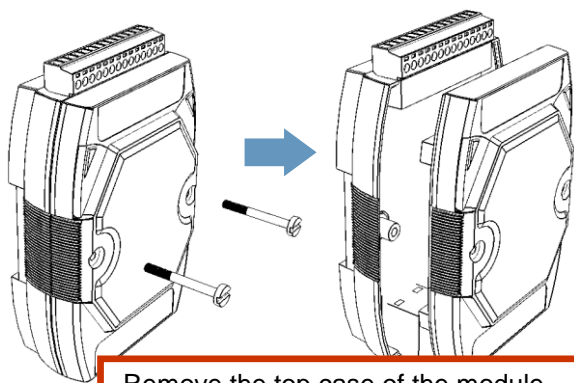


Remove the top case of the module.

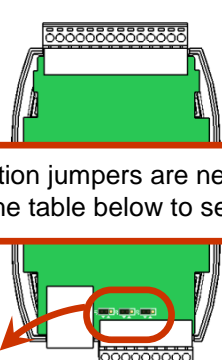

The selection jumpers are next to the connector. Refer to the table below to set the input type.

Channel	Vin0 ±	Vin1 ±	Vin2 ±
Jumper	J1	J2	J3

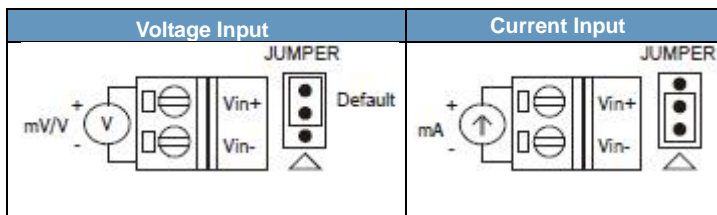


Digital Input/ Counter	Readback as 1	Readback as 0
	+10 ~ +50 V _{DC}	Open or <4 V _{DC}
Sink		
Source		

Power Relay	ON State	OFF State
	Readback as 1	Readback as 0
Relay Output		

Tips & Warnings



The jumper settings of the input type for each AI channel must correspond to the input range for each AI channel of the web interface.

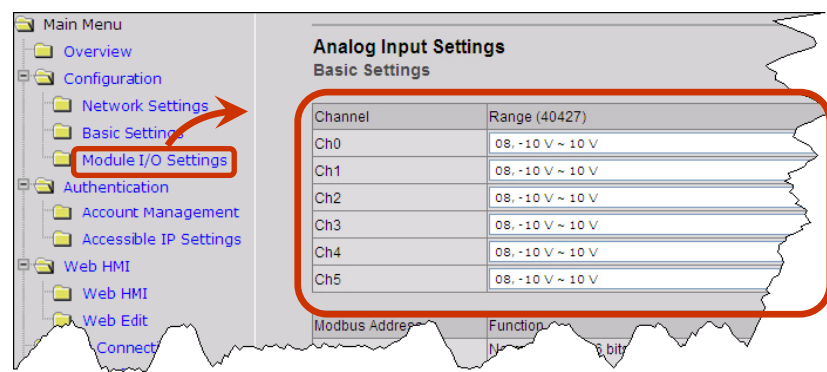

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Default
DEC	HEX					
00000 : 00002	0000 : 0002	3	DO value	0: Off 1: On	R/W	-
00034 : 00039	0022 : 0027	6	Clear the DI counter value	1: Clear	W	-
00130 : 00135	0082 : 0087	6	Clear the DI latched value	1: Clear	W	-
00162 : 00164	00A2 : 00A4	3	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00196	00C2 : 00C4	3	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00350	015E	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00351 : 00356	015F : 0164	6	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00437	01B3 : 01B5	3	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00517	0203 : 0205	3	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00597	0253 : 0255	3	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00628	0274	1	Set the AI sampling rate	0: Normal mode (10 Hz, 16 bits) 1: Fast mode (60 Hz, 12 bits)	R/W/E	0
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00630	0276	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00638	027C : 027E	3	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00670	029C : 029E	3	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00702	02BC : 02BE	3	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : :	02DC : :	3	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0

00734	02DE					
00764	02FC	3	Clear the AI high alarm status	1: Clear	W	-
:	:					
00766	02FE					
00796	031C	3	Clear the AI low alarm status	1: Clear	W	-
:	:					
00798	031E					
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-

Discrete Inputs (1xxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000	0000	6	DI value	0: Off 1: On	R
:	:				
10005	0005				
10032	0020	6	Read DI "high latch" status	0: Normal 1: Latched	R
:	:				
10037	0025				
10064	0040	6	Read DI "low latch" status	0: Normal 1: Latched	R
:	:				
10069	0045				
10224	00E0	3	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
:	:				
10226	00E2				
10256	0100	3	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
:	:				
10258	0102				

Input Register (3xxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000	0000	3	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30002	0002					
30032	0020	6	2	DI counter value	0 to 4294967295	R
:	:					
30043	002B					
30236	00EC	3	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30238	00EE					
30268	010C	3	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30270	010E					
30300	012C	1	1	Number of the DI channel	6	R
30310	0136	1	1	Number of the DO channel	3	R
30320	0140	1	1	Number of the AI channel	3	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40200 : 40211	00C8 : 00D3	6	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00630) is changed by a write operation.	0 to 4294967295	R/W	0
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40298	0128 : 012A	3	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40330	0148 : 014A	3	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40429	01AB : 01AD	3	1	Set the AI range	0x07: 4~20 mA 0x08: +/-10 V 0x09: +/-5 V 0x0A: +/-1 V 0x0B: +/-500 mV 0x0C: +/-150 mV 0x0D: +/-20 mA 0x1A: 0~20 mA	R/W/E	0x08
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7002	R	-

OME-ET-7015/OME-PET-7015

I/O Specifications

RTD Input	
Input Channels	7 (Differential)
Sensor Type	Pt100, Pt1000, Ni120, Cu100, Cu1000
Wire Connection	2/3 wire
Individual Channel Configuration	Yes
Resolution	16-bit
Sampling Rate	12 Samples/Sec. (Total)
Accuracy	+/-0.05%
Zero Drift	+/-0.5 μ V/ $^{\circ}$ C
Span Drift	+/-20 μ V/ $^{\circ}$ C
Common Mode Rejection	150 dB
Normal Mode Rejection	100 dB
Input Impedance	>1 M Ω
Open Wire Detection	Yes
3-wire RTD Lead Resistance Elimination	Yes

Pin Assignments

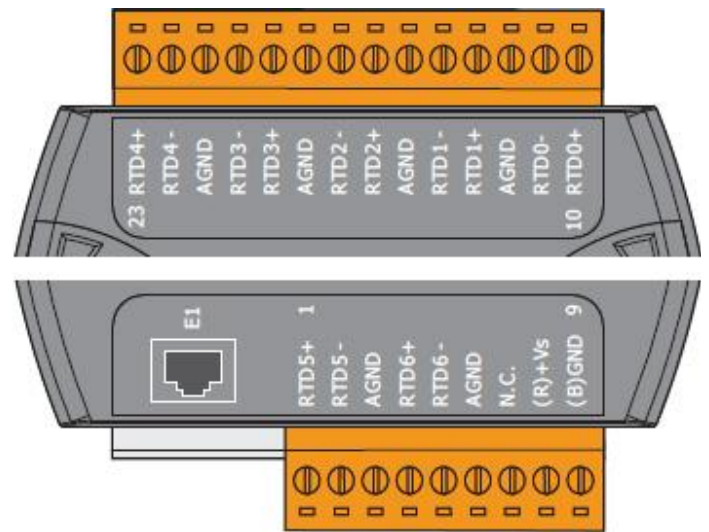

Wire Connections

RTD Input	CH0 1, 2, 5 and 6	CH3 and CH4
2-wire of RTD		
3-wire of RTD		

Tips & Warnings

- Use 26-12 AWG wire for signal connections
- Strip the wire to a length of 7 ± 0.5 mm
- Use a crimp terminal for wiring
- Avoid high-voltage cables and power equipment as much as possible
- Use shielded wire and connect the shielding to the Ax terminal of the channel

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00595 : 00601	0253 : 0259	7	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency: 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-
00833	0341	1	Zero calibration for the channel 1	1: Set	W	-
00834	0342	1	Span calibration for the channel 1	1: Set	W	-
00835	0343	1	Zero calibration for the channel 2	1: Set	W	-
00836	0344	1	Span calibration for the channel 2	1: Set	W	-
00837	0345	1	Zero calibration for the channel 3	1: Set	W	-
00838	0346	1	Span calibration for the channel 3	1: Set	W	-
00839	0347	1	Zero calibration for the channel 4	1: Set	W	-
00840	0348	1	Span calibration for the channel 4	1: Set	W	-
00841	0349	1	Zero calibration for the channel 5	1: Set	W	-
00842	034A	1	Span calibration for the channel 5	1: Set	W	-
00843	034B	1	Zero calibration for the channel 6	1: Set	W	-
00844	034C	1	Span calibration for the channel 6	1: Set	W	-

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30006	0000 : 0006	7	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30320	0140	1	1	Number of the AI channel	7	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40110 : 40116	006E : 0074	7	1	Set the AI temperature offset value	-128 to 127	R/W/E	0
40142 : 40148	008E : 0094	7	1	Set the AI resistance offset value	0 to 255	R/W/E	0
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40427 : 40433	01AB : 01B1	7	1	Set the AI range	0x20: Platinum 100, $\alpha=0.00385$, $-100^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x21: Platinum 100, $\alpha=0.00385$, $0^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x22: Platinum 100, $\alpha=0.00385$, $0^{\circ}\text{C} \sim 200^{\circ}\text{C}$ 0x23: Platinum 100, $\alpha=0.00385$, $0^{\circ}\text{C} \sim 600^{\circ}\text{C}$ 0x24: Platinum 100, $\alpha=0.003916$, $-100^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x25: Platinum 100, $\alpha=0.003916$, $0^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x26: Platinum 100, $\alpha=0.003916$, $0^{\circ}\text{C} \sim 200^{\circ}\text{C}$ 0x27: Platinum 100, $\alpha=0.003916$, $0^{\circ}\text{C} \sim 600^{\circ}\text{C}$ 0x28: Nickel 120, $-80^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x29: Nickel 120, $0^{\circ}\text{C} \sim 100^{\circ}\text{C}$ 0x2A: Platinum 1000, $\alpha=0.00385$, $-200^{\circ}\text{C} \sim 600^{\circ}\text{C}$ 0x2B: Cu 100 @ 0°C , $\alpha=0.00421$, $-20^{\circ}\text{C} \sim 150^{\circ}\text{C}$ 0x2C: Cu 100 @ 25°C , $\alpha=0.00427$, $0^{\circ}\text{C} \sim 200^{\circ}\text{C}$ 0x2D: Cu 1000 @ 0°C , $\alpha=0.00421$, $-20^{\circ}\text{C} \sim 150^{\circ}\text{C}$ 0x2E: Platinum 100, $\alpha=0.00385$, $-200^{\circ}\text{C} \sim 200^{\circ}\text{C}$ 0x2F: Platinum 100, $\alpha=0.003916$, $-200^{\circ}\text{C} \sim 200^{\circ}\text{C}$ 0x80: Platinum 100, $\alpha=0.00385$, $-200^{\circ}\text{C} \sim 600^{\circ}\text{C}$ 0x81: Platinum 100, $\alpha=0.003916$, $-200^{\circ}\text{C} \sim 600^{\circ}\text{C}$ 0x82: Cu 50 @ 0°C , $-50^{\circ}\text{C} \sim 150^{\circ}\text{C}$ 0x83: Nickel 100, $-60^{\circ}\text{C} \sim 180^{\circ}\text{C}$	R/W/E	0x20
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7015	R	-

OME-ET-7017/OME-PET-7017

I/O Specifications

Analog Input		
Input Channels	8 (Differential)	
Input Type	+/-150 mV, +/-500 mV, +/-1 V, +/-5 V, +/-10 V, 0~20 mA, +/-20 mA, 4~20 mA (jumper selectable)	
Individual Channel Configuration	Yes	
Resolution	Normal Mode	16-bit
	Fast Mode	12-bit
Sampling Rate	Normal Mode	10 Samples/Sec. (Total)
	Fast Mode	60 Samples/Sec. (Total)
Accuracy	Normal Mode	+/-0.1%
	Fast Mode	+/-0.5% or better
Zero Drift	+/-20 uV/°C	
Span Drift	+/-25 ppm/°C	
Overvoltage Protection	240 Vrms	
Input Impedance	Voltage	2 MΩ
	Current	125 Ω
Common Mode Rejection	86 dB Min.	
Normal Mode Rejection	100 dB	
Digital Output		
Output Channels	4	
Type	Isolated Open Collector (Sink)	
Max. Load Current	700 mA/Channel	
Load Voltage	5 V _{DC} ~50 V _{DC}	
Overvoltage Protection	60 V _{DC}	
Overload Protection	1.4 A	
Short-circuit Protection	Yes	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

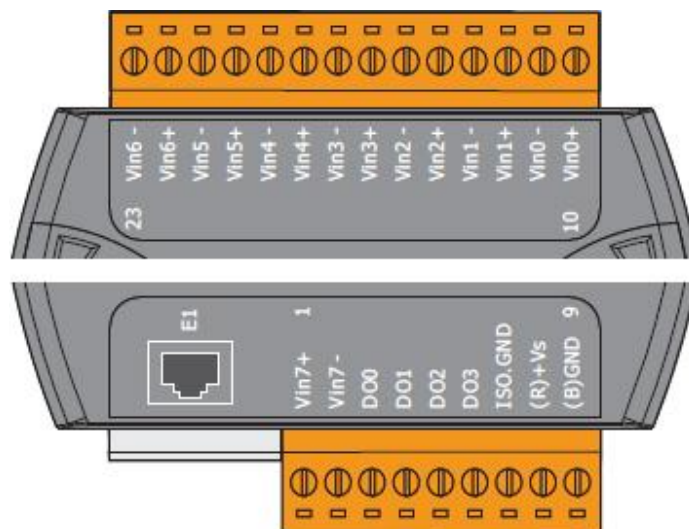

Voltage/Current Input Selection Jumper Settings

Remove the top case of the module.

The selection jumpers are next to the connector. Refer to the table below to set the input type.

Channel	Vin6 ±	Vin5 ±	Vin4 ±	Vin3 ±	Vin2 ±	Vin1 ±	Vin0 ±
Jumper	J7	J6	J5	J4	J3	J2	J1

Channel	Vin7 ±
Jumper	J8

Voltage Input	Current Input
<p>JUMPER: Default</p>	<p>JUMPER: (Bottom Position)</p>

Tips & Warnings



The jumper settings of the input type for each AI channel must correspond to the input range for each AI channel of the web interface.

Analog Input Settings
Basic Settings

Channel	Range (40427)
Ch0	08, -10 V ~ 10 V
Ch1	08, -10 V ~ 10 V
Ch2	08, -10 V ~ 10 V
Ch3	08, -10 V ~ 10 V
Ch4	08, -10 V ~ 10 V
Ch5	08, -10 V ~ 10 V

Wire Connections

Digital Output	ON State Readback as 1	OFF State Readback as 0
Open Collector (Sink)	<p>5 ~ 50 Vdc</p>	<p>5 ~ 50 Vdc</p>

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00003	0000 : 0003	4	DO value	0: Off 1: On	R/W	-
00162 : 00169	00A2 : 00A9	8	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00201	00C2 : 00C9	8	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00438	01B3 : 01B6	4	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00518	0203 : 0206	4	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00602	0253 : 025A	8	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00628	0274	1	Set the AI sampling rate	0: Normal mode (10 Hz, 16 bits) 1: Fast mode (60 Hz, 12 bits)	R/W/E	0
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency: 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00643	027C : 0283	8	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00675	029C : 02A3	8	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00707	02BC : 02C3	8	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : 00739	02DC : 02E3	8	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00764 : 00771	02FC : 0303	8	Clear the AI high alarm status	1: Clear	W	-
00796 : 00803	031C : 0323	8	Clear the AI low alarm status	1: Clear	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10224 : 10231	00E0 : 00E7	8	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
10256 : 10263	0100 : 0107	8	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30007	0000 : 0007	8	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30236 : 30243	00EC : 00F3	8	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30268 : 30275	010C : 0113	8	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30310	0136	1	1	Number of the DO channel	4	R
30320	0140	1	1	Number of the AI channel	8	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40303	0128 : 012F	8	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40335	0148 : 014F	8	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40434	01AB : 01B2	8	1	Set the AI range	0x07: 4 ~ 20 mA 0x08: +/-10 V 0x09: +/-5 V 0x0A: +/-1 V 0x0B: +/-500 mV 0x0C: +/-150 mV 0x0D: +/-20 mA 0x1A: 0~20 mA	R/W/E	0x08
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7017	R	-

OME-ET-7017-10/OME-PET-7017-10


I/O Specifications

Analog Input		
Input Channels	10 differential or 20 single-ended (Note) (software selectable)	
Input Type	+/-150 mV, +/-500 mV, +/-1 V, +/-5 V, +/-10 V, 0~20 mA, +/-20 mA, 4~20 mA (jumper selectable)	
Individual Channel Configuration	Yes	
Resolution	Normal Mode	16-bit
	Fast Mode	12-bit
Sampling Rate	Normal Mode	10 Samples/Sec. (Total)
	Fast Mode	60 Samples/Sec. (Total)
Accuracy	Normal Mode	+/-0.1%
	Fast Mode	+/-0.5% or better
Zero Drift	+/-20 uV/°C	
Span Drift	+/-25 ppm/°C	
Overvoltage Protection	Differential	240 Vrms
	Single-ended	150 Vrms
Input Impedance	Voltage	2 MΩ (Differential), 1 MΩ (Single-ended)
	Current	125 Ω
Common Mode Rejection	86 dB Min.	
Normal Mode Rejection	100 dB	
Note: Differential mode can be used for voltage input and current input. Single-ended mode can be used for voltage input only		

Pin Assignments

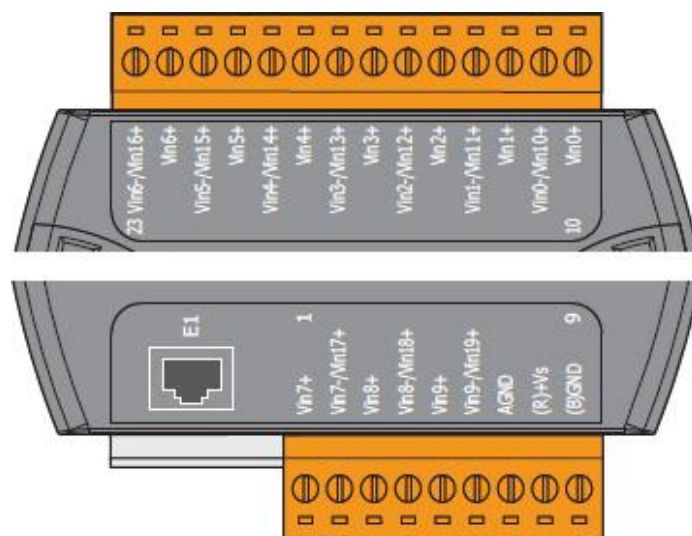

Voltage/Current Input Selection Jumper Settings

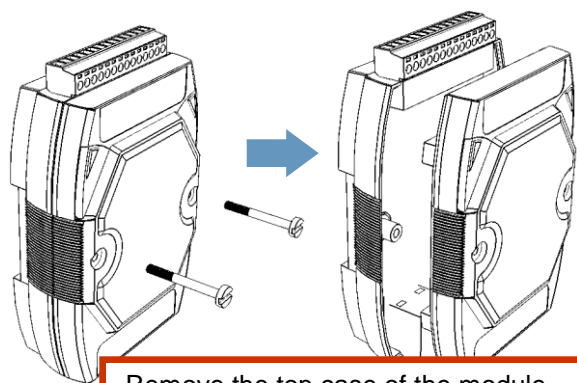


Remove the top case of the module.

Channel	Vin6 ±	Vin5 ±	Vin4 ±	Vin3 ±	Vin2 ±	Vin1 ±	Vin0 ±
Jumper	J7	J6	J5	J4	J3	J2	J1

The selection jumpers are next to the connector. Refer to the table below to set the input type.


Channel	Vin7 ±	Vin8 ±	Vin9 ±
Jumper	J8	J9	J10

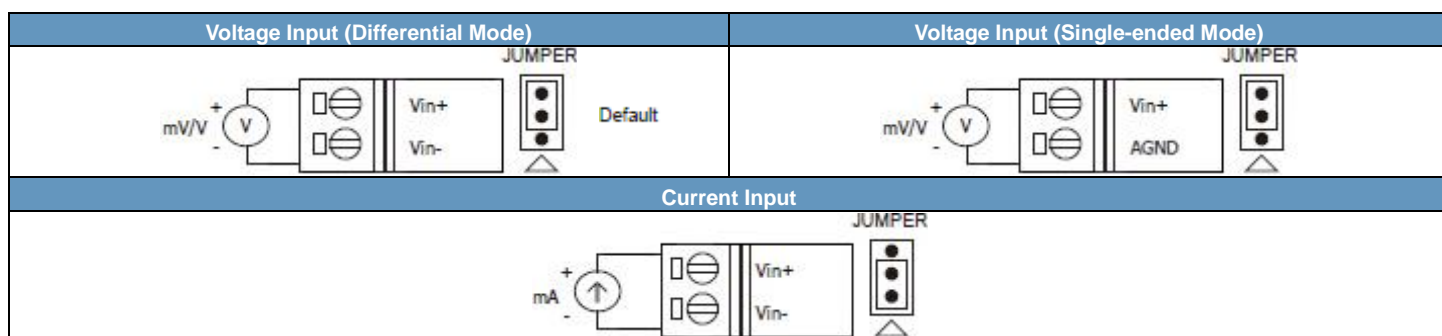

Tips & Warnings



The jumper settings of the input type for each AI channel must correspond to the input range for each AI channel of the web interface.

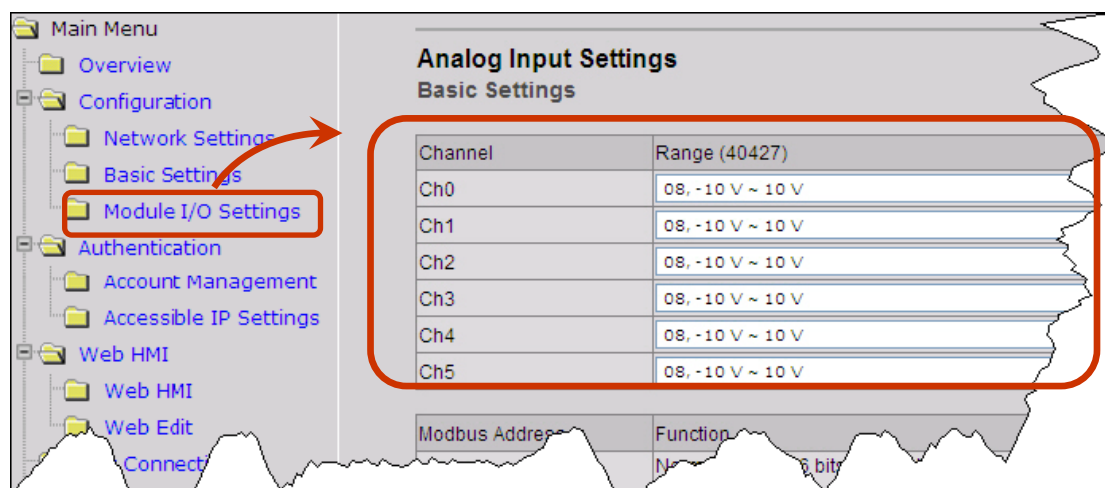

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00162 : 00181	00A2 : 00B5	20	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00213	00C2 : 00D5	20	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00595 : 00614	0253 : 0266	20	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00628	0274	1	Set the AI sampling rate	0: Normal mode (10 Hz, 16 bits) 1: Fast mode (60 Hz, 12 bits)	R/W/E	0
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00655	027C : 028F	20	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00687	029C : 02AF	20	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00719	02BC : 02CF	20	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : 00751	02DC : 02EF	20	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00764 : 00783	02FC : 030F	20	Clear the AI high alarm status	1: Clear	W	-
00796 : 00815	031C : 032F	20	Clear the AI low alarm status	1: Clear	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-
00833	0341	1	Set the AI mode	0: Differential 1: Single-ended	R/W/E	0

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10224 : 10243	00E0 : 00F3	20	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
10256 : 10275	0100 : 0113	20	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30019	0000 : 0013	20	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30236 : 30255	00EC : 00FF	20	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30268 : 30287	010C : 011F	20	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30320	0140	1	1	Number of the AI channel	10/20	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40315	0128 : 013B	20	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40347	0148 : 015B	20	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40446	01AB : 01BF	20	1	Set the AI range	0x07: 4 ~ 20 mA 0x08: +/-10 V 0x09: +/-5 V 0x0A: +/-1 V 0x0B: +/-500 mV 0x0C: +/-150 mV 0x0D: +/-20 mA 0x1A: 0~20 mA	R/W/E	0x08
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7017	R	-

OME-ET-7018Z/OME-PET-7018Z






I/O Specifications

Analog Input	
Input Channels	10 (Differential)
Input Type	+/-15 mV, +/-50 mV, +/-100 mV, +/-500 mV, +/-1 V, +/-2.5V 0~20 mA, +/-20 mA, 4~20 mA (Requires Optional External 125Ω Resistor) Thermocouple (J, K, T, E, R, S, B, N, C, L, M and LDIN43710)
Individual Channel Configuration	Yes
Resolution	16-bit
Sampling Rate	10 Samples/Sec. (Total)
Accuracy	+/-0.1% or better
Zero Drift	+/-0.5 uV/°C
Span Drift	+/-25 ppm/°C
Overvoltage Protection	240 Vrms
Input Impedance	>300 KΩ
Common Mode Rejection	150 dB Min.
Normal Mode Rejection	100 dB
Temperature Outputs Consistency	Yes
Stable Temperature Output In The Field	Yes
Open Wire Detection	Yes
Digital Output	
Output Channels	6
Type	Isolated Open Collector (Sink)
Max. Load Current	700 mA/Channel
Load Voltage	5 V _{DC} -50 V _{DC}
Overvoltage Protection	60 V _{DC}
Overload Protection	1.4 A
Short-circuit Protection	Yes
Power-on Value	Yes, Programmable
Safe Value	Yes, Programmable

Pin Assignments

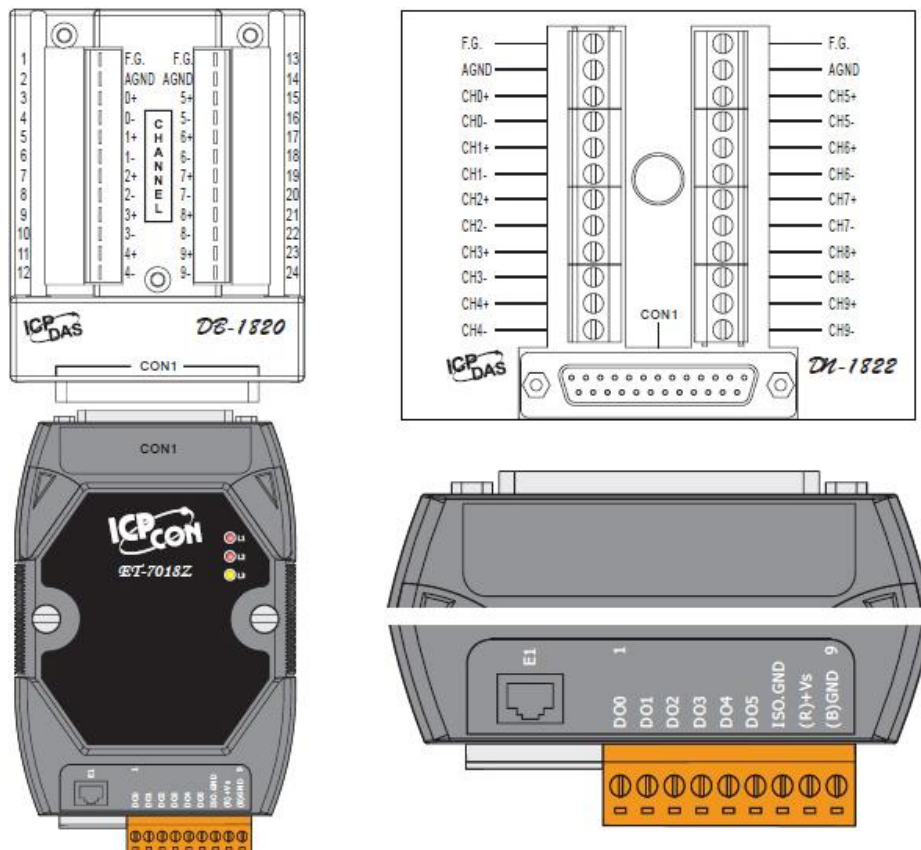

Wire Connections

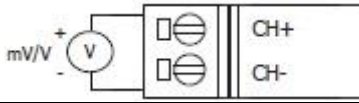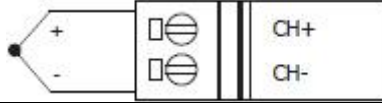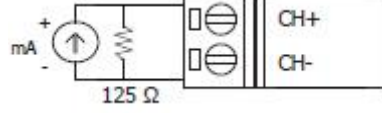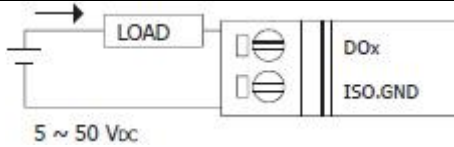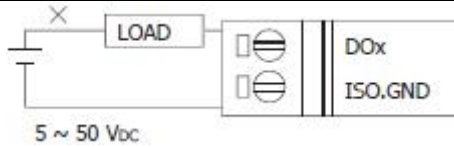Voltage Input		Thermocouple Input	
			
Current Input			
		<p>Note that an optional external 125 Ω resistor is required when connecting to a current source.</p>	
Digital Output	ON State Readback as 1	OFF State Readback as 0	
Open Collector (Sink)			

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00005	0000 : 0005	6	DO value	0: Off 1: On	R/W	-
00162 : 00171	00A2 : 00AB	10	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00203	00C2 : 00CB	10	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00440	01B3 : 01B8	6	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00520	0203 : 0208	6	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00604	0253 : 025C	10	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00627	0273	1	Enable/Disable the CJC function	0: Disable 1: Enable	R/W/E	1
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00645	027C : 0285	10	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00677	029C : 02A5	10	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00709	02BC : 02C5	10	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : 00741	02DC : 02E5	10	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00764 : 00773	02FC : 0305	10	Clear the AI high alarm status	1: Clear	W	-
00796 : 00805	031C : 0325	10	Clear the AI low alarm status	1: Clear	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10224 : 10233	00E0 : 00E9	10	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
10256 : 10265	0100 : 0109	10	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30009	0000 : 0009	10	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30143	008F	1	1	CJC value	-32768 to 32767	R
30236 : 30245	00EC : 00F5	10	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30268 : 30277	010C : 0115	10	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30310	0136	1	1	Number of the DO channel	6	R
30320	0140	1	1	Number of the AI channel	10	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40305	0128 : 0131	10	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40337	0148 : 0151	10	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40436	01AB : 01B4	10	1	Set the AI range	0x00: +/-15 mV 0x01: +/-50 mV 0x02: +/-100 mV 0x03: +/-500 mV 0x04: +/-1 V 0x05: +/-2.5 V 0x06: +/-20 mA 0x07: 4 ~ 20 mA 0x0E: Type J, -210°C ~ 760°C 0x0F: Type K, -270°C ~ 1372°C 0x10: Type T, -270°C ~ 400°C 0x11: Type E, -270°C ~ 1000°C 0x12: Type R, 0°C ~ 1768°C 0x13: Type S, 0°C ~ 1768°C 0x14: Type B, 0°C ~ 1820°C 0x15: Type N, -270°C ~ 1300°C 0x16: Type C, 0°C ~ 2320°C 0x17: Type L, -200°C ~ 800°C 0x18: Type M, -200°C ~ 100°C 0x19: Type L DIN43710, -200°C ~ 900°C 0x1A: 0 ~ 20 mA	R/W/E	0x05
40491 : 40500	01EB : 01F4	10	1	Set the CJC Offset for the single channel	-9999 to 9999	R/W/E	0
40523	020B	1	1	Set the CJC Offset for all channels	-9999 to 9999	R/W/E	0
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7018	R	-
40589	024D	1	1	Set the CJC operation status	0: Stop 1: Start 2: Read once	R/W/E	1

OME-ET-7019/OME-PET-7019

I/O Specifications

Analog Input		
Input Channels	8 (Differential)	
Input Type	+/-15 mV, +/-50 mV, +/-100 mV, +/-150 mV, +/-500 mV, +/-1 V, +/-5 V, +/-10 V, 0-20 mA, +/-20 mA, 4-20 mA Thermocouple (J, K, T, E, R, S, B, N, C, L, M and LDIN43710)	
Individual Channel Configuration	Yes	
Resolution	16-bit	
Sampling Rate	10 Samples/Sec. (Total)	
Accuracy	+/-0.1% or better	
Zero Drift	+/-10 uV/°C	
Span Drift	+/-25 ppm/°C	
Overvoltage Protection	240 Vrms	
Input Impedance	Voltage	>1 MΩ
	Current	125 Ω
Common Mode Rejection	86 dB Min.	
Normal Mode Rejection	100 dB	
Open Wire Detection	Yes	
Digital Output		
Output Channels	4	
Type	Isolated Open Collector (Sink)	
Max. Load Current	700 mA/Channel	
Load Voltage	5 V _{DC} -50 V _{DC}	
Overvoltage Protection	60 V _{DC}	
Overload Protection	1.4 A	
Short-circuit Protection	Yes	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

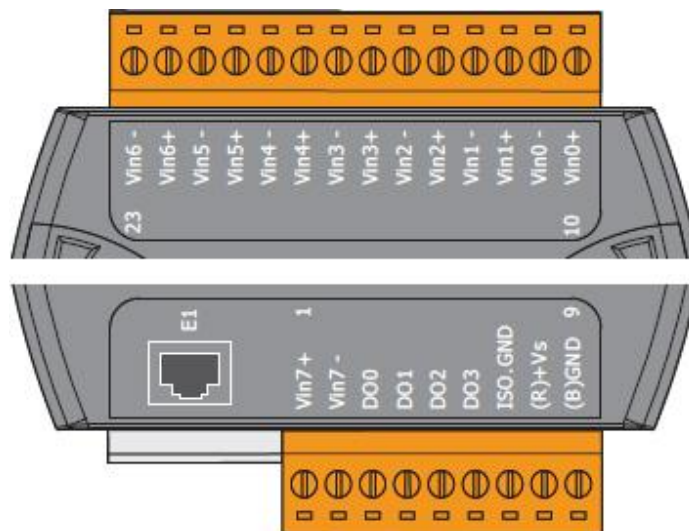

Voltage/Current Input Selection Jumper Settings

Remove the top case of the module.

Channel	Vin6 ±	Vin5 ±	Vin4 ±	Vin3 ±	Vin2 ±	Vin1 ±	Vin0 ±
Jumper	J7	J6	J5	J4	J3	J2	J1

The selection jumpers are next to the connector. Refer to the table below to set the input type.

Channel	Vin7 ±
Jumper	J8

Voltage Input	Thermocouple Input
Current Input	

Tips & Warnings



The jumper settings of the input type for each AI channel must correspond to the input range for each AI channel of the web interface.

Analog Input Settings
Basic Settings

Channel	Range (40427)
Ch0	08, -10 V ~ 10 V
Ch1	08, -10 V ~ 10 V
Ch2	08, -10 V ~ 10 V
Ch3	08, -10 V ~ 10 V
Ch4	08, -10 V ~ 10 V
Ch5	08, -10 V ~ 10 V

Wire Connections

Digital Output	ON State Readback as 1	OFF State Readback as 0
Open Collector (Sink)		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00003	0000 : 0003	4	DO value	0: Off 1: On	R/W	-
00162 : 00169	00A2 : 00A9	8	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00201	00C2 : 00C9	8	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00438	01B3 : 01B6	4	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00518	0203 : 0206	4	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00602	0253 : 025A	8	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00627	0273	1	Enable/Disable the CJC function	0: Disable 1: Enable	R/W/E	1
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00643	027C : 0283	8	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00675	029C : 02A3	8	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00707	02BC : 02C3	8	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : 00739	02DC : 02E3	8	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00764 : 00771	02FC : 0303	8	Clear the AI high alarm status	1: Clear	W	-
00796 : 00803	031C : 0323	8	Clear the AI low alarm status	1: Clear	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for channel 0	1: Active	W	-
00832	0340	1	Span calibration for channel 0	1: Active	W	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10224 : 10231	00E0 : 00E7	8	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
10256 : 10263	0100 : 0107	8	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30007	0000 : 0007	8	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30143	008F	1	1	CJC value	-32768 to 32767	R
30236 : 30243	00EC : 00F3	8	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30268 : 30275	010C : 0113	8	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30310	0136	1	1	Number of the DO channel	4	R
30320	0140	1	1	Number of the AI channel	8	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)




Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40303	0128 : 012F	8	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40335	0148 : 014F	8	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40434	01AB : 01B2	8	1	Set the AI range	0x00: +/-15 mV 0x01: +/-50 mV 0x02: +/-100 mV 0x03: +/-500 mV 0x04: +/-1 V 0x05: +/-2.5 V 0x06: +/-20 mA 0x07: 4 ~ 20 mA 0x0E: Type J, -210°C ~ 760°C 0x0F: Type K, -270°C ~ 1372°C 0x10: Type T, -270°C ~ 400°C 0x11: Type E, -270°C ~ 1000°C 0x12: Type R, 0°C ~ 1768°C 0x13: Type S, 0°C ~ 1768°C 0x14: Type B, 0°C ~ 1820°C 0x15: Type N, -270°C ~ 1300°C 0x16: Type C, 0°C ~ 2320°C 0x17: Type L, -200°C ~ 800°C 0x18: Type M, -200°C ~ 100°C 0x19: Type L DIN43710, -200°C ~ 900°C 0x1A: 0 ~ 20 mA	R/W/E	0x05
40491 : 40598	01EB : 01F2	8	1	Set the CJC Offset for the single channel	-9999 to 9999	R/W/E	0
40523	020B	1	1	Set the CJC Offset for all channels	-9999 to 9999	R/W/E	0
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7019	R	-
40589	024D	1	1	Set the CJC operation status	0: Stop 1: Start 2: Read once	R/W/E	1

OME-ET-7019Z/OME-PET-7019Z

I/O Specifications

Analog Input	
Input Channels	10 (Differential)
Input Type	+/-15 mV, +/-50 mV, +/-100 mV, +/-150 mV, +/-500 mV, +/-1 V, +/-2.5V, +/-5 V, +/-10 V 0~20 mA, +/-20 mA, 4~20 mA (Jumper Selectable) Thermocouple (J, K, T, E, R, S, B, N, C, L, M and LDIN43710)
Individual Channel Configuration	Yes
Resolution	16-bit
Sampling Rate	10 Samples/Sec. (Total)
Accuracy	+/-0.1% or better
Zero Drift	+/-0.5 uV/°C
Span Drift	+/-25 ppm/°C
Overvoltage Protection	240 Vrms
Input Impedance	>300 KΩ
Common Mode Rejection	86 dB Min.
Normal Mode Rejection	100 dB
Temperature Outputs Consistency	Yes
Stable Temperature Output In The Field	Yes
Open Wire Detection	Yes
Digital Output	
Output Channels	6
Type	Isolated Open Collector (Sink)
Max. Load Current	700 mA/Channel
Load Voltage	5 V _{DC} ~50 V _{DC}
Overvoltage Protection	60 V _{DC}
Overload Protection	1.4 A
Short-circuit Protection	Yes
Power-on Value	Yes, Programmable
Safe Value	Yes, Programmable

Pin Assignments

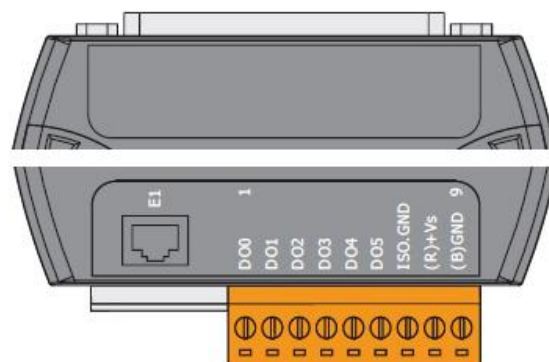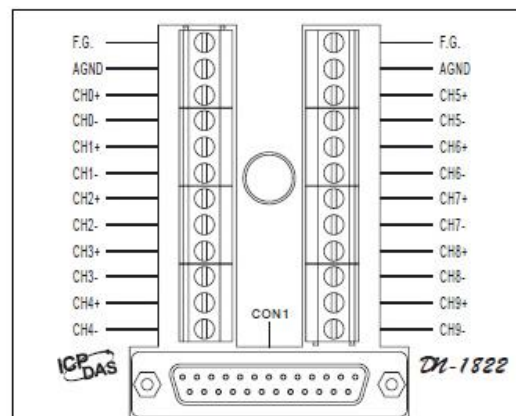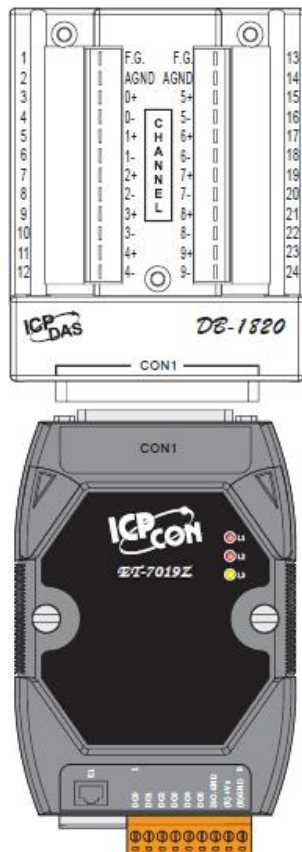

Voltage/Current Input Selection Jumper Settings

Remove the top case of the module.

Channel	CH0 ±	CH1 ±	CH2±	CH3±	CH4±	CH5±	CH6±	CH7±
Jumper	J1	J2	J3	J4	J5	J6	J7	J8

Channel	CH8 ±	CH9 ±
Jumper	J9	J10

The selection jumpers are next to the connector. Refer to the table below to set the input type.

Voltage Input		Thermocouple Input	
CH+	CH-	CH+	CH-
Default		Default	

Current Input	
CH+	CH-
Default	

Tips & Warnings





The jumper settings of the input type for each AI channel must correspond to the input range for each AI channel of the web interface.

Analog Input Settings
Basic Settings

Channel	Range (40427)
Ch0	08, -10 V ~ 10 V
Ch1	08, -10 V ~ 10 V
Ch2	08, -10 V ~ 10 V
Ch3	08, -10 V ~ 10 V
Ch4	08, -10 V ~ 10 V
Ch5	08, -10 V ~ 10 V

Wire Connections

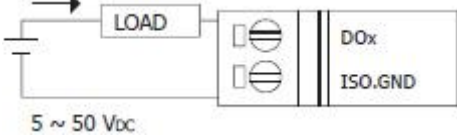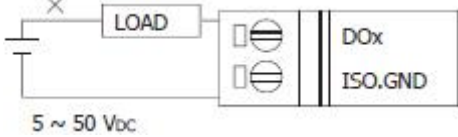Digital Output	ON State Readback as 1	OFF State Readback as 0
Open Collector (Sink)		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00005	0000 : 0005	6	DO value	0: Off 1: On	R/W	-
00162 : 00171	00A2 : 00AB	10	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00203	00C2 : 00CB	10	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00440	01B3 : 01B8	6	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00520	0203 : 0208	6	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00604	0253 : 025C	10	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00627	0273	1	Enable/Disable the CJC function	0: Disable 1: Enable	R/W/E	1
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00631	0277	1	Set the AI data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00645	027C : 0285	10	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00677	029C : 02A5	10	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00709	02BC : 02C5	10	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : 00741	02DC : 02E5	10	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00764 : 00773	02FC : 0305	10	Clear the AI high alarm status	1: Clear	W	-
00796 : 00805	031C : 0325	10	Clear the AI low alarm status	1: Clear	W	-
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10224 : 10233	00E0 : 00E9	10	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
10256 : 10265	0100 : 0109	10	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000 : 30009	0000 : 0009	10	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30143	008F	1	1	CJC value	-32768 to 32767	R
30236 : 30245	00EC : 00F5	10	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30268 : 30277	010C : 0115	10	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
30310	0136	1	1	Number of the DO channel	6	R
30320	0140	1	1	Number of the AI channel	10	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40305	0128 : 0131	10	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40337	0148 : 0151	10	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40427 : 40436	01AB : 01B4	10	1	Set the AI range	0x00: +/-15 mV 0x01: +/-50 mV 0x02: +/-100 mV 0x03: +/-500 mV 0x04: +/-1 V 0x05: +/-2.5 V 0x06: +/-20 mA 0x07: 4 ~ 20 mA 0x08: +/-10 V 0x09: +/-5 V 0x0A: +/-1V 0x0B: +/-500 mV 0x0C: +/-150 mV 0x0D: +/-20 mA 0x0E: Type J, -210°C ~ 760°C 0x0F: Type K, -270°C ~ 1372°C 0x10: Type T, -270°C ~ 400°C 0x11: Type E, -270°C ~ 1000°C 0x12: Type R, 0°C ~ 1768°C 0x13: Type S, 0°C ~ 1768°C 0x14: Type B, 0°C ~ 1820°C 0x15: Type N, -270°C ~ 1300°C 0x16: Type C, 0°C ~ 2320°C 0x17: Type L, -200°C ~ 800°C 0x18: Type M, -200°C ~ 100°C 0x19: Type L DIN43710, -200°C ~ 900°C 0x1A: 0 ~ 20 mA	R/W/E	0x05
40491 : 40500	01EB : 01F4	10	1	Set the CJC Offset for the single channel	-9999 to 9999	R/W/E	0
40523	020B	1	1	Set the CJC Offset for all channels	-9999 to 9999	R/W/E	0
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7019	R	-
40589	024D	1	1	Set the CJC operation status	0: Stop 1: Start 2: Read once	R/W/E	1

OME-ET-7026/OME-PET-7026

I/O Specifications


Analog Input		
Input Channels	6 (Differential)	
Input Type	+/-500 mV, +/-1 V, +/-5 V, +/-10 V, 0~20 mA, +/-20 mA, 4~20 mA (jumper selectable)	
Individual Channel Configuration	Yes	
Resolution	Normal Mode	16-bit
	Fast Mode	12-bit
Sampling Rate	Normal Mode	10 Samples/Sec. (Total)
	Fast Mode	60 Samples/Sec. (Total)
Accuracy	Normal Mode	+/-0.1%
	Fast Mode	+/-0.5% or better
Zero Drift	+/-20 uV/°C or better	
Span Drift	+/-25 ppm/°C	
Overvoltage Protection	240 Vrms	
Input Impedance	2 MΩ	
Common Mode Rejection	86 dB Min.	
Normal Mode Rejection	100 dB	
Analog Output		
Output Channels	2	
Output Type	0~5 V, +/-5 V, 0~10 V, +/-10 V 0~20 mA, 4~20 mA (jumper selectable)	
Individual Channel Configuration	Yes	
Resolution	12-bit	
Accuracy	+/-0.1% of FSR	
Voltage Output Capability	20 mA @ 10 V	
Current Load Resistance	500 Ω	
Open Wire Detection	Yes, for 4~20 mA only	
Power On Value	Yes, Programmable	
Safe Value	Yes, Programmable	
Digital Input/Counter		
Input Channels	2	
Dry Contact (Source)	On Voltage Level	Close to GND
	Off Voltage Level	Open
	Effective Distance for Dry Contact	500M max.
Wet Contact (Sink/Source)	On Voltage Level	+3.5 V _{DC} ~ +30V _{DC}
	Off Voltage Level	+1 V _{DC} max.
Counter	Channels	2
	Max. Counts	4,294,967,285 (32-bit)
	Max. Input Frequency	100 Hz
	Min. Pulse Width	5 ms
Overvoltage Protection	30 V _{DC}	
Digital Output		
Output Channels	2	
Type	Isolated Open Collector (Sink)	
Max. Load Current	700 mA/Channel	
Load Voltage	+5 V _{DC} ~ +50 V _{DC}	
Overvoltage Protection	60 V _{DC}	
Overload Protection	1.4 A	
Short-circuit Protection	Yes	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

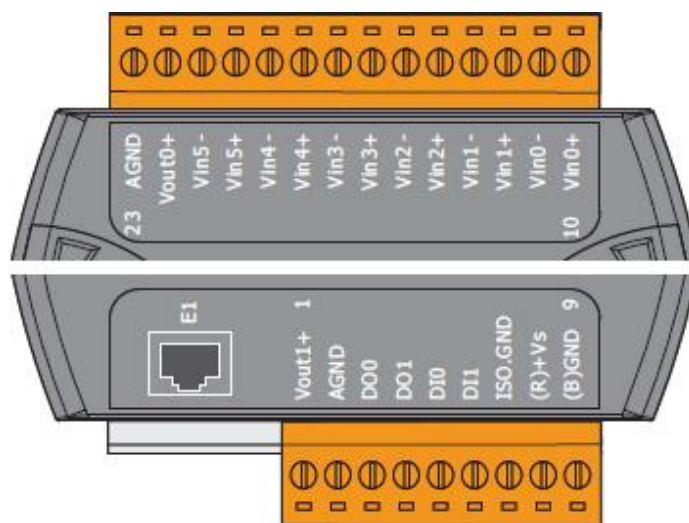


Voltage/Current Input/Output Selection Jumper Settings

Channel	Vout0 & AGND	Vin5 ±	Vin4 ±	Vin3 ±	Vin2 ±	Vin1 ±	Vin0 ±
Jumper	JP5	J6	J5	J4	J3	J2	JP1


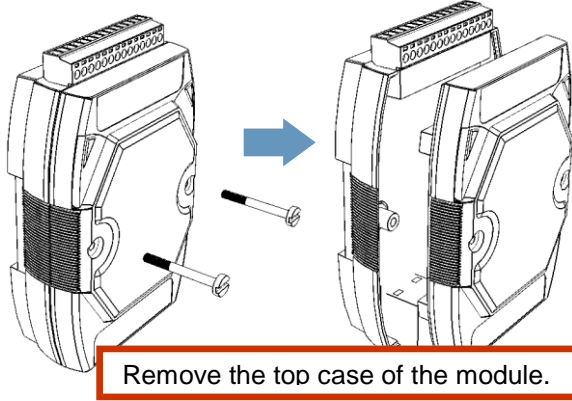


Remove the top case of the module.

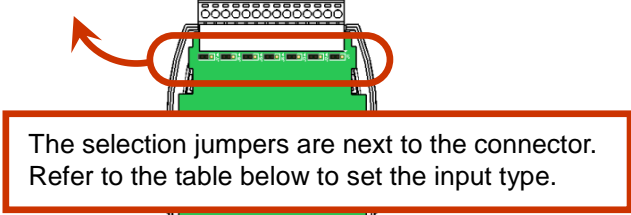

The selection jumpers are next to the connector. Refer to the table below to set the input type.



Channel	Vout1+ & AGND
Jumper	JP6

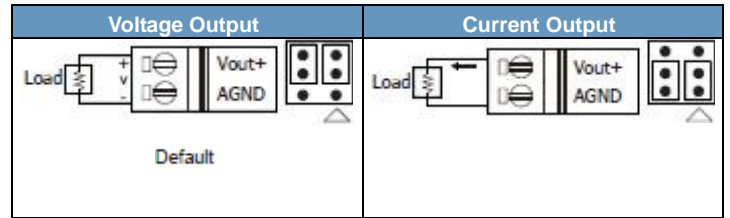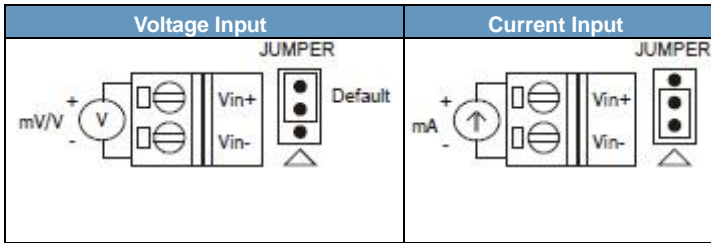



Tips & Warnings



The jumper settings of the input type for each AI/AO channel must correspond to the input range for each AI/AO channel of the web interface.

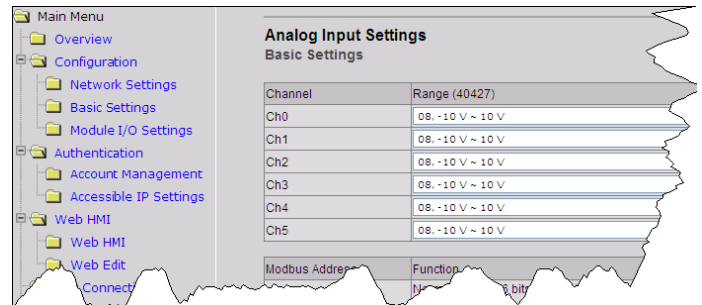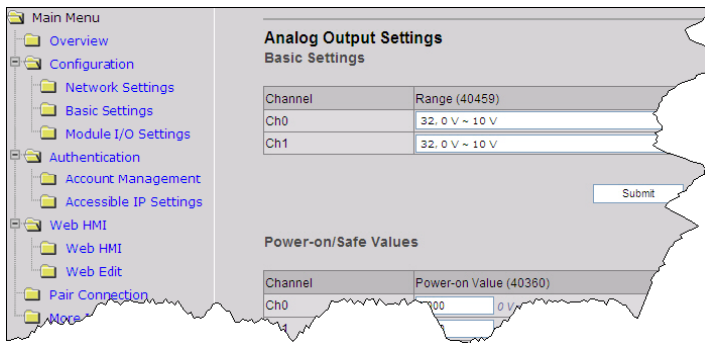

Wire Connections

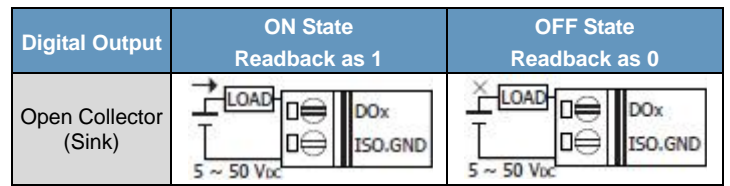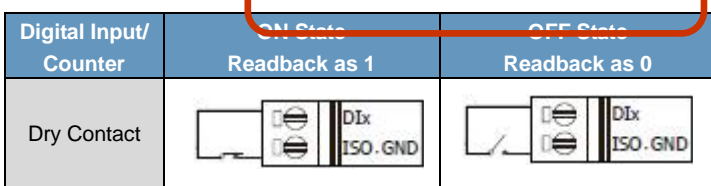

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00001	0000 : 0001	2	DO value	0: Off 1: On	R/W	-
00034 : 00035	0022 : 0023	2	Clear the DI counter value	1: Clear	W	-
00130 : 00131	0082 : 0083	2	Clear the DI latched value	1: Clear	W	-
00162 : 00167	00A2 : 00A7	6	Clear 1-ch historical AI max. value	1: Clear	W	-
00194 : 00199	00C2 : 00C7	6	Clear 1-ch historical AI min. value	1: Clear	W	-
00226	00E2	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00233	00E9	1	Reboot the module	1: Reboot	W	-
00350	015E	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00351 : 00352	015F : 0160	2	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00431	01AF	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00432	01B0	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00435 : 00436	01B3 : 01B4	2	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00515 : 00516	0203 : 0204	2	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00595 : 00560	0253 : 0258	6	Enable/Disable the AI function	0: Disable 1: Enable	R/W/E	1
00628	0274	1	Set the AI sampling rate	0: Normal mode (10 Hz, 16 bits) 1: Fast mode (60 Hz, 12 bits)	R/W/E	0
00629	0275	1	Set the AI noise filter	0: Frequency 60 Hz 1: Frequency 50 Hz	R/W/E	0
00630	0276	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-
00631	0277	1	Set the AI/AO data format	0: Hexadecimal format 1: Engineering unit	R/W/E	0
00632	0278	1	Reset the AI calibration to the factory settings	1: Reset	W	-
00634	027A	1	Clear all historical AI max. values	1: Clear	W	-
00635	027B	1	Clear all historical AI min. values	1: Clear	W	-
00636 : 00641	027C : 0281	6	Enable/Disable the AI high alarm function	0: Disable 1: Enable	R/W/E	0
00668 : 00670	029C : 02A1	6	Enable/Disable the AI low alarm function	0: Disable 1: Enable	R/W/E	0
00700 : 00705	02BC : 02C1	6	Set the AI high alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0
00732 : :	02DC : :	6	Set the AI low alarm mode	0: Momentary mode 1: Latching mode	R/W/E	0

00737	02E1					
00764	02FC	6	Clear the AI high alarm status	1: Clear	W	-
:	:					
00769	0301					
00796	031C	6	Clear the AI high low status	1: Clear	W	-
:	:					
00801	0321					
00830	033E	1	Enable/Disable the AI calibration	0: Disable 1: Enable	R/W	-
00831	033F	1	Zero calibration for the channel 0	1: Set	W	-
00832	0340	1	Span calibration for the channel 0	1: Set	W	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000	0000	2	DI value	0: Off 1: On	R
:	:				
10001	0001				
10032	0020	2	Read DI "high latch" status	0: Normal 1: Latched	R
:	:				
10033	0021				
10064	0040	2	Read DI "low latch" status	0: Normal 1: Latched	R
:	:				
10065	0041				
10224	00E0	6	Read AI high alarm status. When the AI value is higher than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
:	:				
10229	00E5				
10256	0100	6	Read AI low alarm status. When the AI value is lower than the high alarm value, the status becomes 1.	0: Normal 1: Alarmed	R
:	:				
10261	0105				

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30000	0000	6	1	AI value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30005	0005					
30032	0020	2	2	DI counter value	0 to 4294967295	R
:	:					
30035	0023					
30236	00EC	6	1	AI historical max. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30241	00F1					
30268	010C	6	1	AI historical min. value	-32768 to 32767 (0x0000 to 0xFFFF)	R
:	:					
30273	0111					
30300	012C	1	1	Number of the DI channel	6	R
30310	0136	1	1	Number of the DO channel	2	R
30320	0140	1	1	Number of the AI channel	2	R
30330	014A	1	1	Number of the AO channel	2	R
30350	015E	1	1	OS image version	0x123 means version 1.2.3	R
30351	015F	1	1	Firmware version	0x123 means version 1.2.3	R
30353	0161	1	1	I/O version	0x123 means version 1.2.3	R
30360	0168	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40000 : 40001	0000 : 0001	2	1	AO value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W	-
40200 : 40203	00C8 : 00CB	2	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00630) is changed by a write operation.	0 to 4294967295	R/W	0
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1
40296 : 40301	0128 : 012D	6	1	Set the AI high alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	32767 (0x7FFF)
40328 : 40333	0148 : 014D	6	1	Set the AI low alarm value	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	-32768 (0x8000)
40360 : 40361	0168 : 0169	2	1	Set the power-on value for the AO channel	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	0
40392 : 40393	0188 : 0189	2	1	Set the safe value for the AO channel	-32768 to 32767 (0x0000 to 0xFFFF)	R/W/E	0
40427 : 40432	01AB : 01B0	6	1	Set the AI range	0x07: 4~20 mA 0x08: +/-10 V 0x09: +/-5 V 0x0A: +/-1 V 0x0B: +/-500 mV 0x0C: +/-150 mV 0x0D: +/-20 mA 0x1A: 0~20 mA	R/W/E	0x08
40459 : 40460	01CB : 01CC	2	1	Set the AO range	0x30: 0~20 mA 0x31: 4~20 mA 0x32: 0~10 V 0x33: +/-10 V 0x34: 0~5 V 0x35: +/-5 V	R/W/E	0x32
40523 : 40524	020B : 020C	2	1	Set the AO slew rate range	0x00: Immediate 0x01: 0.0625 V/sec or 0.125 mA/sec 0x02: 0.125 V/sec or 0.25 mA/sec 0x03: 0.25 V/sec or 0.5 mA/sec 0x04: 0.5 V/sec or 1.0 mA/sec 0x05: 1.0 V/sec or 2.0 mA/sec 0x06: 2.0 V/sec or 4.0 mA/sec 0x07: 4.0 V/sec or 8.0 mA/sec 0x08: 8.0 V/sec or 16 mA/sec 0x09: 16 V/sec or 32 mA/sec 0x10: 32 V/sec or 64 mA/sec 0x11: 64 V/sec or 128 mA/sec 0x12: 128 V/sec or 256 mA/sec 0x13: 256 V/sec or 512 mA/sec 0x14: 512 V/sec or 1024 mA/sec	R/W/E	0x00
40555	022B	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40556	022C	1	1	Read the boot count of the module	1 to 32767	R	-


				The factory default value is 0 when the settings are set to the factory default values.			
40557	022D	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40558	022E	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40559	022F	1	1	Read the module name	0x7026	R	-

OME-ET-7042/OME-PET-7042





I/O Specifications

Model	OME-ET-7042	OME-PET-7042
Digital Output		
Output Channels	16	
Type	Isolated Open Collector (Sink)	
Max. Load Current	100 mA/Channel at 25°C Direct drive power relay module	
Load Voltage	+5 V _{DC} ~ +30 V _{DC}	
Overvoltage Protection	-	60 V _{DC}
Overload Protection	-	1.3 A
Short-circuit Protection	-	Yes
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

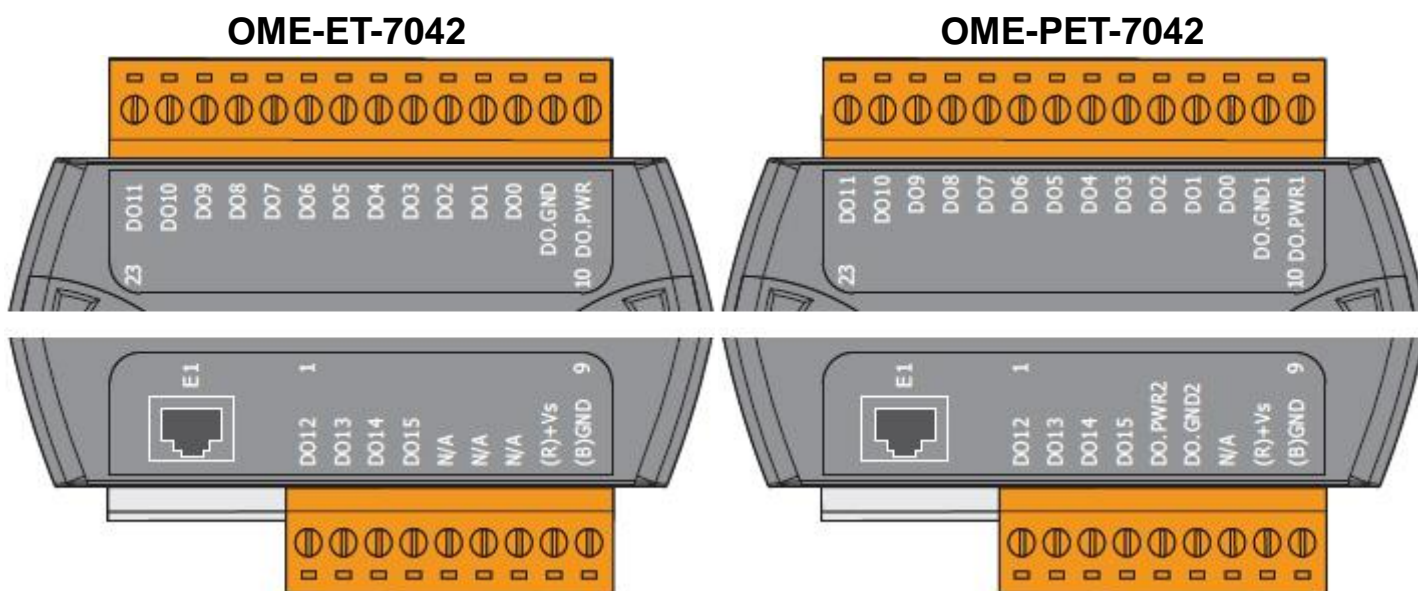

Wire Connection

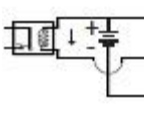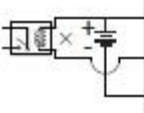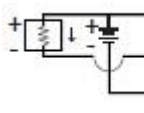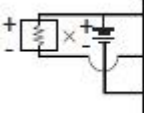Digital Output	ON State Readback as 1	OFF State Readback as 0
Drive Relay		
Resistance Load		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00015	0000 : 000F	16	DO value	0: Off 1: On	R/W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00250	00EB : 00FA	16	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00282	010B : 011A	16	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30110	006E	1	1	Number of the DO channel	16	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7042	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7044/OME-PET-7044

I/O Specifications

Digital Input/Counter		
Input Channels	8	
Type	Wet Contact (Sink, Source)	
On Voltage Level	+10 V _{DC} ~ +50V _{DC}	
Off Voltage Level	+4 V _{DC} max.	
Input Impedance	10 KΩ	
Counter	Channels	8
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	500 Hz
	Min. Pulse Width	1 ms
Overvoltage Protection	70 V _{DC}	
Digital Output		
Output Channels	8	
Type	Isolated Open Collector (Sink)	
Max. Load Current	300 mA/Channel at 25°C	
Load Voltage	+10 V _{DC} ~ +40 V _{DC}	
Overvoltage Protection	60 V _{DC}	
Overload Protection	1.1 A	
Short-circuit Protection	Yes	
Power On Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

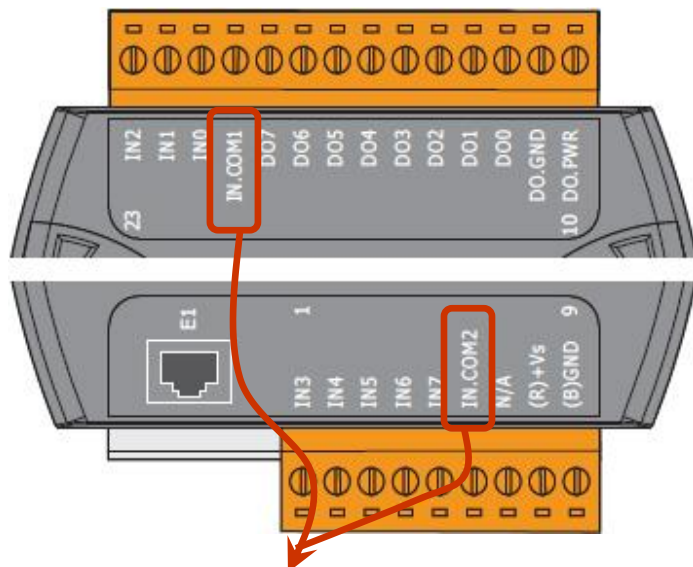

The IN.COM1 and IN.COM2 of the OME-ET-7044 are internally wired together.

Wire Connection

Digital Input/Counter	Readback as 1 +10 ~ +50 V _{DC}	Readback as 0 Open or <4 V _{DC}
Sink		
Source		

Digital Output	ON State Readback as 1	OFF State Readback as 0
Drive Relay		
Resistance Load		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00007	0000 : 0007	8	DO value	0: Off 1: On	R/W	-
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00041	0022 : 0029	8	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00158	0097 : 009E	8	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00242	00EB : 00F2	8	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00274	010B : 0112	8	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10007	0000 : 0007	8	DI value	0: Off 1: On	R
10032 : 10039	0020 : 0027	8	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10071	0040 : 0047	8	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30031	0010 : 001F	8	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	8	R
30110	006E	1	1	Number of the DO channel	8	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40065	0032 : 0041	8	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7044	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7050/OME-PET-7050

I/O Specifications

Model		OME-ET-7050	OME-PET-7050
Digital Input/Counter			
Input Channels		12	
Type		Wet Contact (Sink, Source)	
On Voltage Level		+10 V _{DC} ~ +50V _{DC}	
Off Voltage Level		+4 V _{DC} max.	
Input Impedance		10 KΩ	
Counter	Channels	12	
	Max. Count	4,294,967,285 (32-bit)	
	Max. Input Frequency	500 Hz	
	Min. Pulse Width	1 ms	
Overvoltage Protection		70 V _{DC}	
Digital Output			
Output Channels		6	
Type		Isolated Open Collector (Sink)	
Max. Load Current		100 mA/Channel at 25°C Direct drive power relay module	
Load Voltage		+5 V _{DC} ~ +30 V _{DC}	
Overvoltage Protection		-	60 V _{DC}
Overload Protection		-	1.3 A
Short-circuit Protection		-	Yes
Power-on Value		Yes, Programmable	
Safe Value		Yes, Programmable	

Pin Assignments

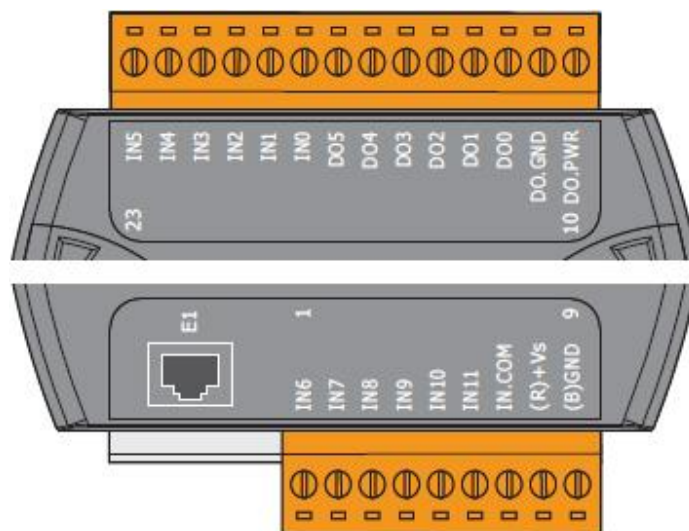

Wire Connection

Digital Input/Counter	Readback as 1 +10 ~ +50 V _{DC}	Readback as 0 Open or <4 V _{DC}
Sink		
Source		

Digital Output	ON State Readback as 1	OFF State Readback as 0
Drive Relay		
Resistance Load		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00005	0000 : 0005	6	DO value	0: Off 1: On	R/W	-
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00045	0022 : 002D	12	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00162	0097 : 00A2	12	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00240	00EB : 00F0	6	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00272	010B : 0110	6	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10011	0000 : 000B	12	DI value	0: Off 1: On	R
10032 : 10043	0020 : 002B	12	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10075	0040 : 004B	12	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30039	0010 : 0027	12	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	12	R
30110	006E	1	1	Number of the DO channel	6	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40073	0032 : 0049	12	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7050	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7051/OME-PET-7051

I/O Specifications

Digital Input/Counter		
Input Channels	16	
Type	Wet Contact (Sink, Source)	
On Voltage Level	+10 V _{DC} ~ +50V _{DC}	
Off Voltage Level	+4 V _{DC} max.	
Input Impedance	10 KΩ	
Counter	Channels	16
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	500 Hz
	Min. Pulse Width	1 ms
Overvoltage Protection	70 V _{DC}	

Pin Assignments

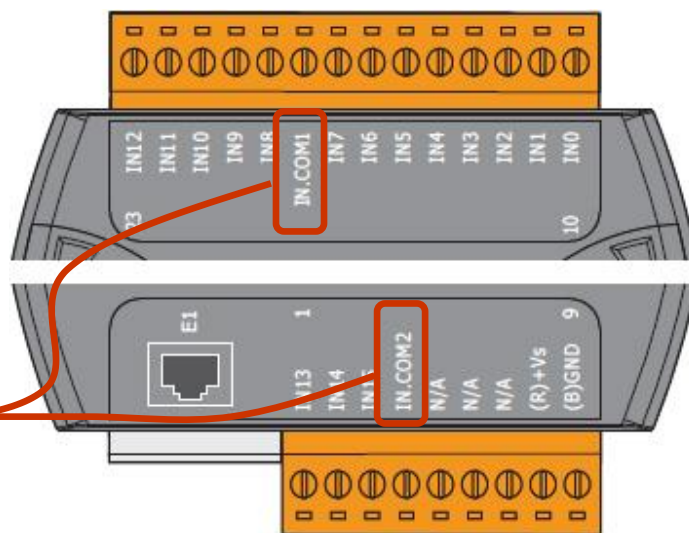

The IN.COM1 and IN.COM2 of the OME-ET-7051 are internally wired together.

Wire Connection

Digital Input/Counter	Readback as 1 +10 ~ +50 V _{DC}	Readback as 0 Open or <4 V _{DC}
Sink		
Source		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00049	0022 : 0031	16	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00166	0097 : 00A6	16	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10015	0000 : 000F	16	DI value	0: Off 1: On	R
10032 : 10047	0020 : 002F	16	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10079	0040 : 004F	16	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30047	0010 : 002F	16	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	16	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40081	0032 : 0051	16	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7051	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7052/OME-PET-7052

I/O Specifications

Digital Input/Counter		
Input Channels	8	
Type	Wet Contact (Sink, Source)	
On Voltage Level	+10 V _{DC} ~ +50V _{DC}	
Off Voltage Level	+4 V _{DC} max.	
Input Impedance	10 KΩ	
Counter	Channels	8
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	500 Hz
	Min. Pulse Width	1 ms
Overvoltage Protection	70 V _{DC}	
Digital Output		
Output Channels	8	
Type	Open Collector (Source)	
Max. Load Current	650 mA/Channel at 25°C	
Load Voltage	+10 V _{DC} ~ +40 V _{DC}	
Overvoltage Protection	47 V _{DC}	
Overload Protection	-	
Short-circuit Protection	Yes	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

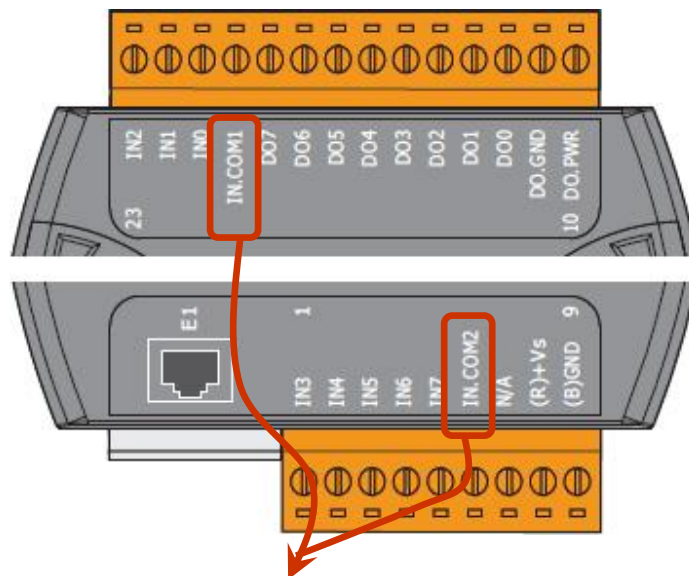

The IN.COM1 and IN.COM2 of the OME-ET-7052 are internally wired together.

Wire Connection

Digital Input/Counter	Readback as 1 +10 ~ +50 V _{DC}	Readback as 0 Open or <4 V _{DC}
Sink		
Source		

Digital Output	ON State Readback as 1	OFF State Readback as 0
Source		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00007	0000 : 0007	8	DO value	0: Off 1: On	R/W	-
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00041	0022 : 0029	8	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00158	0097 : 009E	8	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00242	00EB : 00F2	8	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00274	010B : 0112	8	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10007	0000 : 0007	8	DI value	0: Off 1: On	R
10032 : 10039	0020 : 0027	8	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10071	0040 : 0047	8	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30031	0010 : 001F	8	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	8	R
30110	006E	1	1	Number of the DO channel	8	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40065	0032 : 0041	8	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7052	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7053/OME-PET-7053

I/O Specifications

Digital Input/Counter		
Input Channels	16	
Type	Dry Contact (Source)	
On Voltage Level	Open	
Off Voltage Level	Close to GND	
Counter	Channels	16
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	500 Hz
	Min. Pulse Width	1 ms
Overvoltage Protection	-	
Effective Distance	500 M max.	

Pin Assignments

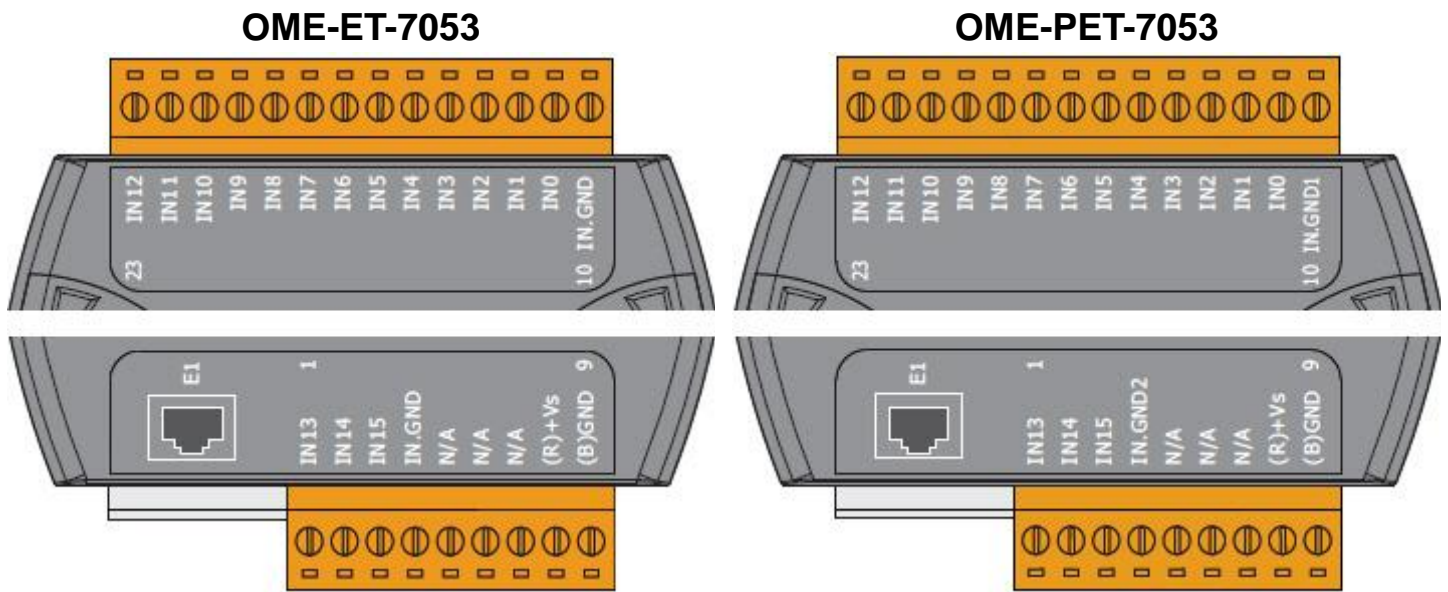

Wire Connection

Digital Input/Counter	ON State Readback as 1	OFF State Readback as 0
Dry Contact		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00049	0022 : 0031	16	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00166	0097 : 00A6	16	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10015	0000 : 000F	16	DI value	0: Off 1: On	R
10032 : 10047	0020 : 002F	16	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10079	0040 : 004F	16	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30047	0010 : 002F	16	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	16	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40081	0032 : 0051	16	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7053	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7060/OME-PET-7060

I/O Specifications

Digital Input/Counter		
Input Channels	6	
Type	Wet Contact (Sink, Source)	
On Voltage Level	+10 V _{DC} ~ +50V _{DC}	
Off Voltage Level	+4 V _{DC} max.	
Input Impedance	10 KΩ	
Counter	Channels	6
	Max. Count	4,294,967,285 (32-bit)
	Max. Input Frequency	500 Hz
	Min. Pulse Width	1 ms
Overvoltage Protection	70 V _{DC}	
Power Relay		
Output Channels	6	
Type	Power Relay, Form A (SPST N.O.)	
Operating Voltage Range	250 V _{AC} /30V _{DC}	
Max. Load Current	5.0 A/channel at 25°C	
Operate Time	6 ms (Typical)	
Release Time	3 ms (Typical)	
Electrical Life (Resistive Load)	VDE:	5A @ 250 V _{AC} 30,000 ops (10 ops/minute) at 75°C
		5A @ 30 V _{AC} 70,000 ops (10 ops/minute) at 75°C
	UL:	5A @ 250 V _{AC} /30 V _{DC} 6,000 ops
		3A @ 250 V _{AC} /30 V _{DC} 100,000 ops
Mechanical Life	20,000,000 ops. at no load (300 ops/minute)	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

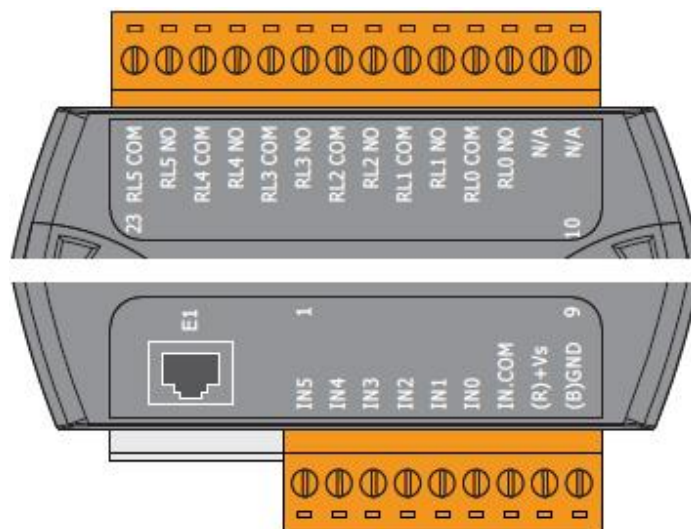

Wire Connection

Digital Input/Counter	Readback as 1 +10 ~ +50 V _{DC}	Readback as 0 Open or <4 V _{DC}
Sink		
Source		
Power Relay	ON State Readback as 1	OFF State Readback as 0
Relay Output		

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00005	0000 : 0005	6	DO value	0: Off 1: On	R/W	-
00032	0020	1	Clear 1-ch historical DI max. value	1: Clear	W	-
00033	0021	1	Clear 1-ch historical DI min. value	1: Clear	W	-
00034 : 00039	0022 : 0027	6	Clear the DI counter value	1: Clear	W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00150	0096	1	Enable/Disable the DI latch function	0: Disable 1: Enable	R/W/E	0
00151 : 00156	0097 : 009C	6	Enable/Disable the DI counter function	0: Disable 1: Enable	R/W/E	0
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00240	00EB : 00F0	6	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00272	010B : 0110	6	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0
00318	013E	1	Save preset values for the DI counter to the EEPROM	1: Save	W/E	-

Discrete Inputs (1xxxx)

Register		Points	Description	Data Format	Attribute
DEC	HEX				
10000 : 10005	0000 : 0005	6	DI value	0: Off 1: On	R
10032 : 10037	0020 : 0025	6	Read DI "high latch" status	0: Normal 1: Latched	R
10064 : 10069	0040 : 0045	6	Read DI "low latch" status	0: Normal 1: Latched	R

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30016 : 30027	0010 : 001B	6	2	DI counter value	0 to 4294967295	R
30100	0064	1	1	Number of the DI channel	6	R
30110	006E	1	1	Number of the DO channel	6	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)


Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40050 : 40061	0032 : 003D	6	2	Set a preset value for the DI Counter Any values updated based on the Modbus communication will not take immediate effect and not be saved to EEPROM until the register (00318) is changed by a write operation.	0 to 4294967295	R/W	0
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7060	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

OME-ET-7067/OME-PET-7067


I/O Specifications

PhotoMOS Relay		
Output Channels	8	
Type	Power Relay, Form A (SPST N.O.)	
Operating Voltage Range	250 V _{AC} /30 V _{DC}	
Max. Load Current	5.0 A/Channel at 25°C	
Operate Time	6 ms (Typical)	
Release Time	3 ms (Typical)	
Electrical Life (Resistive Load)	VDE	5A @ 250 V _{AC} 30,000 ops (10 ops/minute) at 75°C
		5A @ 30 V _{AC} 70,000 ops (10 ops/minute) at 75°C
	UL	5A @ 250 V _{AC} /30 V _{DC} 6,000 ops
		3A @ 250 V _{AC} /30 V _{DC} 100,000 ops
Mechanical Life	20,000,000 ops. at no load (300 ops/minute)	
Power-on Value	Yes, Programmable	
Safe Value	Yes, Programmable	

Pin Assignments

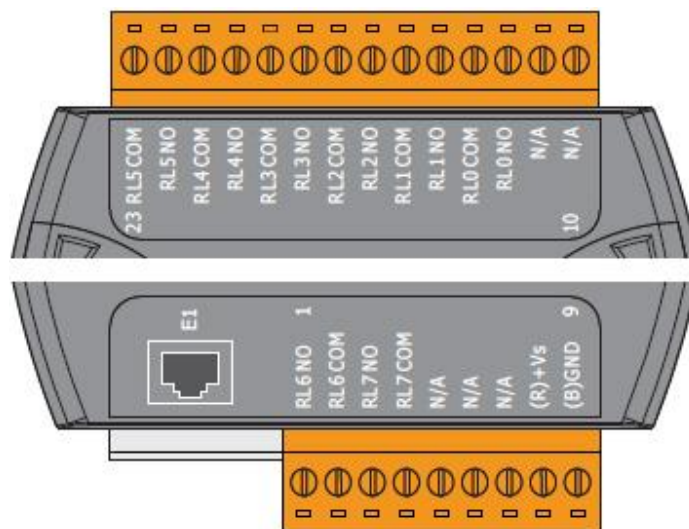

Wire Connection

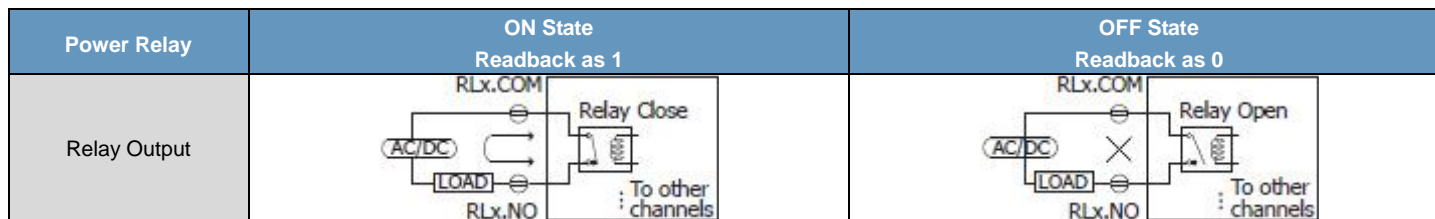

Modbus Register Table

Coils (0xxxx)

Register		Points	Description	Data Format	Attribute	Factory Value
DEC	HEX					
00000 : 00007	0000 : 0007	8	DO value	0: Off 1: On	R/W	-
00126	007E	1	Reset the I/O settings to the factory default state	1: Reset	W	-
00133	0085	1	Reboot the module	1: Reboot	W	-
00231	00E7	1	Save the DO power-on value to the EEPROM	1: Save	W/E	-
00232	00E8	1	Save the DO safe value to the EEPROM	1: Save	W/E	-
00235 : 00242	00EB : 00F2	8	Enable/Disable the DO power-on value function	0: Disable 1: Enable	R/W	0
00267 : 00274	010B : 0112	8	Enable/Disable the DO safe value function	0: Disable 1: Enable	R/W	0

Input Register (3xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute
DEC	HEX					
30110	006E	1	1	Number of the DO channel	8	R
30150	0096	1	1	OS image version	0x123 means version 1.2.3	R
30151	0097	1	1	Firmware version	0x123 means version 1.2.3	R
30153	0099	1	1	I/O version	0x123 means version 1.2.3	R
30160	00A0	1	1	Communication state of the pair-connection	0: Normal <0: Failed	R

Holding Register (4xxxx)

Register		Points	No. Per Point	Description	Data Format	Attribute	Factory Value
DEC	HEX						
40255	00FF	1	1	Read the module reset status	1: Power-on 2: Module Watchdog 3: Software Reset Command	R	-
40256	0100	1	1	Read the boot count of the module The factory default value is 0 when the settings are set to the factory default values.	1 to 32767	R	-
40257	0101	1	1	Set the Host WDT timeout (unit: second)	0: Disable the Host WDT 5 to 65535: Enable the Host WDT	R/W/E	0
40258	0102	1	1	Read the WDT event count The initial value is 0 when the module is reset, and is increased when the WDT even happens.	0 to 32767	R	-
40260	0104	1	1	Read the module name	0x7067	R	-
40271	010F	1	1	Set the module identification (Modbus NetID)	1 to 255	R/W/E	1

Appendix

A. Analog Input Type and Data Format Table

Type Code	Input Range	Data Format	+F.S	-F.S
00	-15 ~ +15 mV	Engineering Unit	+15000	-15000
		2's comp HEX	7FFF	8000
01	-50 ~ +50 mV	Engineering Unit	+5000	-5000
		2's comp HEX	7FFF	8000
02	-100 ~ +100 mV	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
03	-500 ~ +500 mV	Engineering Unit	+5000	-5000
		2's comp HEX	7FFF	8000
04	-1 ~ +1 V	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
05	-2.5 ~ +2.5 V	Engineering Unit	+25000	-25000
		2's comp HEX	7FFF	8000
06	-20 ~ +20 mA	Engineering Unit	+20000	-20000
		2's comp HEX	7FFF	8000
07	+4 ~ +20 mA	Engineering Unit	+20000	+4000
		2's comp HEX	FFFF	0000
08	-10 ~ +10 V	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
09	-5 ~ +5 V	Engineering Unit	+5000	-5000
		2's comp HEX	7FFF	8000
0A	-1 ~ +1 V	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
0B	-500 ~ +500 mV	Engineering Unit	+5000	-5000
		2's comp HEX	7FFF	8000
0C	-150 ~ +150 mV	Engineering Unit	+15000	-15000
		2's comp HEX	7FFF	8000
0D	-20 ~ +20 mA	Engineering Unit	+20000	-20000
		2's comp HEX	7FFF	8000
1A	0 ~ +20 mA	Engineering Unit	+20000	0
		2's comp HEX	FFFF	0000
0E	Type J Thermocouple -210 ~ 760°C	Engineering Unit	+7600	-2100
		2's comp HEX	7FFF	DCA2
0F	Type K Thermocouple -270 ~ 1372°C	Engineering Unit	+13720	-2700
		2's comp HEX	7FFF	E6D0
10	Type T Thermocouple -270 ~ 400°C	Engineering Unit	+4000	-2700
		2's comp HEX	7FFF	A99A
11	Type E Thermocouple -270 ~ 1000°C	Engineering Unit	10000	-2700
		2's comp HEX	7FFF	DD71
12	Type R Thermocouple 0 ~ 1768°C	Engineering Unit	+17680	0
		2's comp HEX	7FFF	0000
13	Type S Thermocouple 0 ~ 1768°C	Engineering Unit	+17680	0
		2's comp HEX	7FFF	0000
14	Type B Thermocouple 0 ~ 1820°C	Engineering Unit	+18200	0
		2's comp HEX	7FFF	0000
15	Type N Thermocouple -270 ~ 1300°C	Engineering Unit	+13000	-2700
		2's comp HEX	7FFF	E56B
16	Type C Thermocouple 0 ~ 2320°C	Engineering Unit	+23200	0
		2's comp HEX	7FFF	0000
17	Type L Thermocouple -200 ~ 800°C	Engineering Unit	+8000	-2000
		2's comp HEX	7FFF	E000

OME-ET-7000/OME-PET-7000 Series

18	Type M Thermocouple -200 ~ 100°C	Engineering Unit	+10000	-20000
		2's comp HEX	4000	8000
19	Type L DIN43710 Thermocouple -200 ~ 900°C	Engineering Unit	9000	-2000
		2's comp HEX	FFFF	E38E
20	Platinum 100, $\alpha=0.00385$ -100 ~ 100°C	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
21	Platinum 100, $\alpha=0.00385$ 0 ~ 100°C	Engineering Unit	+10000	0
		2's comp HEX	7FFF	0000
22	Platinum 100, $\alpha=0.00385$ 0 ~ 200°C	Engineering Unit	+20000	0
		2's comp HEX	7FFF	0000
23	Platinum 100, $\alpha=0.00385$ 0 ~ 600°C	Engineering Unit	+6000	0
		2's comp HEX	7FFF	0000
24	Platinum 100, $\alpha=0.003916$ -100 ~ 100°C	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
25	Platinum 100, $\alpha=0.003916$ 0 ~ 100°C	Engineering Unit	+10000	0
		2's comp HEX	7FFF	0000
26	Platinum 100, $\alpha=0.003916$ 0 ~ 200°C	Engineering Unit	+20000	0
		2's comp HEX	7FFF	0000
27	Platinum 100, $\alpha=0.003916$ 0 ~ 600°C	Engineering Unit	+6000	0
		2's comp HEX	7FFF	0000
28	Nickel 120, -80 ~ 100°C	Engineering Unit	+10000	-8000
		2's comp HEX	7FFF	999A
29	Nickel 120 0 ~ 100°C	Engineering Unit	+10000	0
		2's comp HEX	7FFF	0000
2A	Platinum 1000, $\alpha=0.00385$ -200 ~ 600°C	Engineering Unit	+6000	-2000
		2's comp HEX	7FFF	D556
2B	Cu 100, $\alpha=0.00421$ -20 ~ 150°C	Engineering Unit	+15000	-2000
		2's comp HEX	7FFF	EEEE
2C	Cu 100, $\alpha=0.00427$ 0 ~ 200°C	Engineering Unit	+20000	0
		2's comp HEX	7FFF	0000
2D	Cu 1000, $\alpha=0.00421$ -20 ~ 150°C	Engineering Unit	+15000	-2000
		2's comp HEX	7FFF	EEEE
2E	Platinum 1000, $\alpha=0.00385$ -200 ~ 200°C	Engineering Unit	+20000	-20000
		2's comp HEX	7FFF	8000
2F	Platinum 1000, $\alpha=0.003916$ -200 ~ 200°C	Engineering Unit	+20000	-20000
		2's comp HEX	7FFF	8000
80	Platinum 100, $\alpha=0.00385$ -200 ~ 600°C	Engineering Unit	+6000	-2000
		2's comp HEX	7FFF	D556
81	Platinum 100, $\alpha=0.003916$ -200 ~ 600°C	Engineering Unit	+6000	-2000
		2's comp HEX	7FFF	D556
82	Cu 50 -50 ~ 150°C	Engineering Unit	+15000	-5000
		2's comp HEX	7FFF	D556
83	Nickel 100 -60 ~ 180°C	Engineering Unit	+18000	-6000
		2's comp HEX	7FFF	D556

B. Analog Output Type and Data Format Table

Type Code	Input Range	Data Format	+F.S	-F.S
30	0 ~ +20 mV	Engineering Unit	+20000	0
		2's comp HEX	FFFF	0000
31	4 ~ +20 mV	Engineering Unit	+20000	4000
		2's comp HEX	FFFF	0000
32	0 ~ +10 V	Engineering Unit	+10000	0
		2's comp HEX	7FFF	0000
33	-10 ~ +10 V	Engineering Unit	+10000	-10000
		2's comp HEX	7FFF	8000
34	0 ~ +5 V	Engineering Unit	+5000	0
		2's comp HEX	7FFF	0000
35	-5 ~ +5 V	Engineering Unit	+5000	-5000
		2's comp HEX	7FFF	8000

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2012 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gauges
- ☑ Load Cells & Pressure Gauges
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments